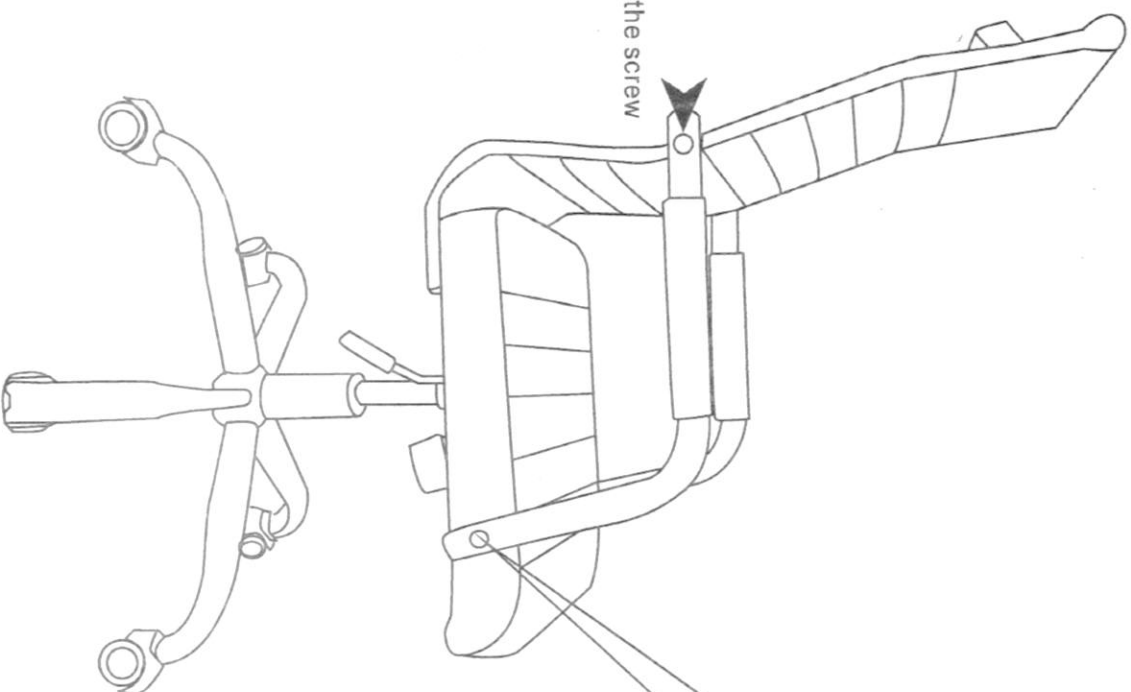


Armrest installation step

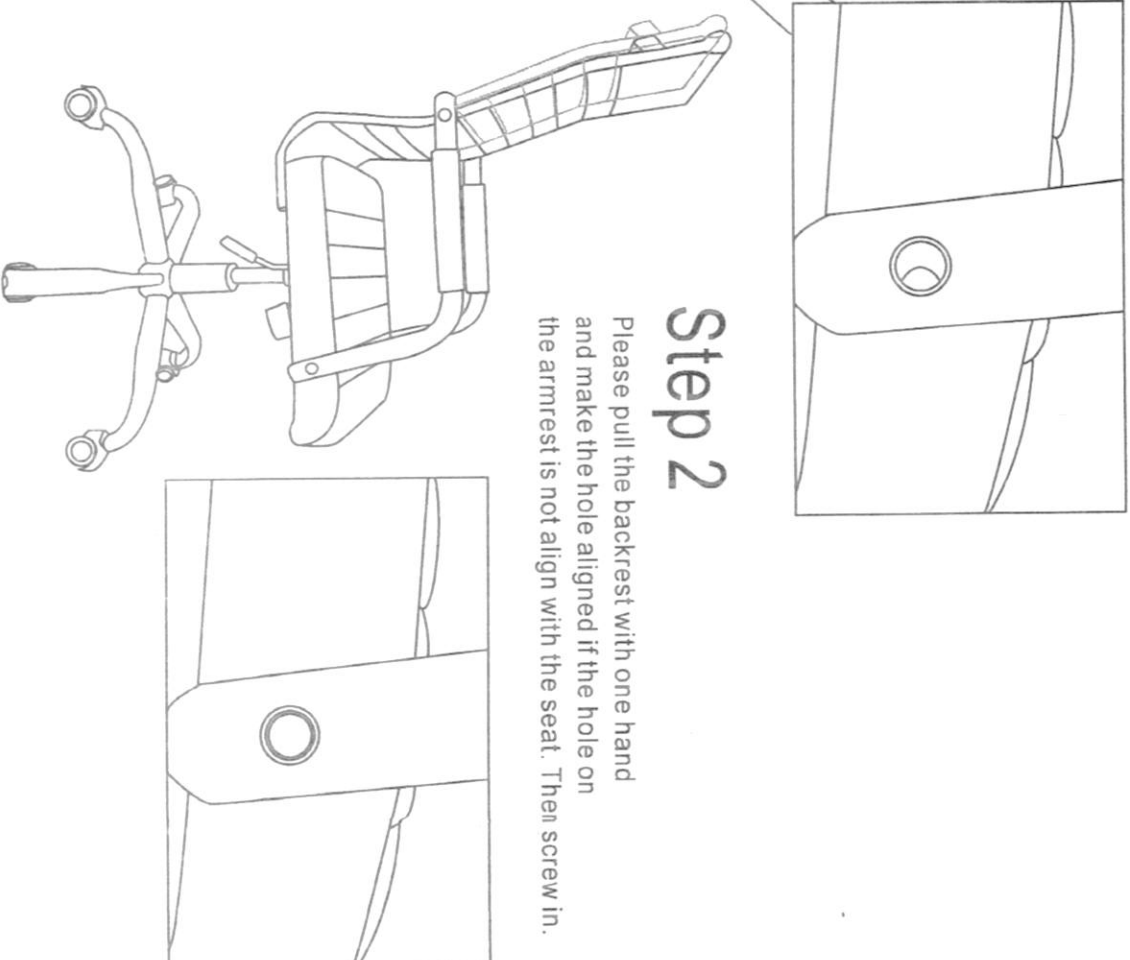
Step 1

Please screw in the screw
on the backrest



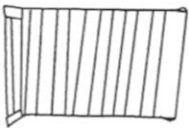
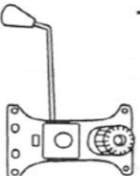
Step 2

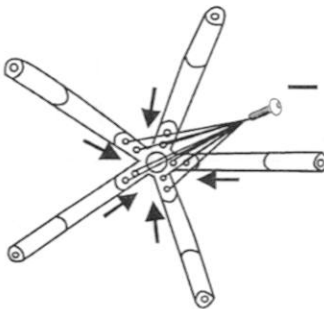
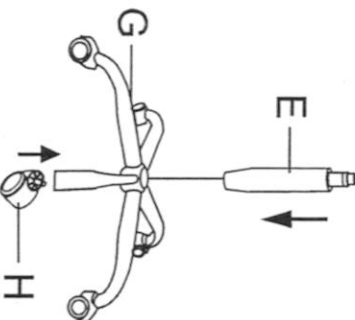
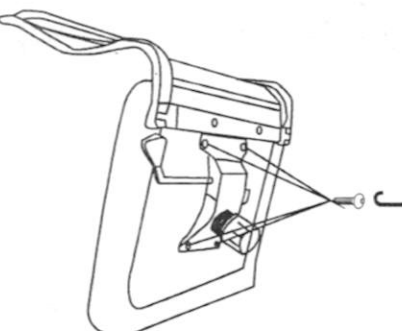
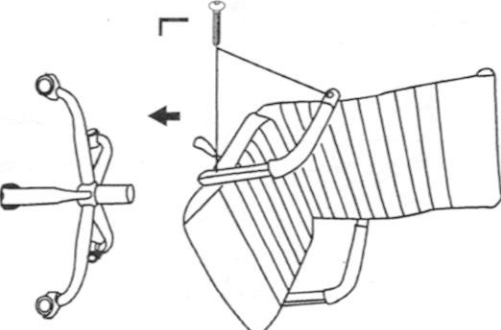
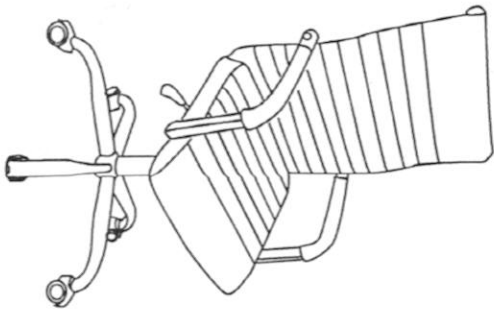
Please pull the backrest with one hand
and make the hole aligned if the hole on
the armrest is not align with the seat. Then screw in.



PARTS*QTY

ASSEMBLY INSTRUVTION

Ax1		Hx5	
Bx1		Ix10	
Cx2		Jx4	
Dx1		Kx2	
Ex1		Lx4	
Gx1		Mx1	

①		②		③	
④		⑤		⑥	

AMADORA