

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 3323

ITEM DESCRIPTION : CABINET



1

Reverse the Cabinet top & place the leg as shown & align the leg to match the apron.




2

Twist the leg into the iron fitting slot by rotating it.



3

Fix the other legs in the similar way

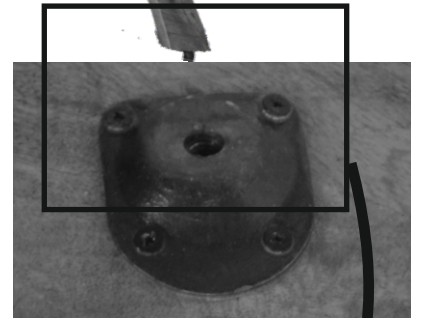

4

Reverse the Cabinet straight. Now your Cabinet is ready for use



Fig. 1

Twist/rotate the leg

Leg

Leg slot fitting

Bedside Top

