

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4011

ITEM DESCRIPTION: 1 DRAWER BEDSIDE



1

Reverse the bedside & place the leg as shown & align the leg to match the apron.



4

Reverse the bedside straight. Now your bedside is ready for use



2

Insert the Bolt to fix the leg with the Bedside top and tighten the nut with the washer as shown in fig1

3

Fix the other leg in the similar way

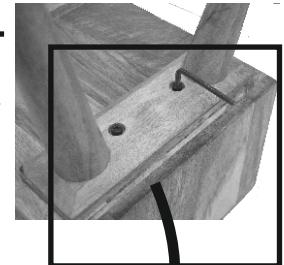


Fig. 1

