


# ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4060

ITEM DESCRIPTION : 2 DRAWER BEDSIDE

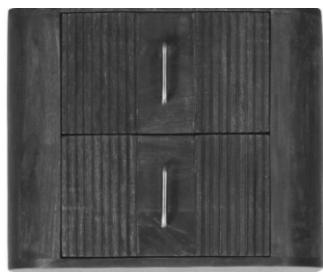

1

Reverse the Bedside & place the leg as shown & align the leg to match the apron.




2

Insert the Bolt to fix the leg with the unit top and tighten the nut with the washer as shown in fig1

3

Fix the other leg in the similar way

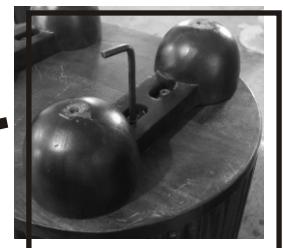

4

Reverse the Bedside straight. Now your Bedside is ready for use



Fig. 1

→ Allen key  
→ Screw 2  
→ Screw 1  
→ Washer 2  
→ Washer 1

