

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 3291

ITEM DESCRIPTION : BEDSIDE



1

Reverse the Bedside top & place the leg as shown & align the leg to match the apron.




2

Twist the leg into the iron fitting slot by rotating it.

3

Fix the other legs in the similar way

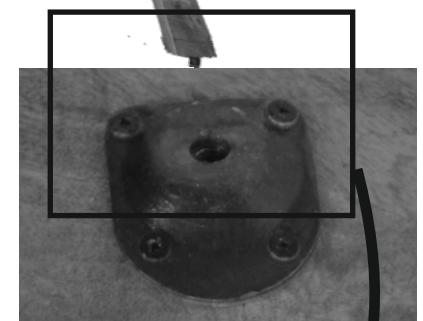

4

Reverse the Bedside straight. Now your Bedside is ready for use



Fig. 1

