

ASSEMBLY INSTRUCTIONS

A X1



B X1



C X4



M6

D X4




M6*20MM

E X1




1

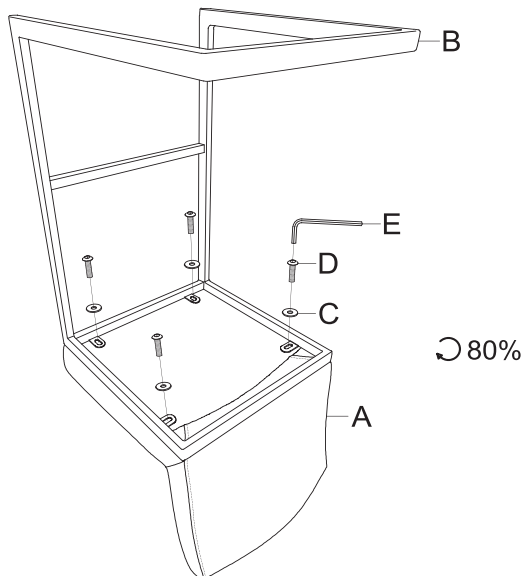


Step1: Lock the screw 80% at first.

2

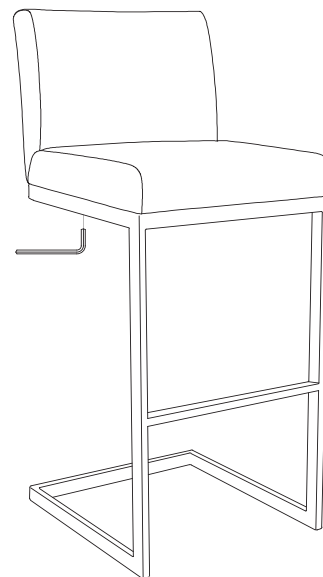

Step2: Before sitting on the chair, please make sure the chair in horizontal position, and then tighten all the screws.

3

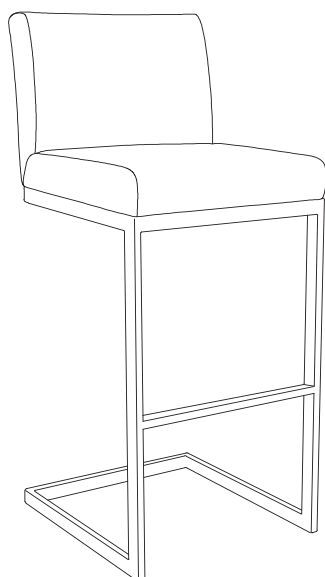

Importer:
CLP Trading GmbH
Triftenstrasse 93
32791 Lage
Germany
info@clp.de