



Montageanleitung

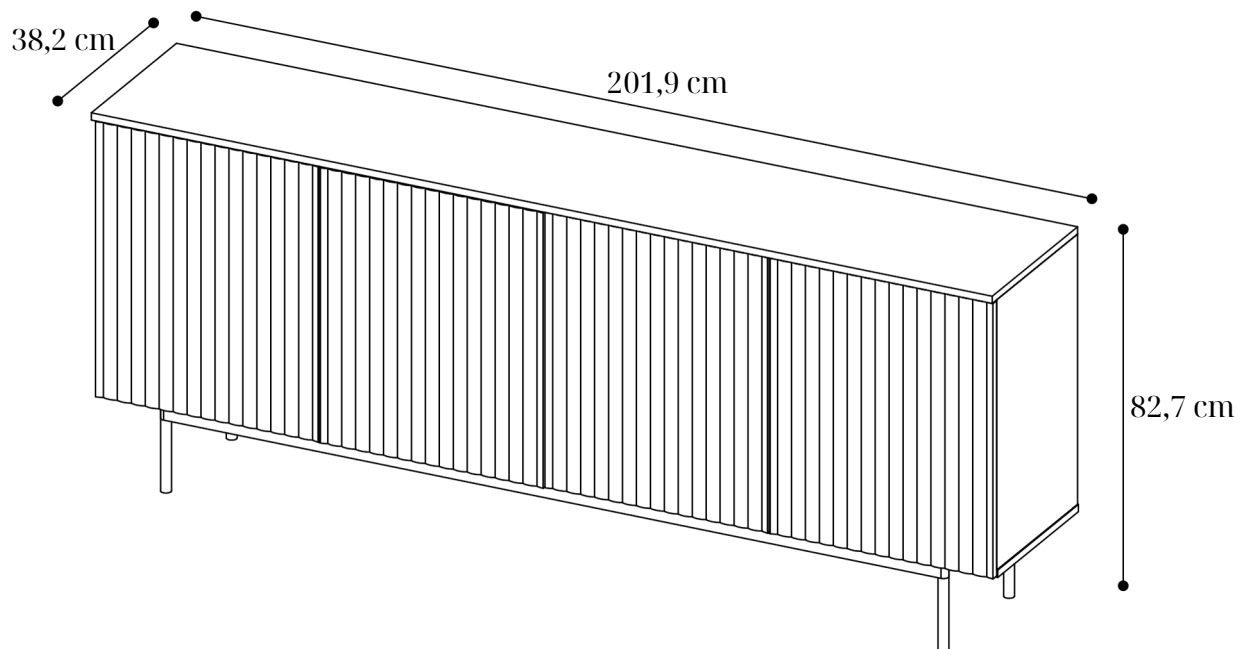





| | | |
|--|--|--|
| | | |
| | | |
| | | |

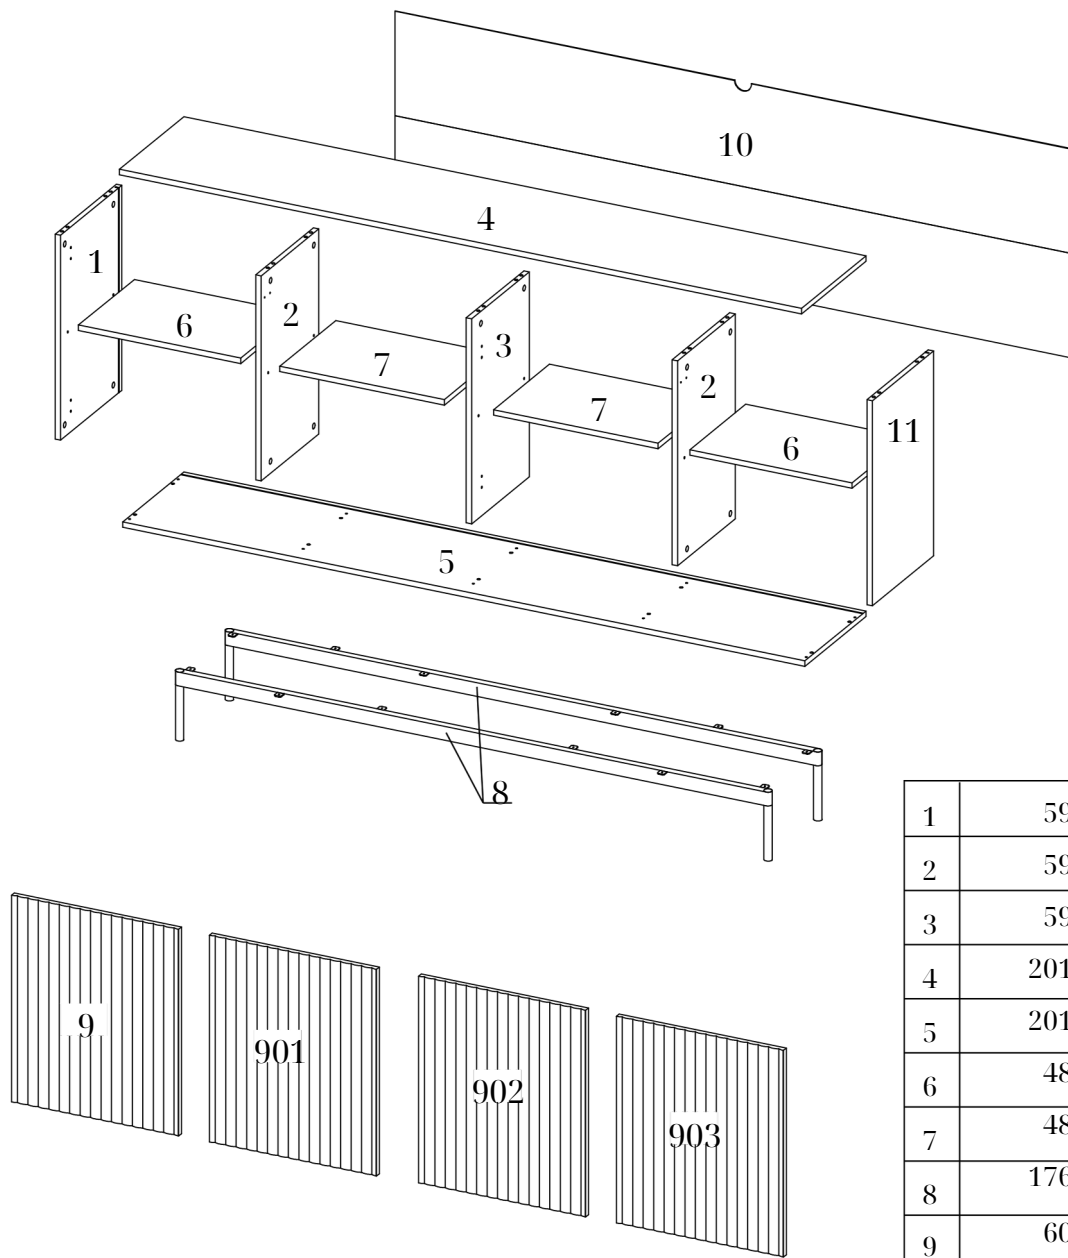


| | | | | | | |
|-------------------------------|--------------------------------|----------------------------|-----------------------------|--------------------------|----------------------------|-------------------------------|
| PTO x4 | A x20 8x35mm | B x20 29,5mm | C x20 15x12mm | F x20 | N x12 3x25mm | N1 x21 3,5x16mm |
| N2 x16 3,5x12mm | TA x1 77x30x15mm | Z x16 4mm | X x10 | P2 x4 35mm | P3 x4 26mm | |













| | |
|-----|---------------|
| 1 | 595x362x16mm |
| 2 | 595x341x16mm |
| 3 | 595x341x16mm |
| 4 | 2019x382x16mm |
| 5 | 2019x362x16mm |
| 6 | 480x331x16mm |
| 7 | 487x331x16mm |
| 8 | 1766x200x22mm |
| 9 | 606x500x16mm |
| 901 | 606x500x16mm |
| 902 | 606x500x16mm |
| 903 | 606x500x16mm |
| 10 | 1996x609x3mm |
| 11 | 595x362x16mm |



1

| | | | |
|--|---|---|--|
| A x16 8x35mm  | C x16 15x12mm  | PTO x4  | N1 x8 3,5x16mm  |
|--|---|---|--|







| | | |
|---|---|--|
| N1 ✓ 3,5x16mm  | N2 ✗ 3,5x12mm  | N ✗ 3x25mm  |
|---|---|--|

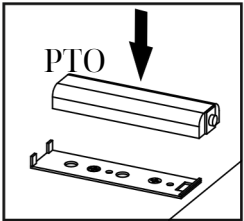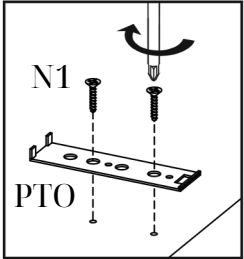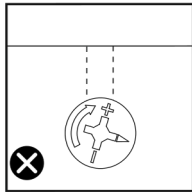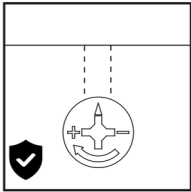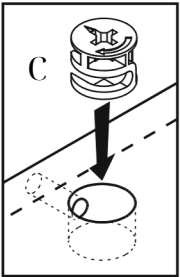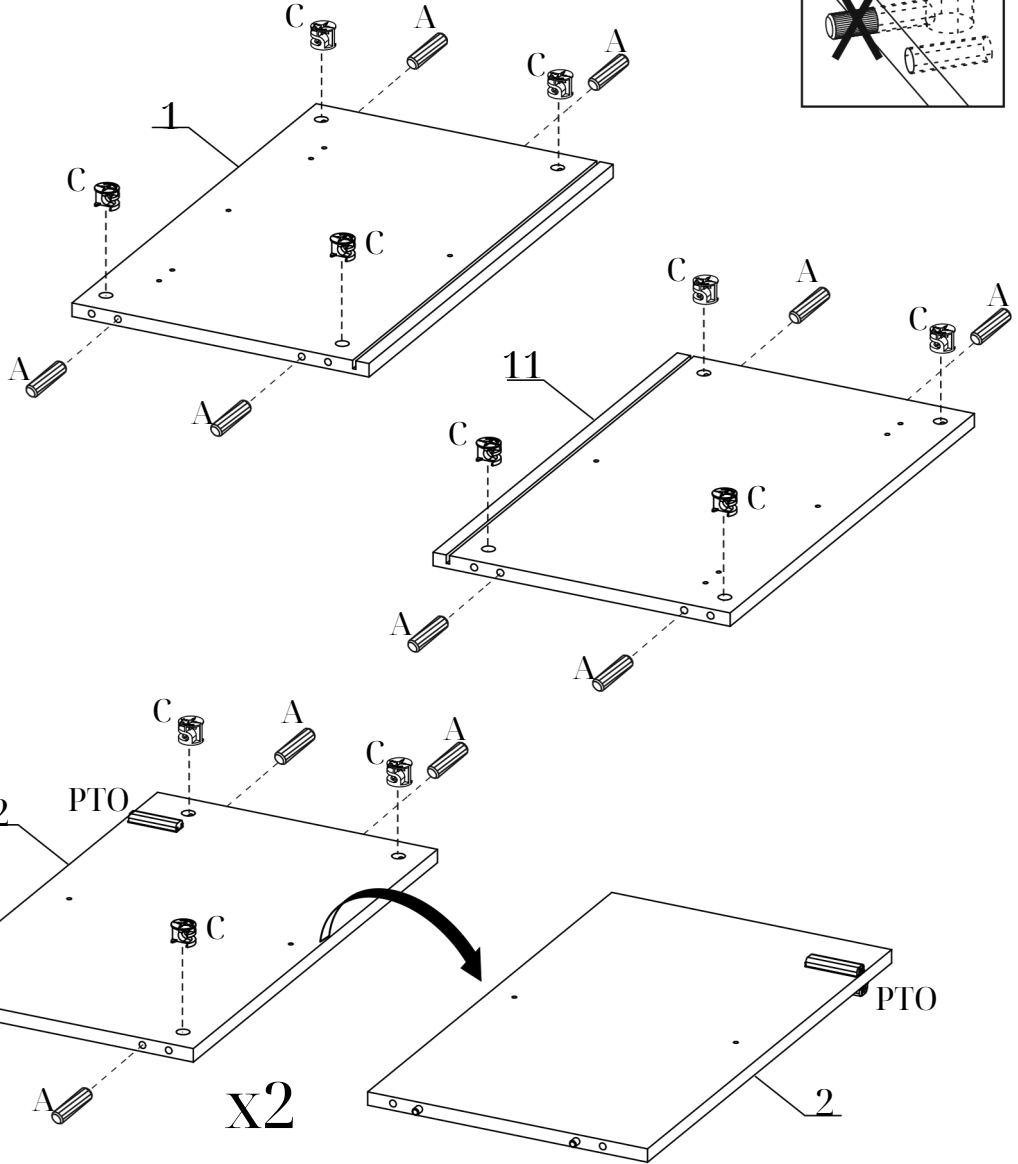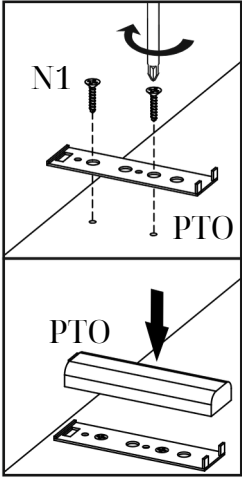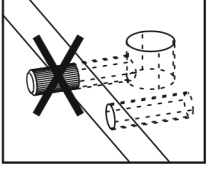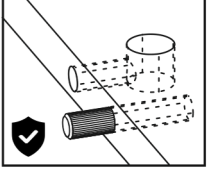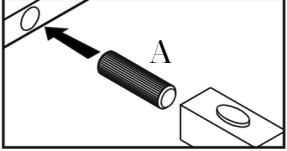




2

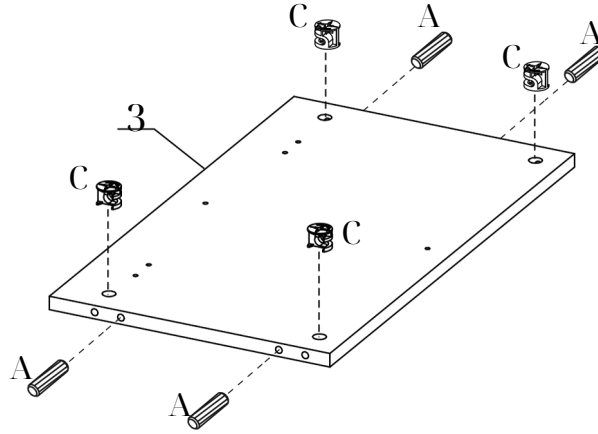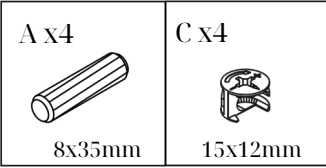

3

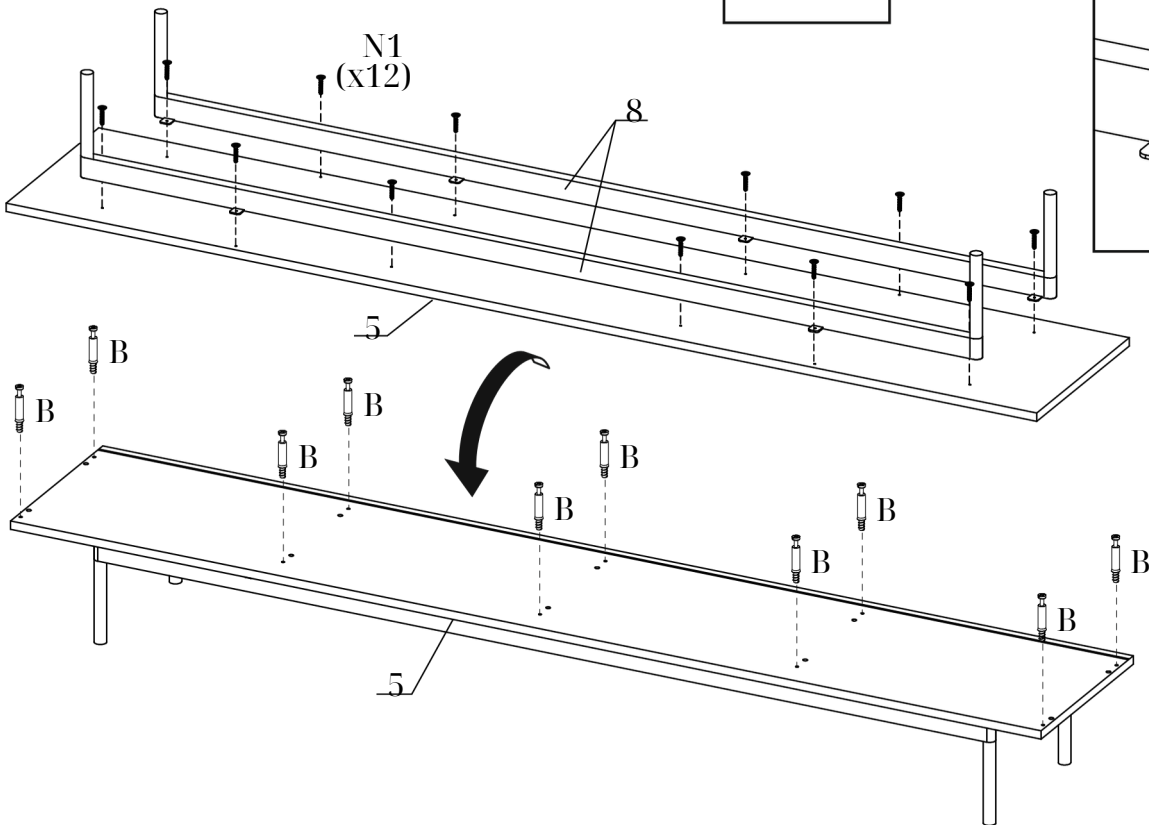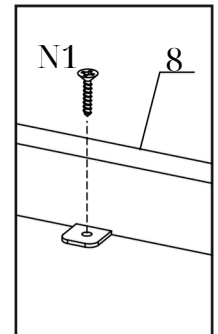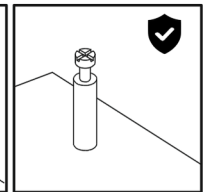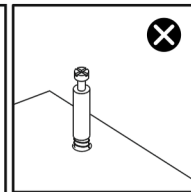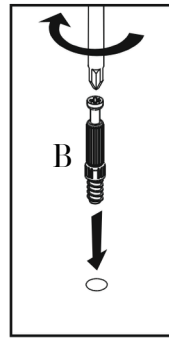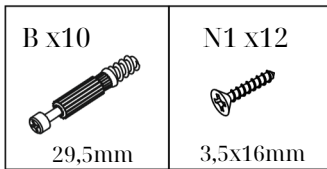

4

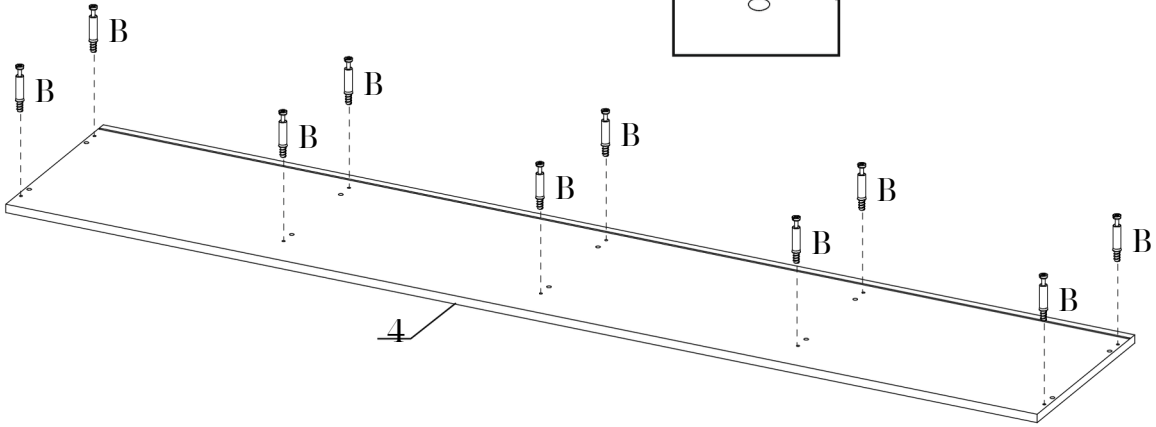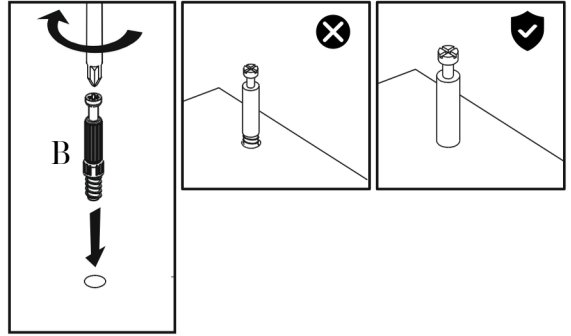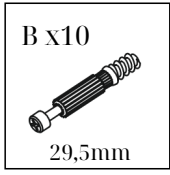

5

