



1na

# ASSEMBLY INSTRUCTION

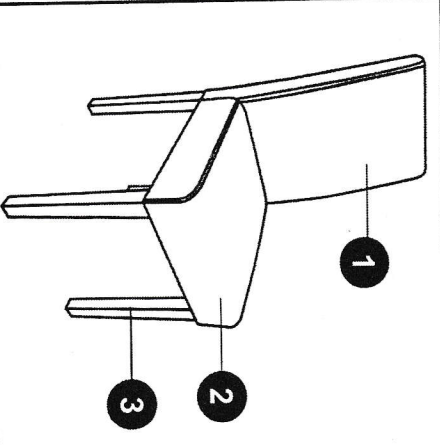


1

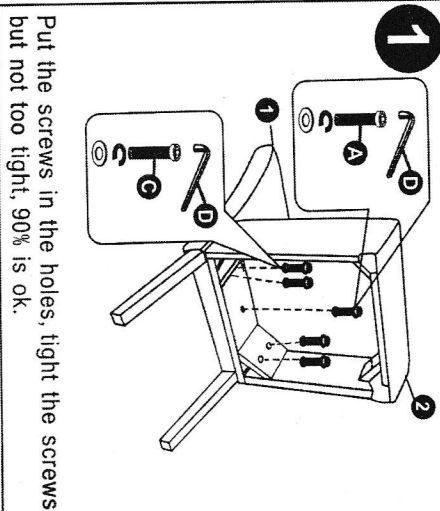


1

Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

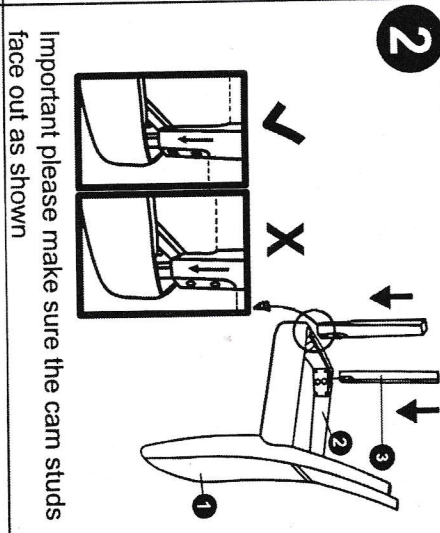


2

Important please make sure the cam studs face out as shown

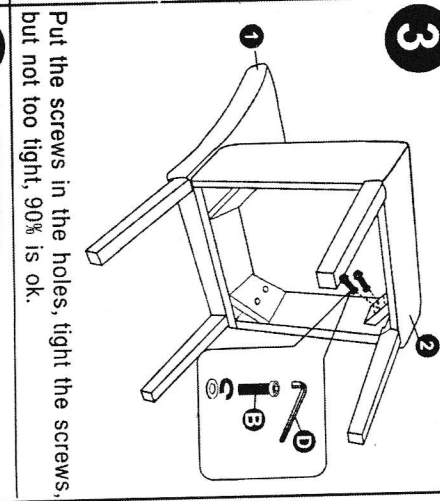


3

Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

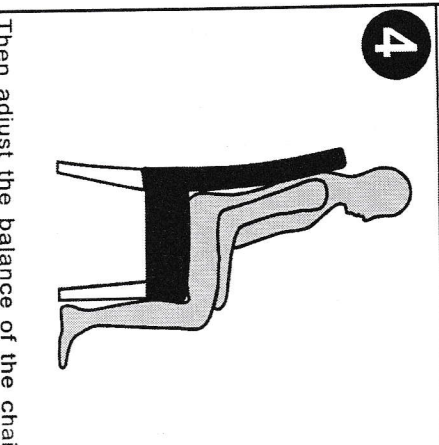


4

Then adjust the balance of the chair.

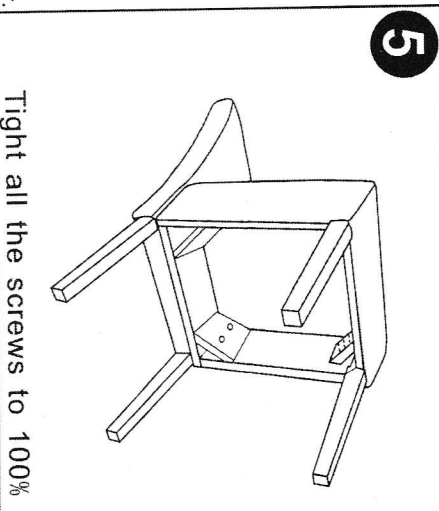


5

Tight all the screws to 100%

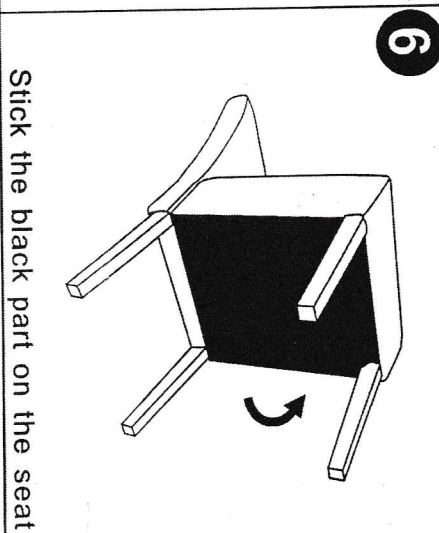



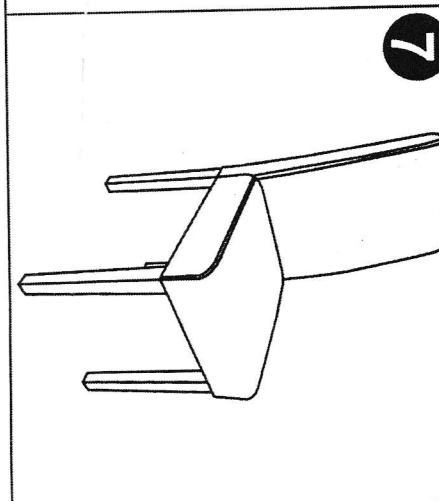

6

Stick the black part on the seat



7

| HARDWARE LIST |           |      |
|---------------|-----------|------|
| CODE          | PARTS     | QTY. |
| 1             | BACK      | 1    |
| 2             | SEAT      | 1    |
| 3             | FRONT LEG | 2    |

| HARDWARE LIST |   |      |
|---------------|---|------|
| CODE          | PARTS   | QTY. |
| A             | M8X50 MM   | 1    |
| B             | M8x70MM    | 4    |
| C             | M8X80 MM   | 4    |
| D             | ALLEN KEY  | 1    |