


MONTAGEANLEITUNG / ASSEMBLY INSTRUCTION BETT / BED LA FAMILIA

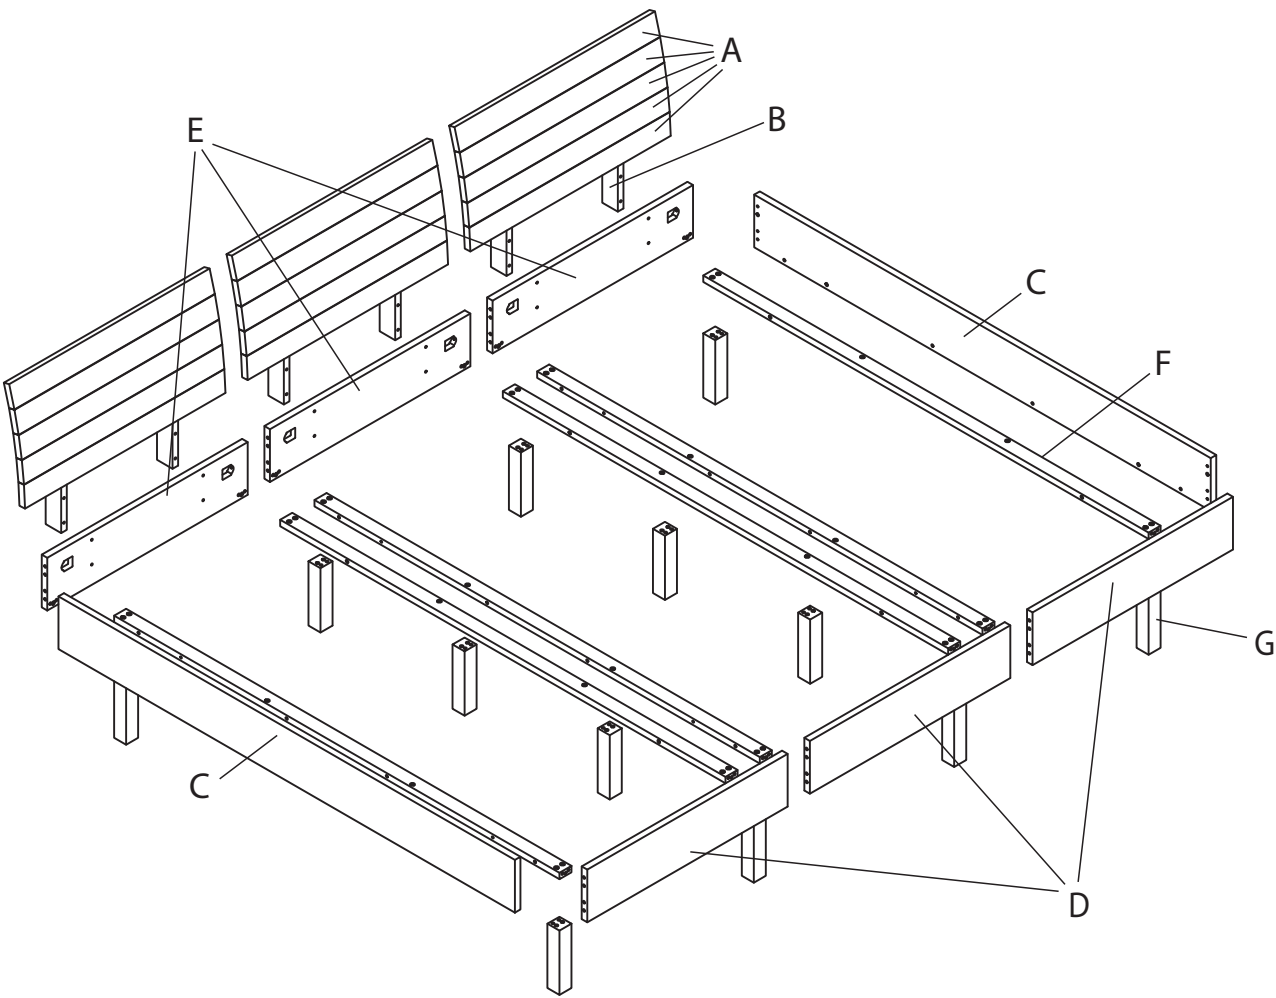


⌚ 60 minuten




bolt M8x100	bolt M8x170 (connecting)	half moon washer Ø 35	nut M8	screw M6x35	screw M6x70	screw M6x90	sleeve nut M6x30 (connecting)	wood dowel 10x30	screw M6x50	sleeve nut M6x15 (connecting)	wood screw 4x30	wood screw 3.5x16	mending plate 2x20x80
24	6	24	24	24	12	18	6	108	24	12	6	6	3

1.


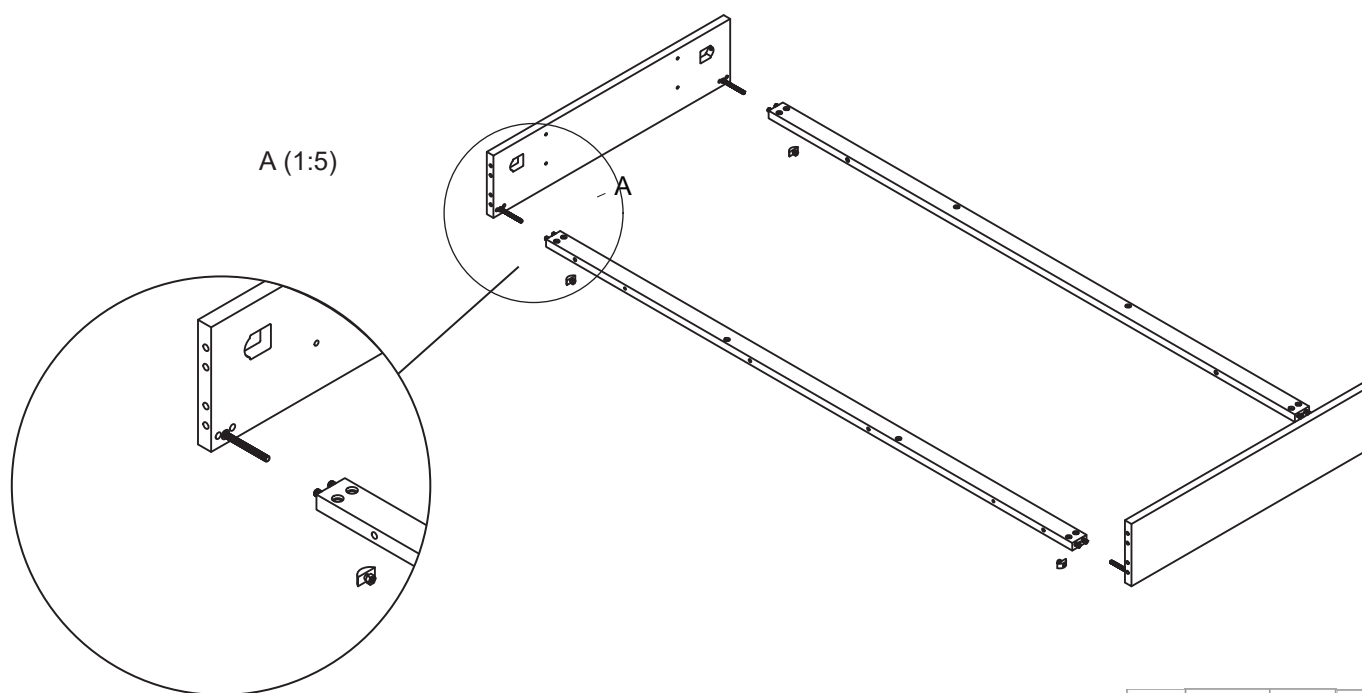


nut M8	half moon washer Ø 35	bolt M8x100	wood dowel 10x30
			
4	4	4	8

Wiederholen Sie den Vorgang 3 Mal. / Repeat the process 3 times.


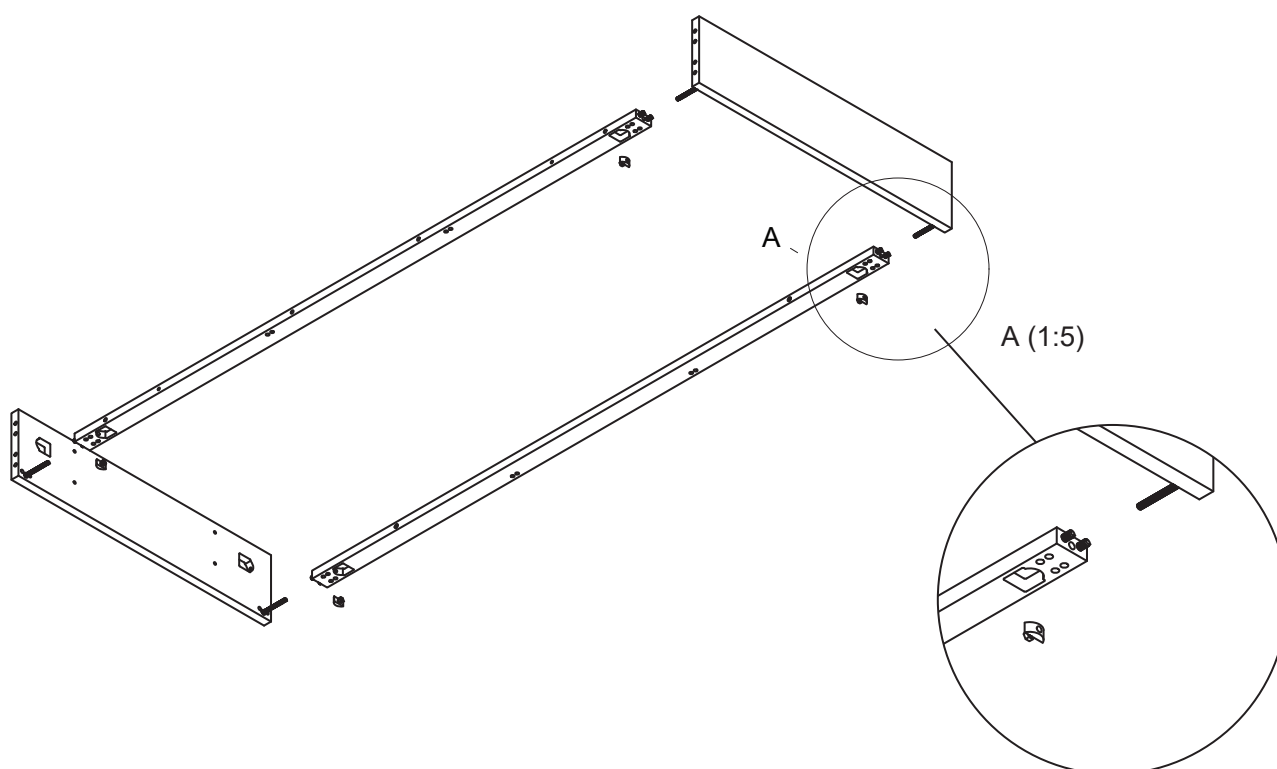


2.

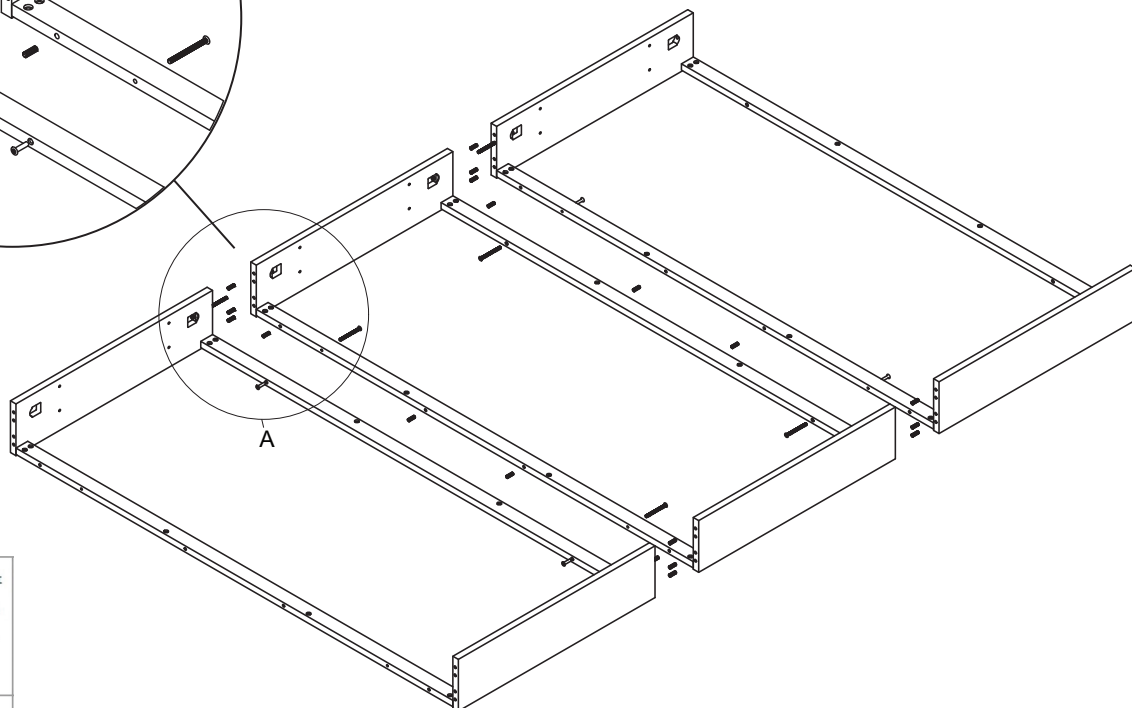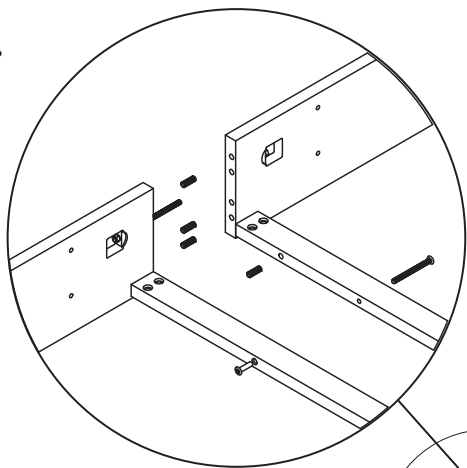


wood dowel 10x30	bolt M8x170 (connecting)	screw M6x90	sleeve nut M6x30 (connecting)
			
20	4	4	4

3.

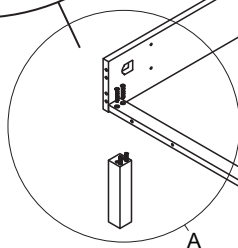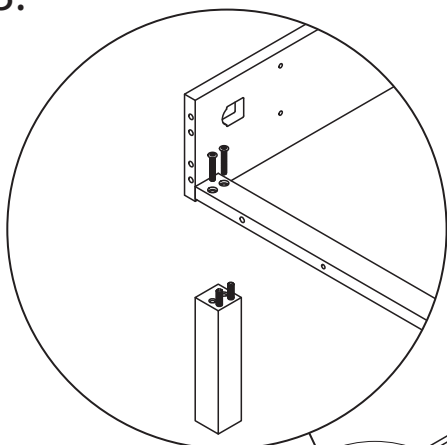


A

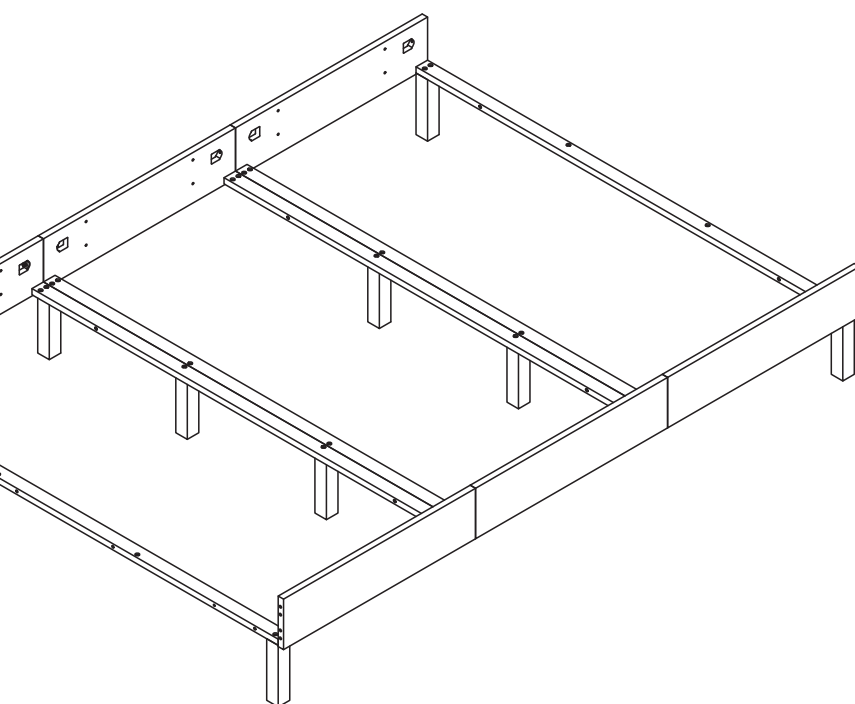


wood dowel 10x30	screw M6x35
	
24	24

4.

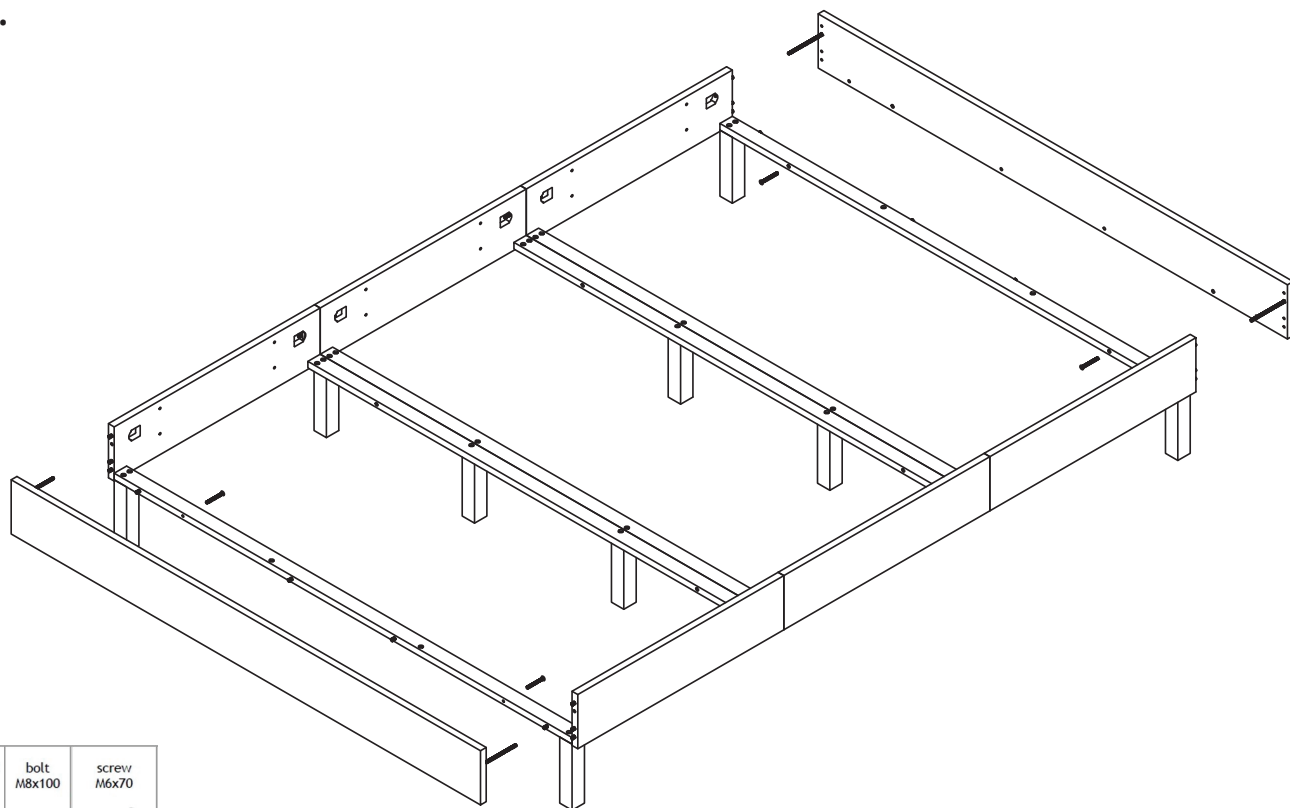

wood dowel 10x30	bolt M8x100	screw M6x70
		
20	4	4

5.


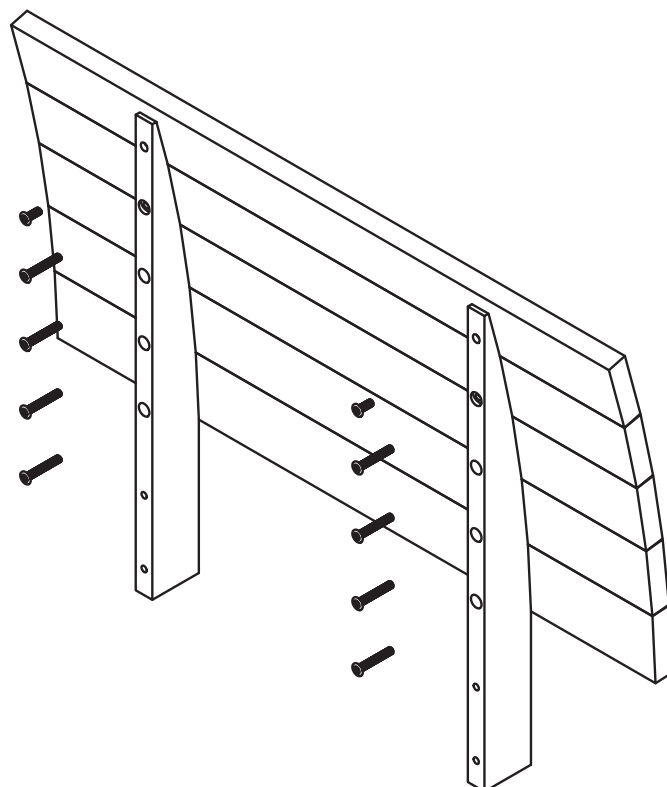


screw M6x50	wood screw 4x30
	
8	2

Wiederholen Sie den Vorgang 3 Mal. / Repeat the process 3 times.


6.

A (1:6)

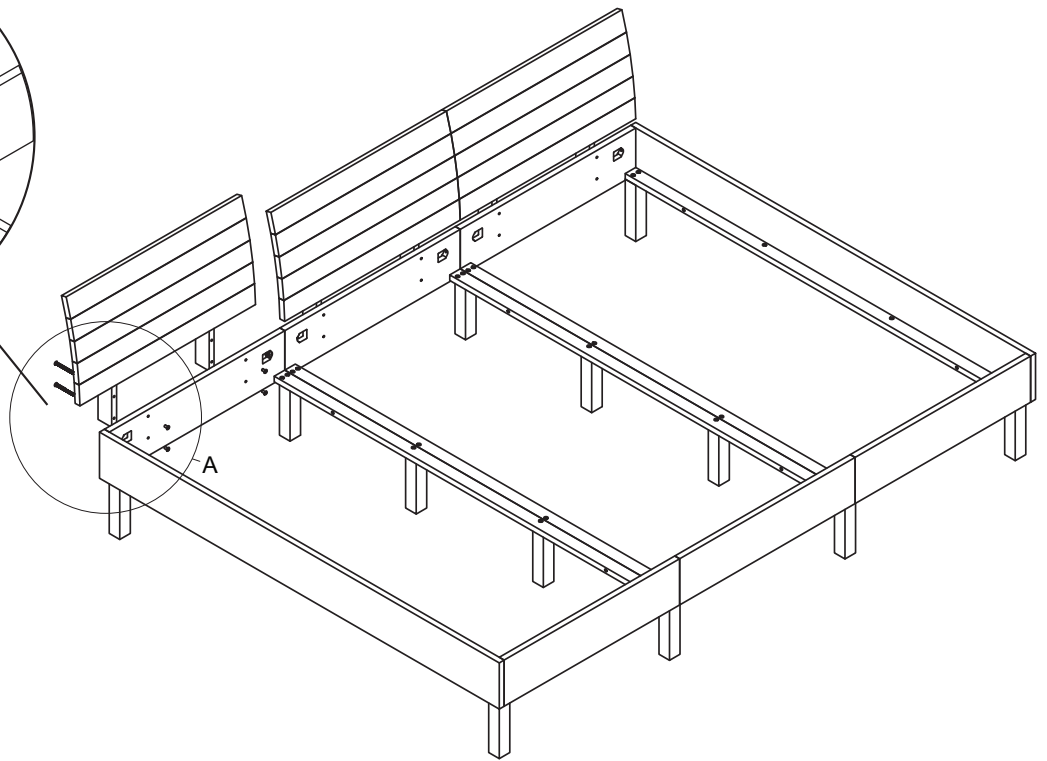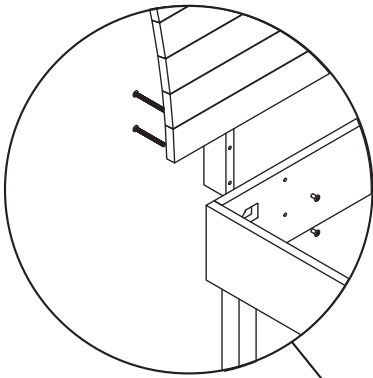


screw M6x90	sleeve nut M6x15 (connecting)
	
12	12

7.

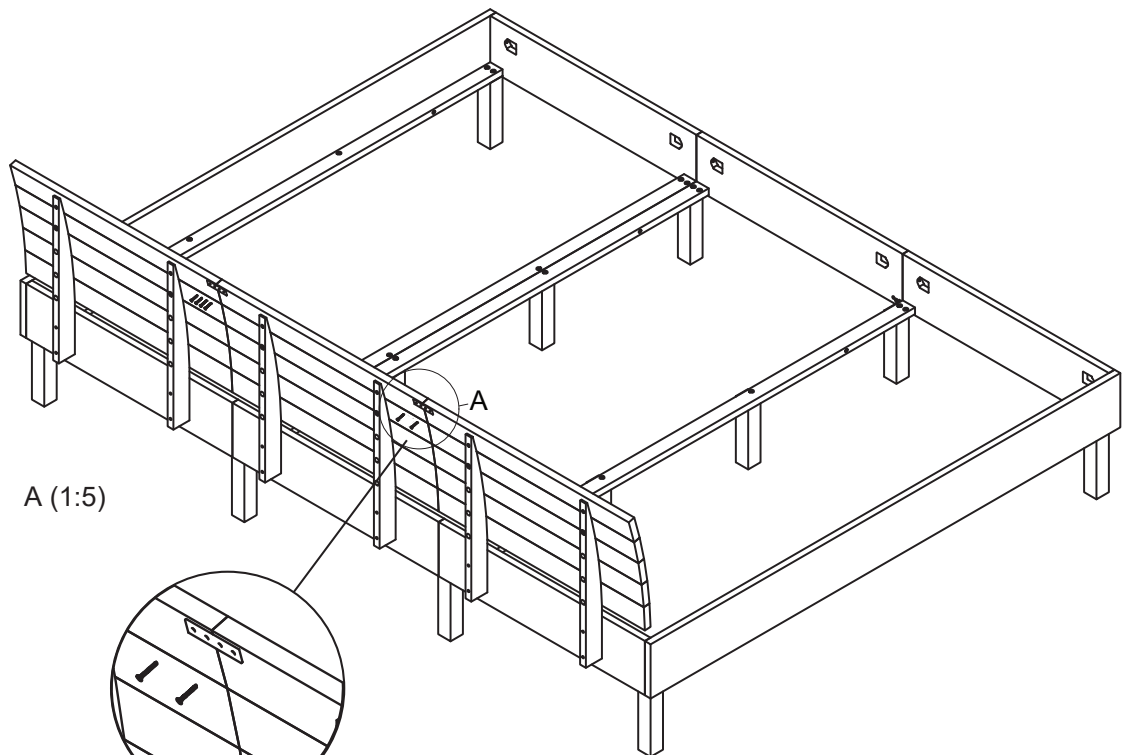

A (1:5)

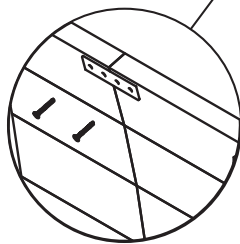

wood screw 3.5x16	mending plate 2x20x80
	
4	2