

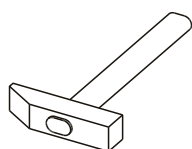
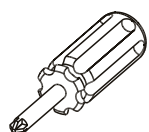
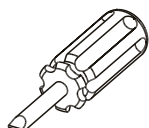
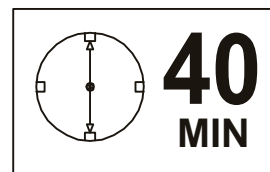
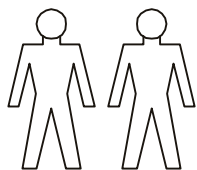
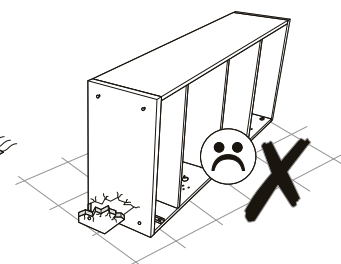
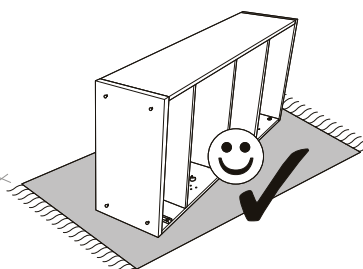
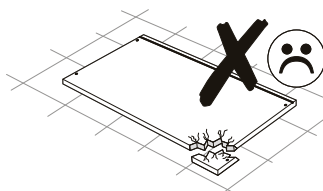
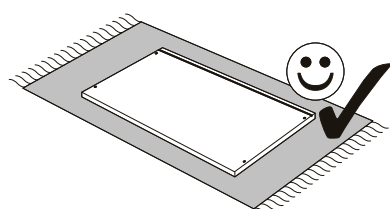



CAMRON Schuhschrank 902 2T






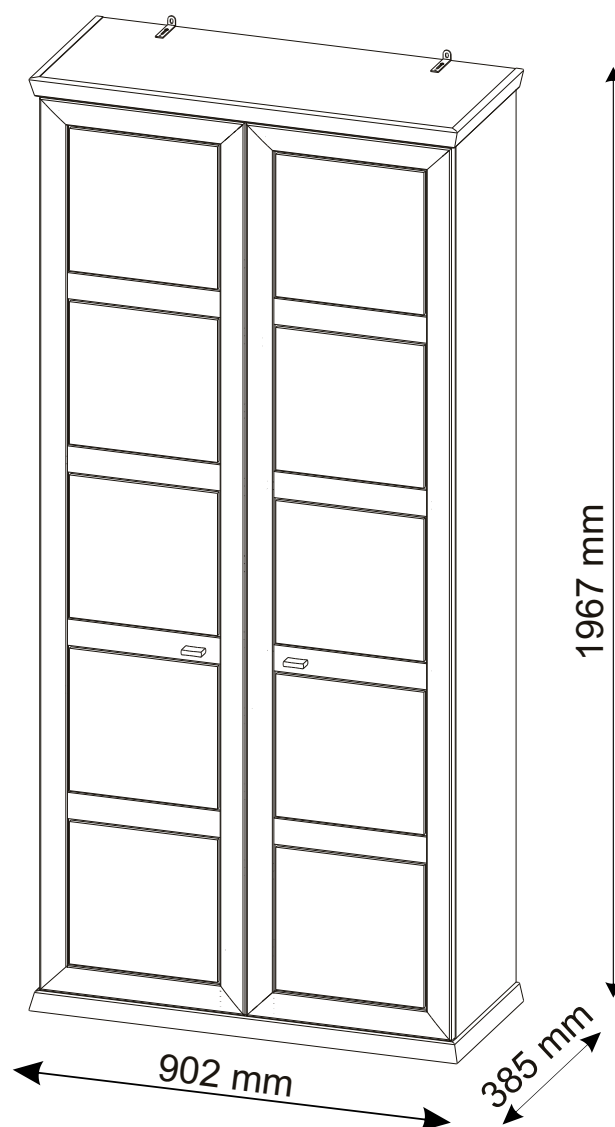



Ø8

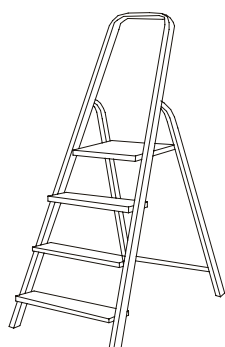

CAMRON Schuhschrank 902 2T





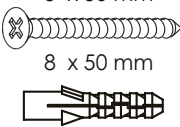
D0 3 x 15 mm  x24	U3  x4	D10 4 x 16 mm  x16
P0  x2	E0 5 x 50 mm 8 x 50 mm  x2	D21 5 x 13 mm  x2
Q3  x40	C0  x8	U2  x6
M1  x24	C2  x12	J10  x8
J3  x8	L6  x2	H2 4 x 22 mm  x4

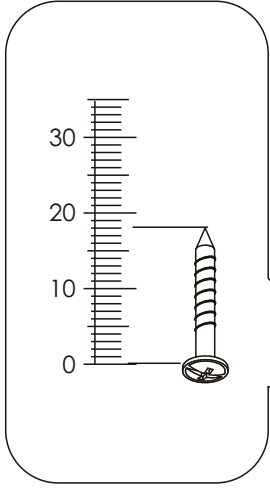



CAMRON Schuhschrank 902 2T

1	1909	348	16	x1	1/1
2	1909	348	16	x1	1/1
3	838	328	16	x1	1/1
4	838	328	16	x10	1/1
5	848	1919	3	x1	1/1
6	1880	432	25	x1	1/1
7	1880	432	25	x1	1/1
8	902	385	40	x1	1/1
9	902	385	40	x1	1/1
					1/1

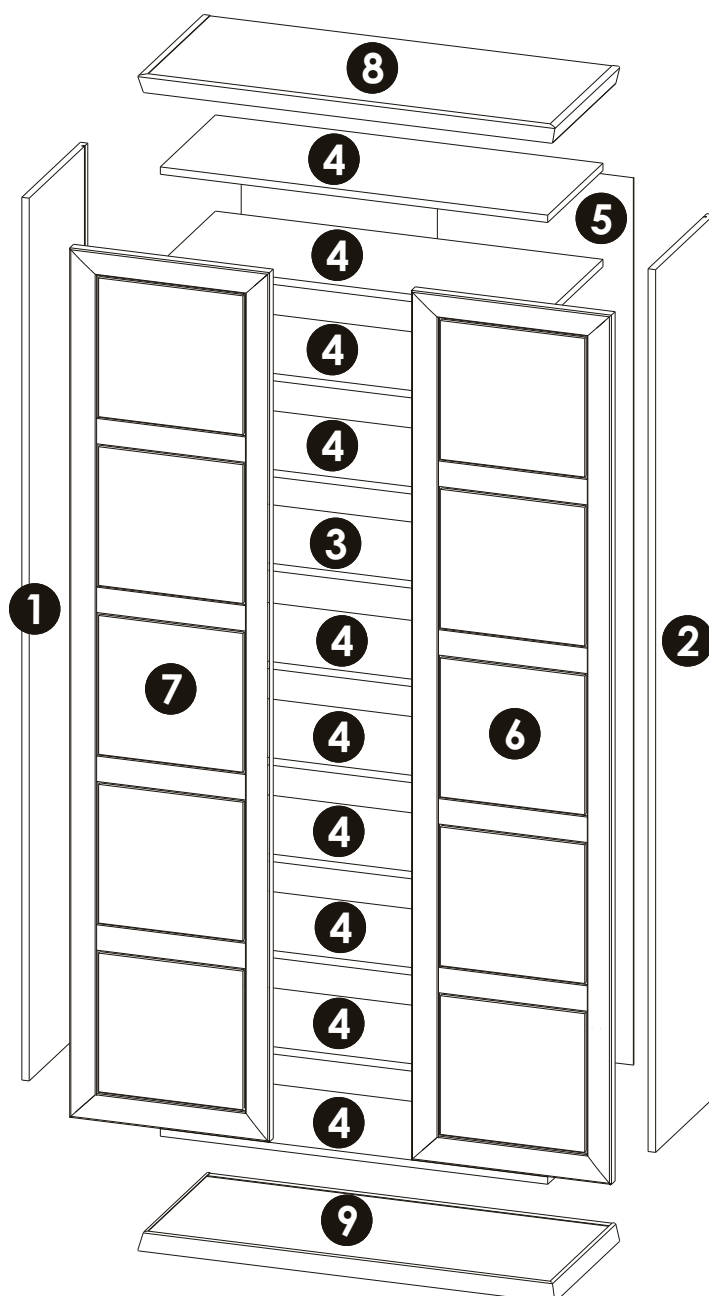
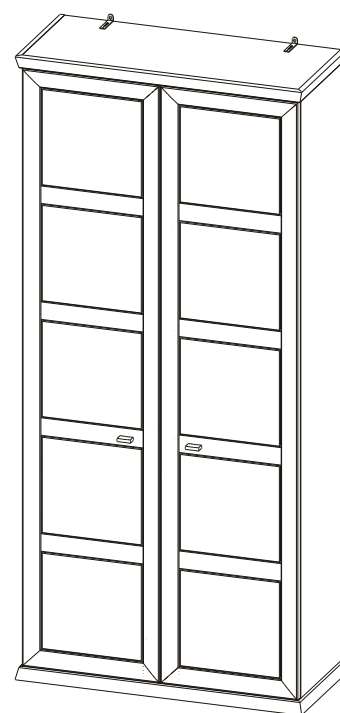





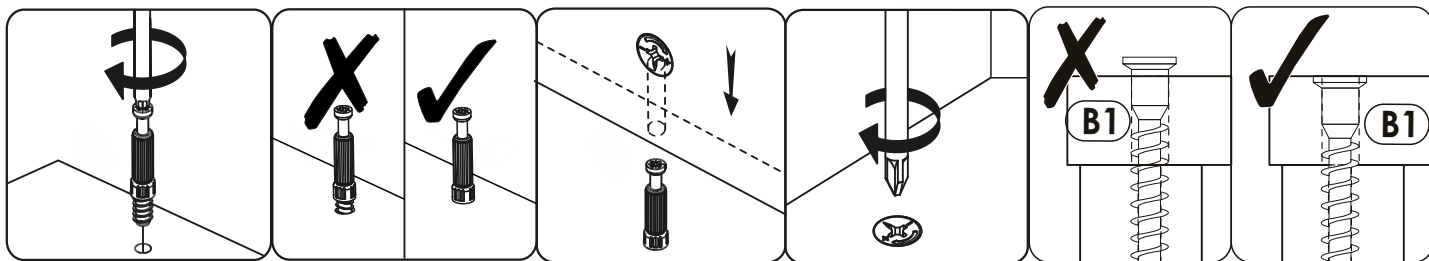


1 ►

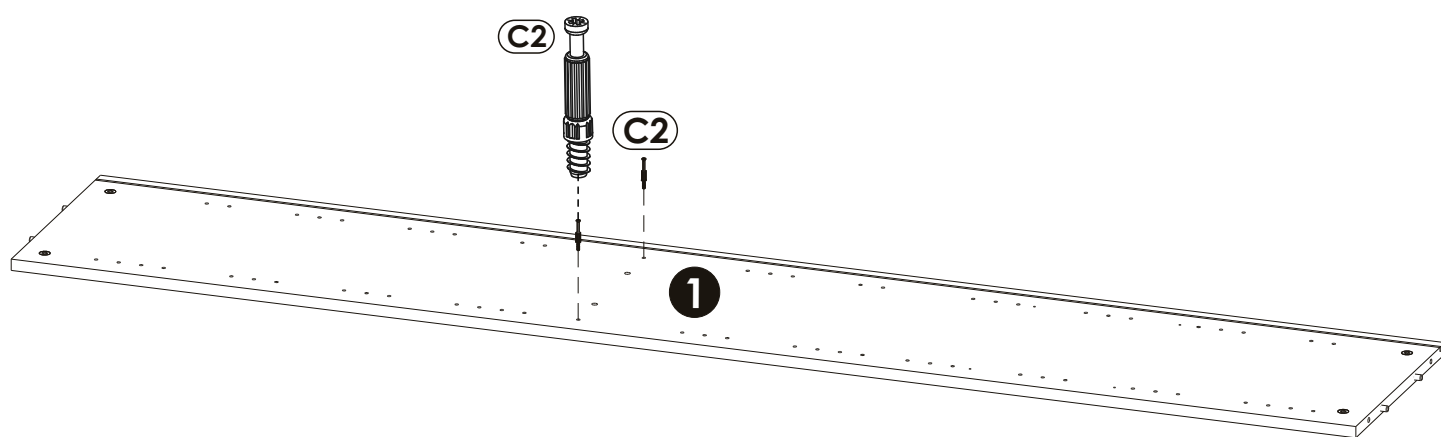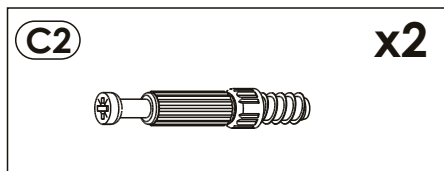



2 ►

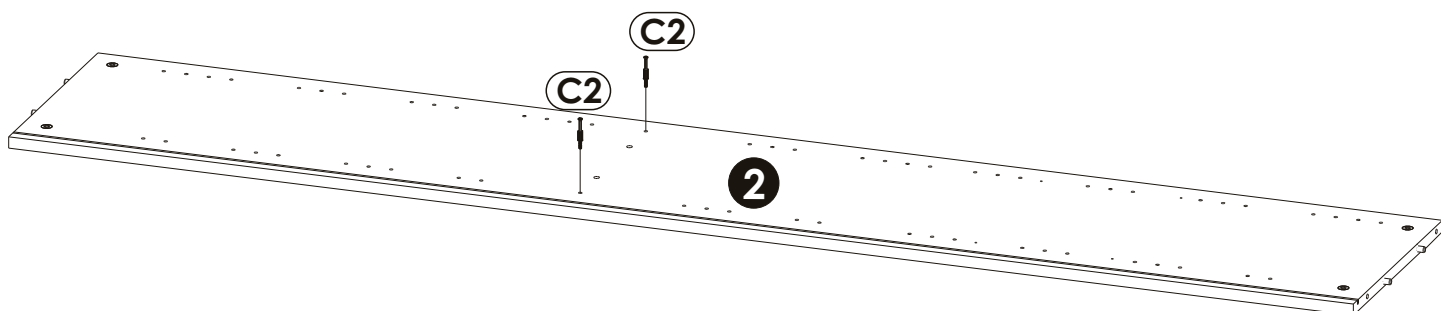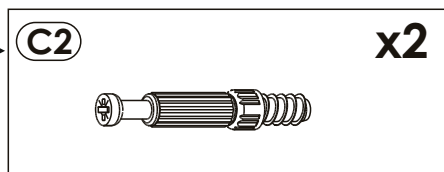

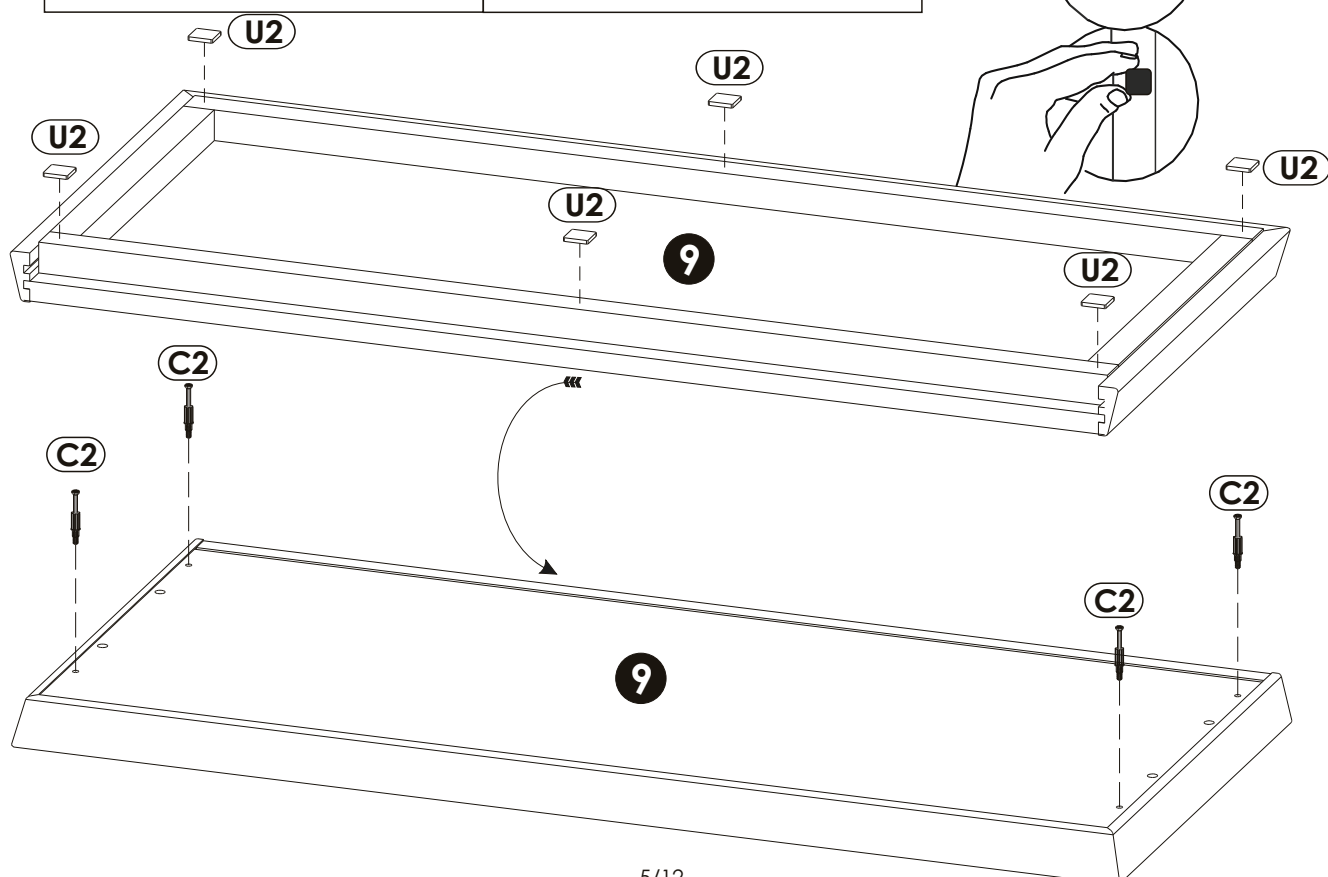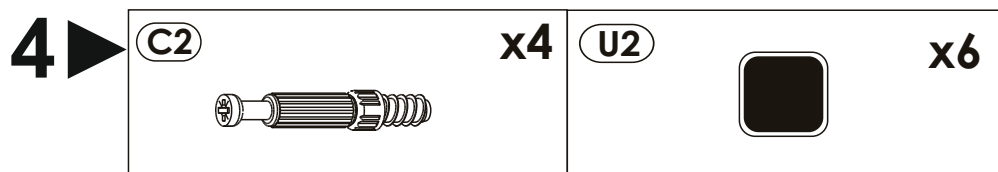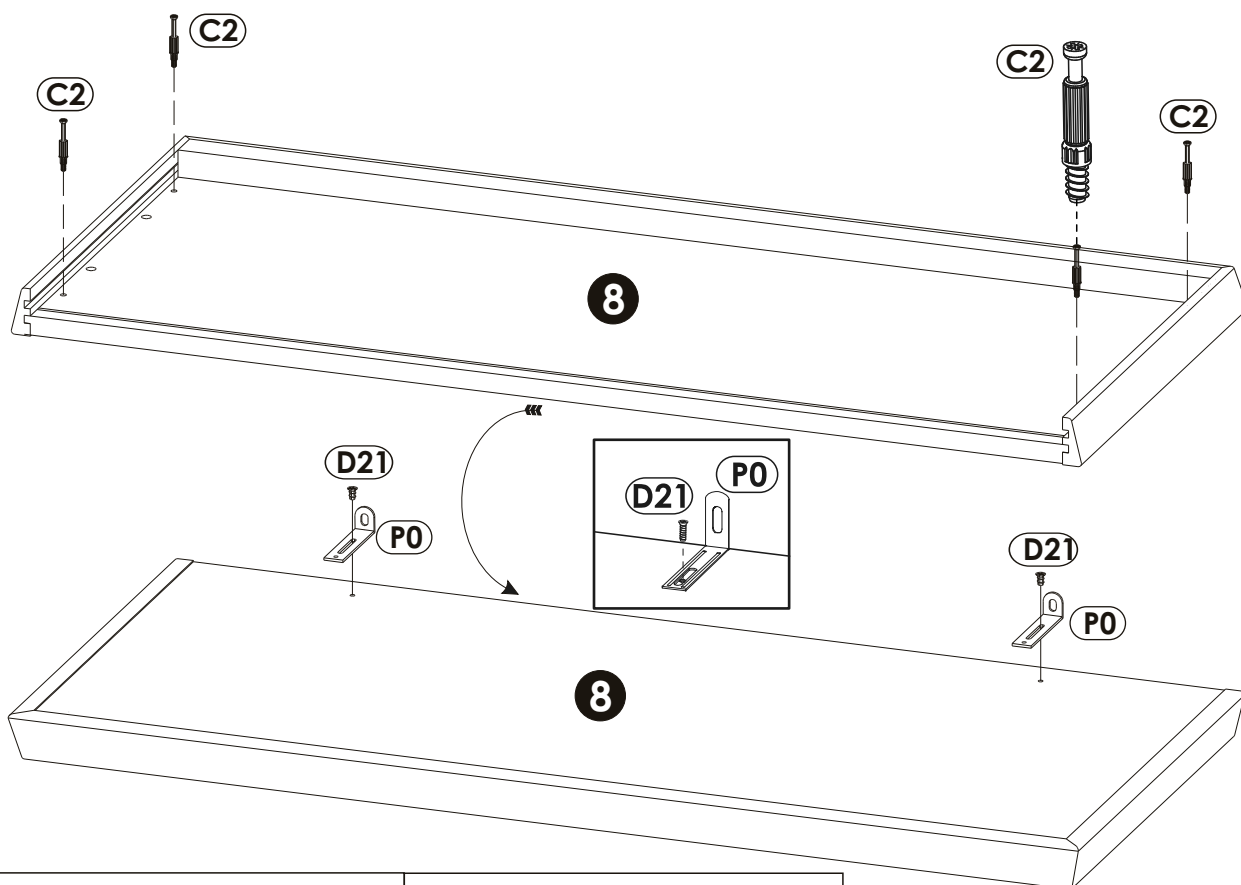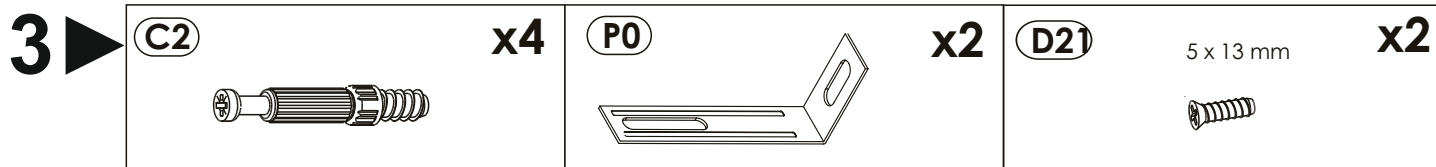



5 ▶

J10  x4	L6  x1	U3  x2
H2  4 x 22 mm x2	D10  4 x 16 mm x8	


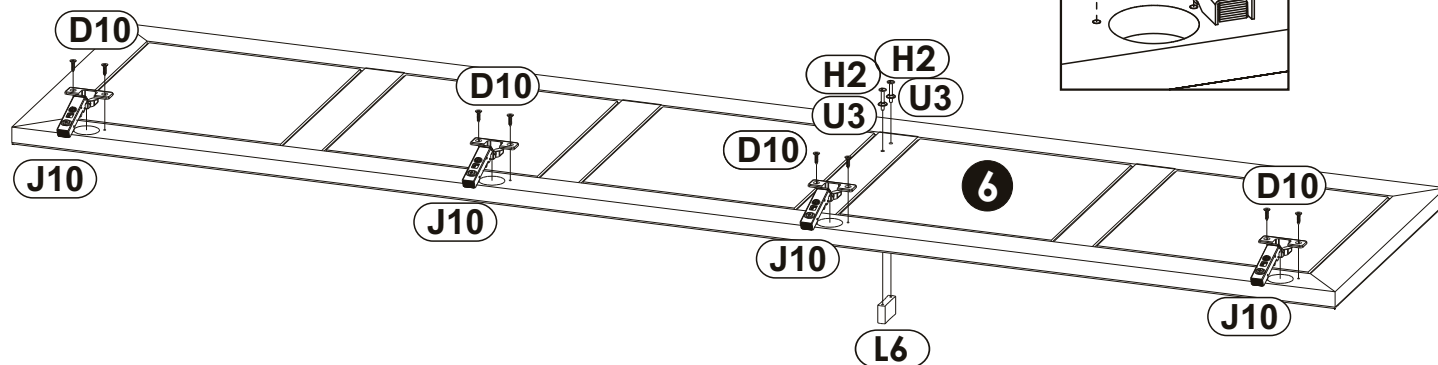


6 ▶



J10  x4	L6  x1	U3  x2
H2  4 x 22 mm x2	D10  4 x 16 mm x8	

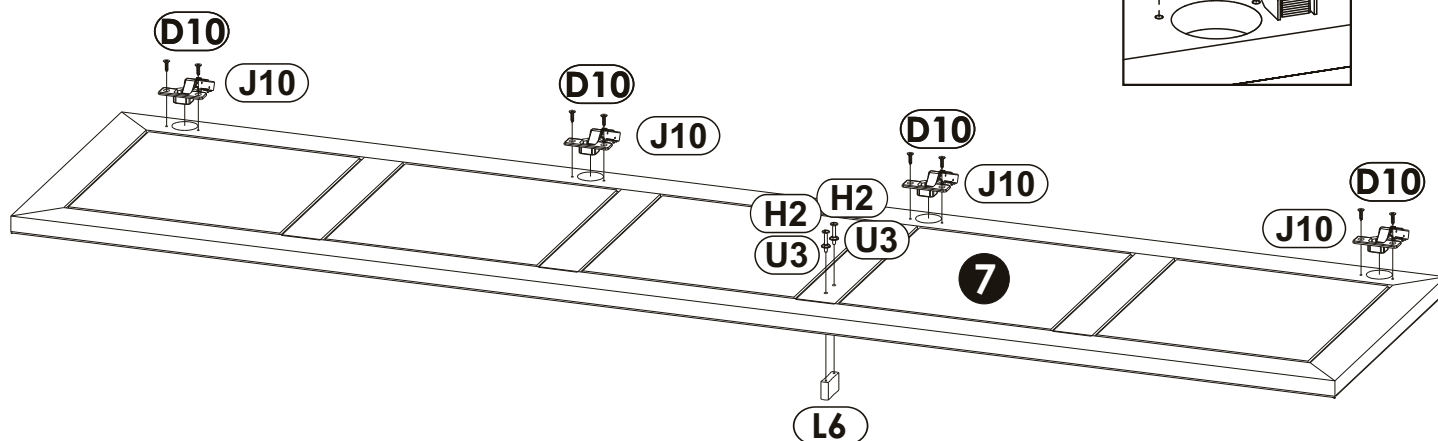



7 ►

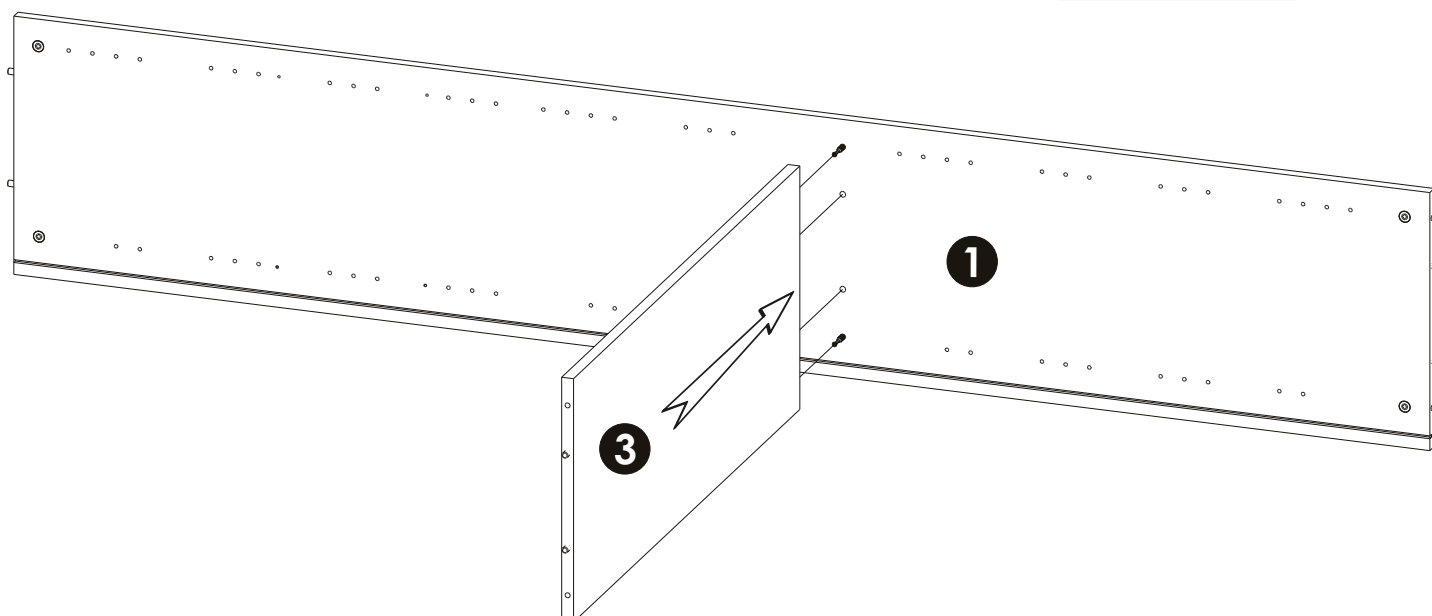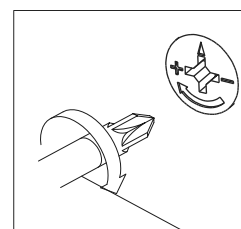


8 ►

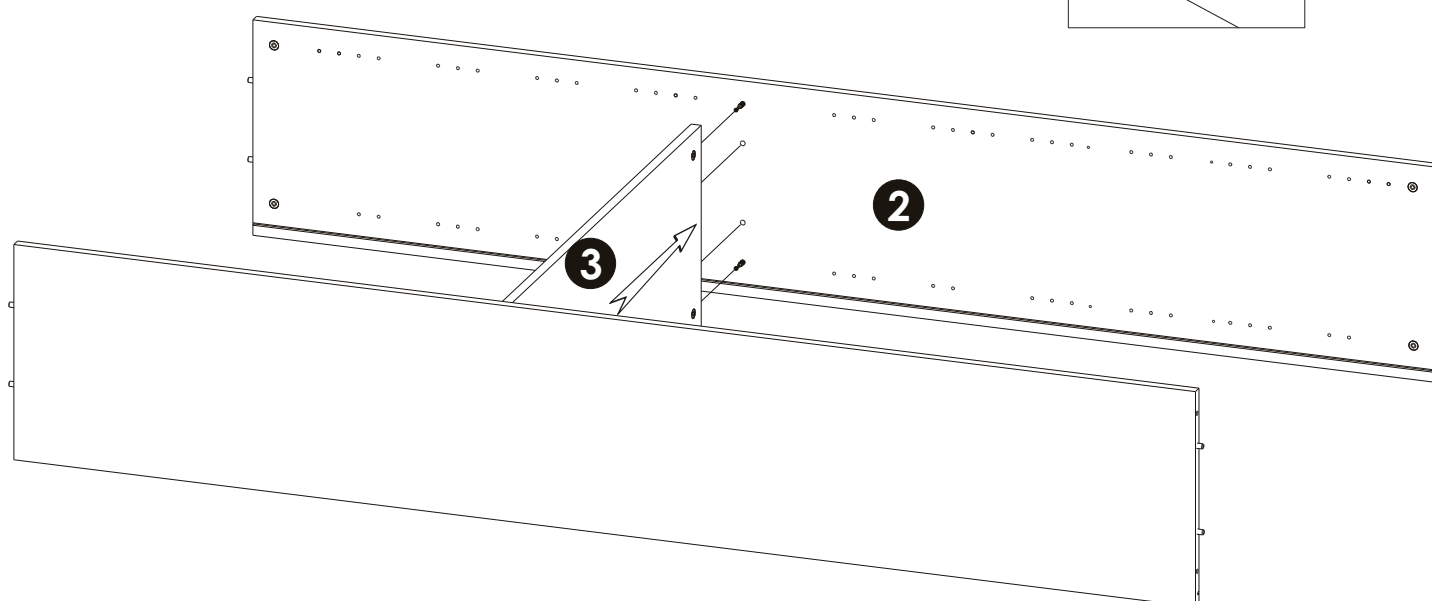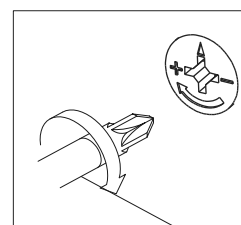



9 ►

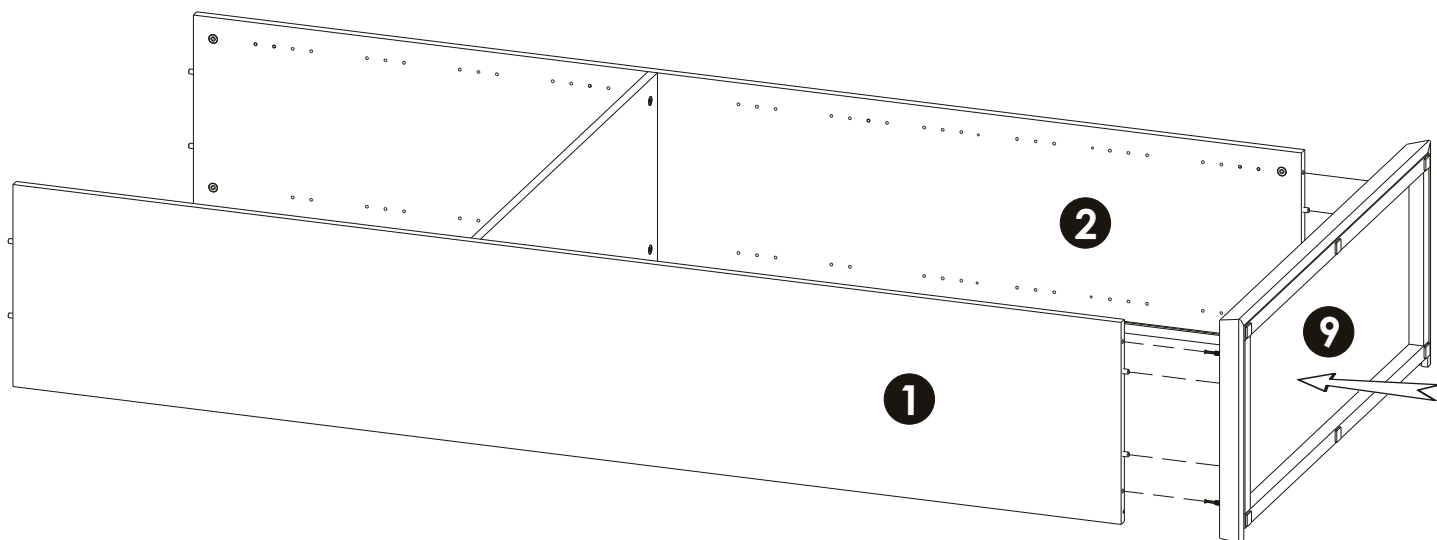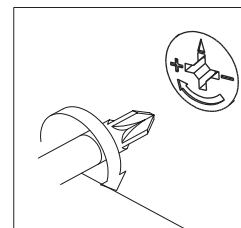









10 ►


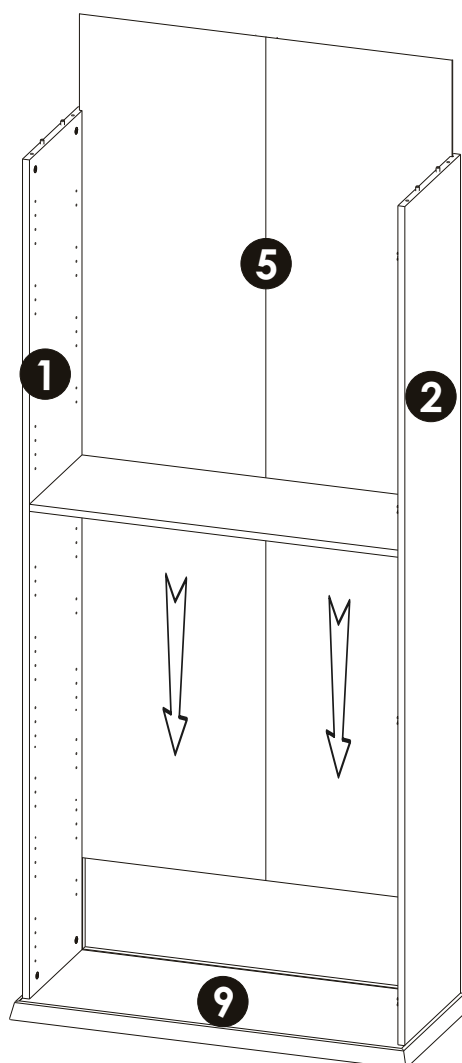


11 ►

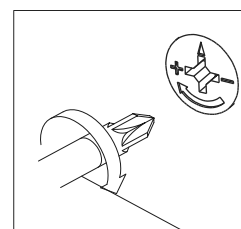
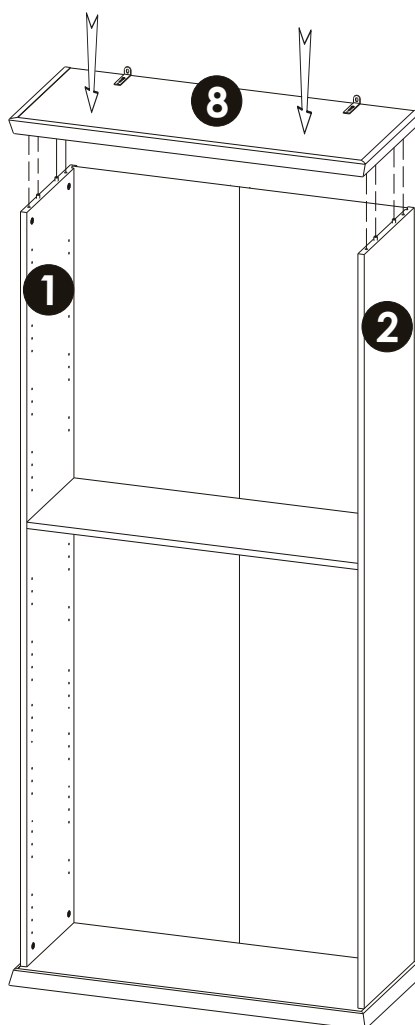


12 ►

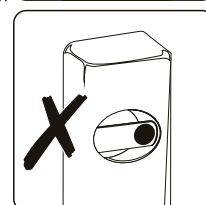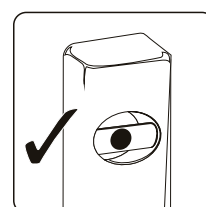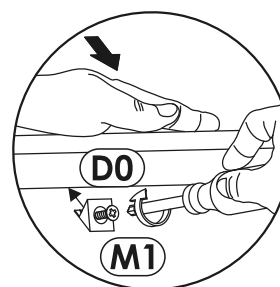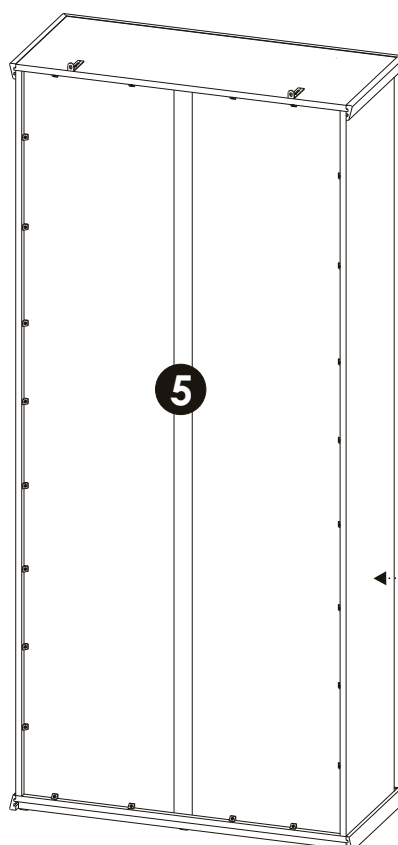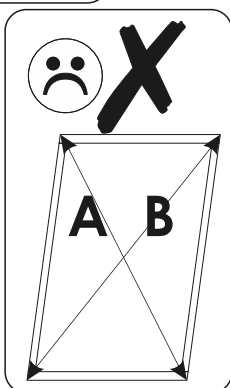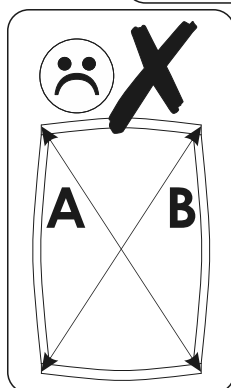
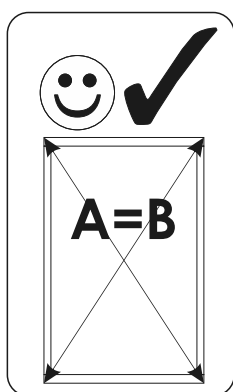
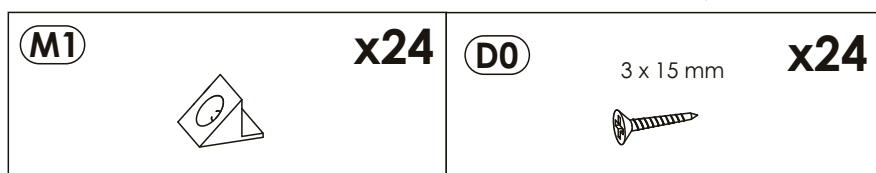


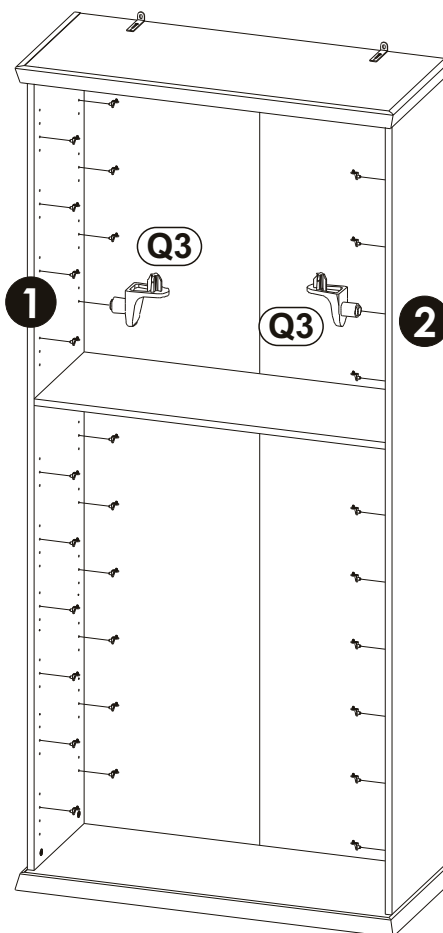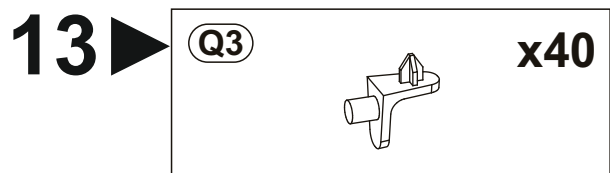





14 ►

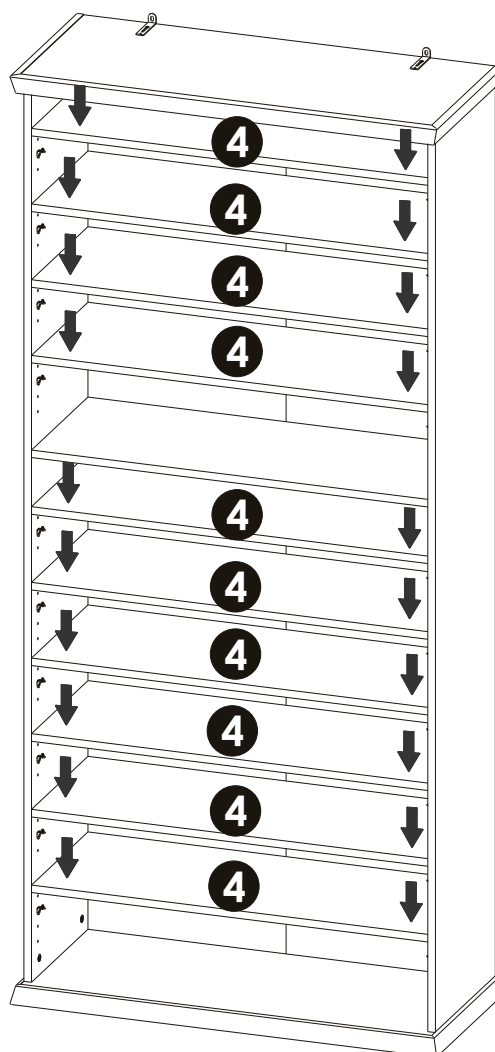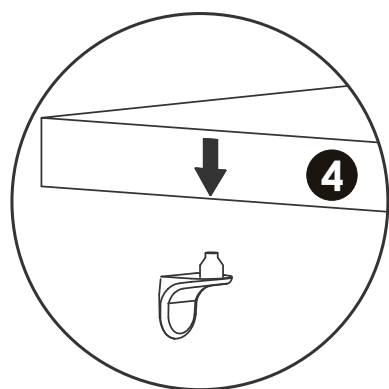




15 ►

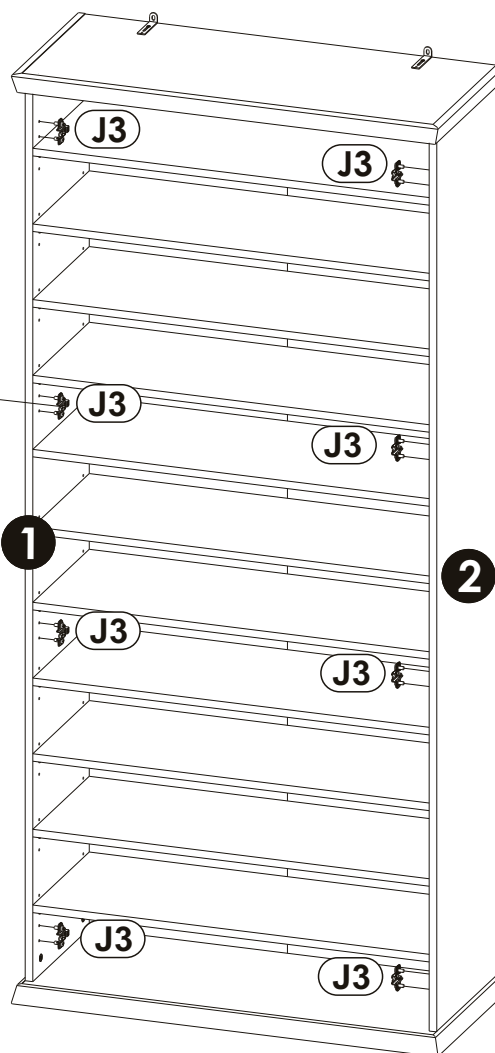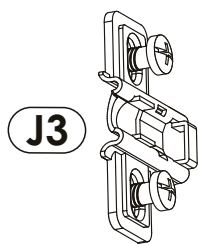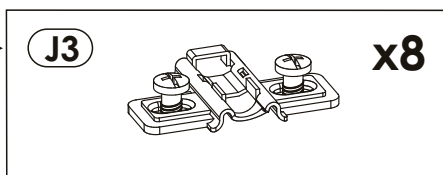

16 ►

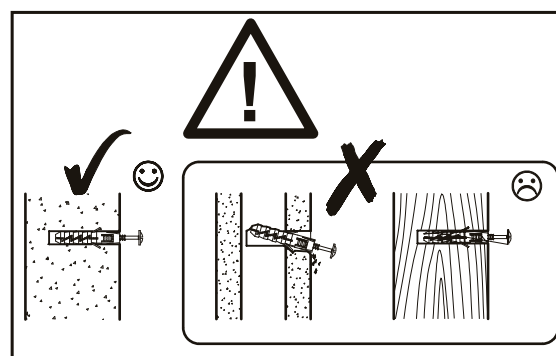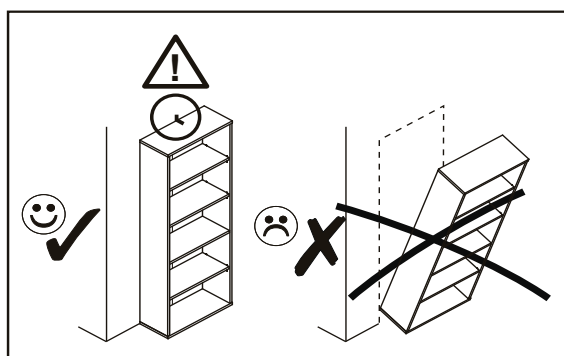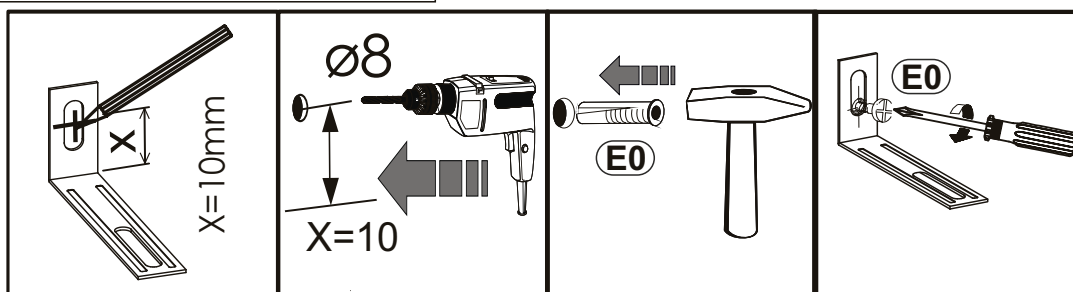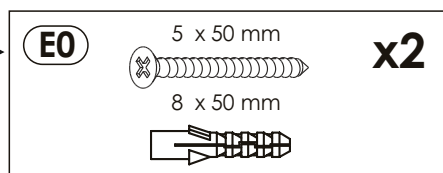

17▶

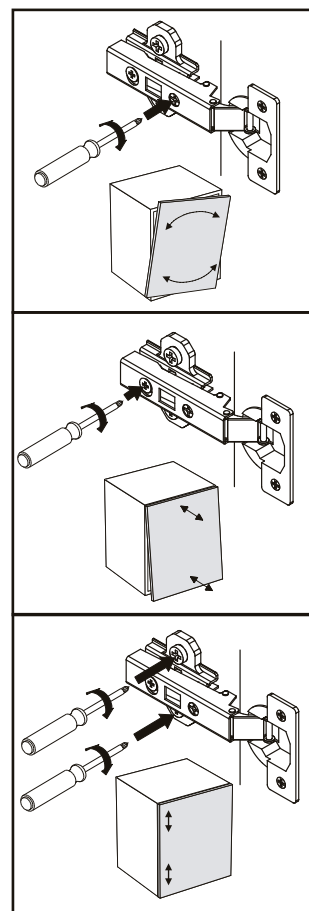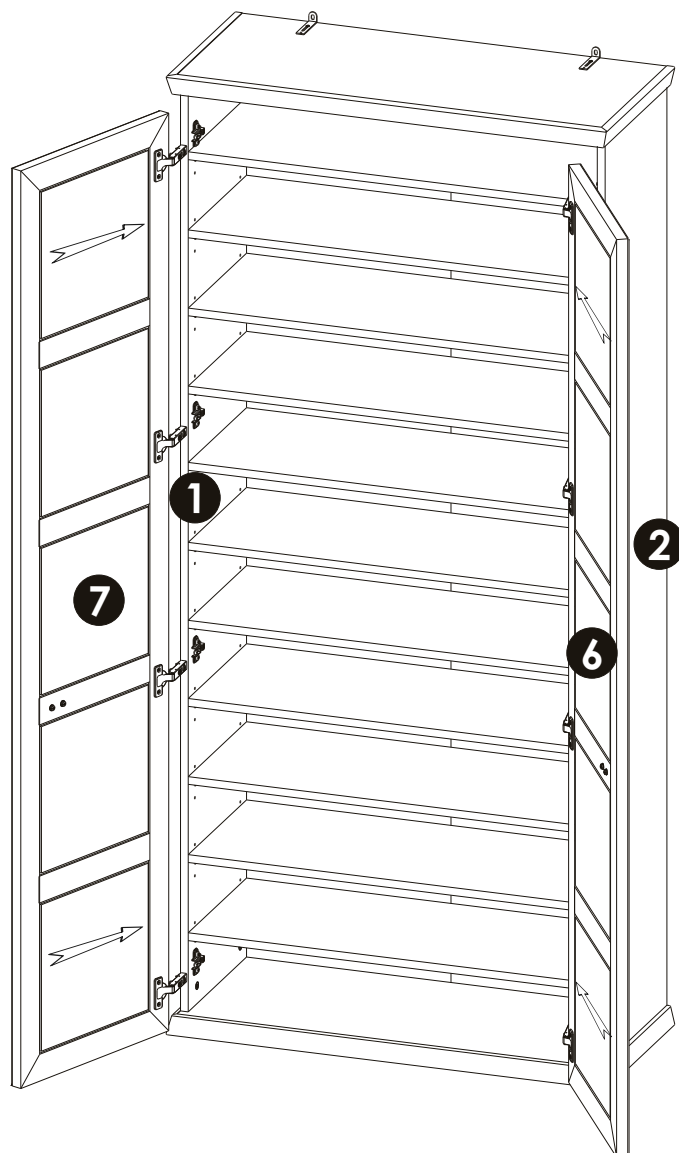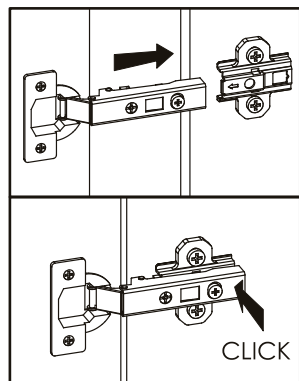

18▶

