

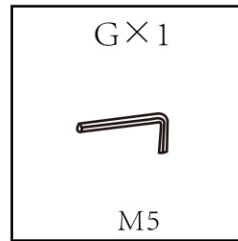
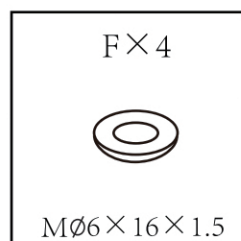
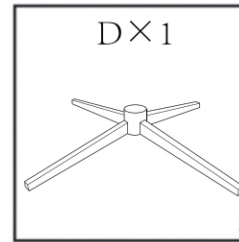
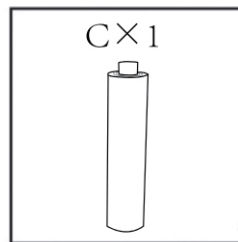
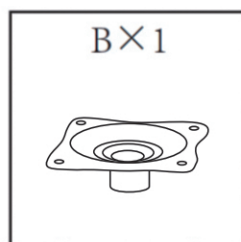
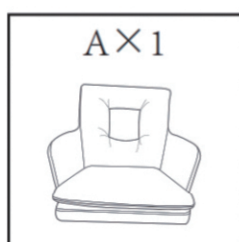


07580206-01/02/03/04

INGO


XXXLutzKG
RomerstraBe39,
AT-4600Wels/Austria

novel

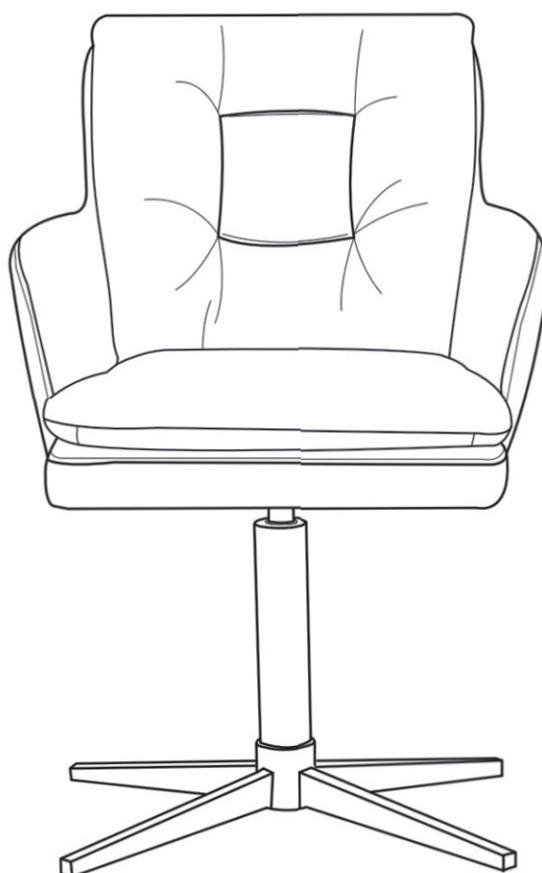

1


Step 1: Put Part C on Part D
and press tight

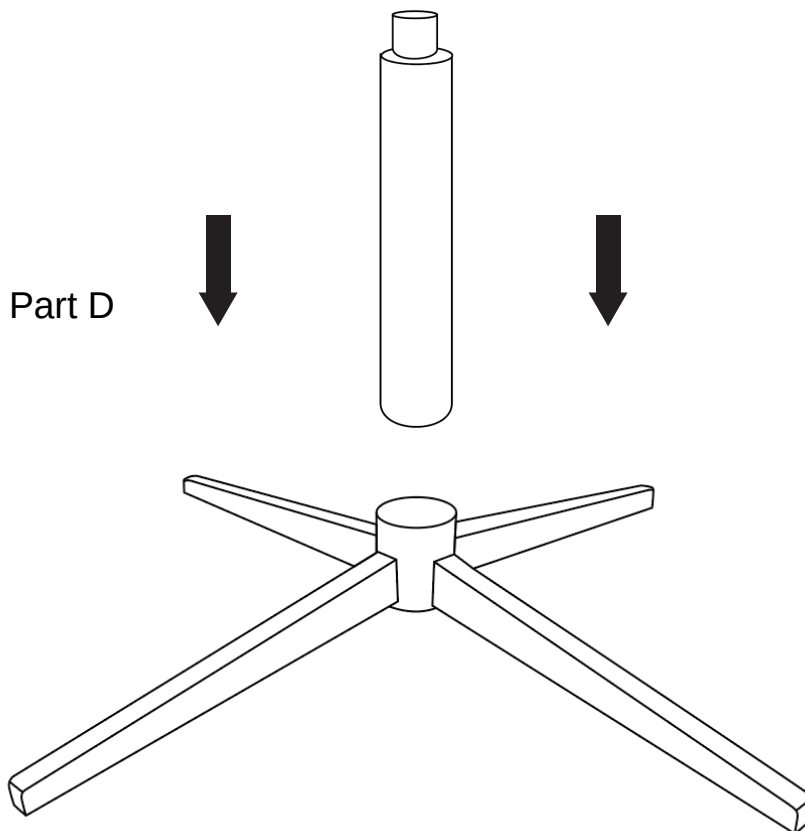

C×1




D×1




2

Step 2: Put Part B on Part C
without pressing

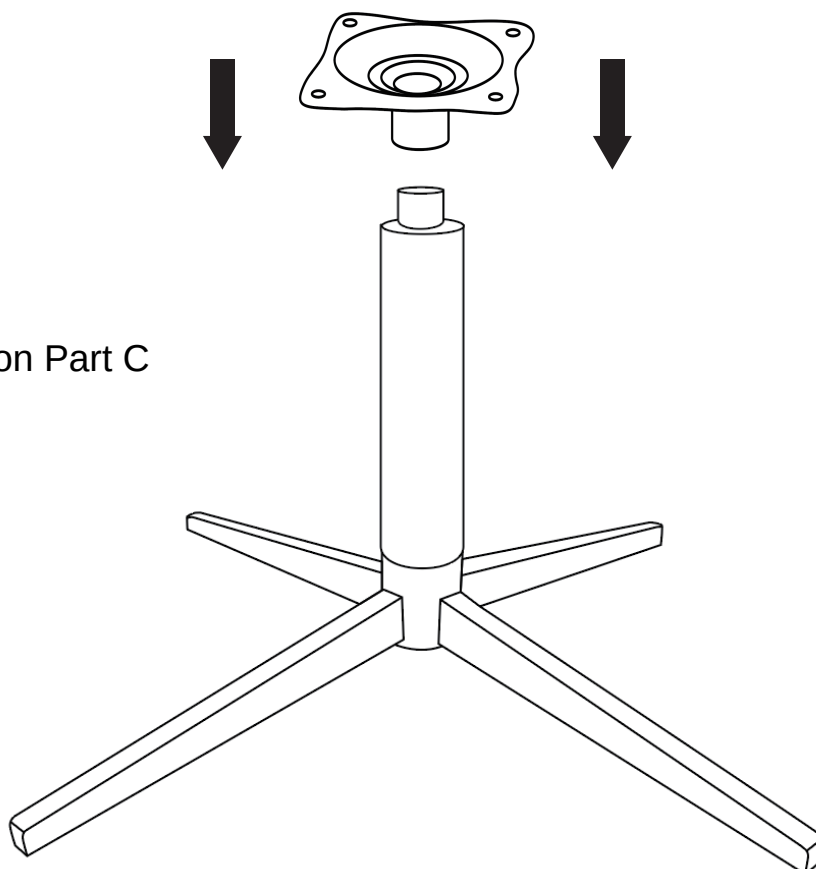


B×1





3

Step 3: Place the frame down
on floor and make Part B
and leg level

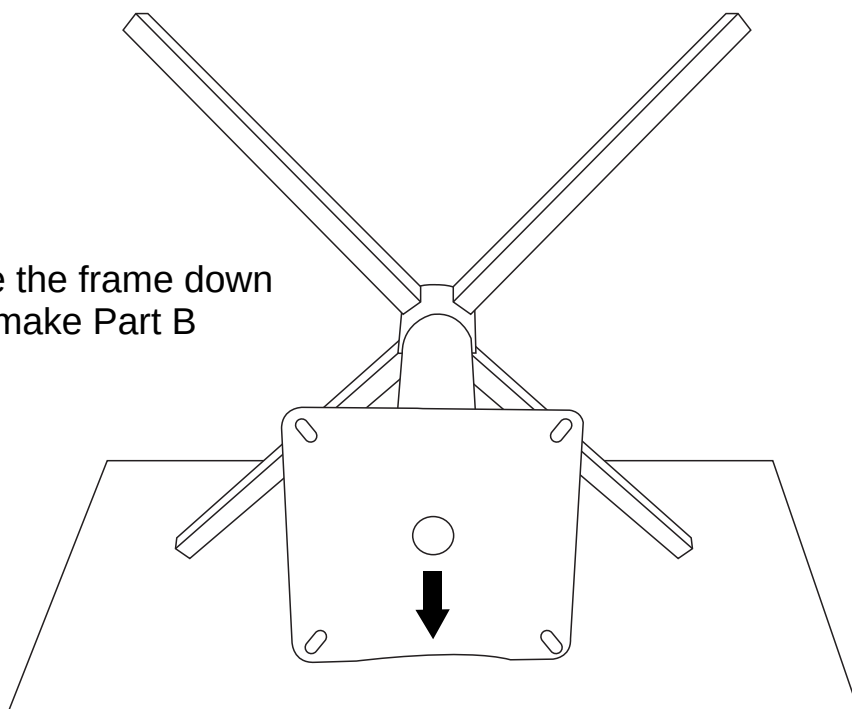


4

Step 4: Press tight Part B

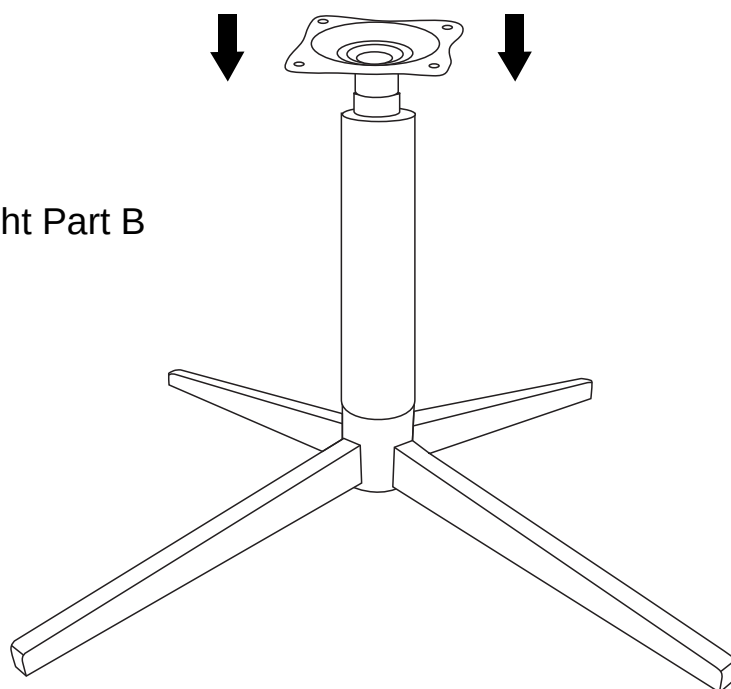

5

Step 5: Tighten the screws

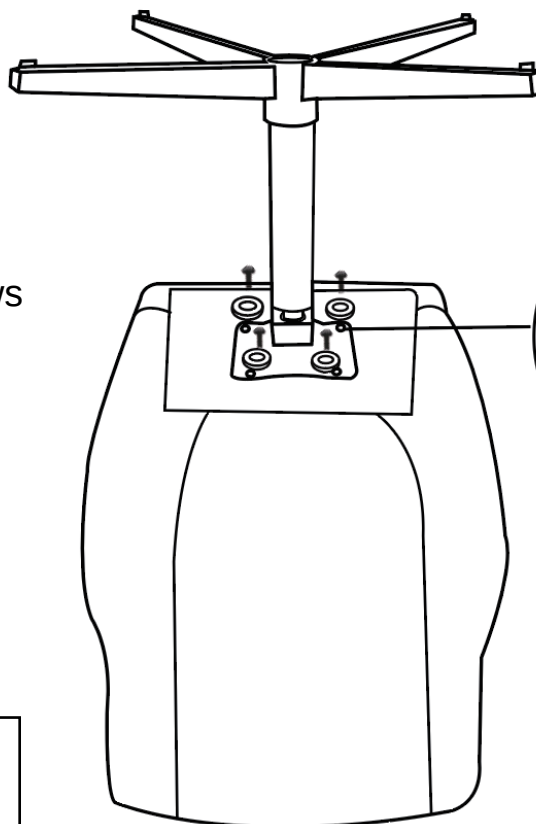

E×4



M6×20mm

F×4



Mφ6×16×1.5

G×4



M5

6

