

20 MIN


2 X



(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU


(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

MODEL "MM 131 ARIANA"

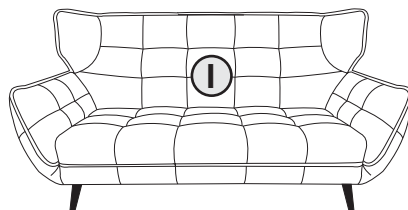

2ER

1/1



H180

x4



H170

x1



6MM

x1



x1





6X30

x12



hardware bag/ sachet matériel/ zubehorbeutel/ sacchetti materiale/ bolsa de materiales/ worek materiałowy

pre-assembled/ pre assemble/ vormontiert/ premontato/ wstępnie/ zamontowane




①

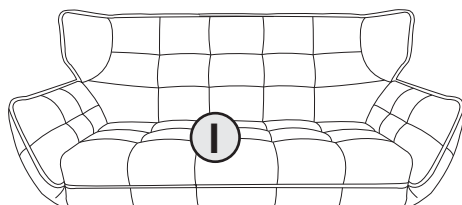


②

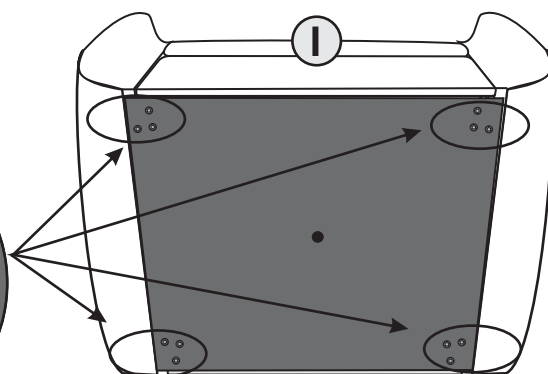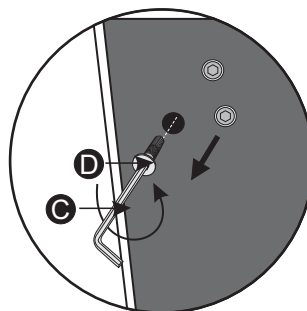

③

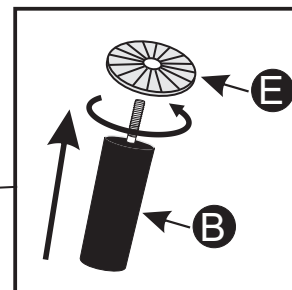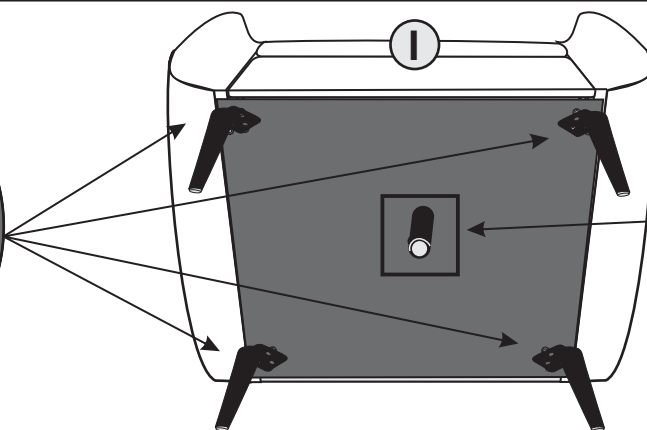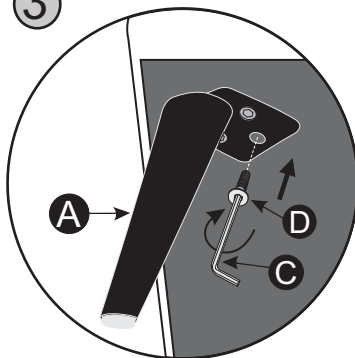

④

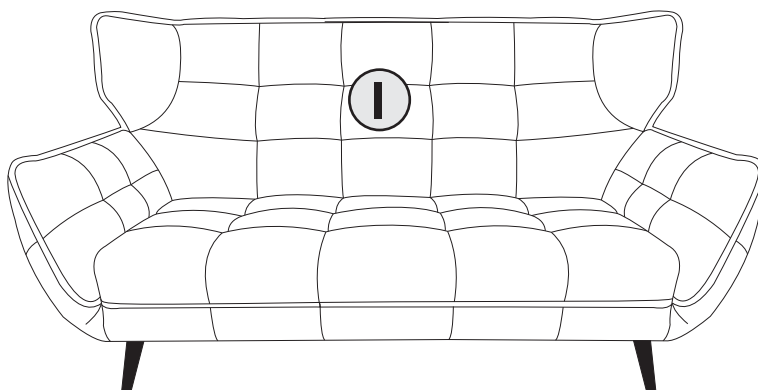

101-14.05.2021

PENSEZ  
AU TRI!ENSEMBLE  
REDUONS L'IMPACT  
ENVIRONNEMENTAL  
DES EMBALLAGESÉLÉMENTS BOIS  
PLASTIQUE  
A JETERÉLÉMENTS  
METAL CARTON  
PAPIER  
A RECYCLER

CONSIGNE POUVANT VARIER LOCALEMENT &gt; WWW.CONSIGNESDETRI.FR