


D Montageanleitung
GB Assembly instructions
F Instructions de montage
PL Instrukcja montażu
RU Инструкция по монтажу
NL Montagehandleiding
TR Montaj talimatı
RO Instrucțiuni de montaj
IT Istruzioni per il montaggio
SK Návod na montáž
CZ Návod k montáži
HU Szerelési útmutató

Stella bettkasten buche Art.Nr. 002V0005-07

Stella bettkasten weiss Art.Nr. 002V0005-14

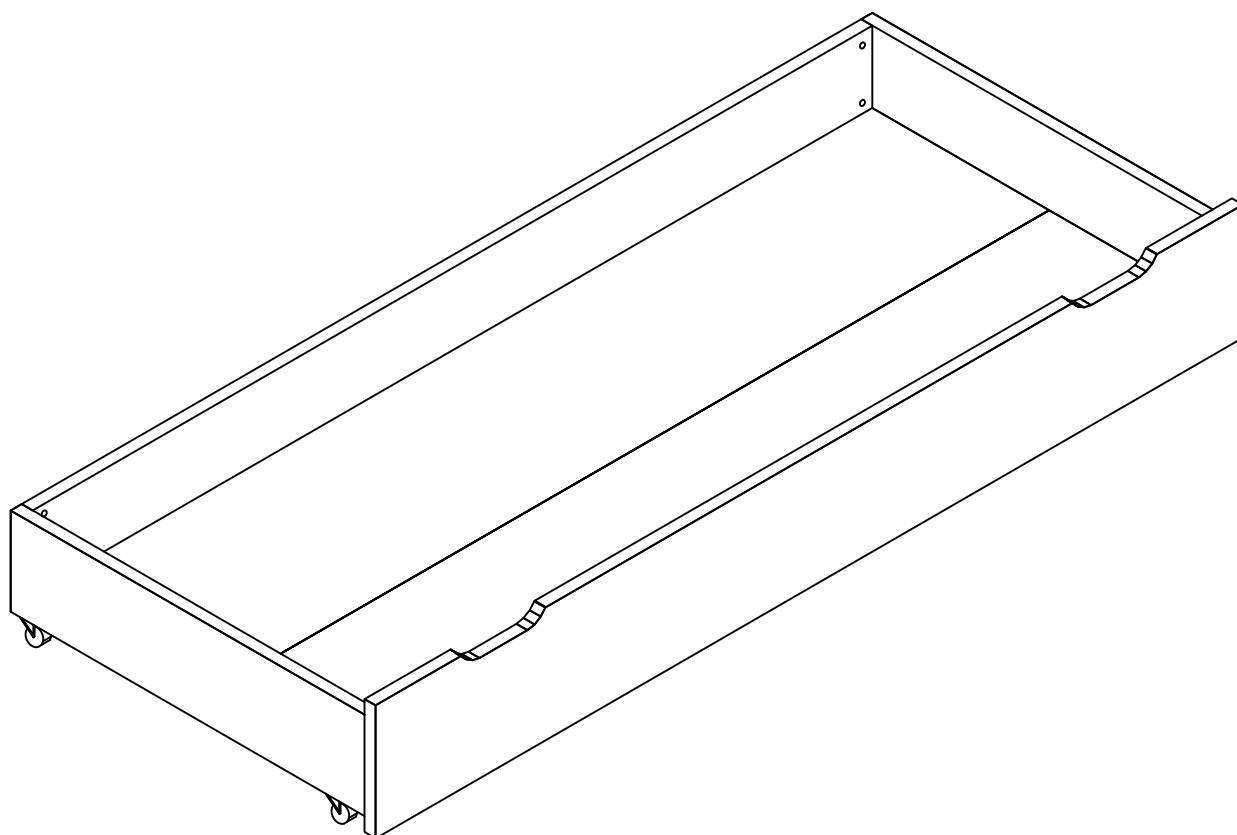

STELLA BETTKASTEN


Beschläge Screws Ferramenta Herraje Ferrure



8 X E 15/13



A Exzenter
Cam lock nut
Eccentrica
Excéntrico
Excentrique



8 X B 18/6



B Abdeckrand
Cam lock bolt
Perno
Pernos
Boulon



12 X T 8/32



C Holzdübel
Dowel
Tassello in legno
Tapón
Cheville en bois



8 x



D Kappe
Cap
Bouchon
Corredera
Tappo



8 X E 3,5x16




E Holzschraube
Wood screw
Vite per legno
Tornillo para madera
Vis panneaux



4 X W25/13




F Rad
Wheel
Ruota
Rueda
Roue

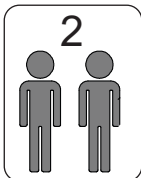


2
Aufbaupersonen
Persons needed for assembly
Personas necesarias para montaje
Personnes nécessaires pour le montage
Persone necessarie per il montaggio




Verwenden Sie keinen elektrischen Schraubendreher
Do not use electric screwdriver
No utilice destornillador eléctrico
Ne pas utiliser de tournevis électrique
Non usare un cacciavite elettrico

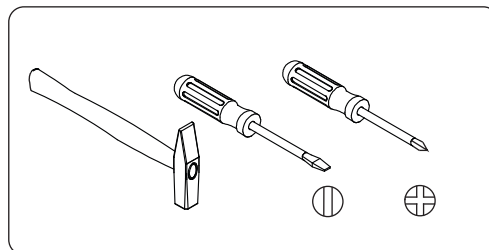


Zusätzlich benötigtes Werkzeug
Additional tools needed
Herramientas adicionales necesarias
Outils nécessaires supplémentaires
Ulteriori strumenti necessari

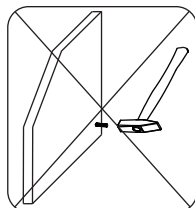

Falsch
Incorrect
Incorrecto
Incorrecto
Scorretto

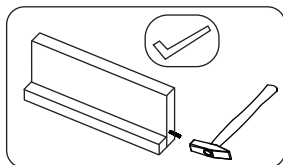


Richtig
Correct
Correcto
Correct
Corretto

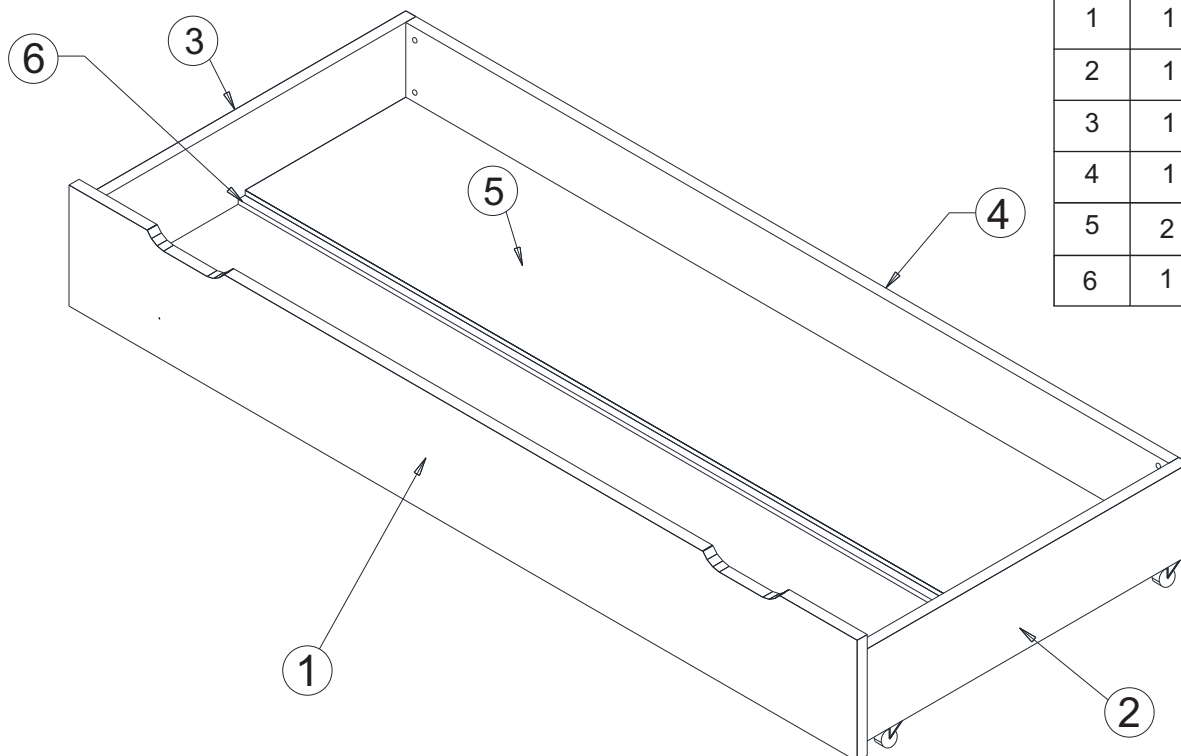


Parts list			
Item	QTY	Dimensions	Colli
1	1	1580X210X25	1
2	1	650X160X20	1
3	1	650X160X20	1
4	1	1530X160x20	1
5	2	1544X322X3	1
6	1	1530X50X20	1


1

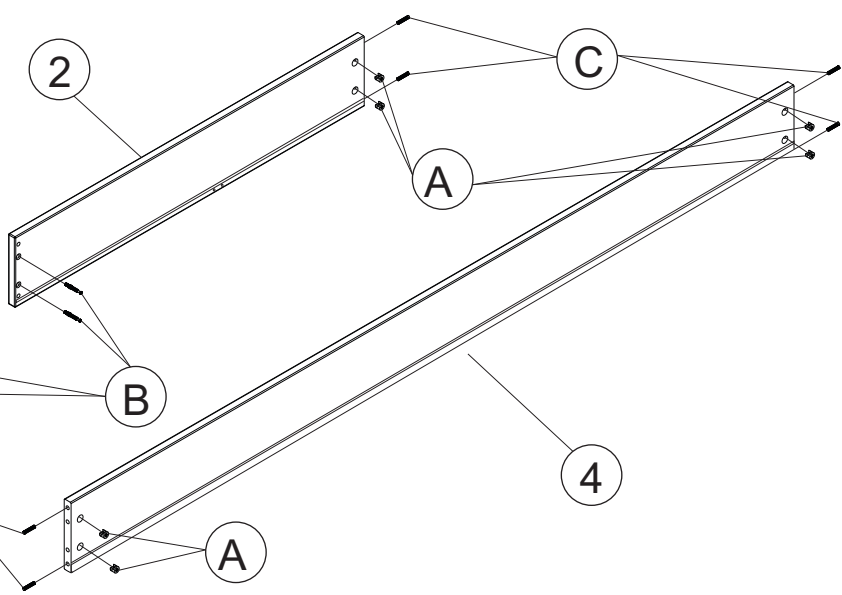


2

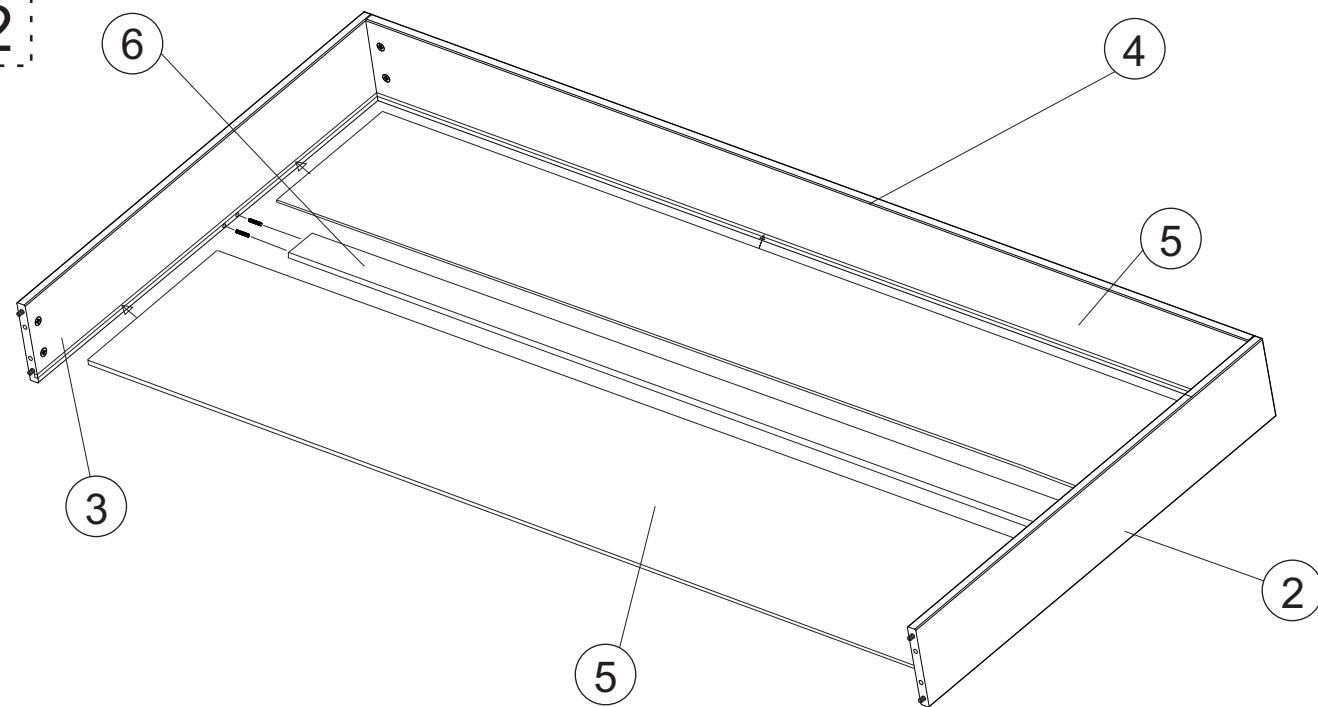

3

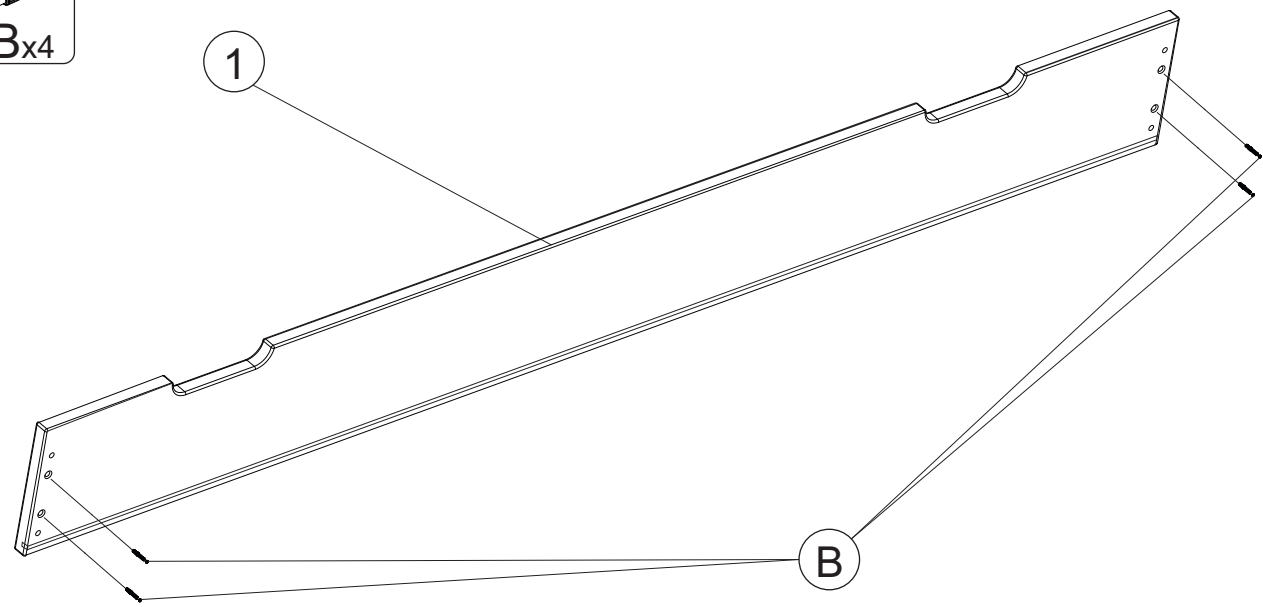

4

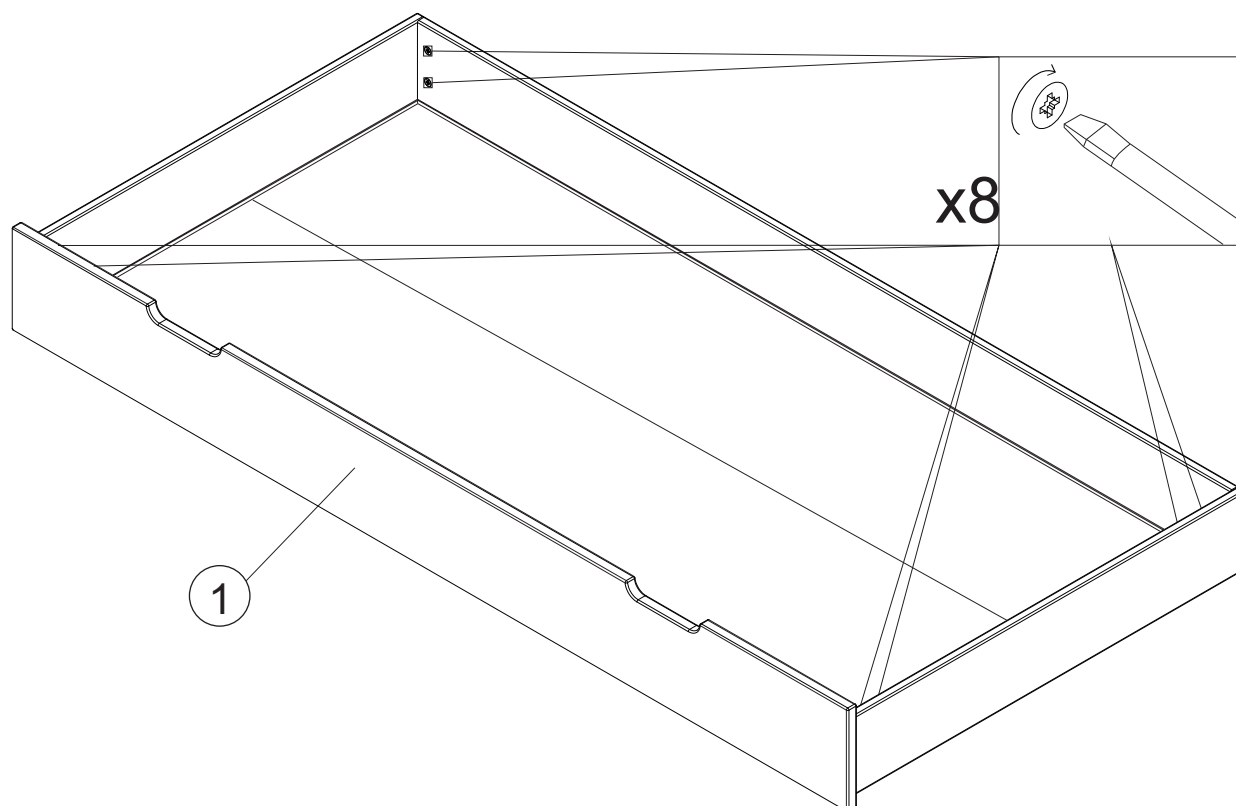

5

