

[mm]

Montageanleitung WJ20








EN - Assembly and alignment of furniture feet
FR - Montage et alignement des pieds de meubles
NL - Montage en uitlijning van meubelpoten
CS - Montáž a vyrovnání nábytkových nohou



25/08/2025




WJ20

50

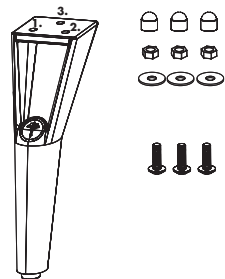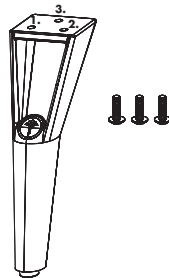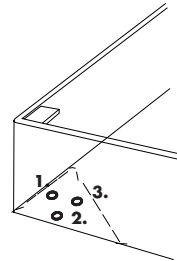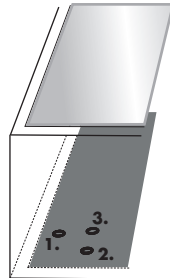




100

150

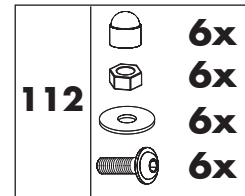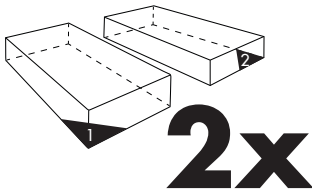

200

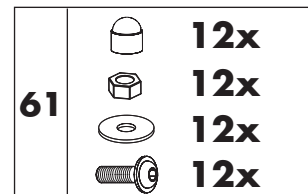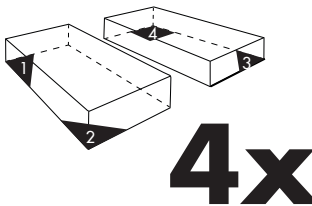

▲ Fußposition/ foot position

250



DE - Werkzeug im Lieferumfang nicht enthalten!
EN - Tools not included in the scope of delivery!
FR - Outils non inclus dans la livraison!
NL - Gereedschap niet bij de levering inbegrepen!
CS - Nářadí není součástí dodávky!




DE - Ausladene Dekorfüße zeigen niemals nach innen!
EN - Extended decorative feet never point inwards!
FR - Les pieds décoratifs en saillie ne sont jamais orientés vers l'intérieur!
NL - Overhangende decoratieve voeten wijzen nooit naar binnen!
CS - Převíslé ozdobné patky nikdy nesměřují dovnitř!




Montageanleitung - VB_C4




EN-Assembly instruction VB_C4 **FR**-Instructions d'installation VB_C4 **NL**-Montage-instructies VB_C4 **HR**-Uputstva za montažu VB_C4 **SK**-Návod na inštaláciu VB_C4 **SL**-Navodila za montažo VB_C4 **CS**-Návod k instalaci VB_C4 **HU**-Összeszerelési útmutató VB_C4 **SV**-Monteringsanvisning VB_C4 **BG**-Инструкции за монтаж VB_C4 **PL**-Instrukcja montażu VB_C4 **IT**-Istruzioni per l'installazione VB_C4 **RO**-Instrucțiuni de asamblare VB_C4

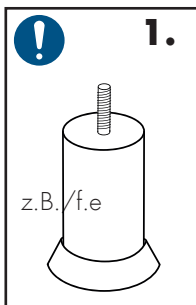


siehe **Dekorfußmontage**/
look **decor foot assembly**

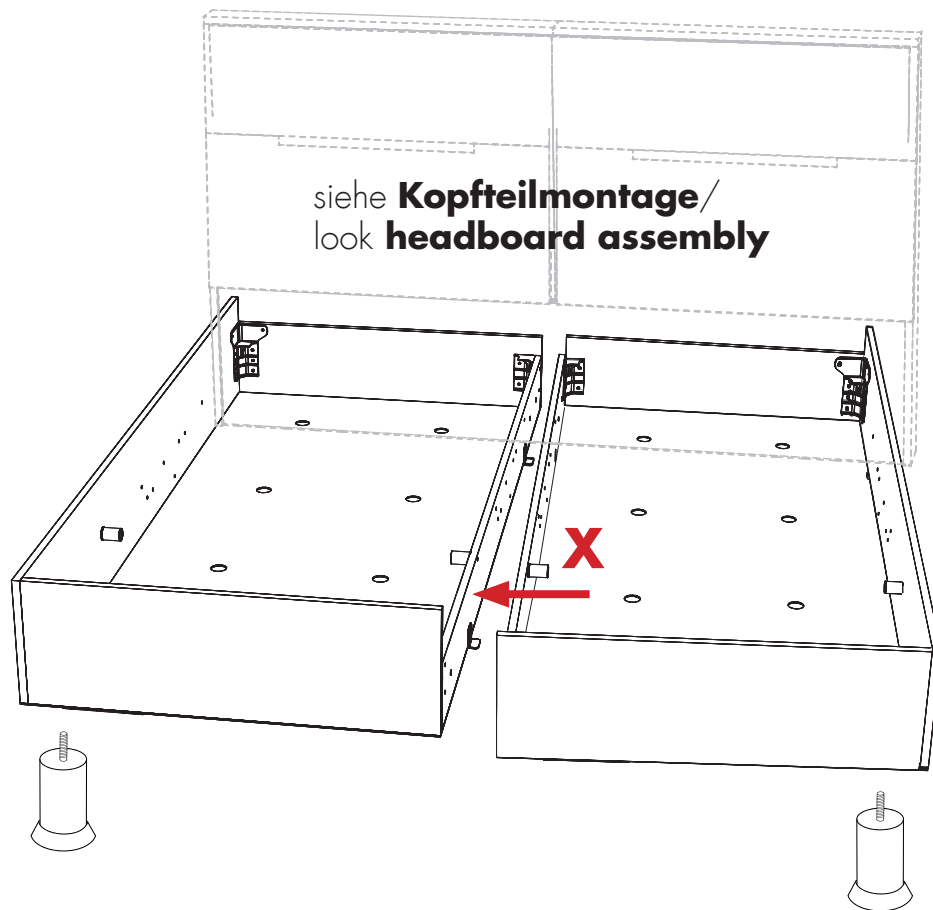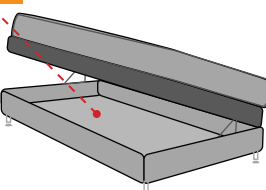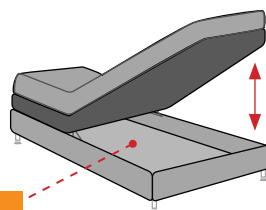

11/		4x
103		4x
		4x
		2x

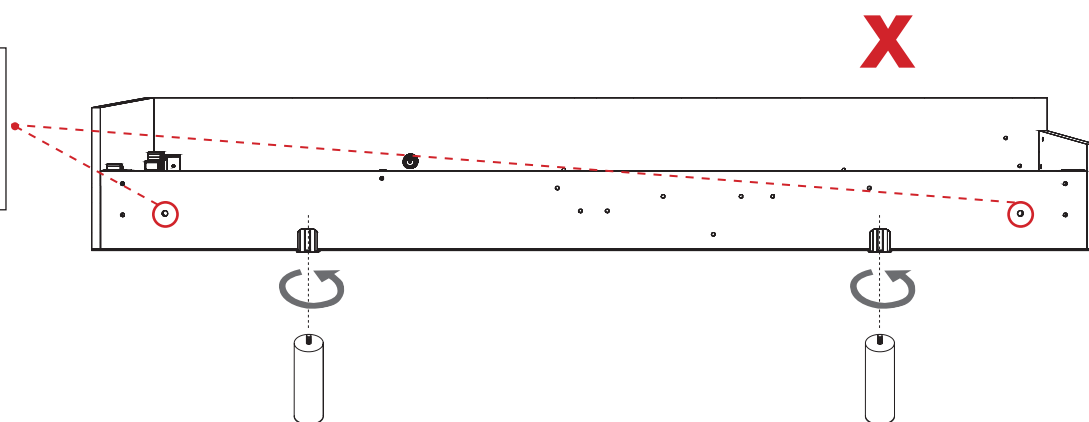

DE-Werkzeug im Lieferumfang nicht enthalten!**EN**-Tools not included in the scope of delivery!**FR**-Outils non inclus dans la livraison!**NL**-Gereedschap niet bij de levering inbegrepen!**HR**-Alati nisu uključeni!**SK**-Náradie nie je súčasťou dodávky!**SL**-Orodje ni vključeno v obseg dobave!**CS**-Nářadí není součástí dodávky!**HU**-A szerszámok nem tartoznak a szállítási terjedelembe!**SV**-Verktyg ingår inte i leveransen!**BG**-Инструментите не са включени в обхвата на доставката!**PL**-Narzędzia nie wchodzą w zakres dostawy!**IT**-Gli attrezzi non sono compresi nella fornitura!**RO**-Unelte nu sunt incluse în livrare!







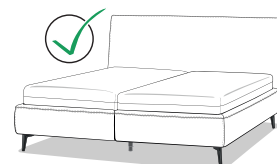


08/09/2025




P056_VB_C4

DE Kopfteilmontageanleitung

EN Assembly of headboard

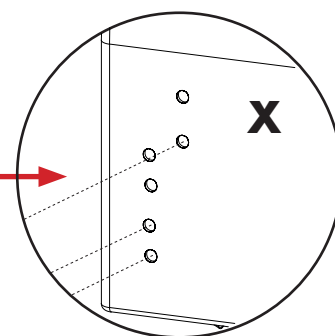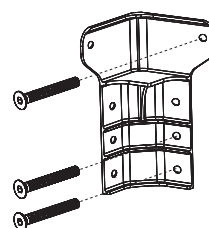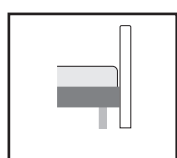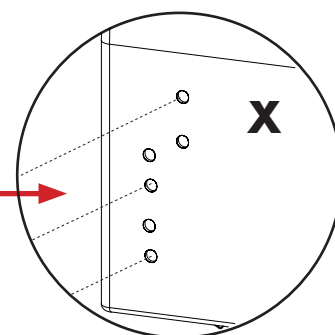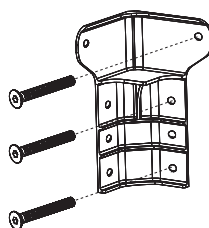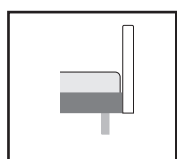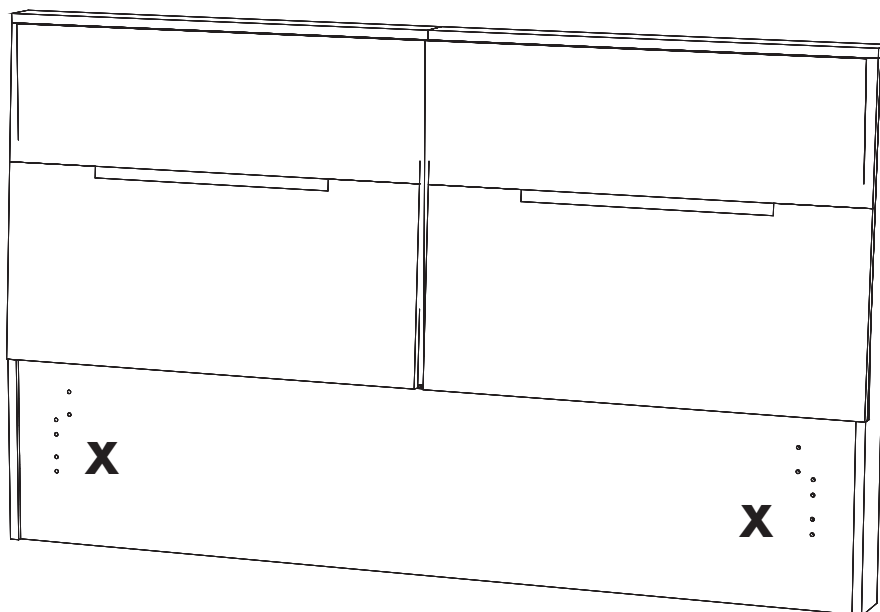

Fußhöhe/foot height = 10cm

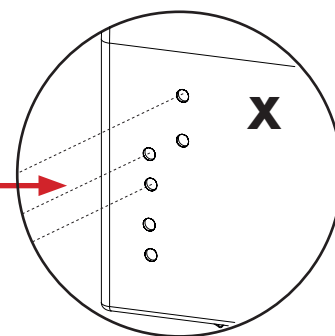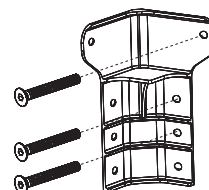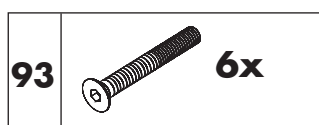

Fußhöhe/foot height = 15cm

