
Assembly Instructions For

WB1485

(CE) 11/12

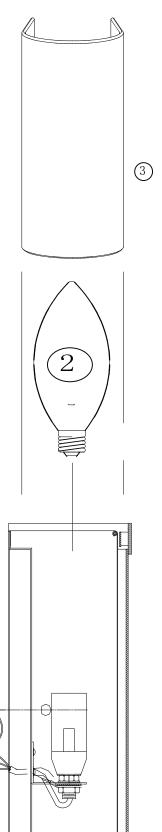

WOODEN SCREW(2)

TERMINAL BLACK

LORD LEAD

INSTALLATION PLATE

IMPO RTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

- $1. Follow\ enclosed\ supplement\ installation\ instructions\ for\ electrical\ and\ fixture\ installation\ onto\ house\ wall.$
- $2.\,install$ bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.
- 3. Install fabric shade by carefully sliding inside of fixture.





GENERATION BRANDS