


PETRA 160x200

(HR) ŠEMA MONTAŽE
 (GB) ASSEMBLY INSTRUCTION
 (DE) AUFBAUANLEITUNG

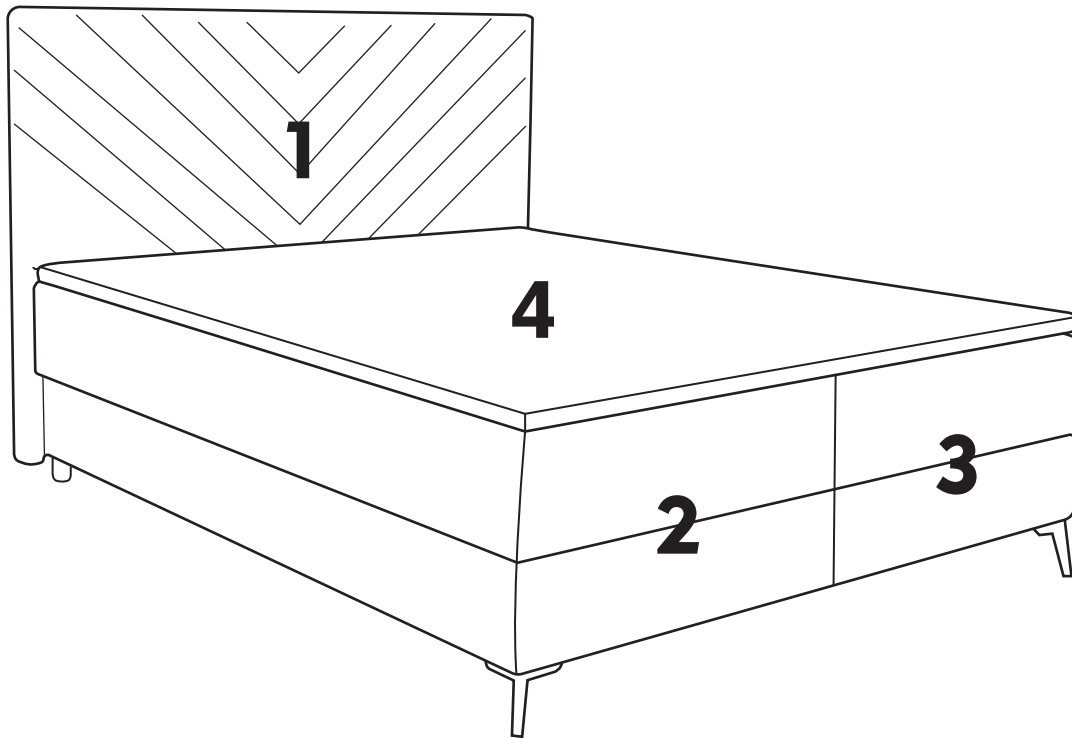

12cm A x2	12cm B x6	5x30mm C x6	100x50x20mm D x4	6x100mm E x4	M8 F x4	M8 G x10	M6 H x4	M6 I x4	8X80mm J x4	30 min
-----------------	-----------------	-------------------	------------------------	--------------------	---------------	----------------	---------------	---------------	-------------------	--------



1

12cm A x2	5x30mm C x6	12cm B x6
-----------------	-------------------	-----------------

