

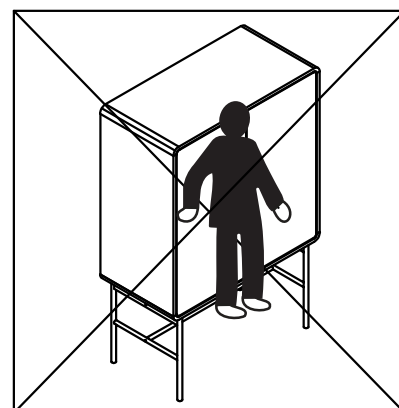
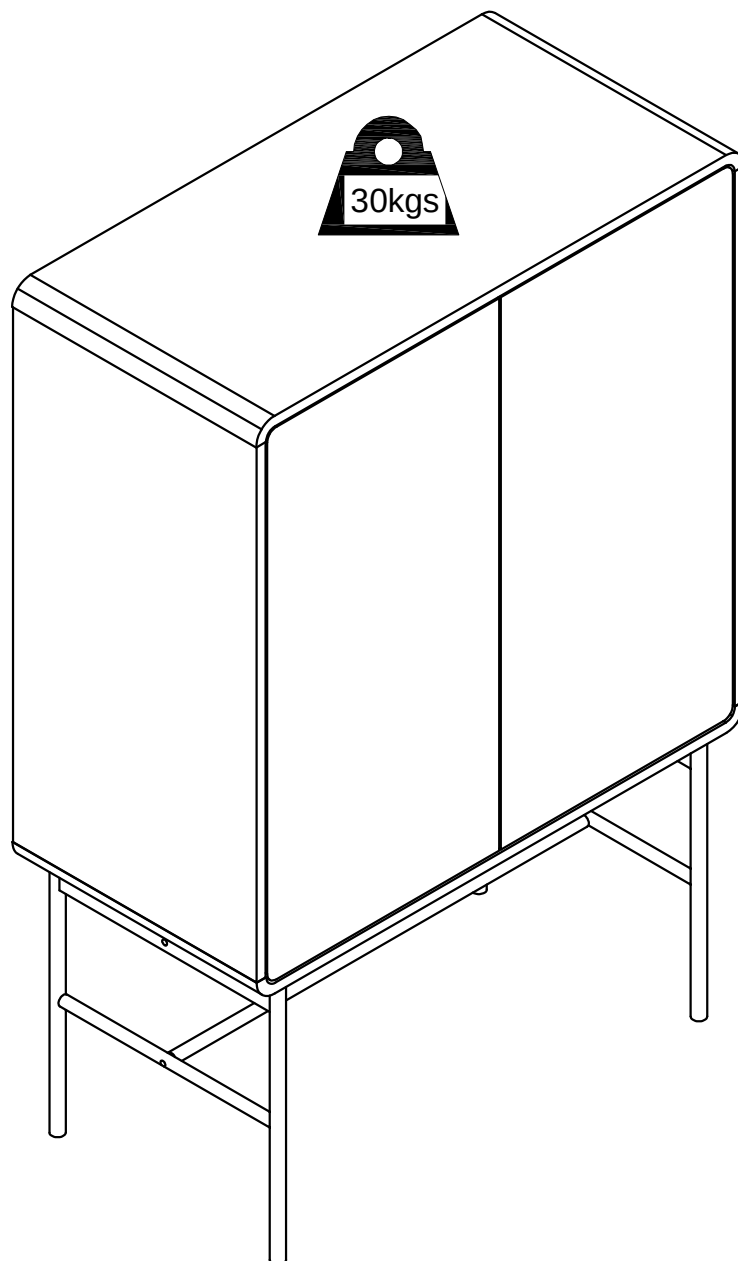








Assemble instruction

27980047/03


SANDY

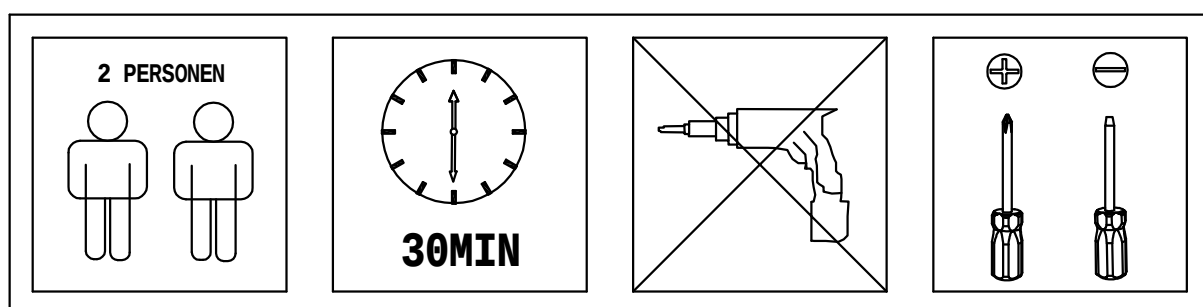

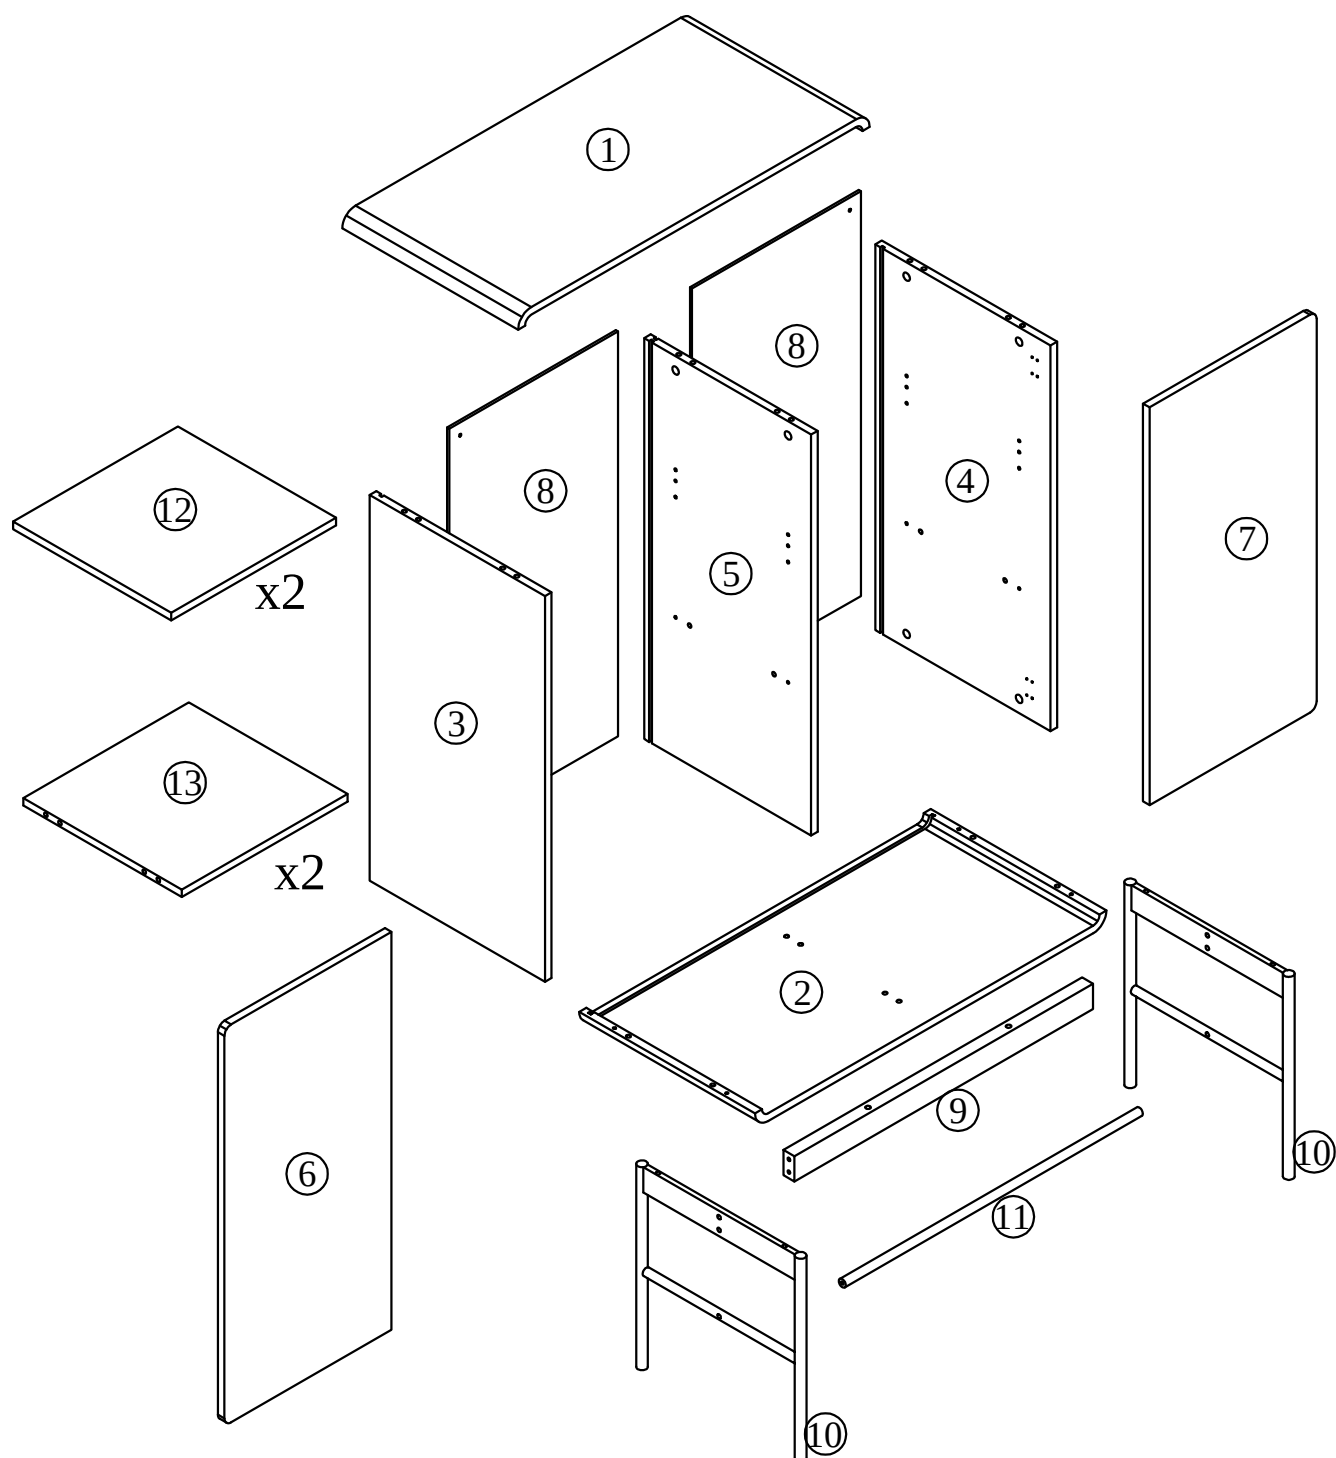


A	x18	B	x18	C	x16	D	x38	E	x2	F	x6	G	x6
													
6x35mm		Ø15x12mm		8x30mm		3.5x14mm		7x40mm		M6x35mm		M6x60mm	
H	x1	I	x8	J	x4	K	x8	L	x2	M	x2	N	x10
													
M4						5x20mm						Ø20mm	
O	x2	P	x2	Q	x2	R	x2						
													
Ø20x12mm		4x60mm		6x30mm		8x50mm							


Assembly details

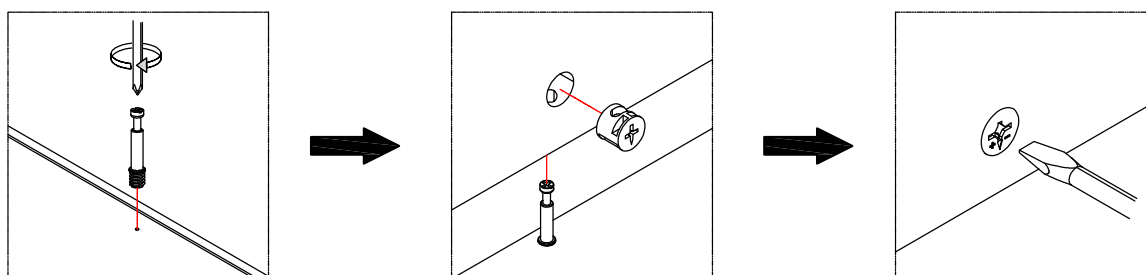


1

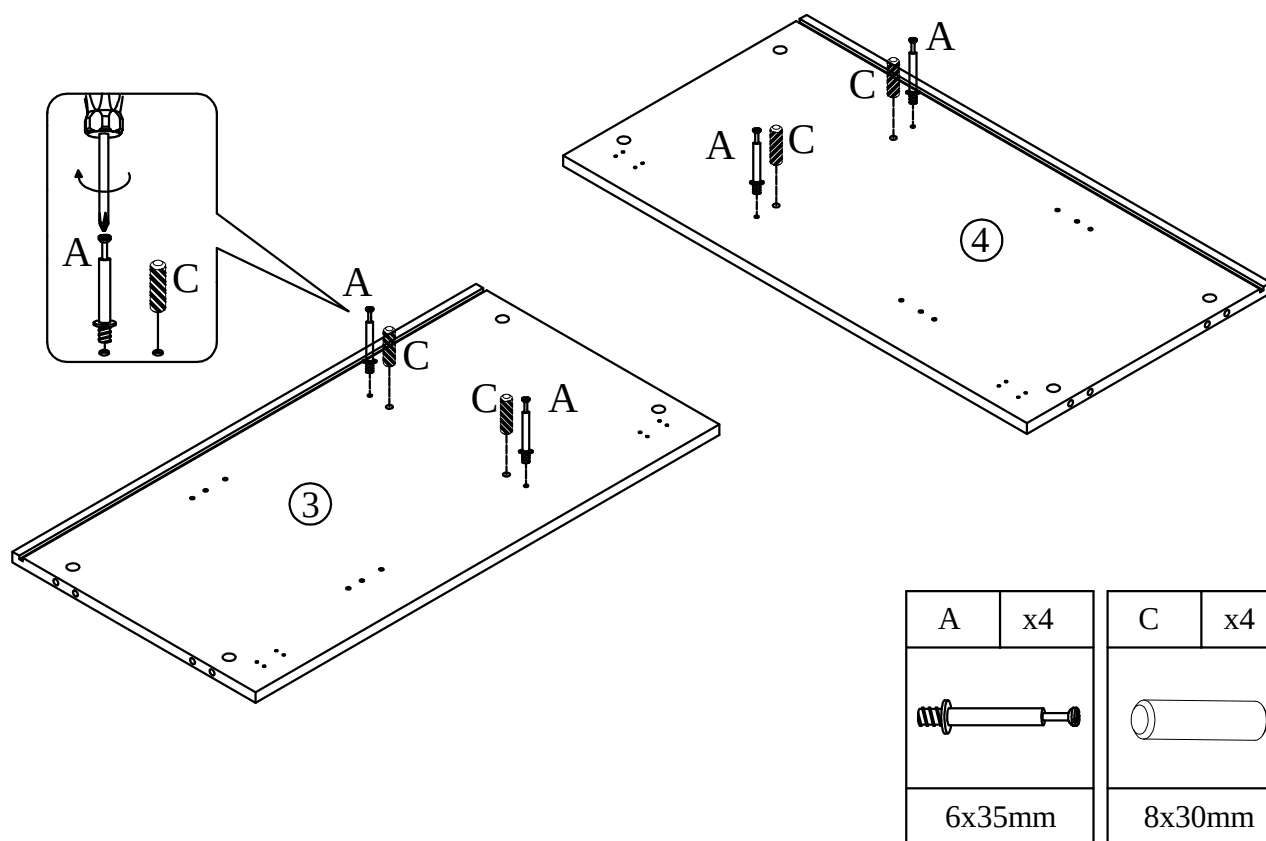


2

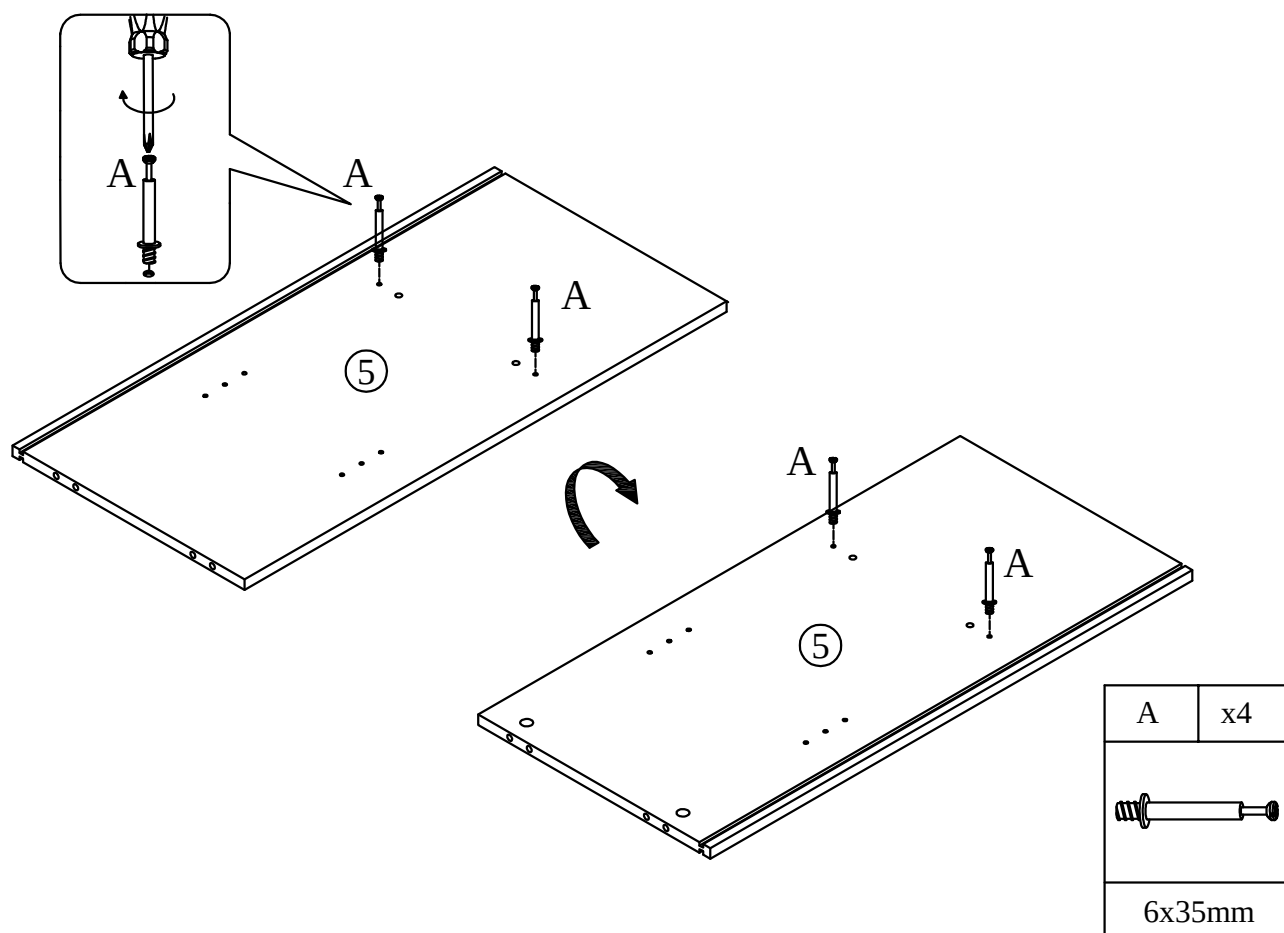


3

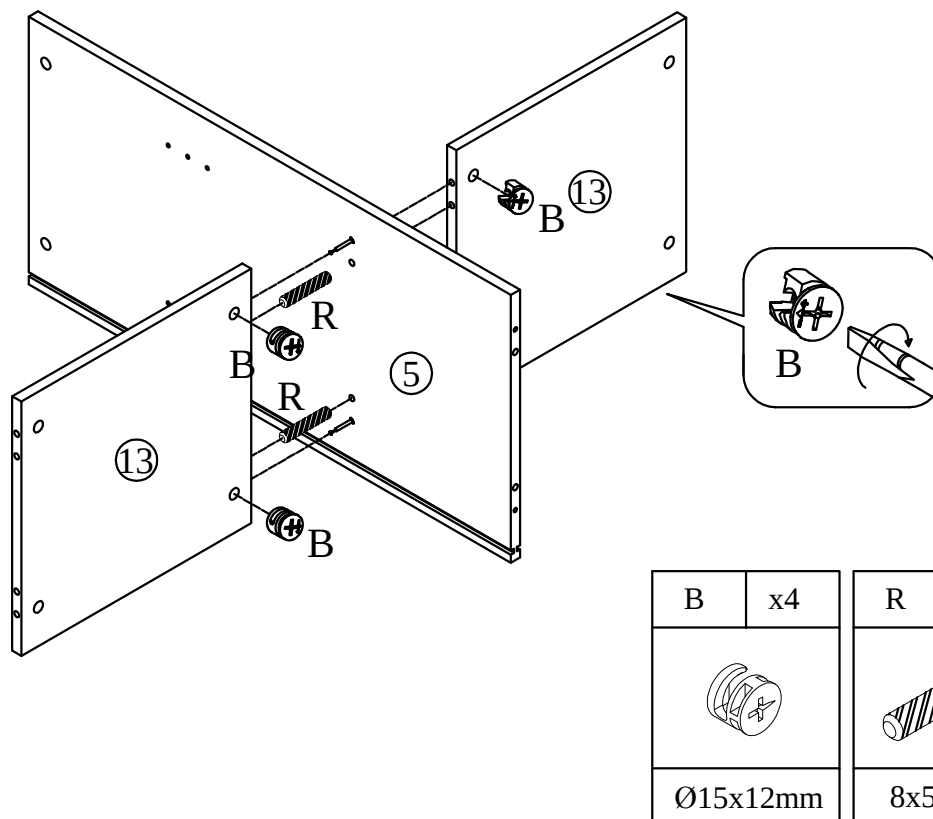


4

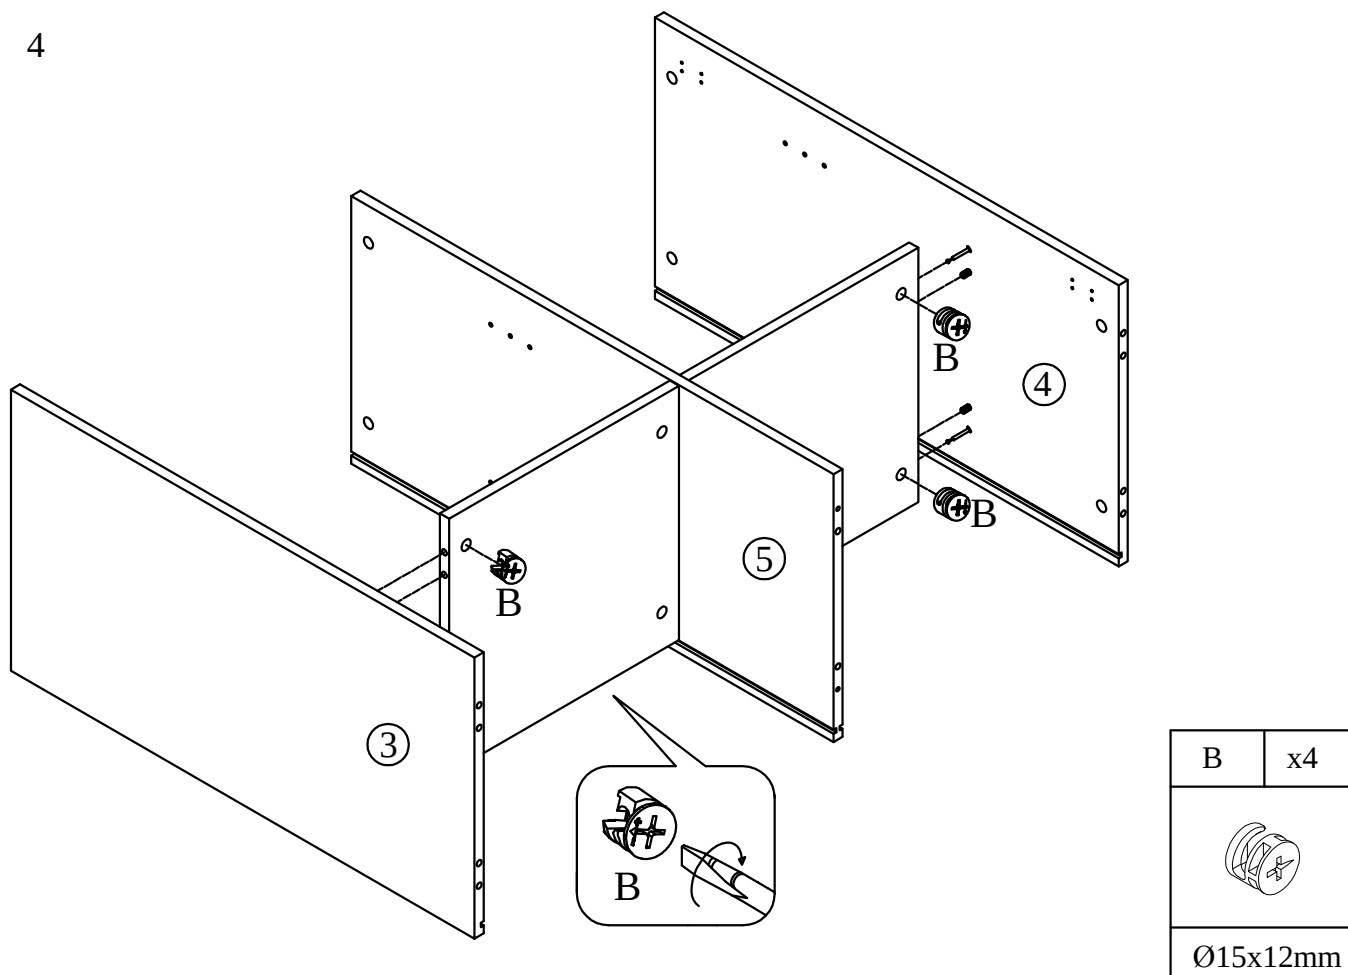



5

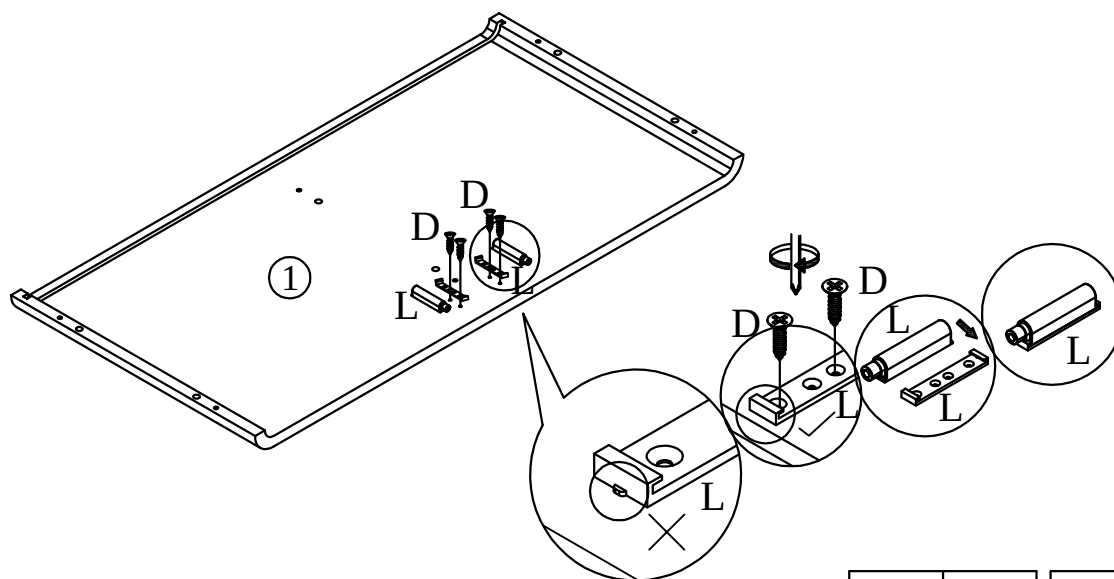


D	x4	L	x2
			
3.5x14mm			

6

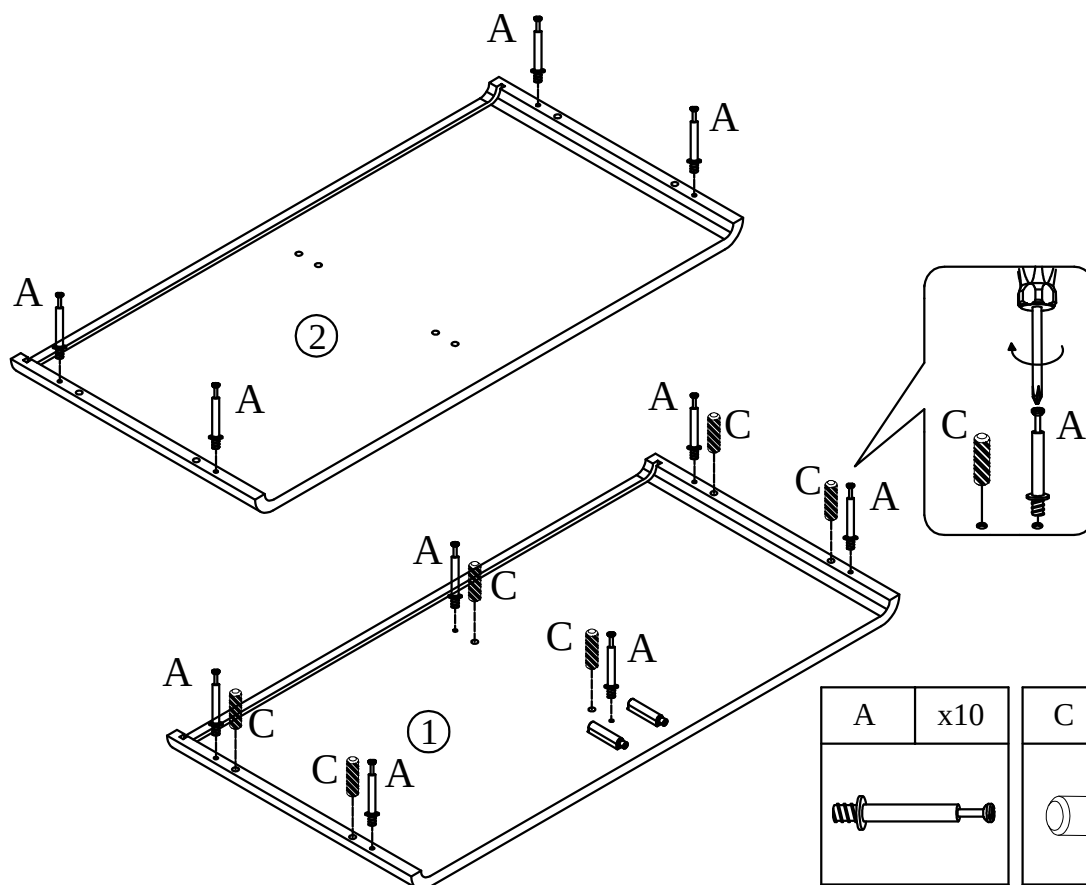


A	x10	C	x6
			
6x35mm		8x30mm	

7

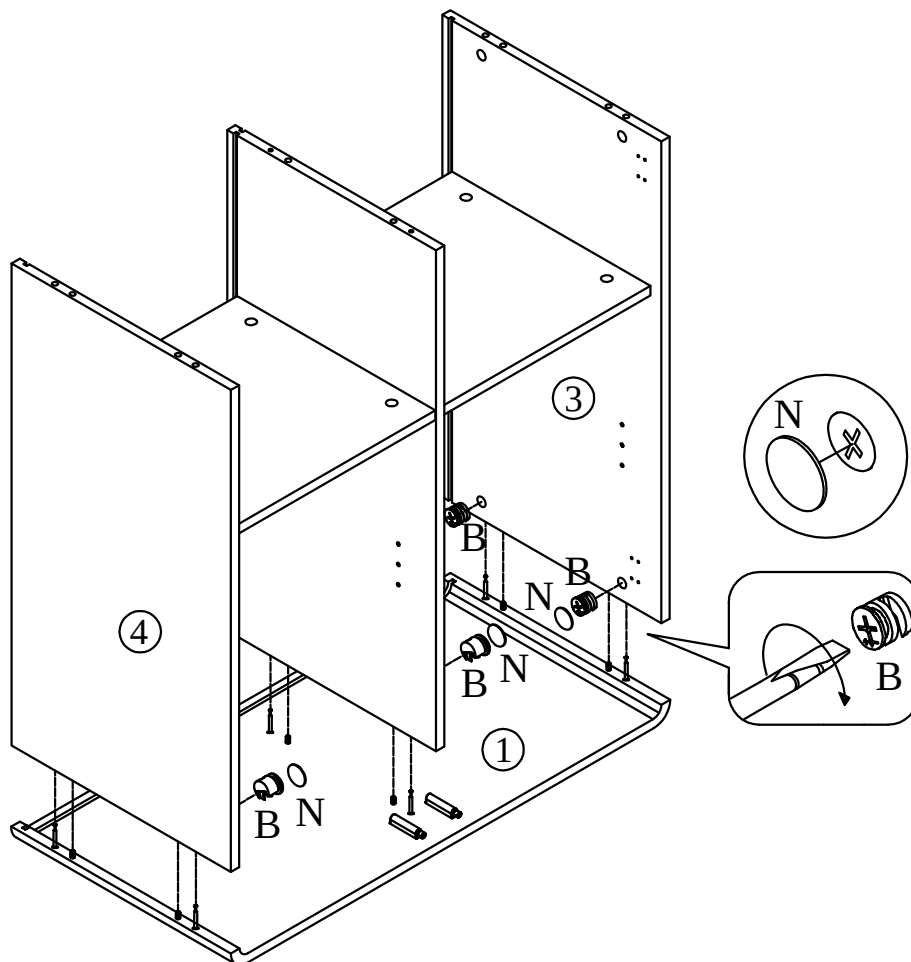


B	x6
	
Ø15x12mm	
N	x6
	
Ø20mm	

8

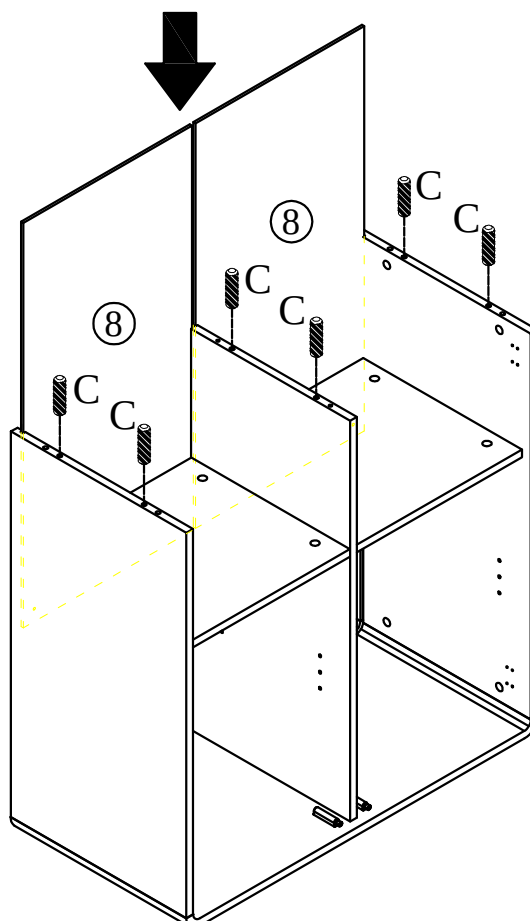

C	x6
	
8x30mm	

9

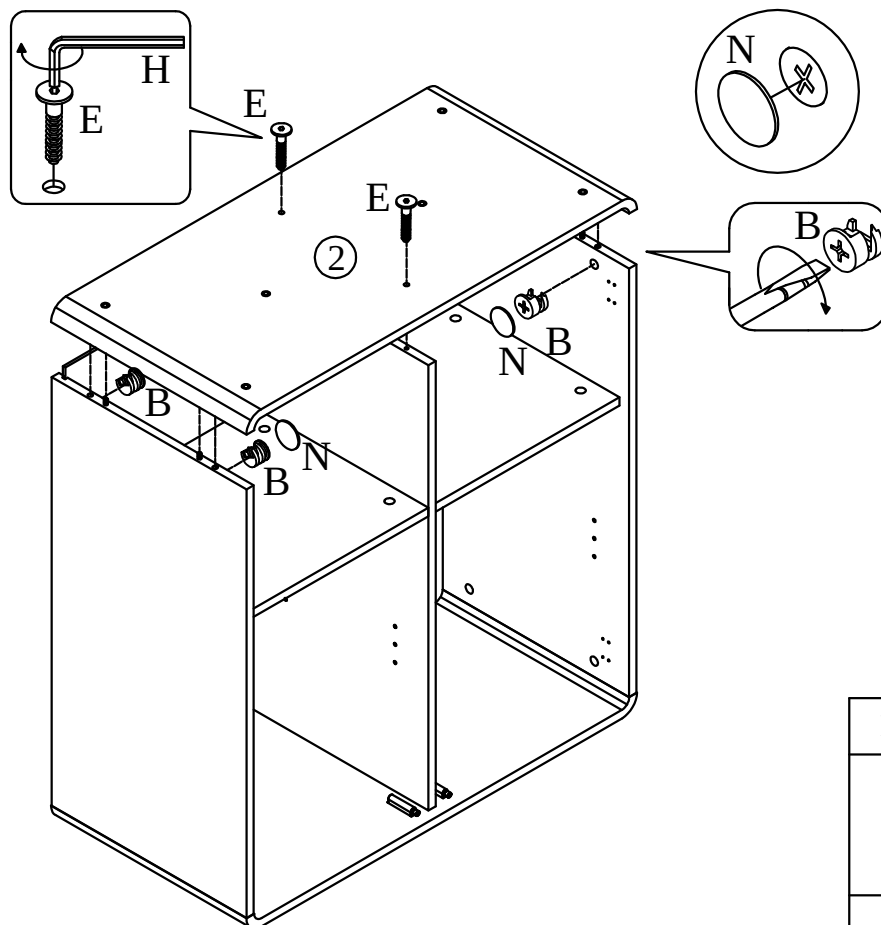



N	x4
Ø20mm	

B	x4
Ø15x12mm	

E	x2
7x40mm	

H	x1
M4	




10

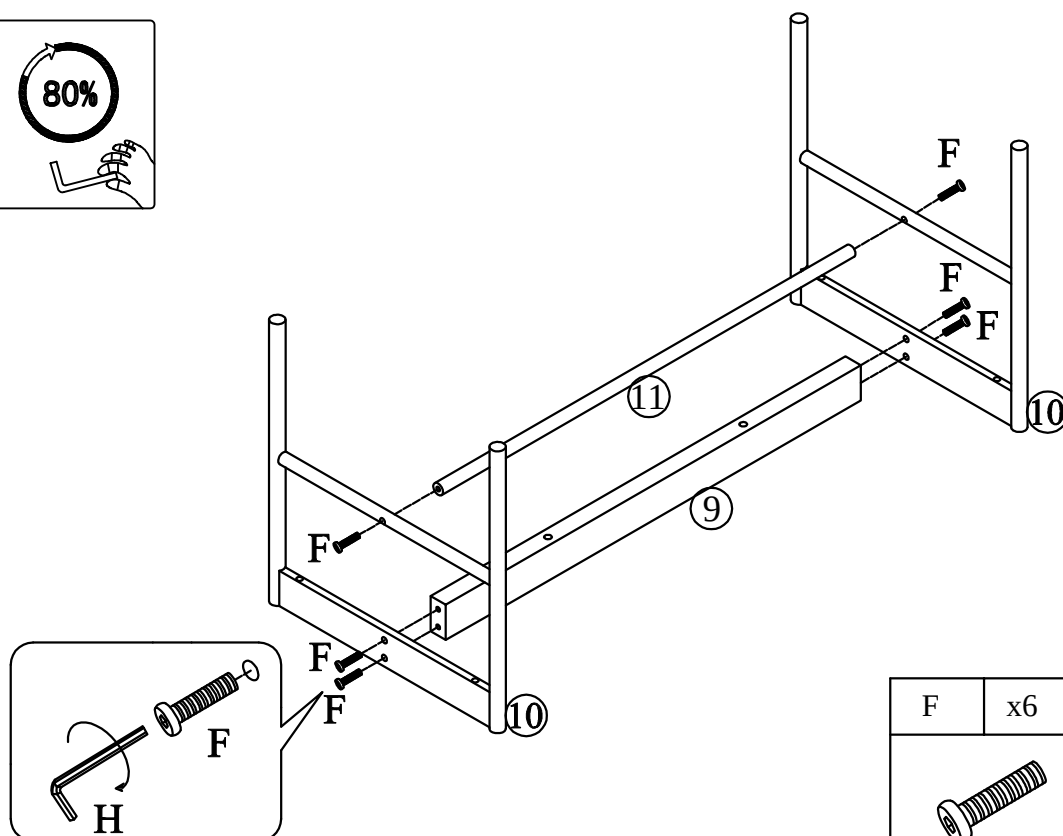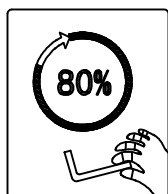

F	x6
M6x35mm	



H	x1
M4	

11

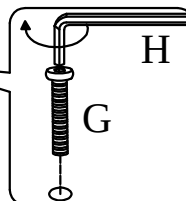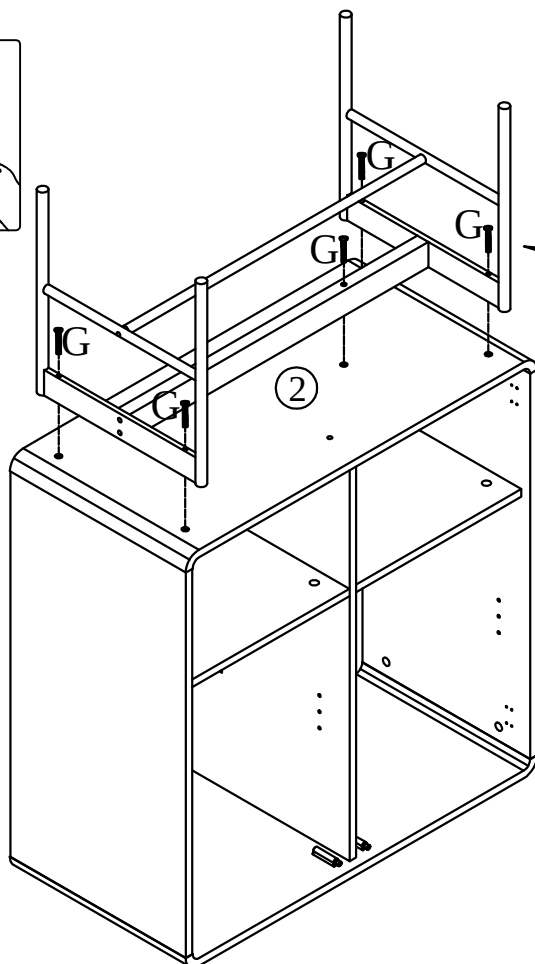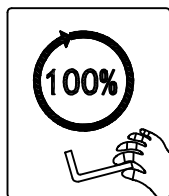


G	x6	H	x1
			
M6x60mm		M4	


12

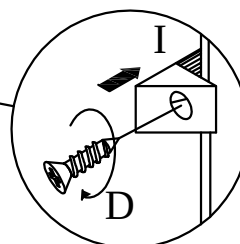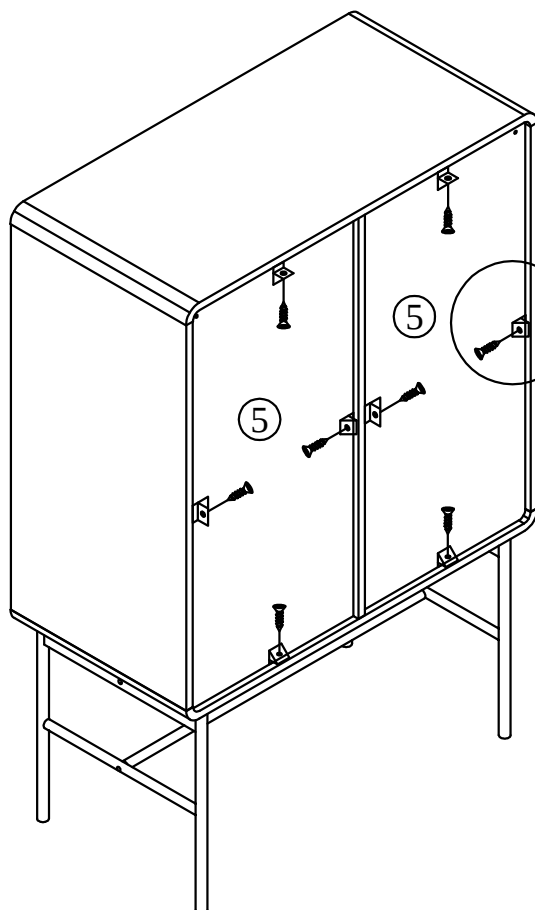


D	x8	I	x8
			
3.5x14mm			

13

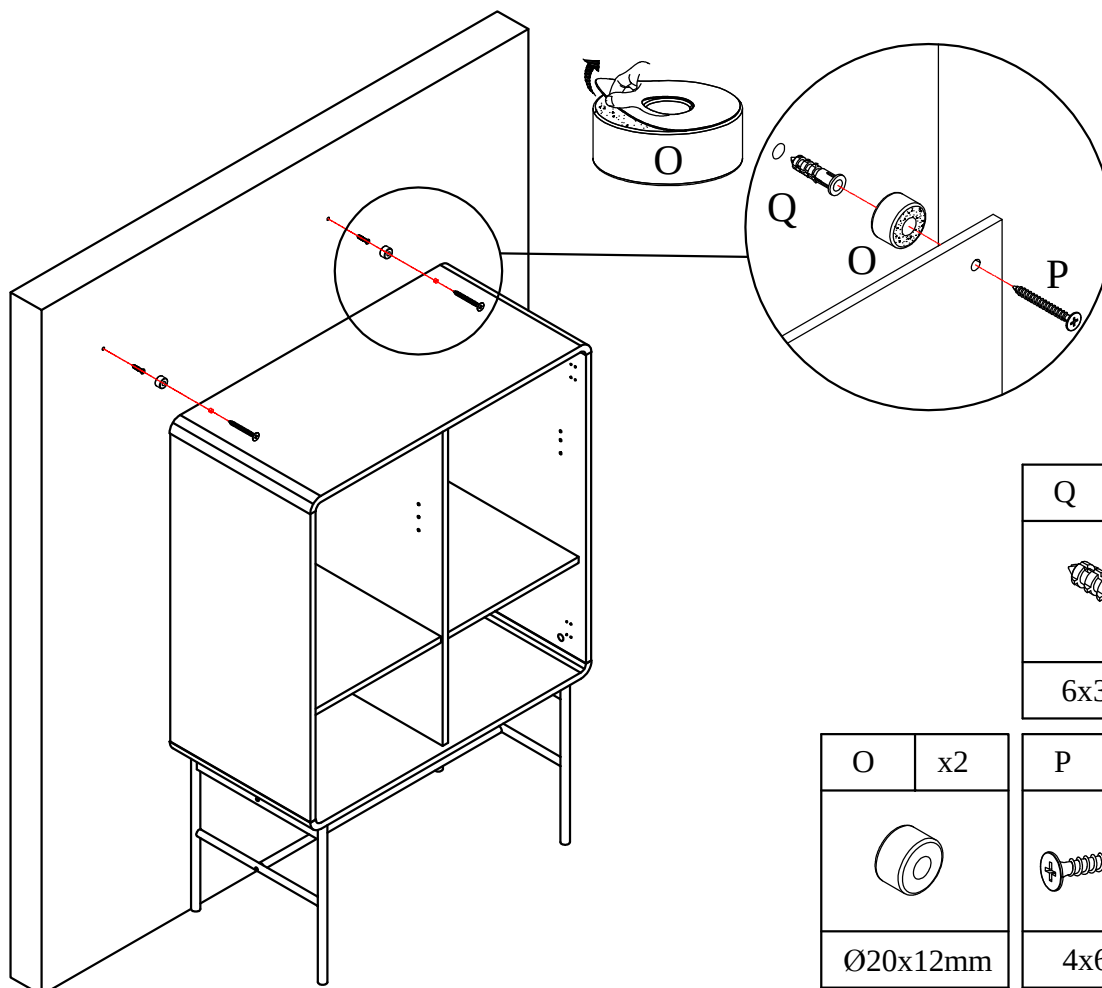


Q	x2
	
6x30mm	

O	x2
	
Ø20x12mm	


P	x2
	
4x60mm	

14

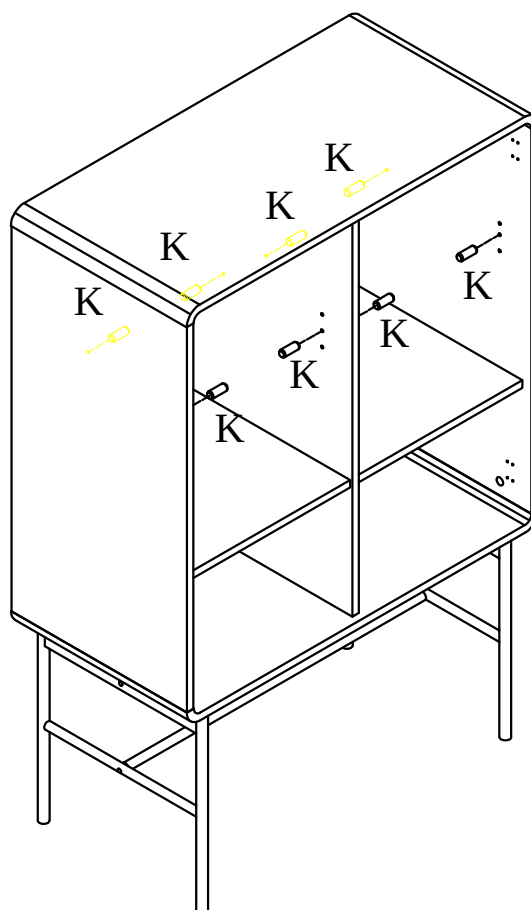


K	x8
	
5x20mm	




15

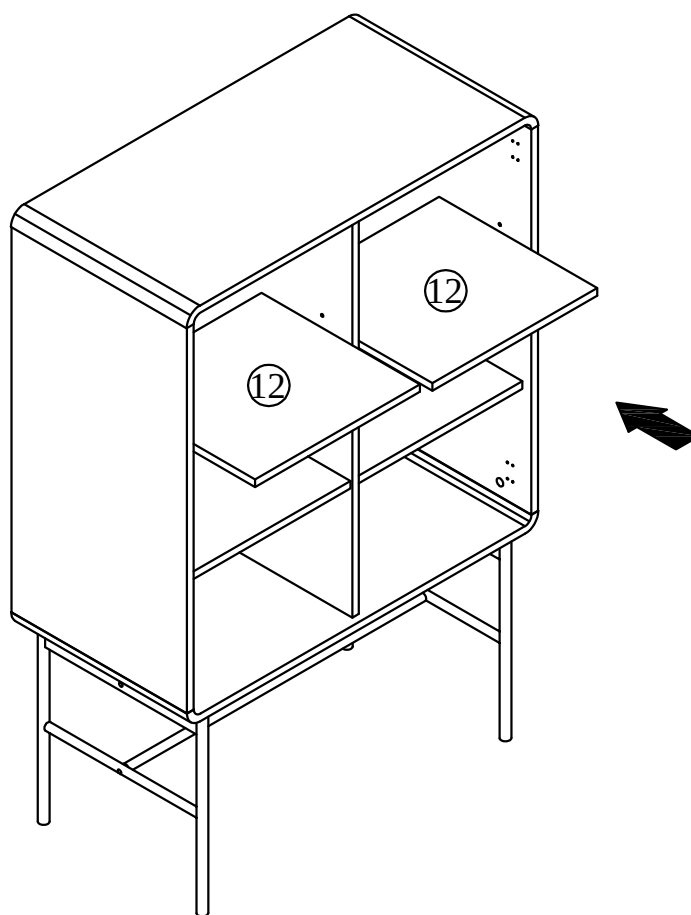

16

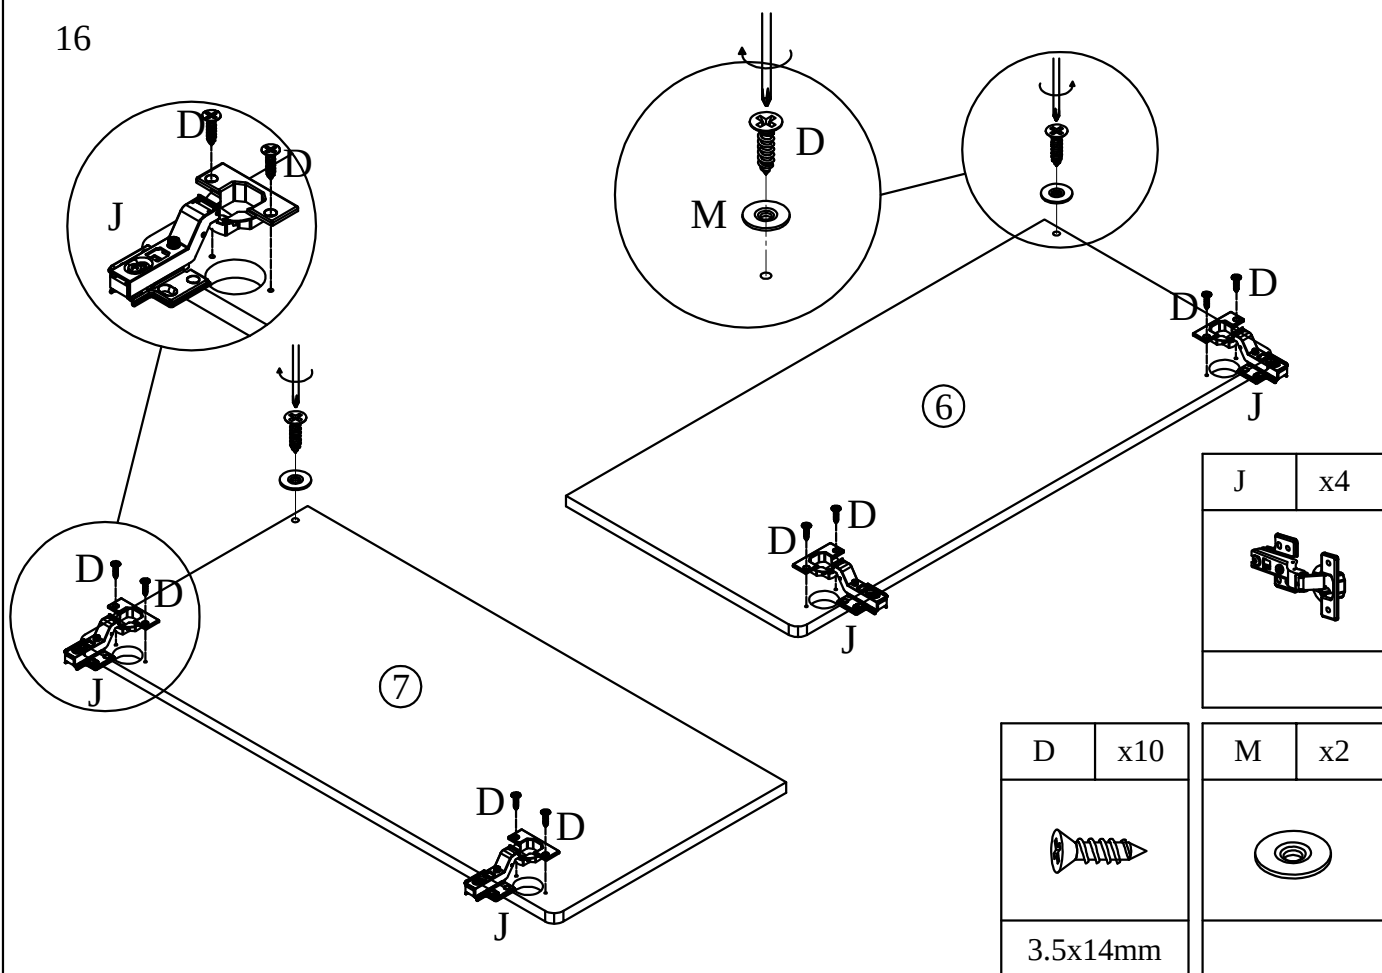

17

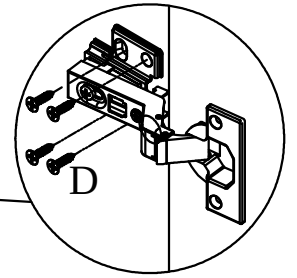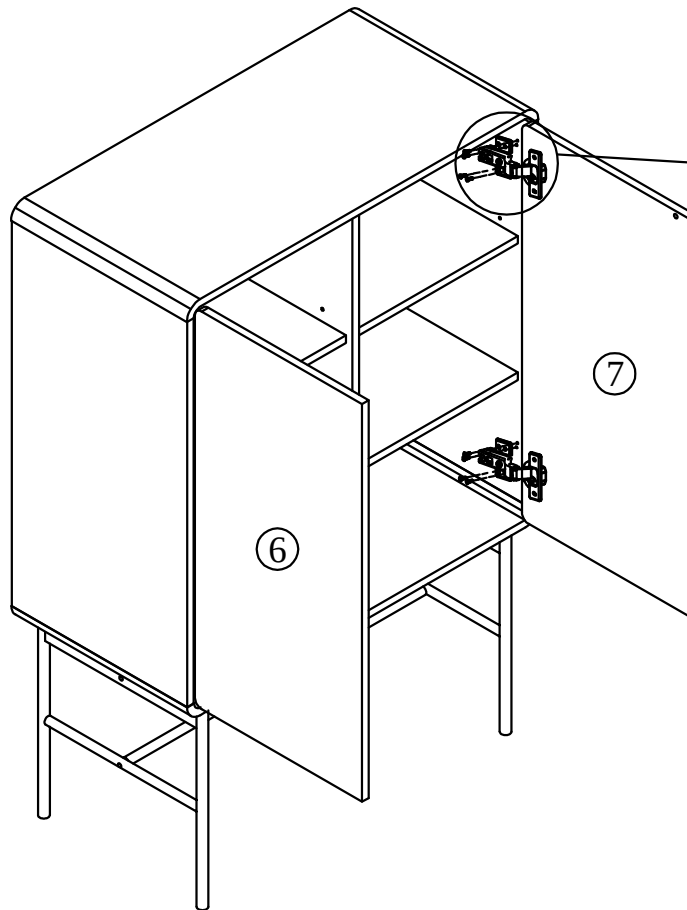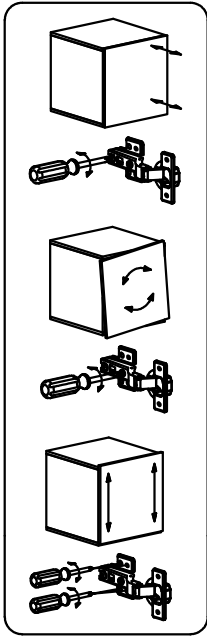

D	x16
	
3.5x14mm	

18

