














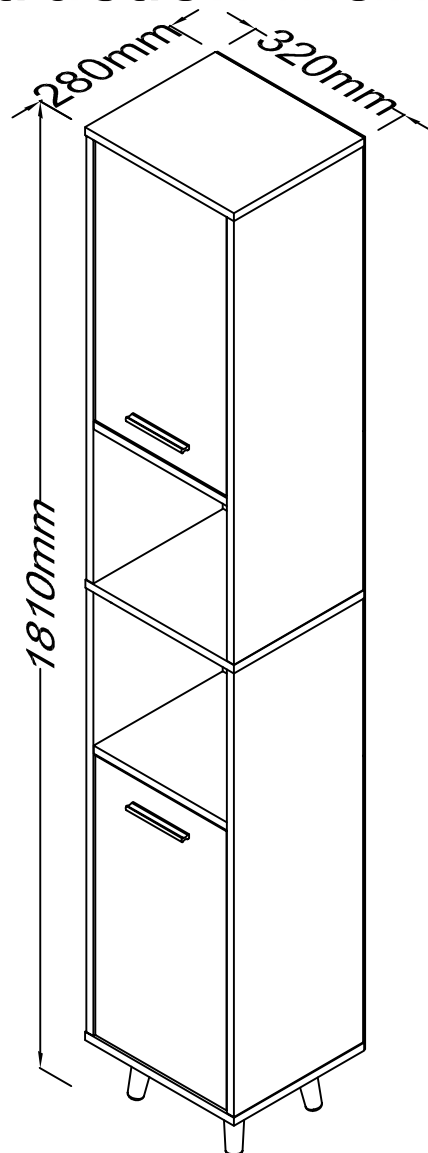




Hochschrank Landos
Montageanleitung
Instruction manual






VCM Morgenthaler GmbH
D-79346 Endingen am Kaiserstuhl

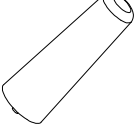service@vcm-gruppe.de
www.vcm-gruppe.de

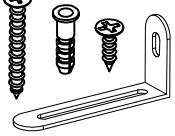


A*16  40 mm	B*16  15*9 mm	C*16  8*40 mm	D*44  3.5*12mm	E*26 	F*4 
G*4  100 mm	H*2 	I*4  3.5*16 mm	J*4  12mm	K*2 	L*8  3.5*35 mm
M*8 					

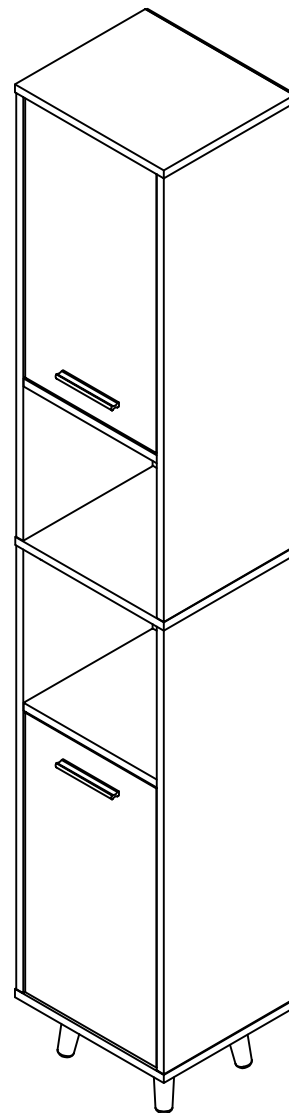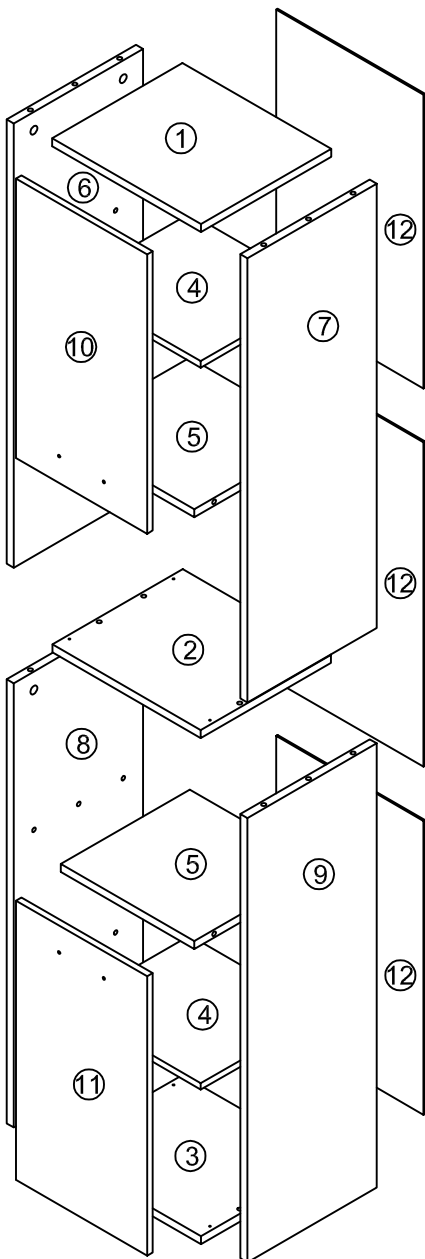



1

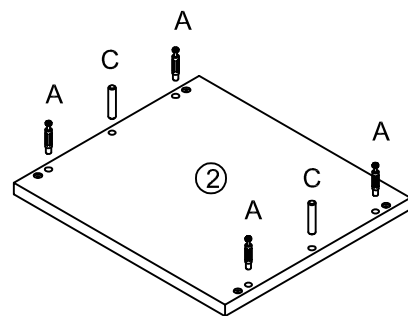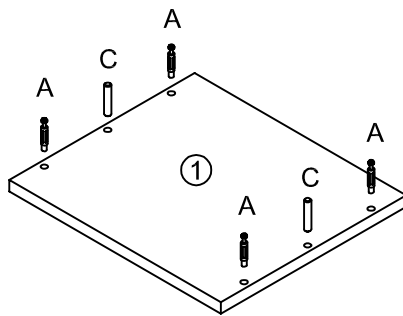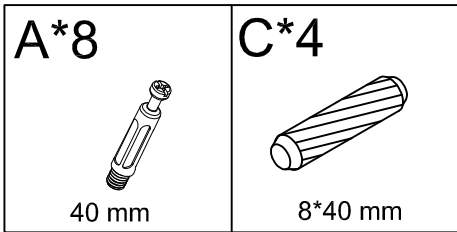

2

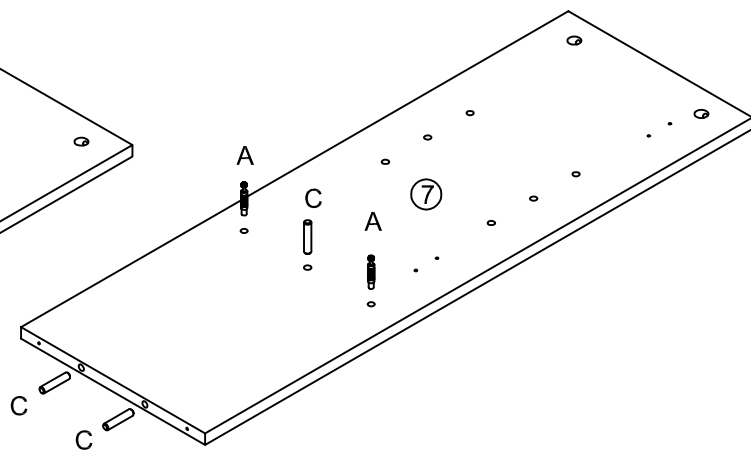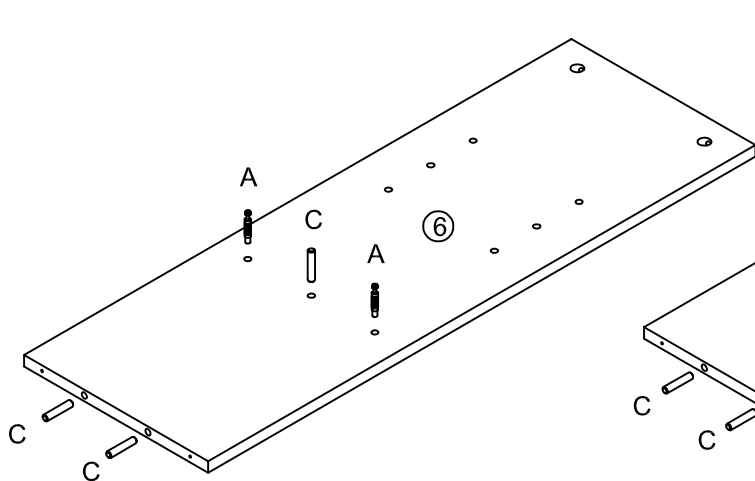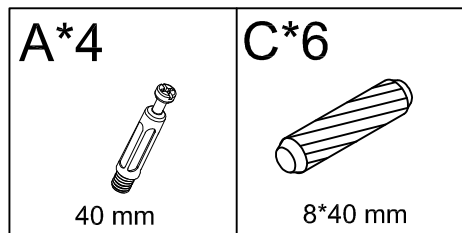

3

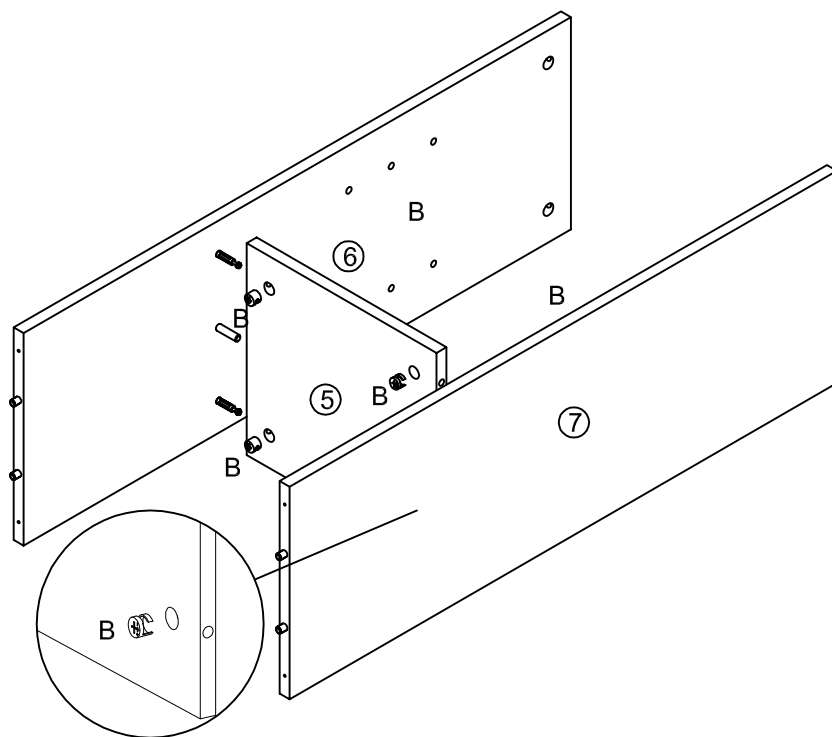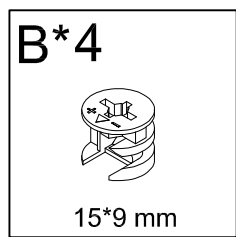


4

B*4




15*9 mm

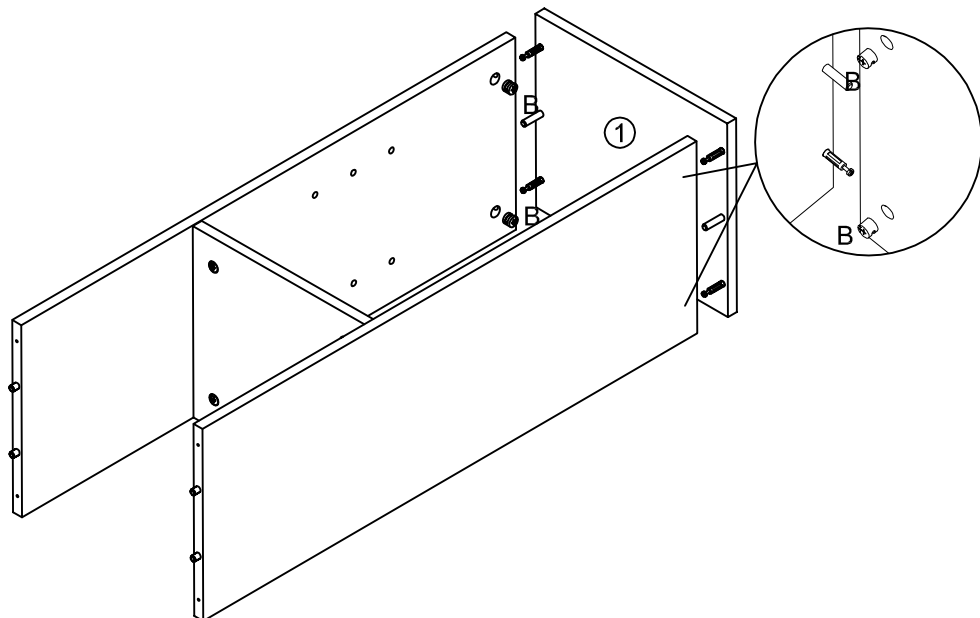


5

L*4



3.5*35 mm

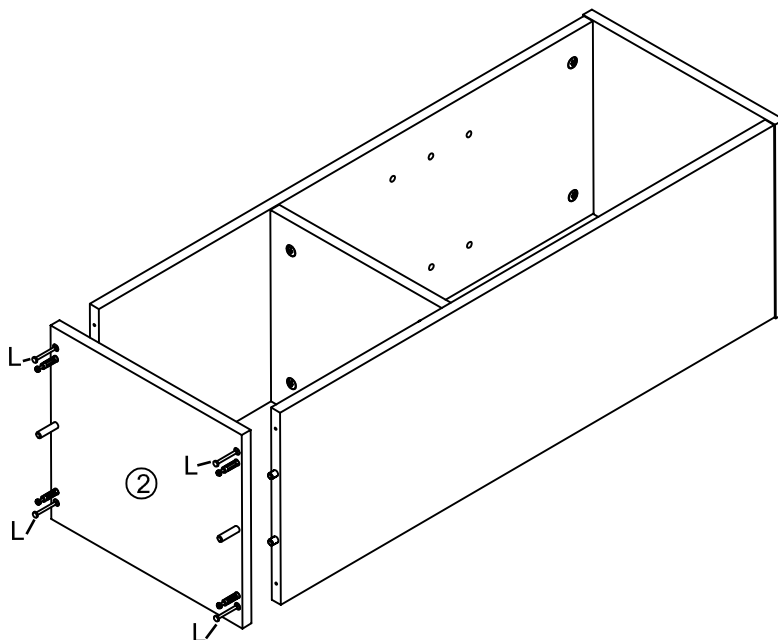


6

A*4




40 mm

C*6




8*40 mm

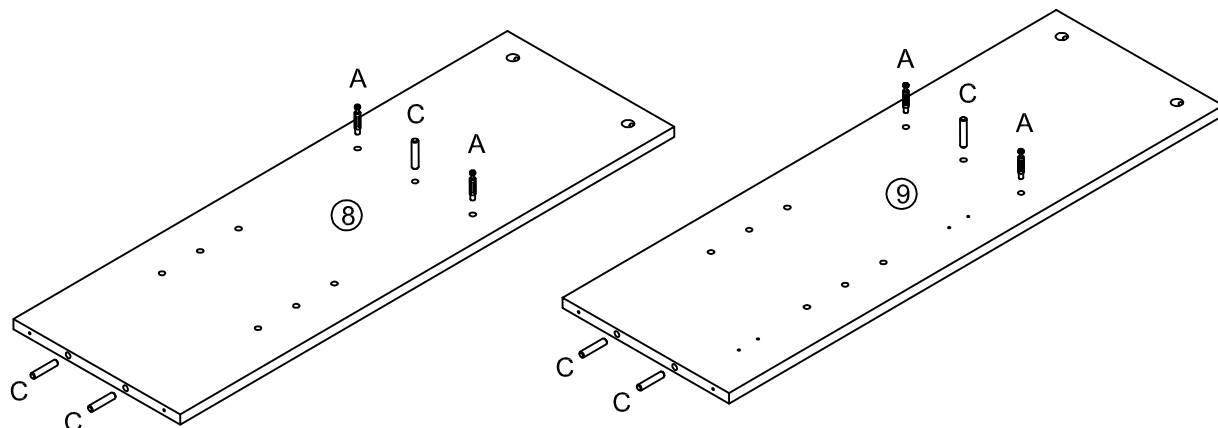


7

B*4




15*9 mm

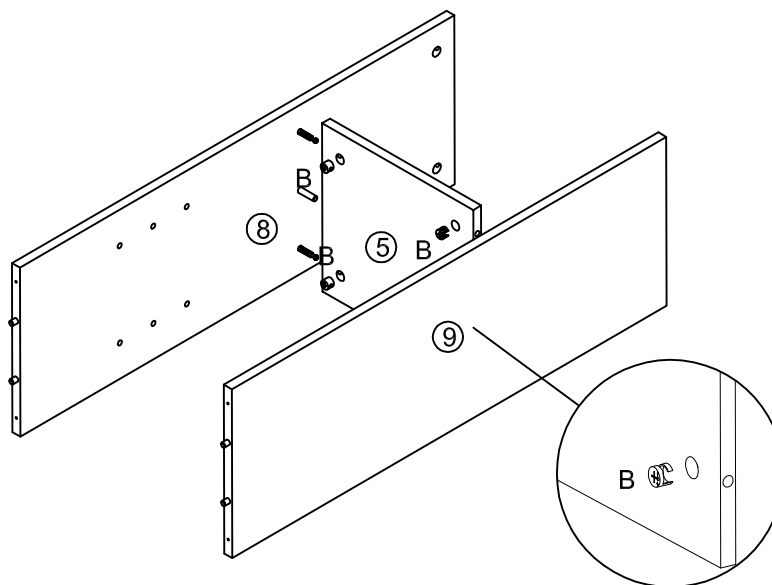


8

L*4



3.5*35 mm

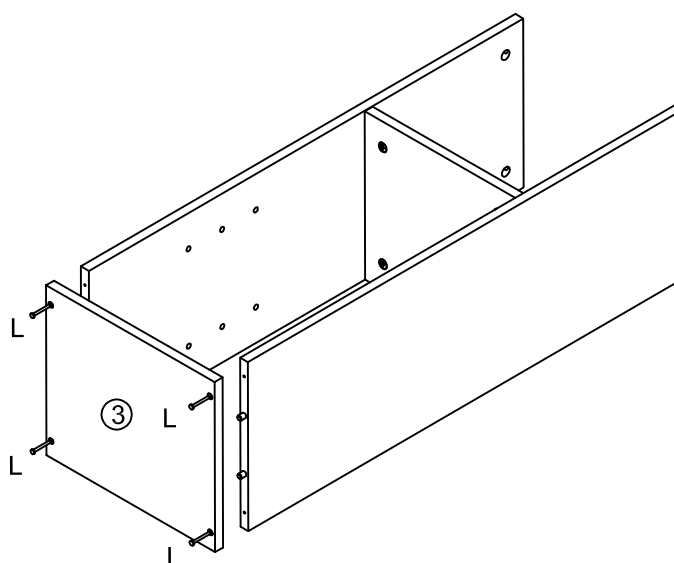


9

B*4




15*9 mm

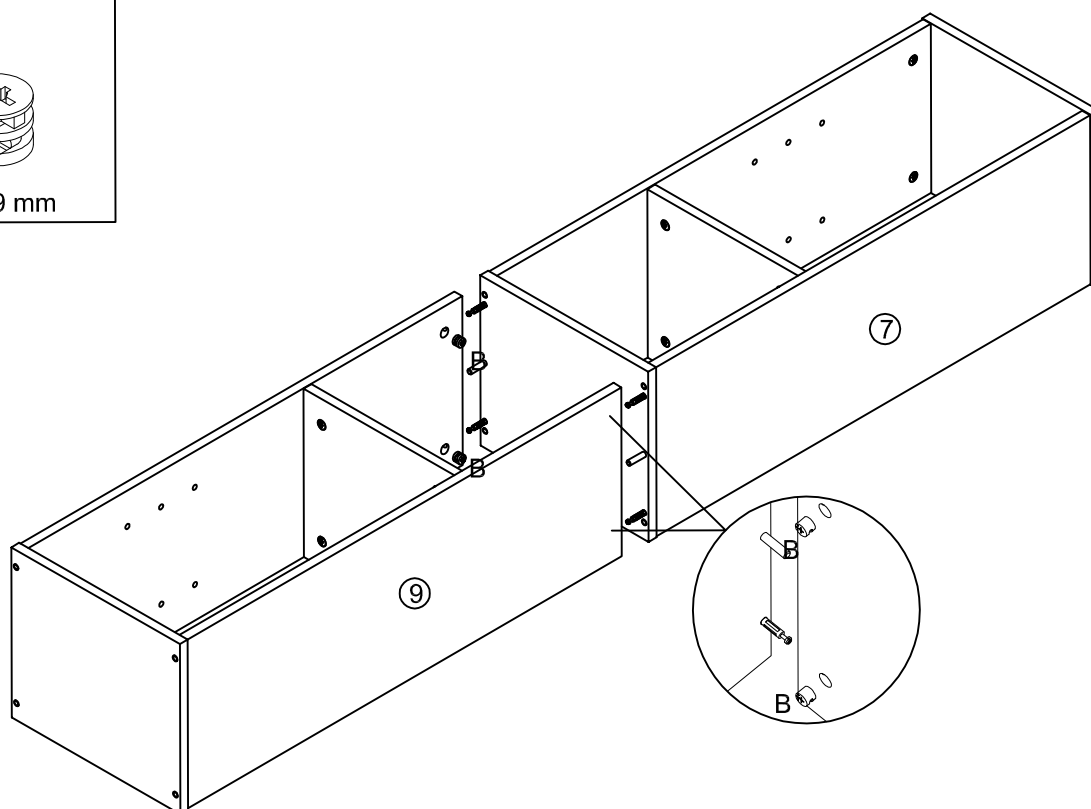

10

E*26

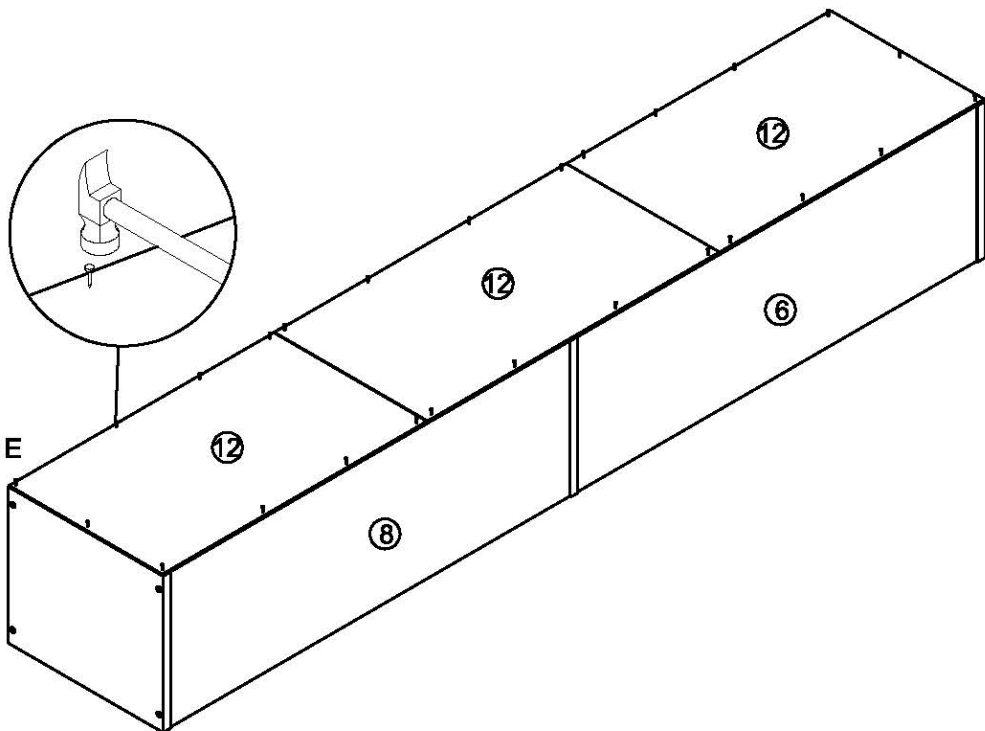

11

D*20




3.5*12mm




F*4



G*4

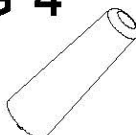

100 mm

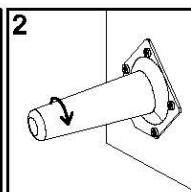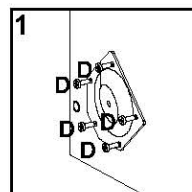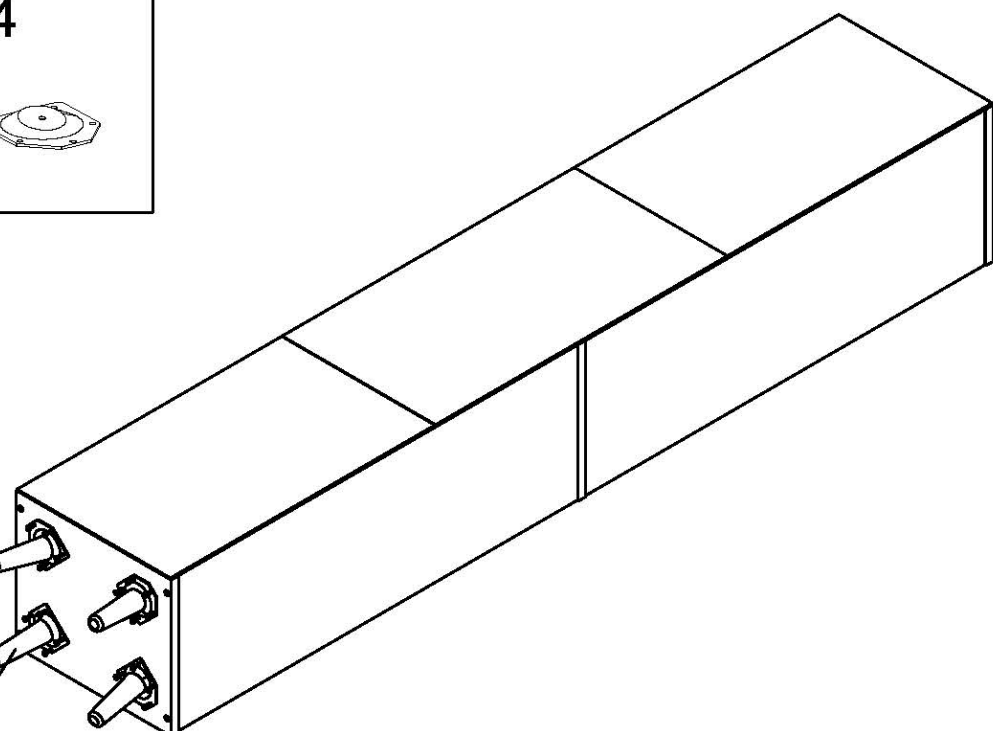


12

D*8



3.5*12mm

J*4




H*2



I*4



3.5*16 mm


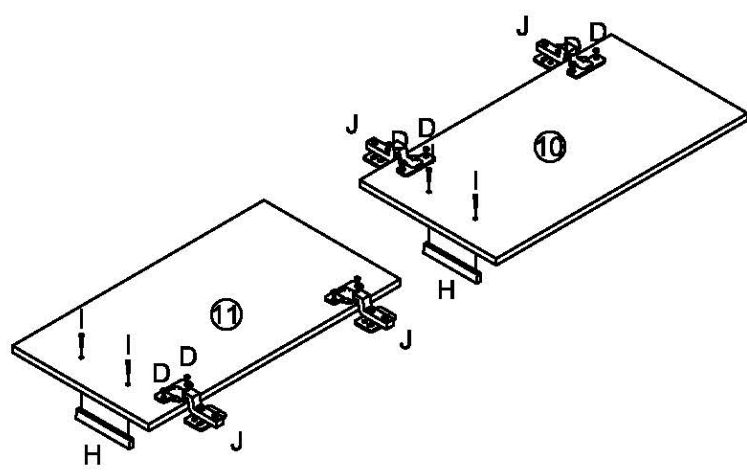


13

D*16




3.5*12mm

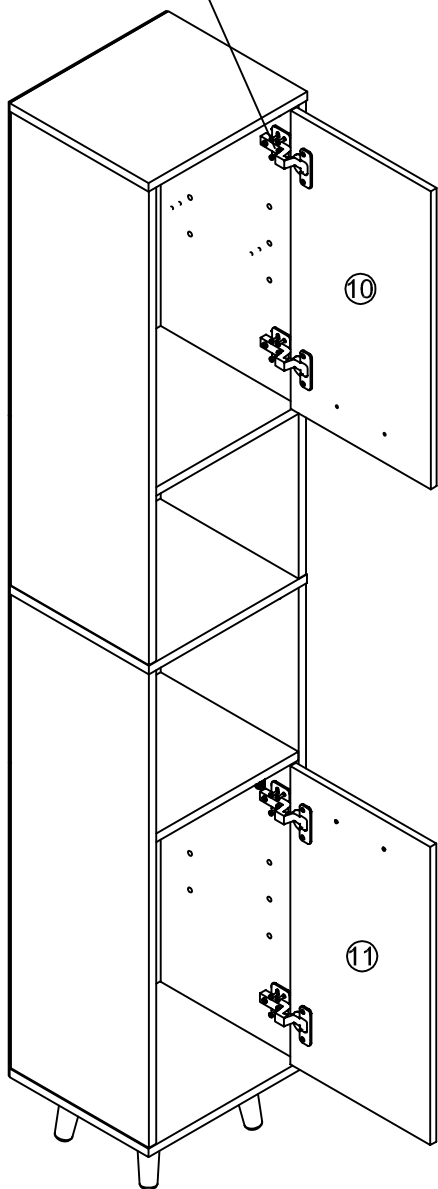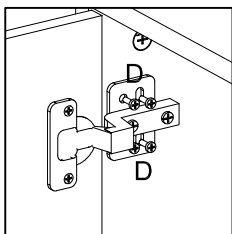

14

M*8

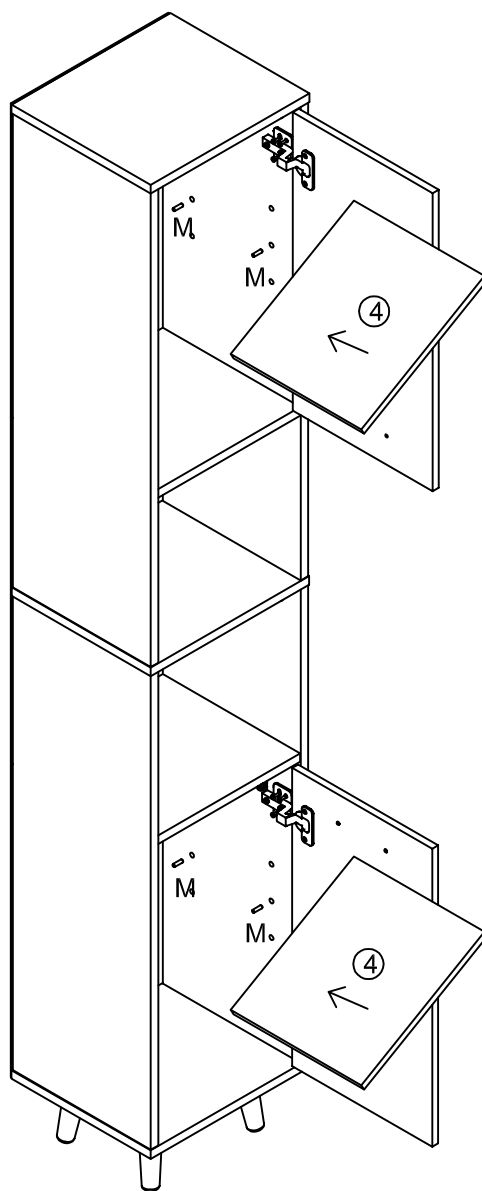

K*2

