


Installation Instructions for  
Rubin 1 Light Mini-Pendant



P1437 1.0

GENERATION LIGHTING

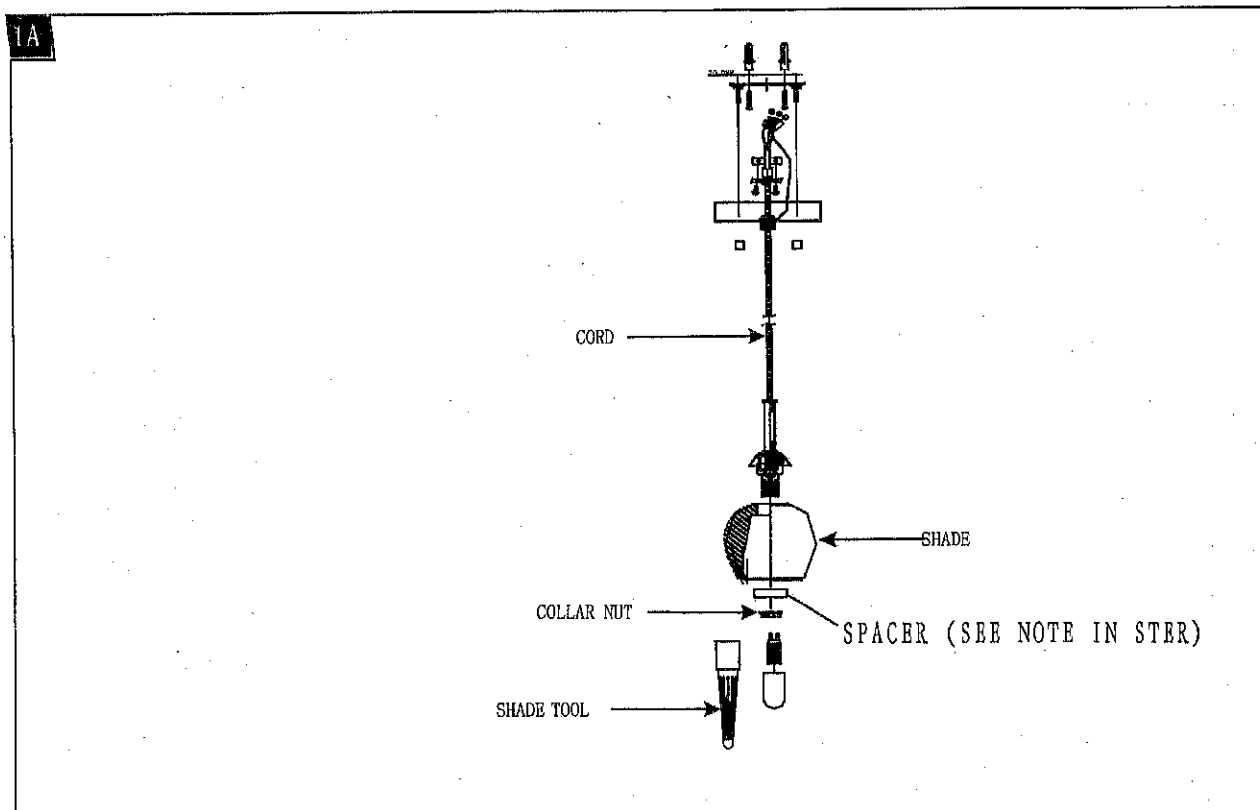

- 1 Determine the wanted height of the fixture by feeding the cord through the canopy and moving the cord up or down.
- 2 Place the cord in between the two cord clips and secure it in place using the clip screws.
- 3 Secure the mounting plate to the cieling.
- 4 Follow enclosed supplement installation instructions for electrical and fixture installation onto cieling.
- 5 Place the canopy onto the mounting plate, and secure it in place with the set screws using an Allen key.
- 6 Place the shade onto the socket and secure it in place by screwing the collar nut onto the socket using the shade tool.
- 7 Screw the lamp into the socket. Refer to the label on the socket for Max Wattage information.