

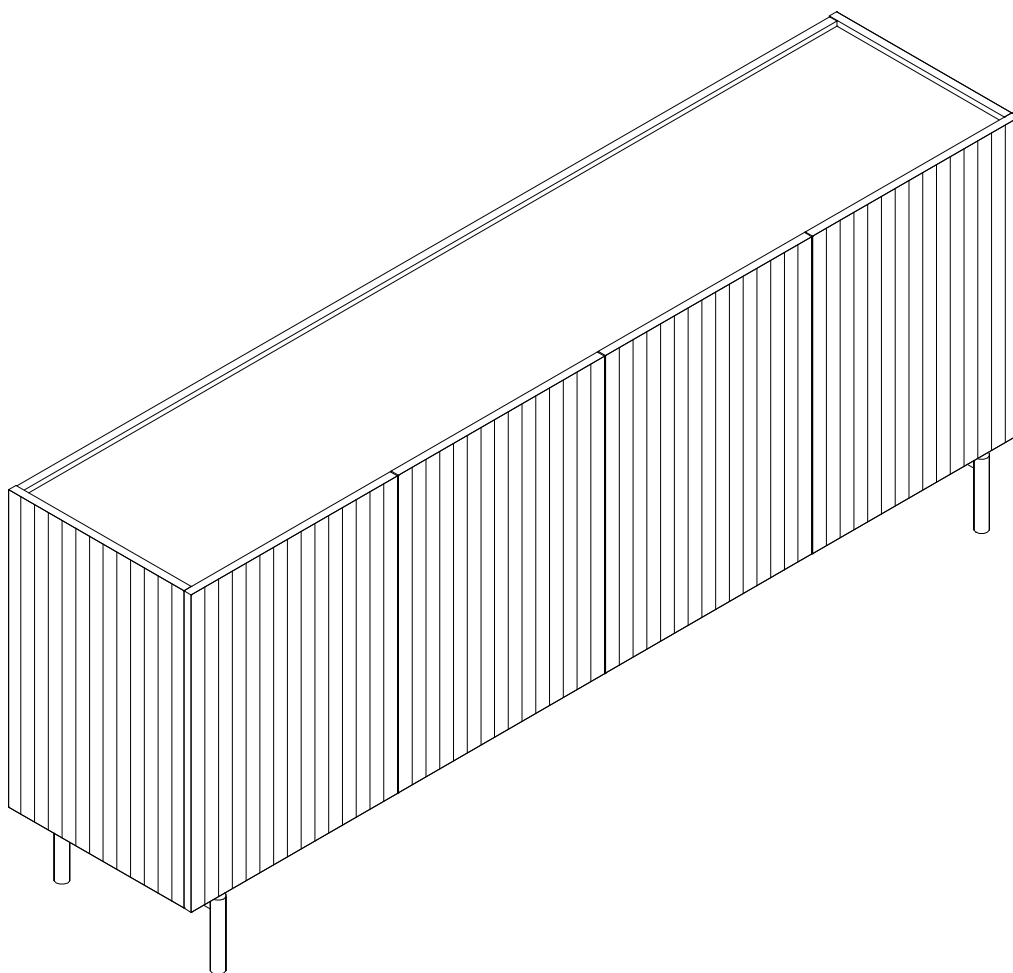
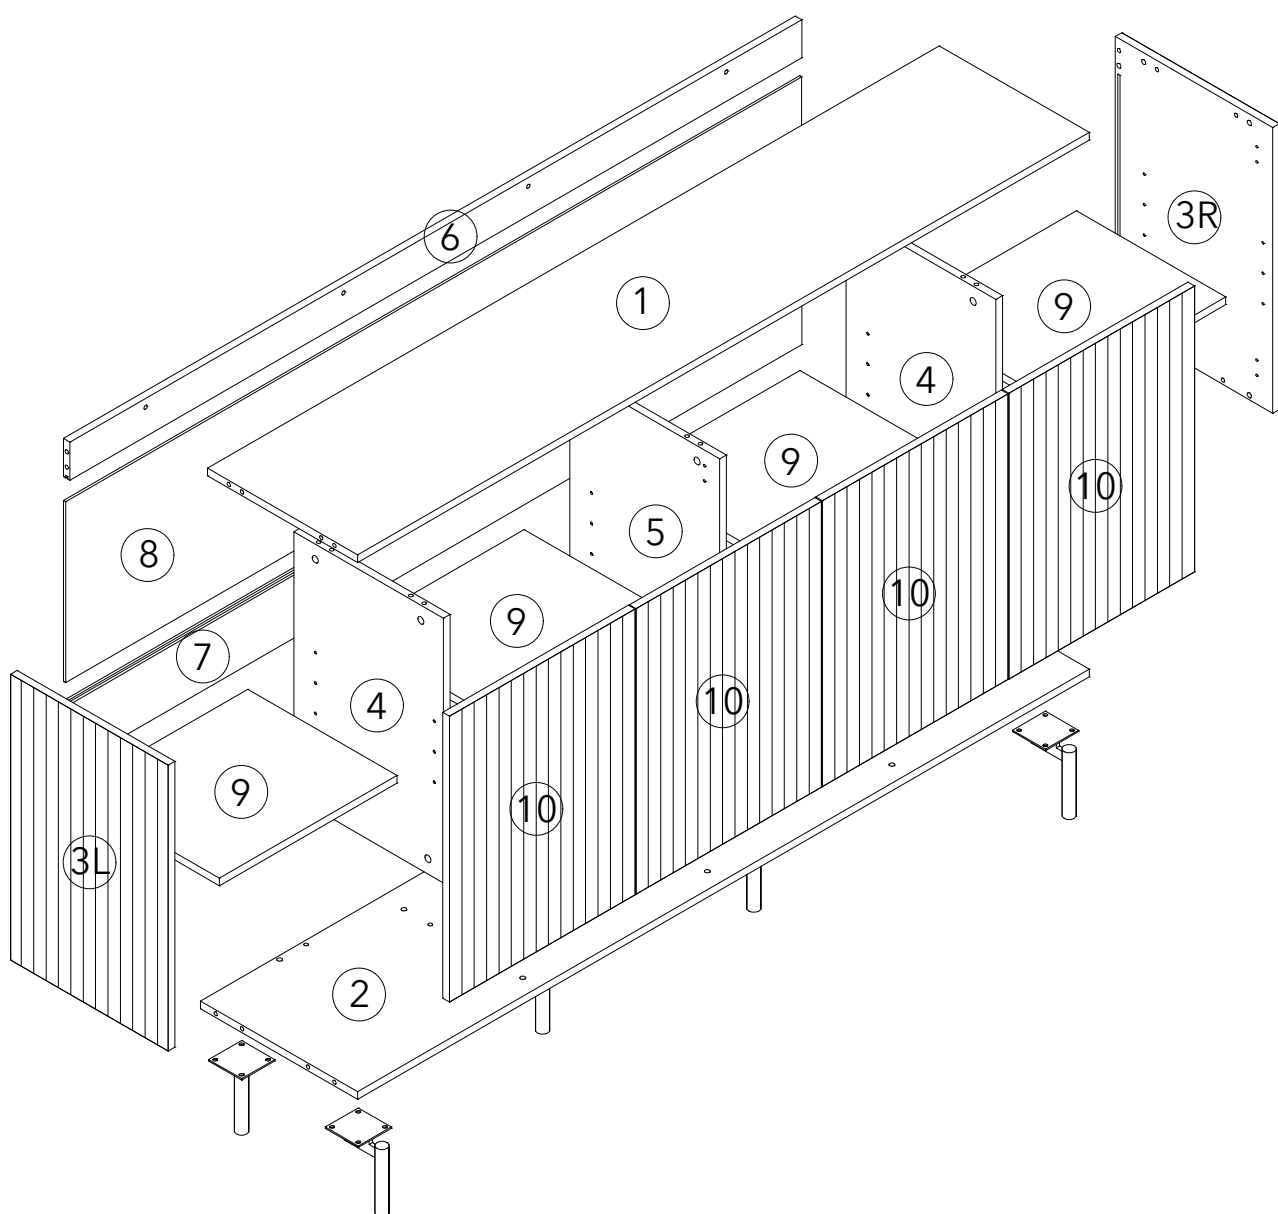
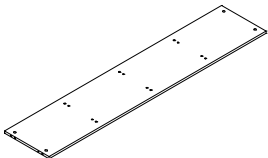
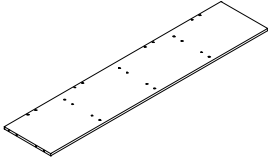
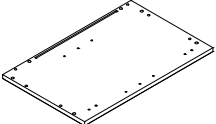
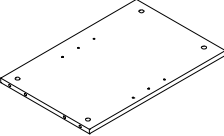
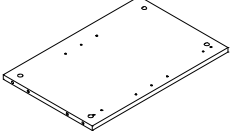
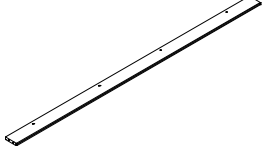
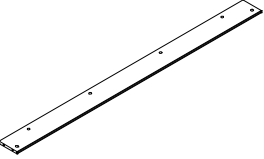
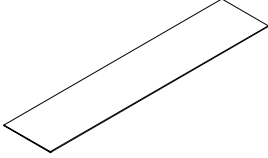












E6GS01

INSTRUCTION MANUAL

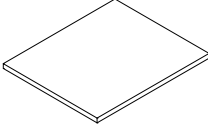


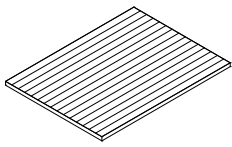


Ref	Dimensions(mm)	Visual	Qty
1	1774x364x16		1
2	1774x381x16		1
3	600x382x16		2
4	556x363x16		2
5	556x363x16		1
6	1774x80x16		1
7	1774x132x16		1
8	1784x380x5		1
9	431x362x16		4
10	600x450x16		4

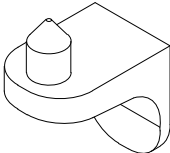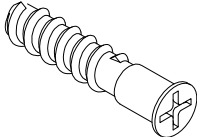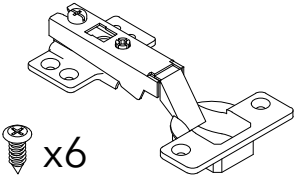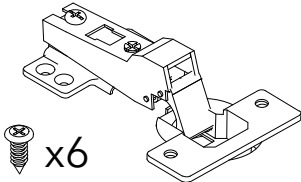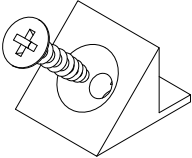								
A	M6x40mm	28pcs	B	Ø15x11.5	28pcs	C	Ø8x30	28pcs
								
G	/	16pcs	I	M6x12mm	24pcs	J	M7x50mm	4pcs
								
M	Flat hinge	4set	K	Small bend	4set	N	/	8set
								
L	/	2pcs	T	/	4pcs	Z	Ø20	28pcs


Step 1:

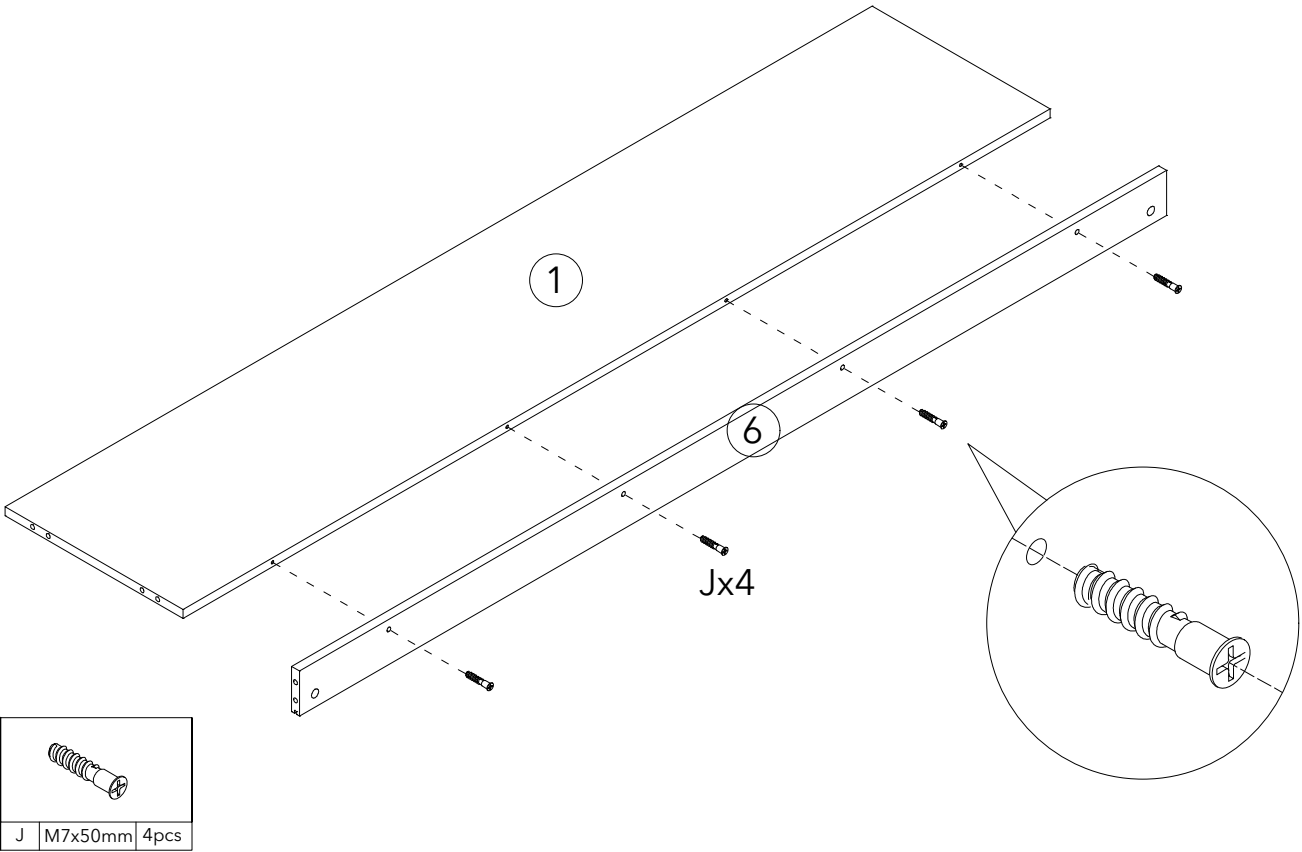


Step 2:

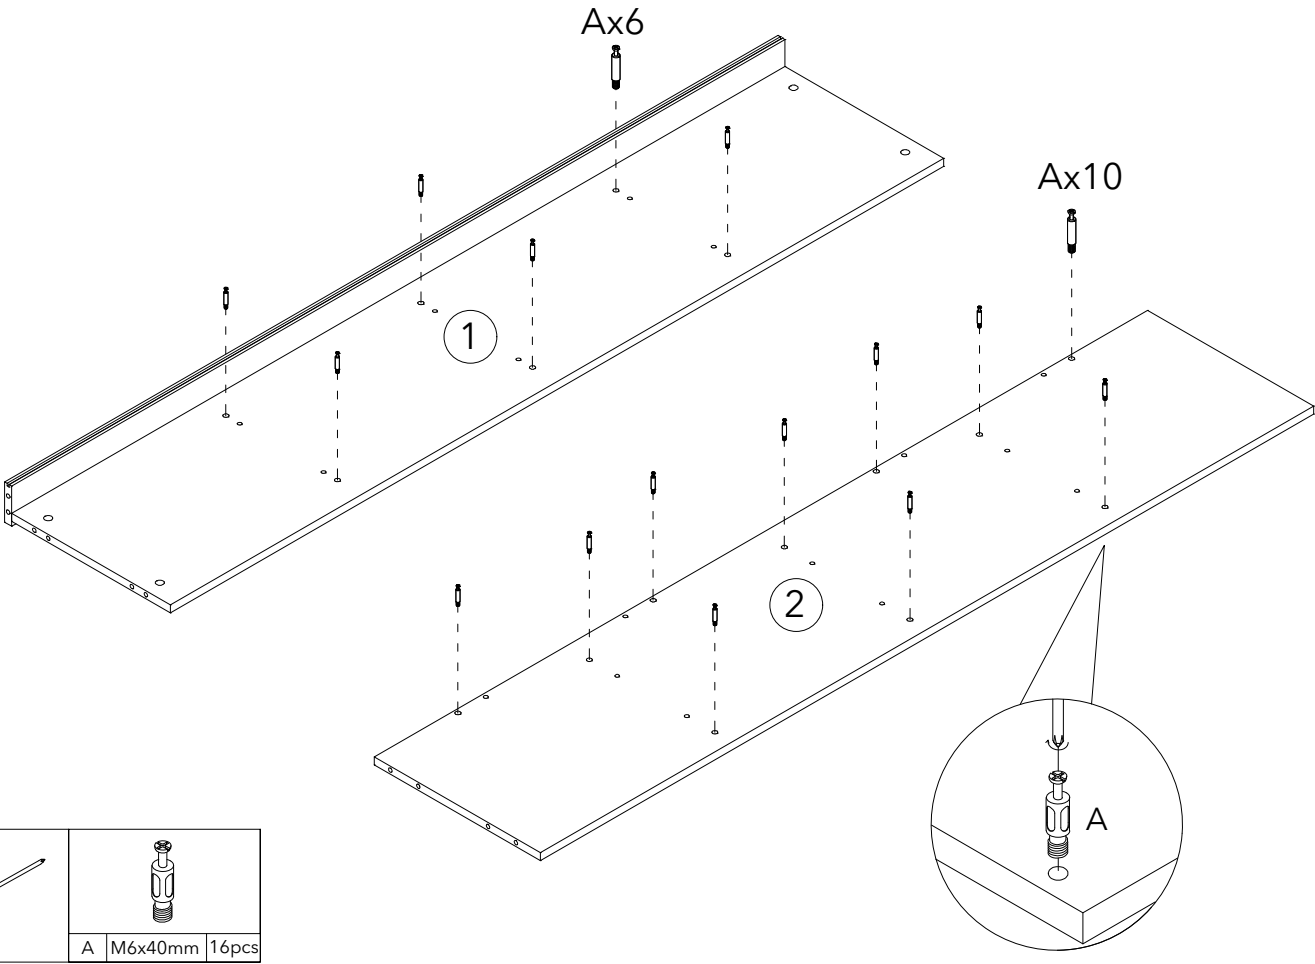


Step 3:

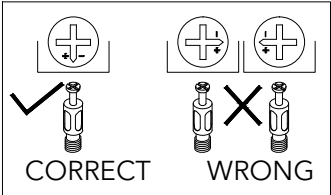



Please note that the locking cam faces outwards

			
		C	Ø8x30 10pcs
			
		B	Ø15x11.5 10pcs


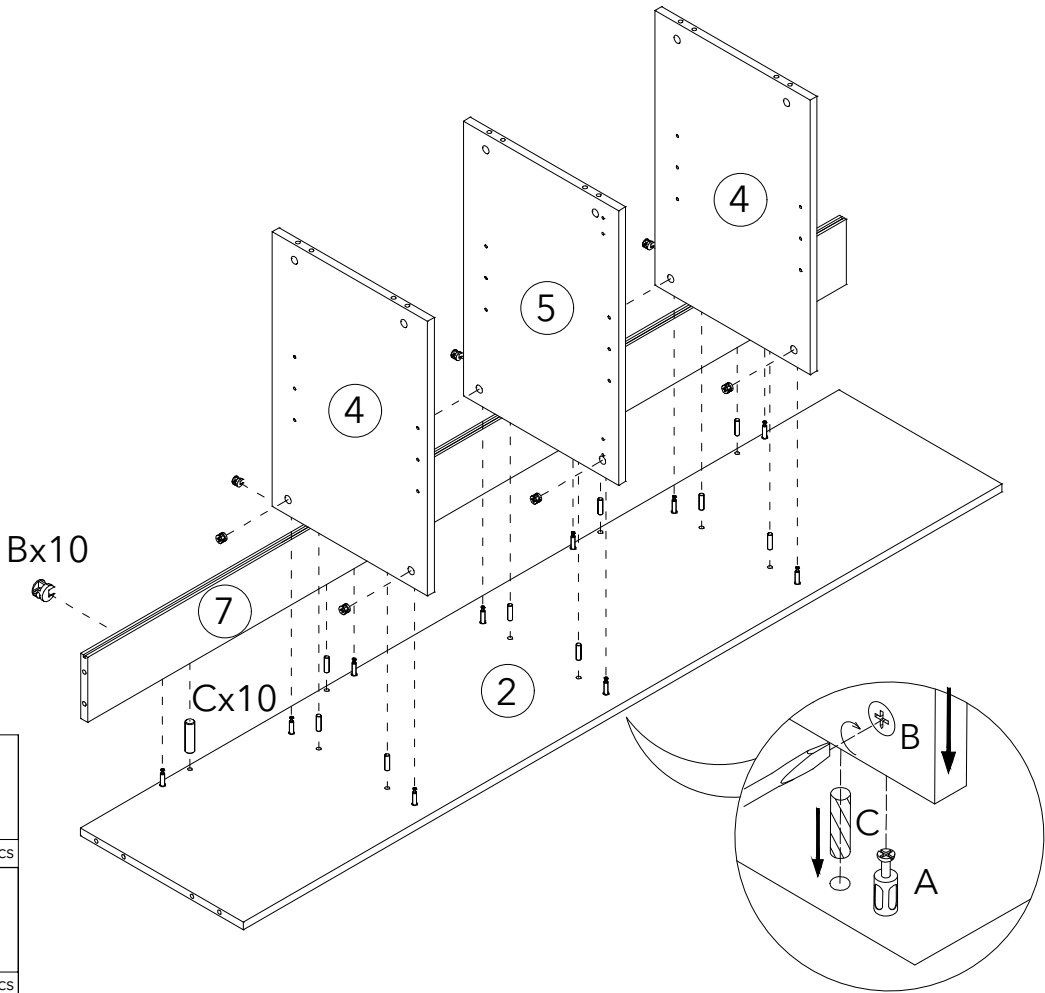


Step 4:



			
		C	Ø8x30 6pcs
			
		B	Ø15x11.5 6pcs

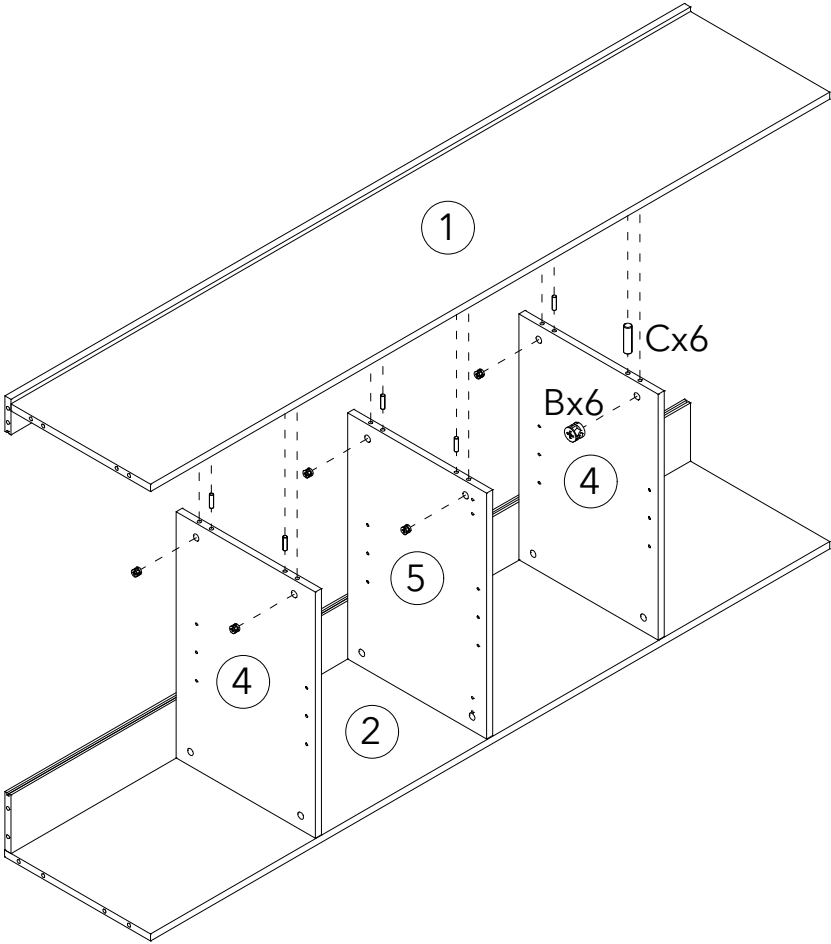


Step 5:

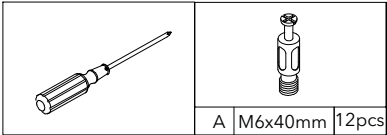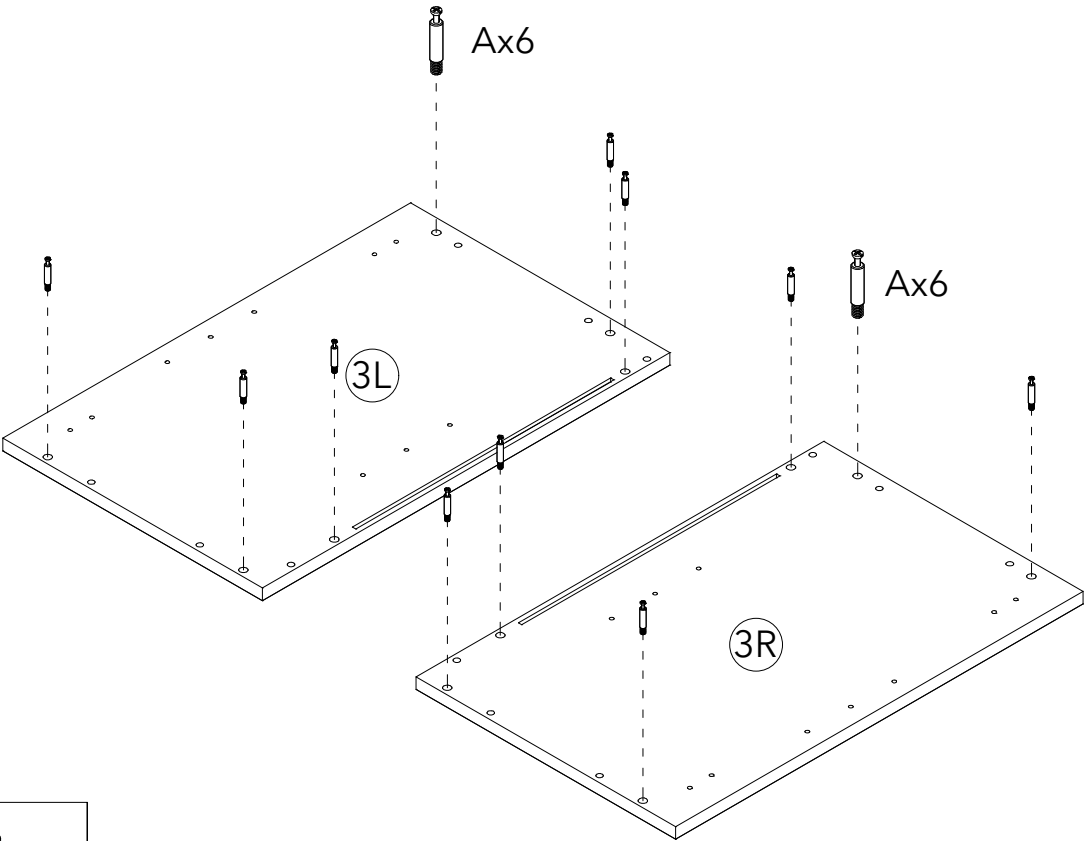


Step 6:

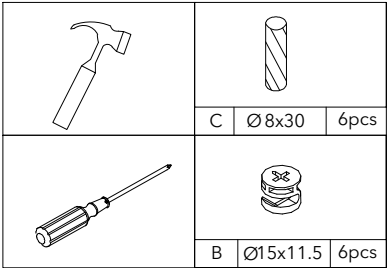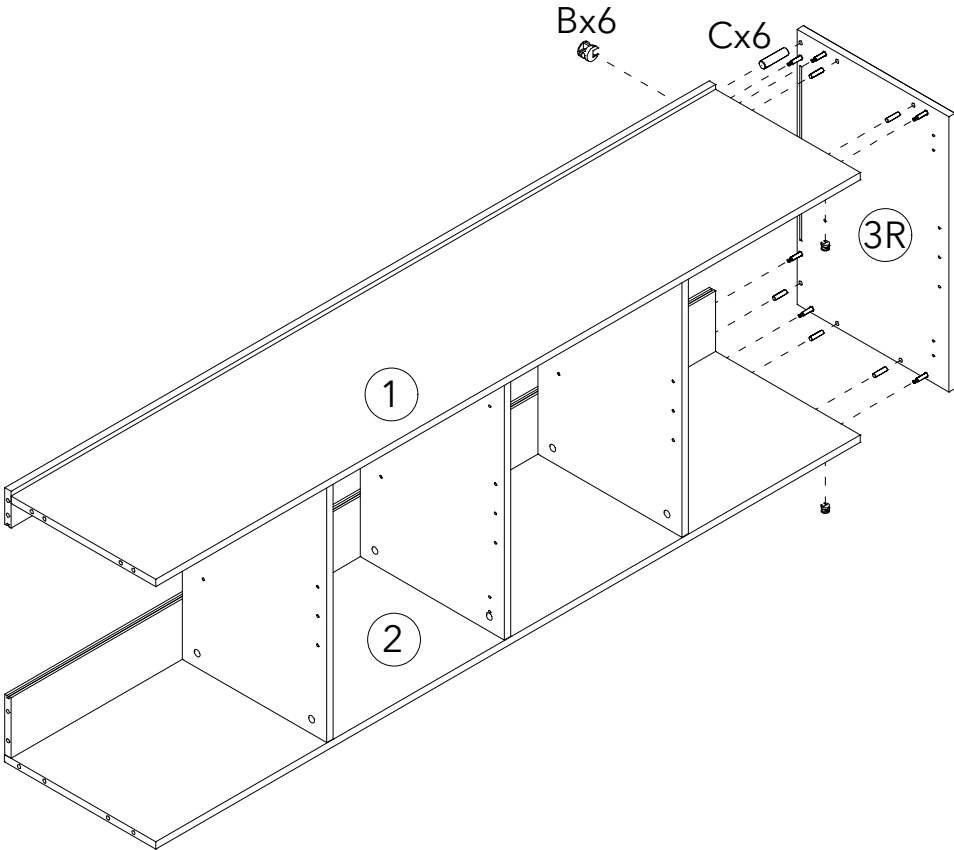



Step 7:

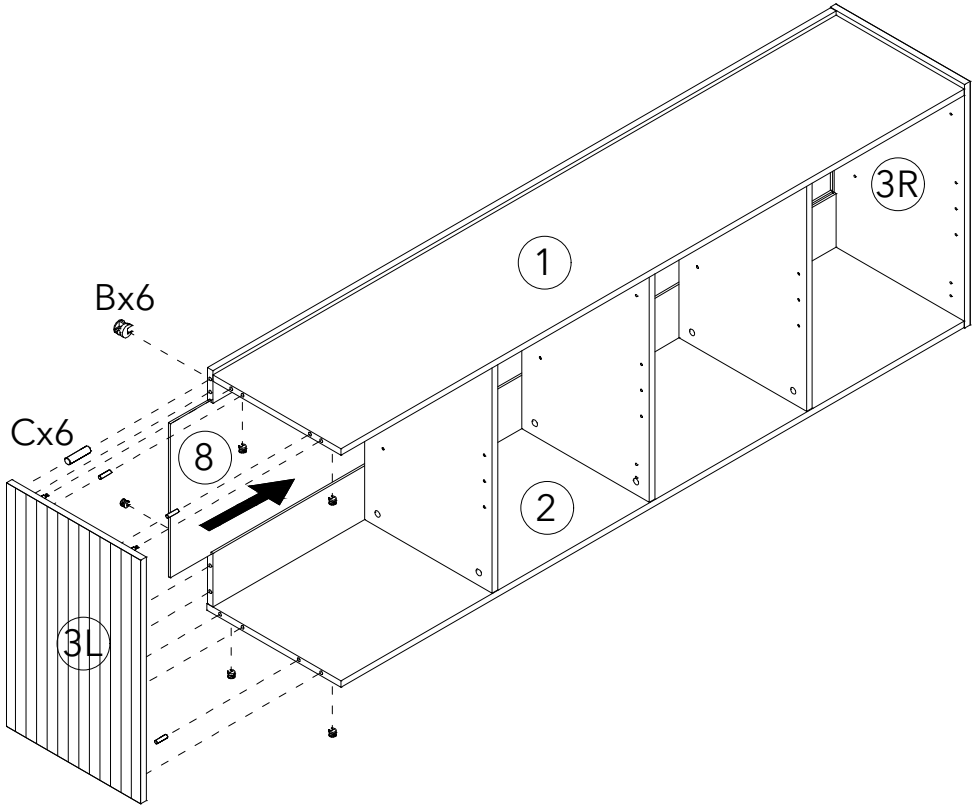


			
	C	Ø8x30	6pcs
			
	B	Ø15x11.5	6pcs

Step 8:


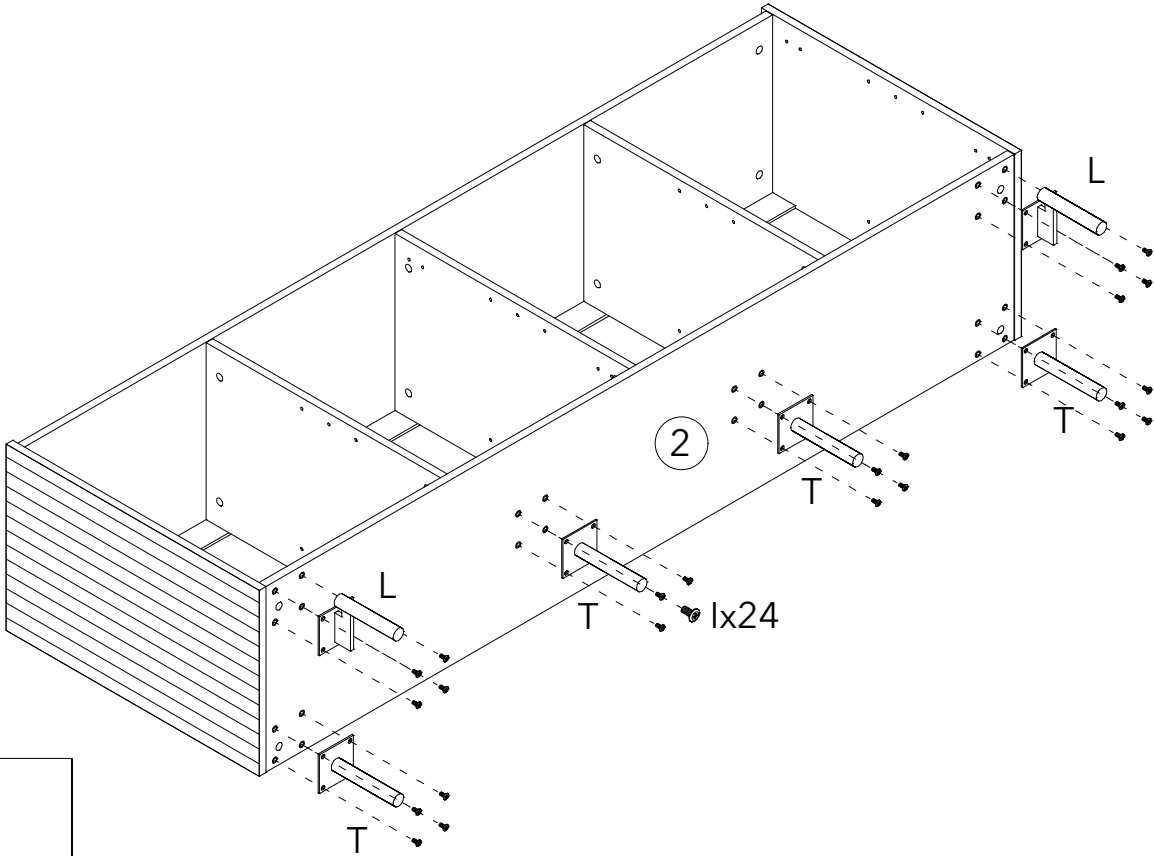


			
	L	/	2pcs
			
	I	M6x12mm	24pcs


Step 9:

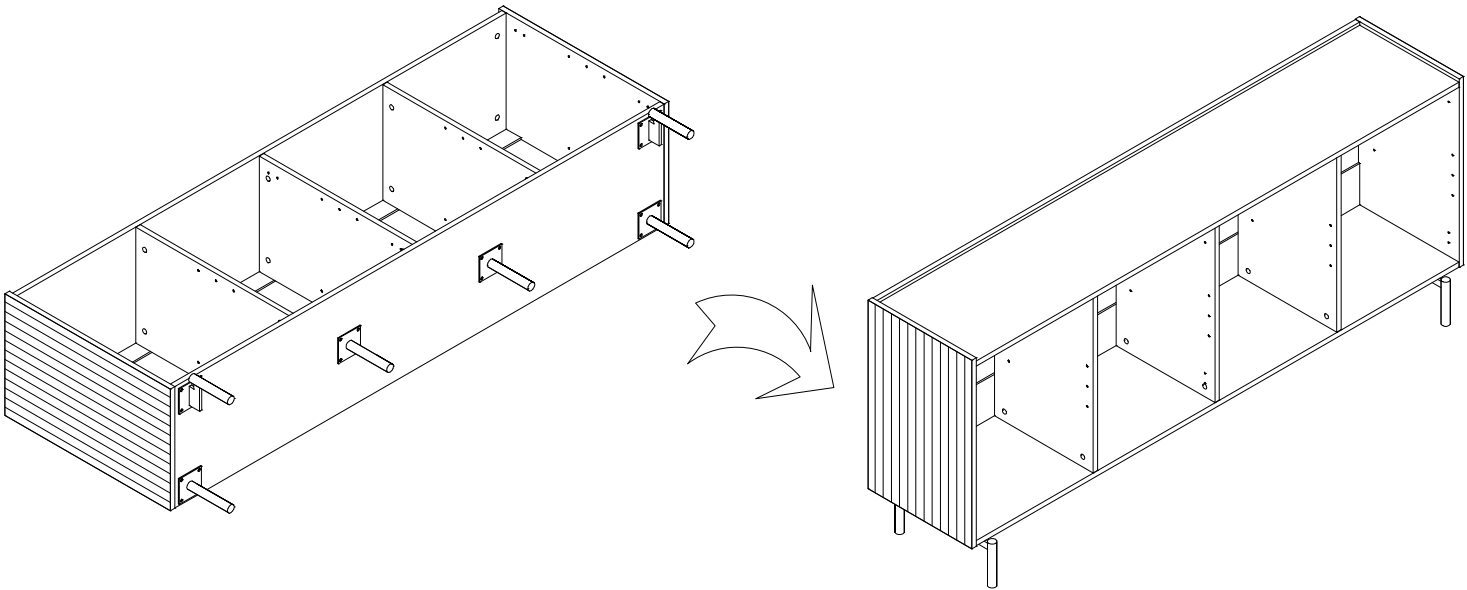


Step 10:

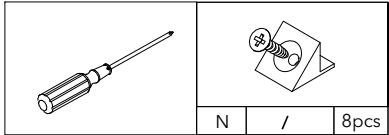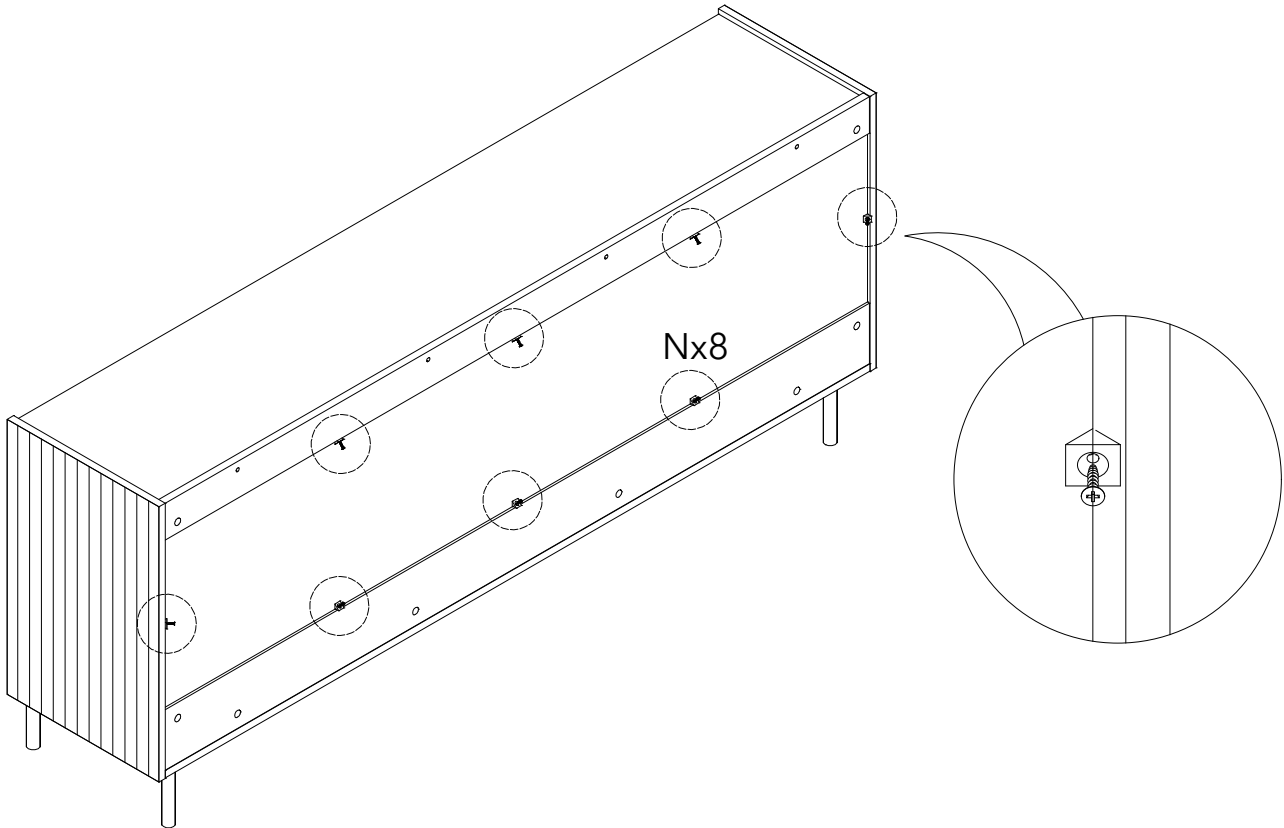


Step 11:



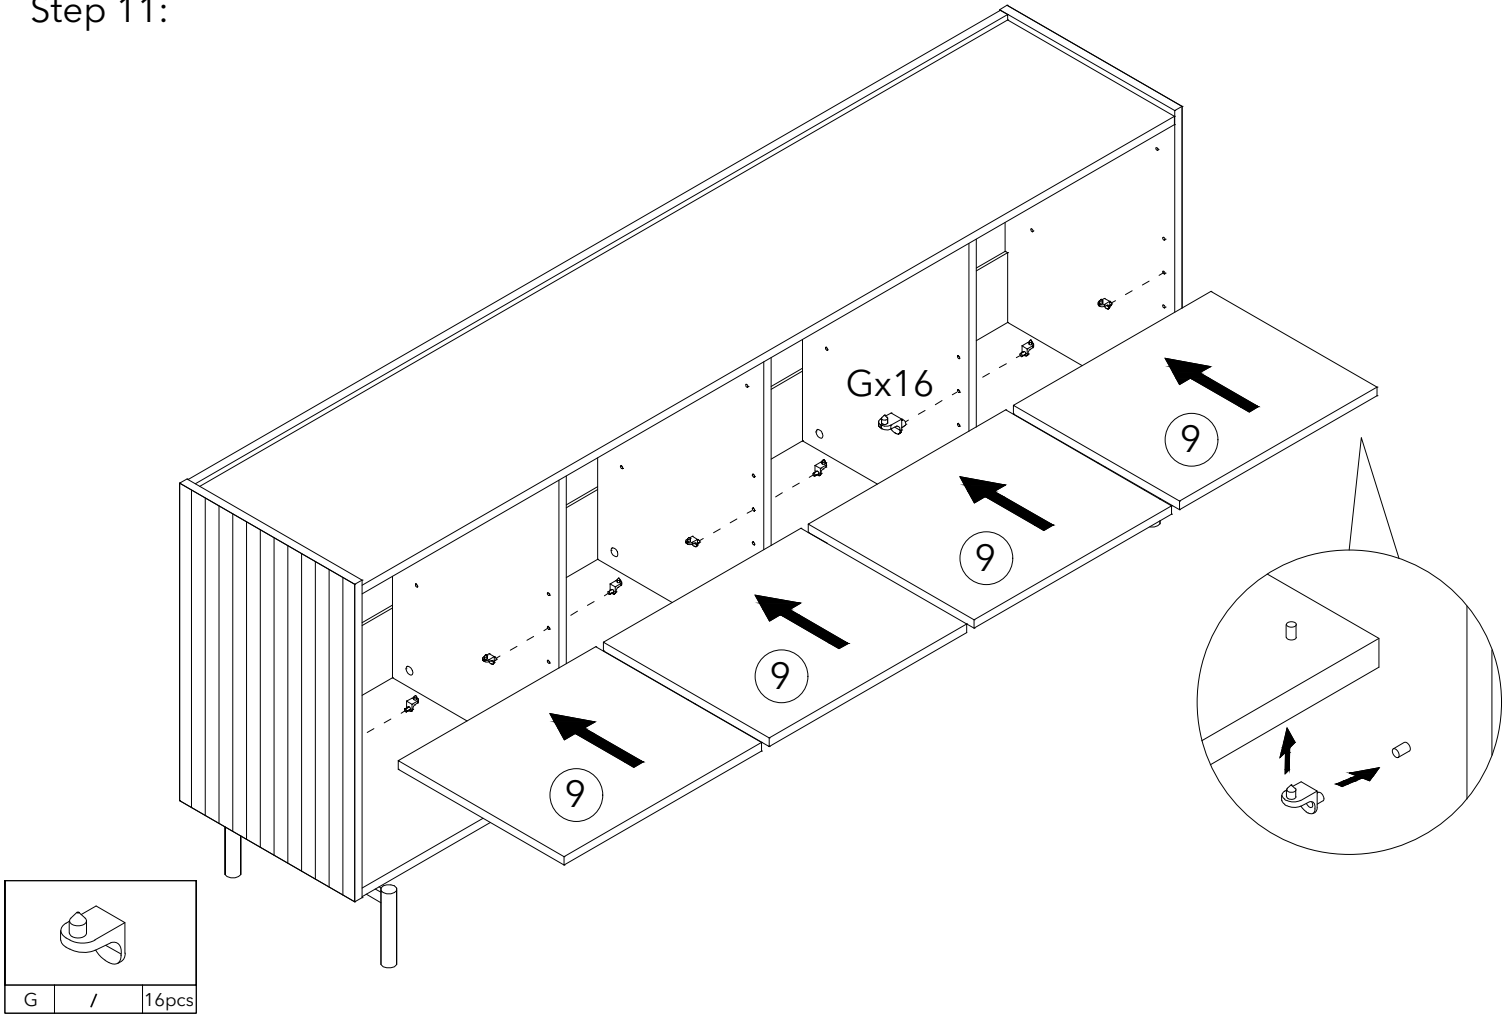


Step 12:

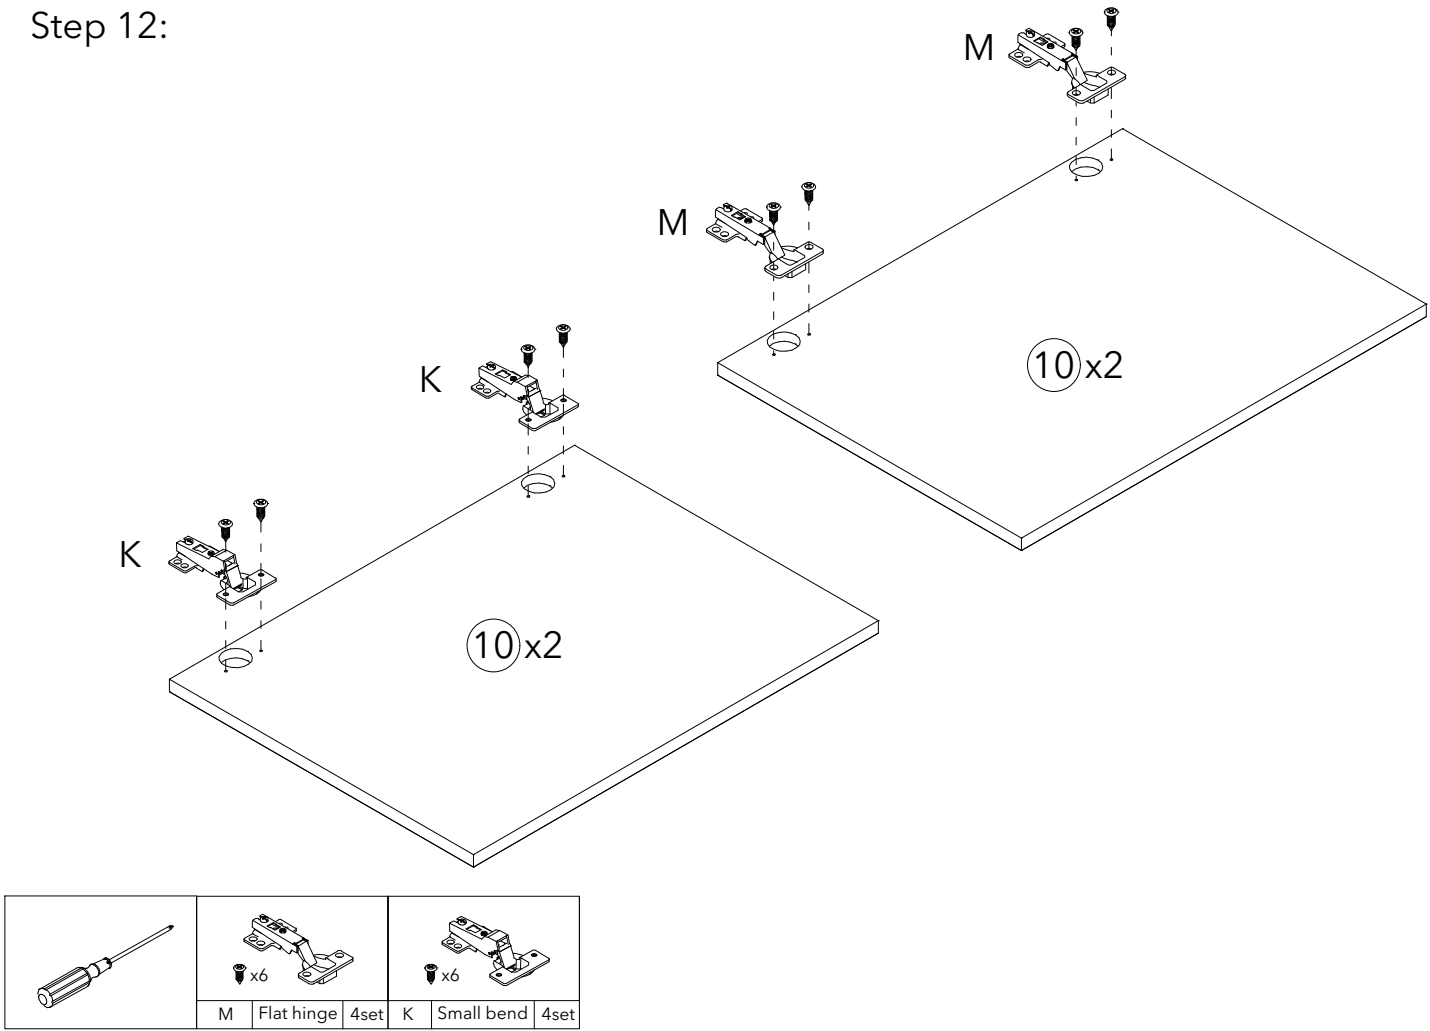





Step 13:

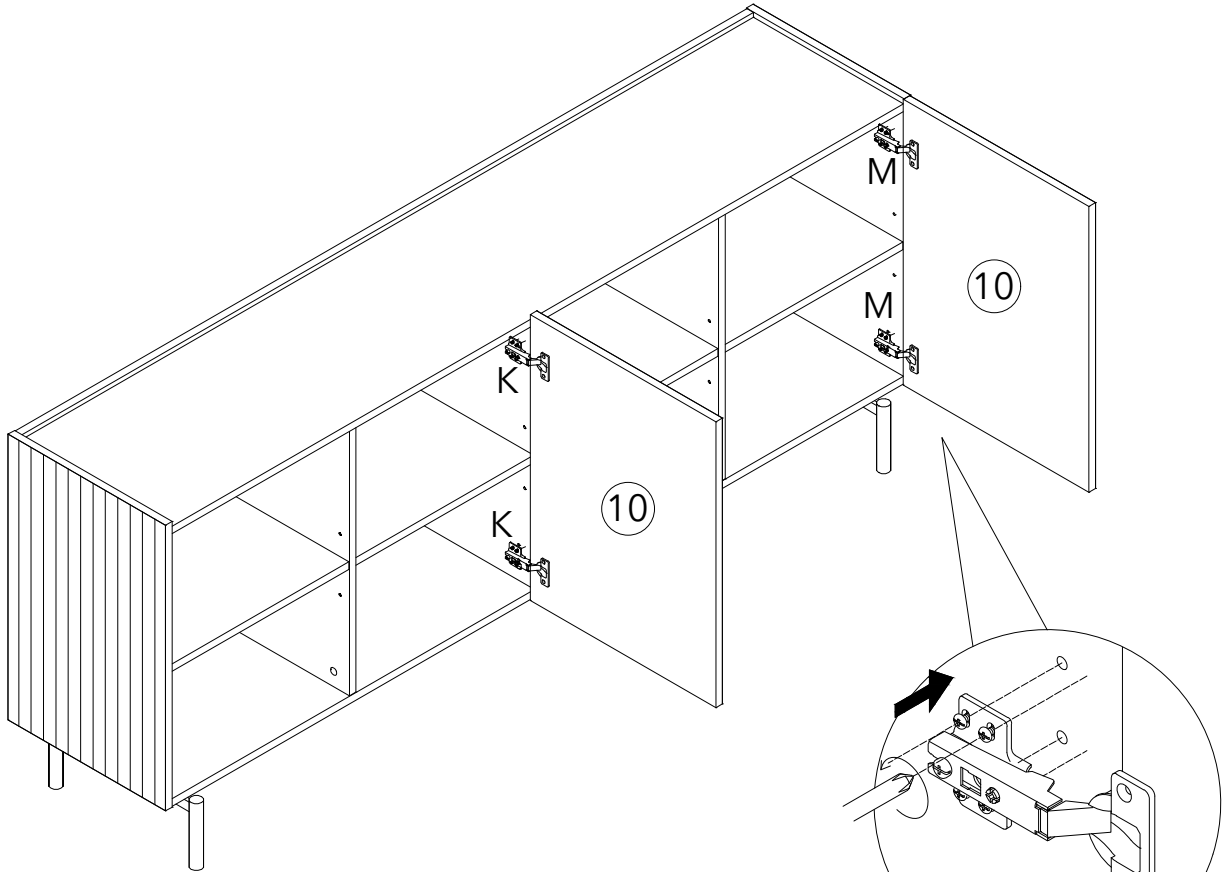


		
M	Flat hinge 2set	K Small bend 2set

Step 14:

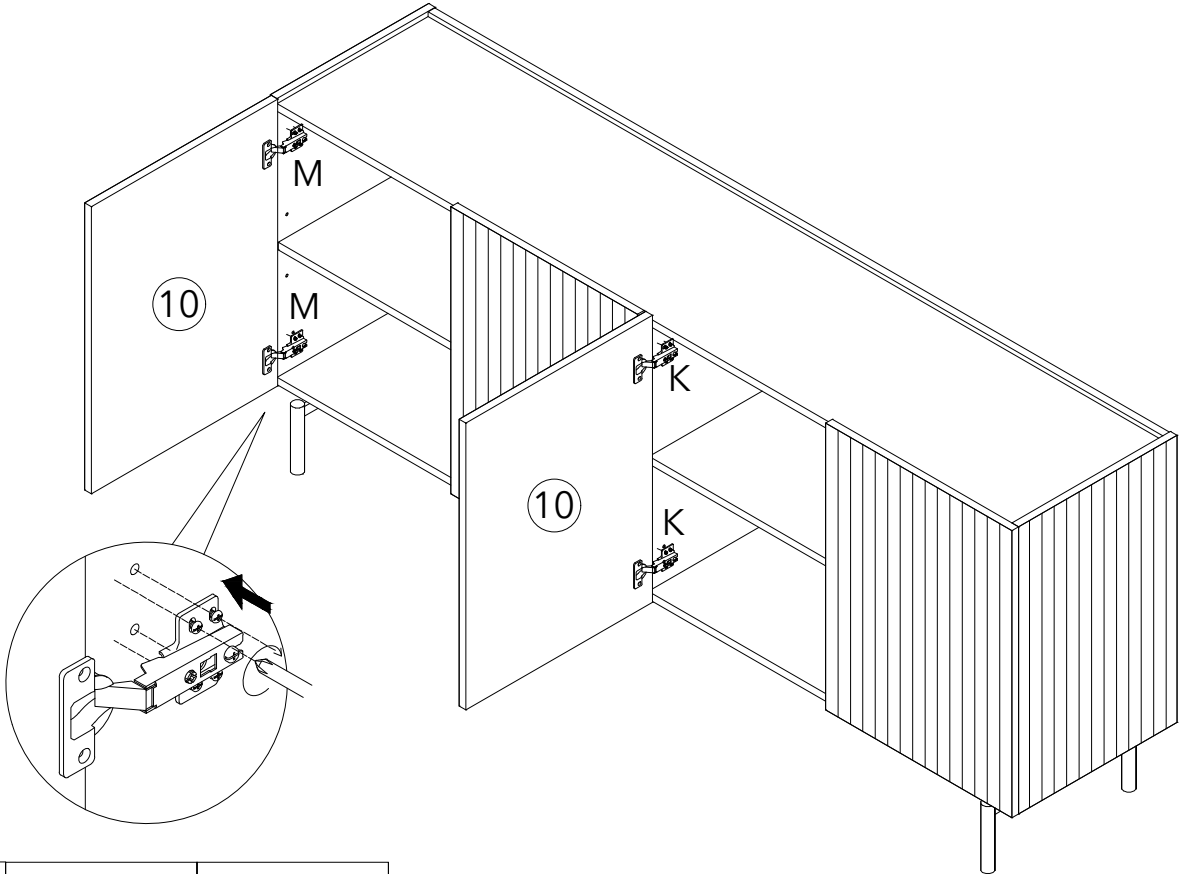


		
M	Flat hinge 2set	K Small bend 2set

Step 15:

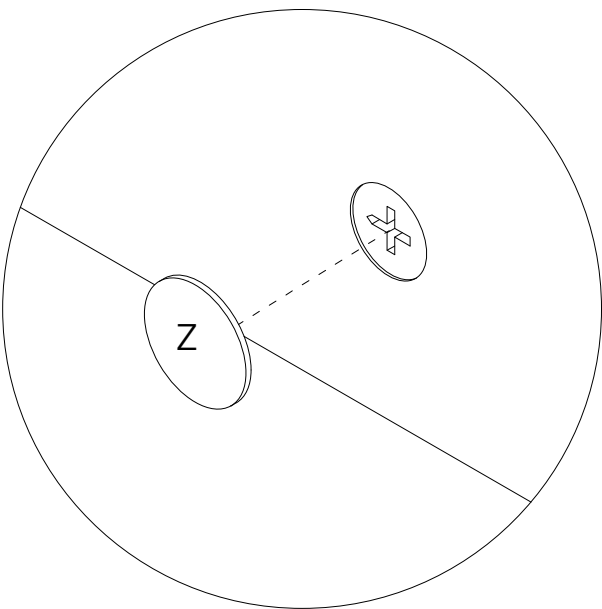

Add the screw covers
for those visible cams

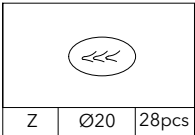

final product

