

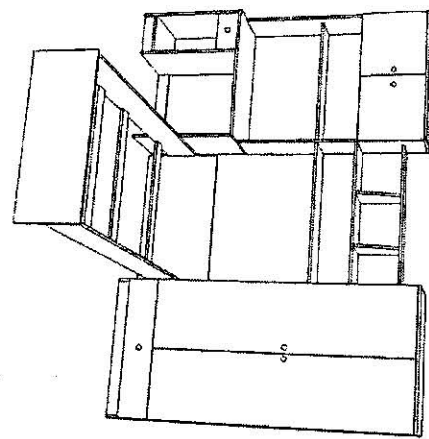


BOND BED

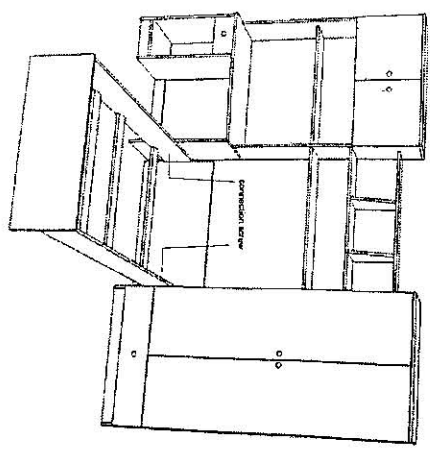


Secure both side of beds with other assembly parts by using connection screws.

10




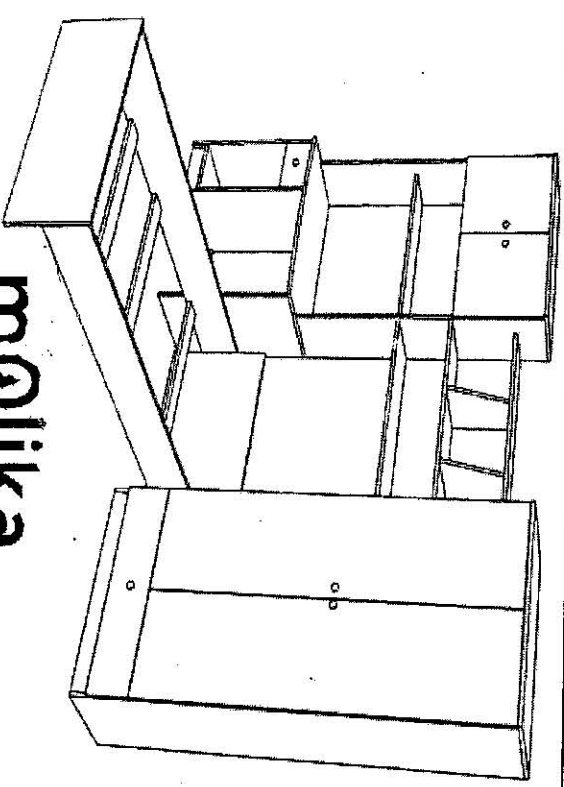


molika
Furniture Factory


BOND BED

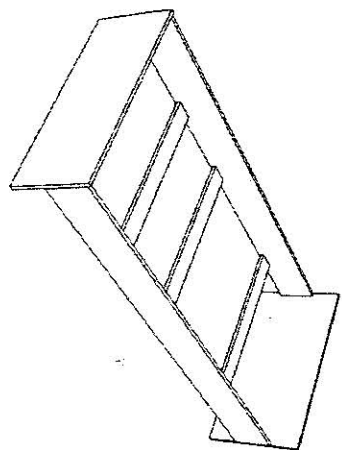

COMPONENTS

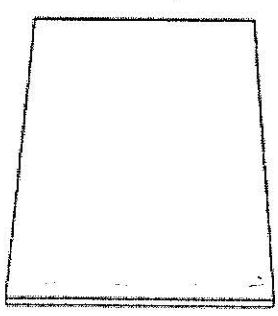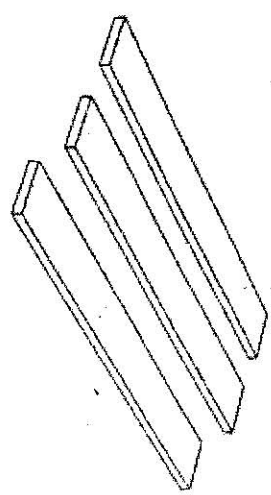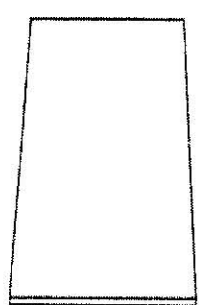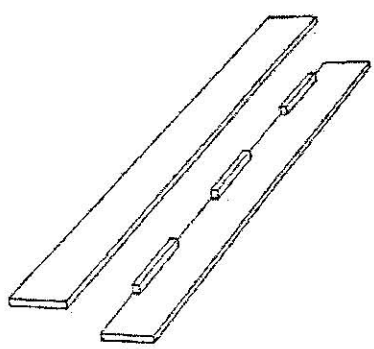

Hardware



Cam screw Cam lock Dowel handle screw



Screw 16mm

Conformat Tools



Screwdriver




Allen wrench

NOTE:
Tools are not applied by the manufacturer
its in costumer hands to secure them.

BOND WARDROBE


BOND WARDROBE

E

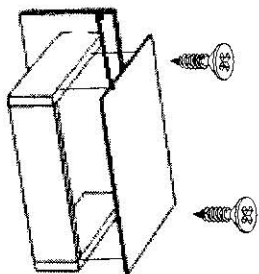


Turn the drawer assembly upside down then fix the bottom drawer panel with the rest of the assembly and secure it by using 16 mm screws

10

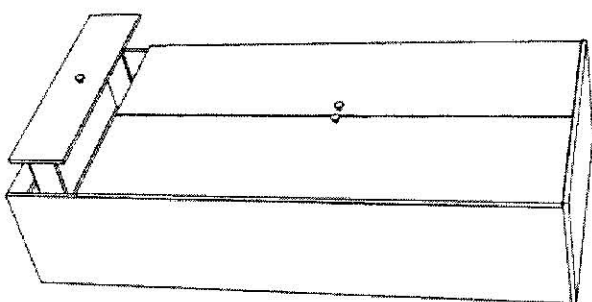


10

COMPONENTS

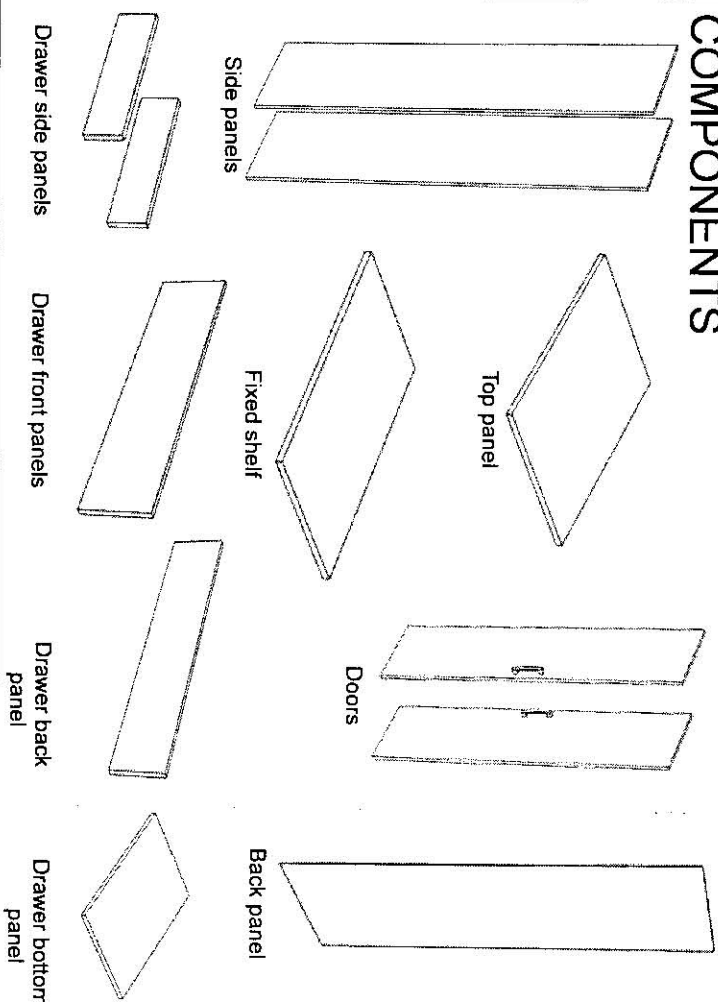

Hardware

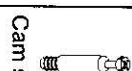

Cam screw



Cam lock



Dowel



Screw 16mm



Conformat handle screw

Tools



Screwdriver




Allen wrench



NOTE:
Tools are not applied by the manufacturer
It's in customer hands to secure them.

BOND WARDROBE


BOND WARDROBE

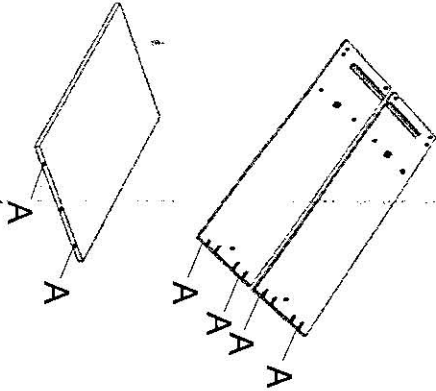


Place wood dowels on the selected holes of side panels and middle and bottom partition panels

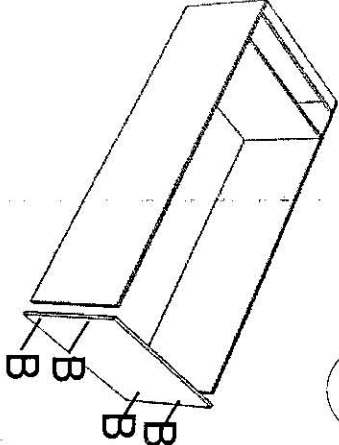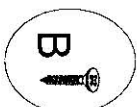


Connect the top panel with the rest of the assembly using conforma screw

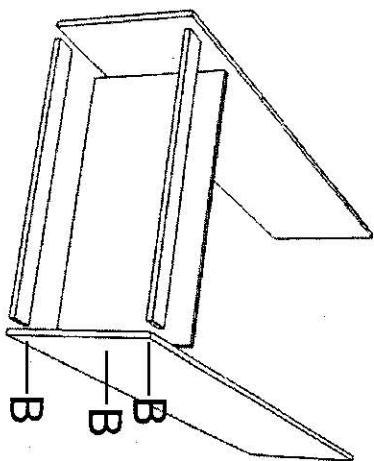


2 Connect side panels with bottom panels and fixed shelf using the conforma screw.

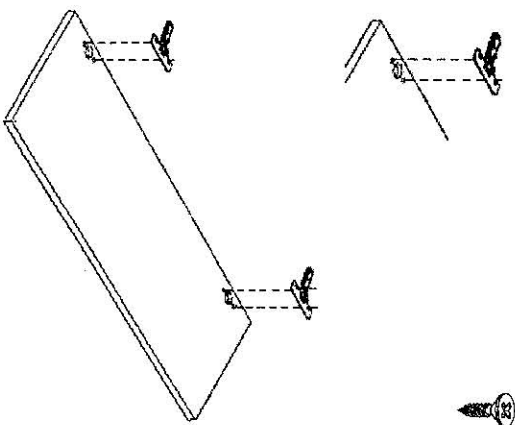


4 Place the hinges in the selected holes and secure them with 16mm screw.

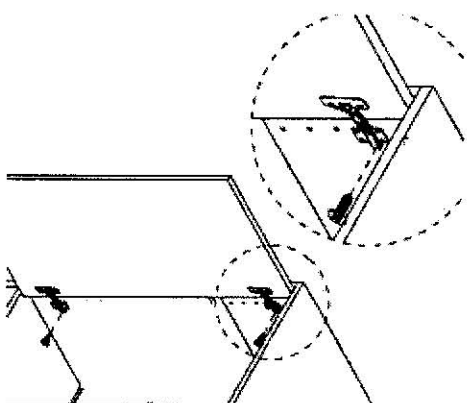


5 Connect the door with the rest of assembly and secure them using hing screws

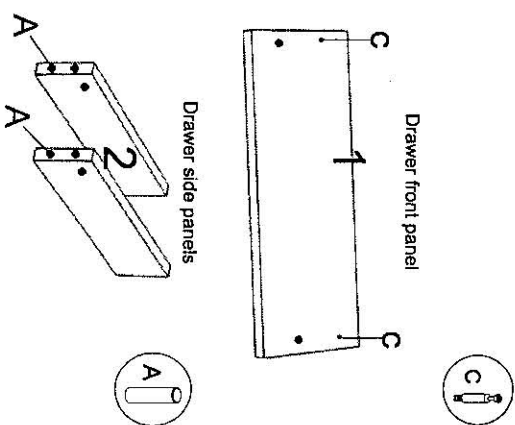

7 1) Place cam screws into the front drawer panel
2) Place dowels into the drawer side panels

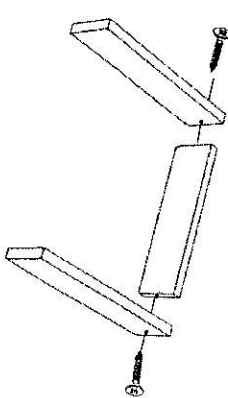

6 Connect the back drawer panel with the side drawer panels and secure the assembly with conforma

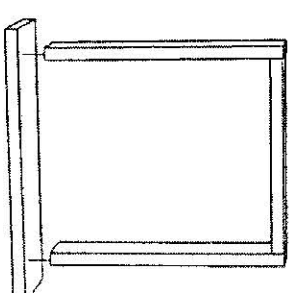



8 Connect drawer assembly with drawer front panel and secure it with cam locks

BOND WORKTABLE




9 Turn the drawer assembly upside down then fix the bottom drawer panel with the rest of the assembly and secure it by using 16 mm screws

10

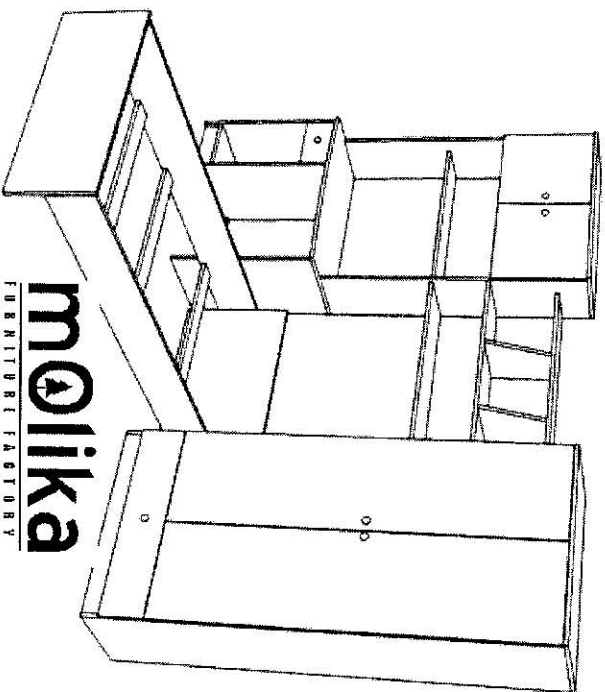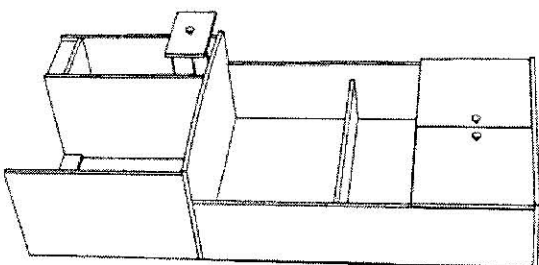


molika
Furniture Factory

BOND WORKTABLE

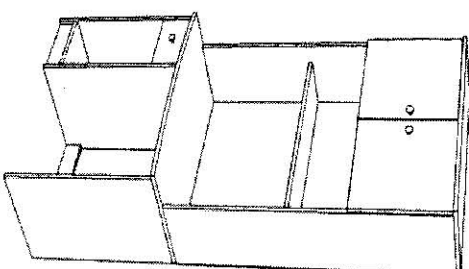


Hardware

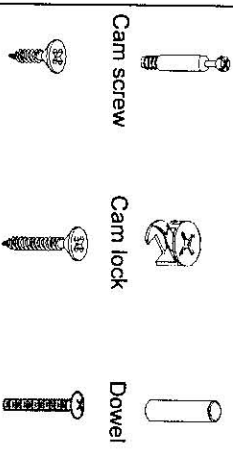





Tools







NOTE:
Tools are not applied by the manufacturer
its in costumer hands to secure them.

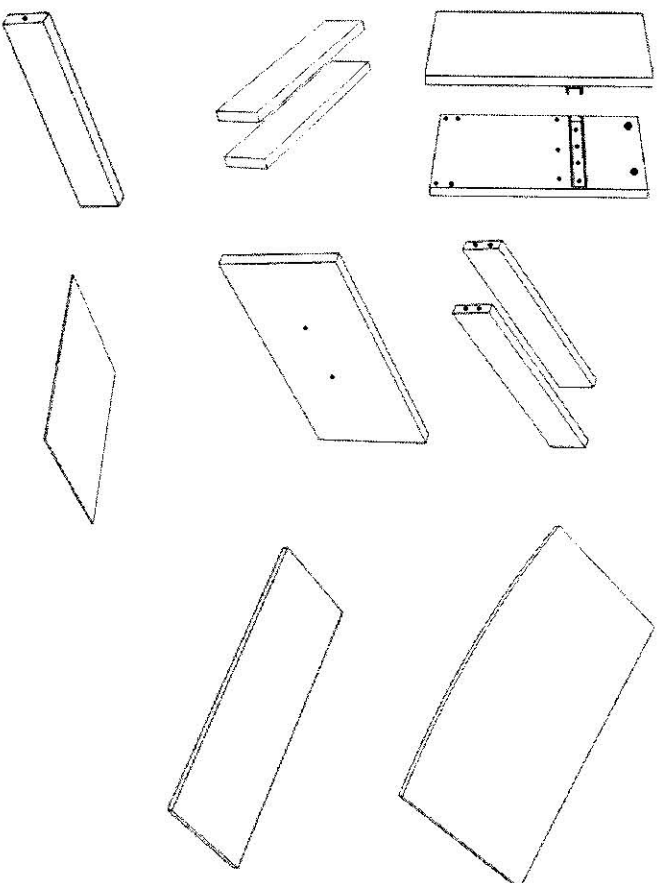

BOND WORKTABLE

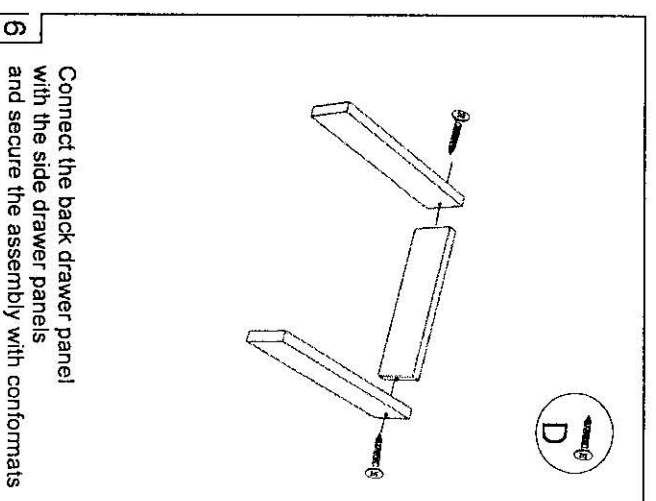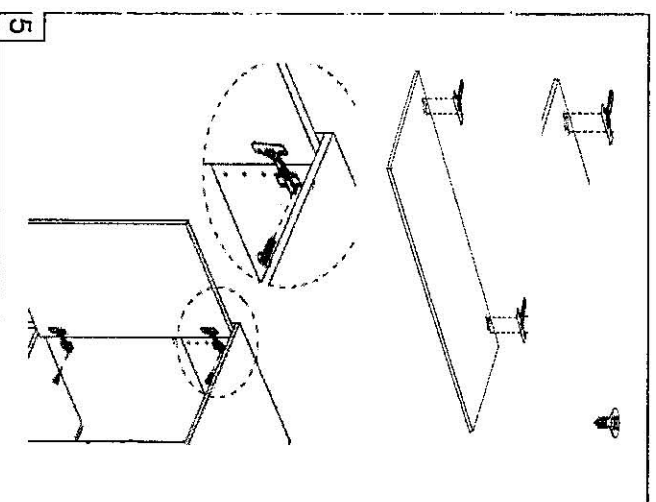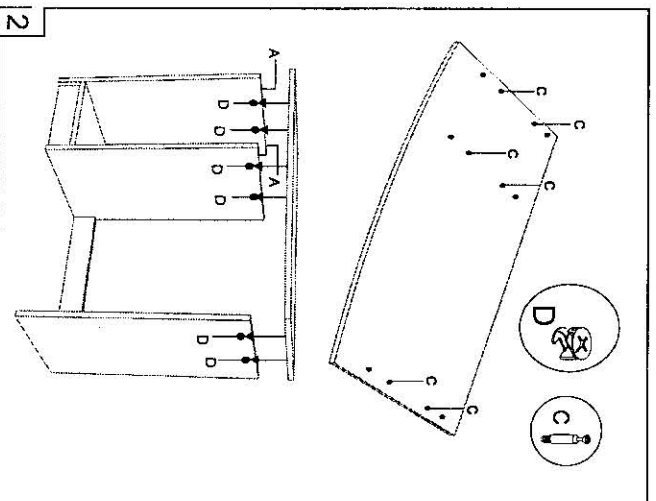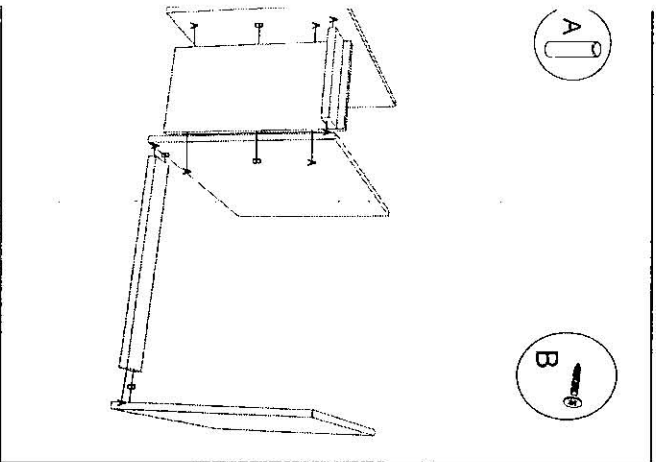


Connect the back drawer panel with the side drawer panels and secure the assembly with conformats

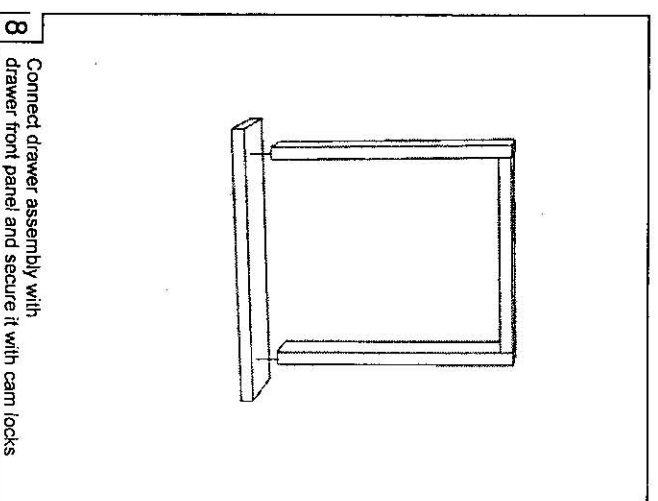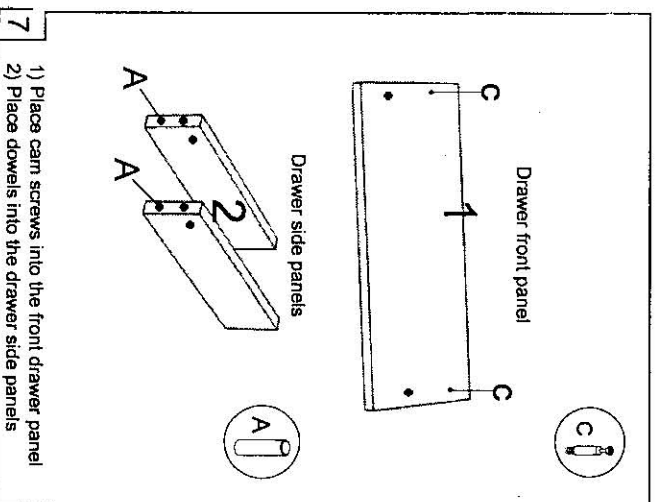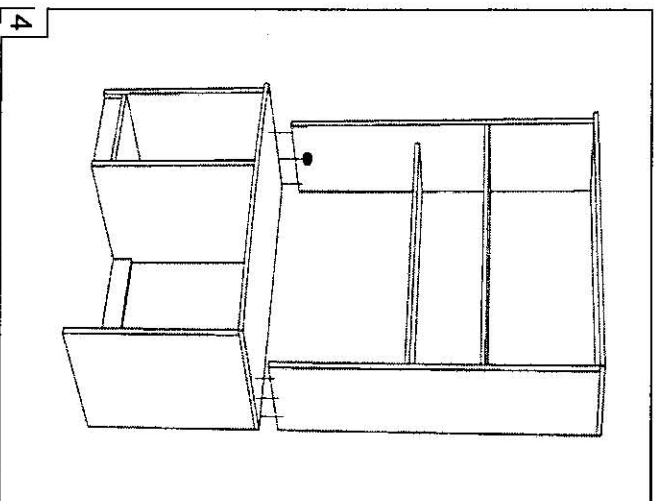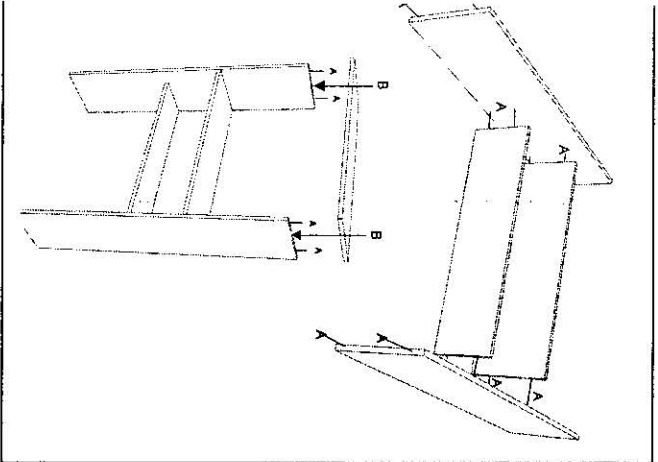


Connect drawer assembly with drawer front panel and secure it with cam locks

BOND WORKTABLE

BOND BED

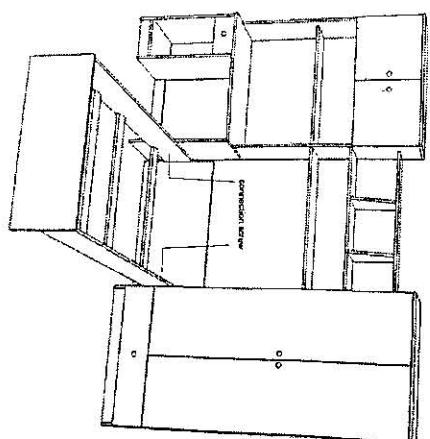


Secure both side of beds with other assembly parts by using connection screws.

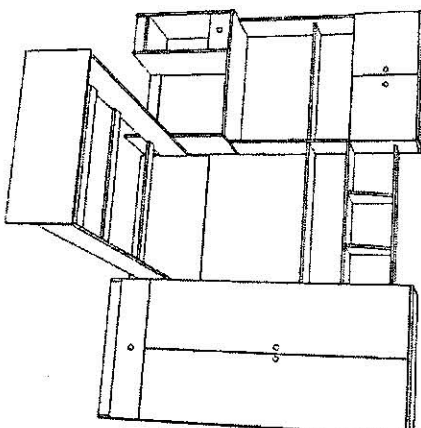

10

BOND BED

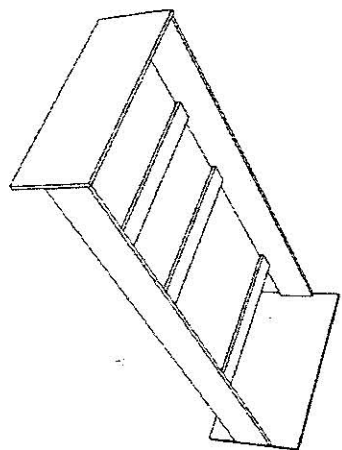

Hardware



Cam screw Cam lock Dowel handle screw



Screw 16mm

Conformat

Tools






Screwdriver



Allen wrench









NOTE:
Tools are not applied by the manufacturer
its in costumer hands to secure them.

COMPONENTS

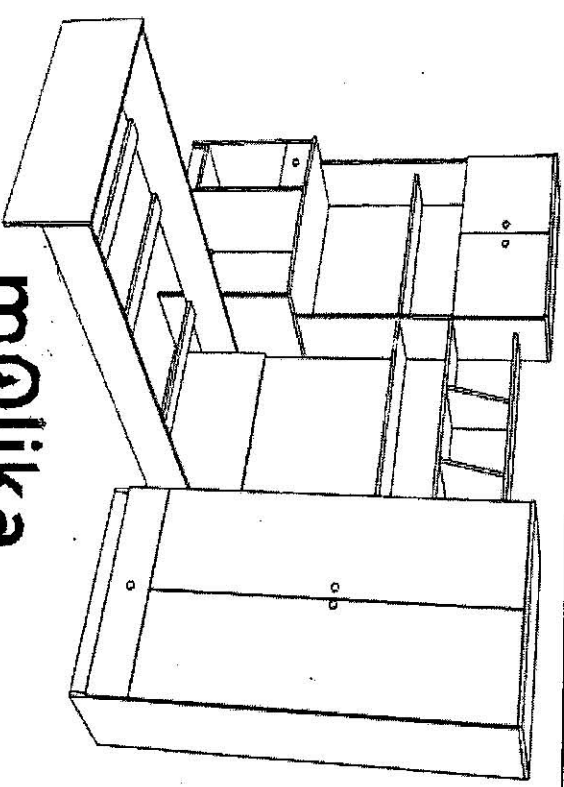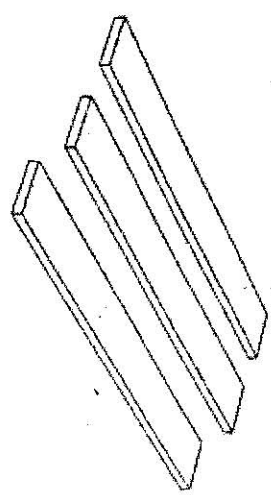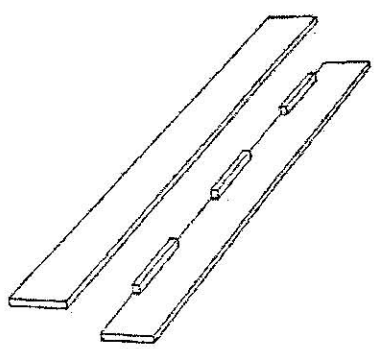

BOND BED

BOND BED

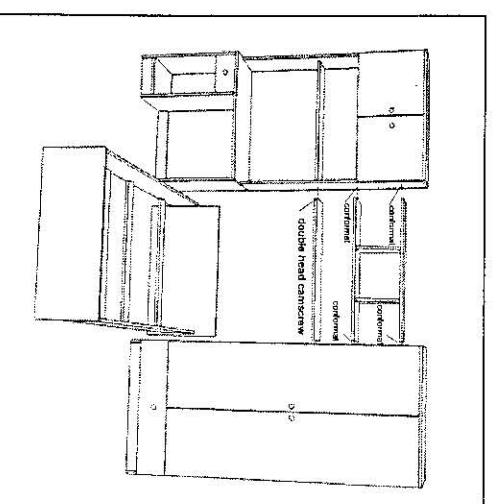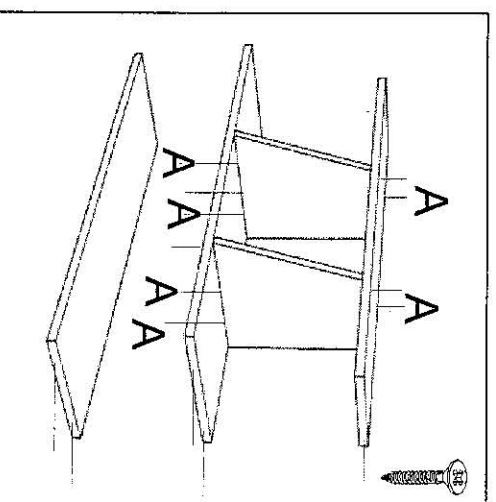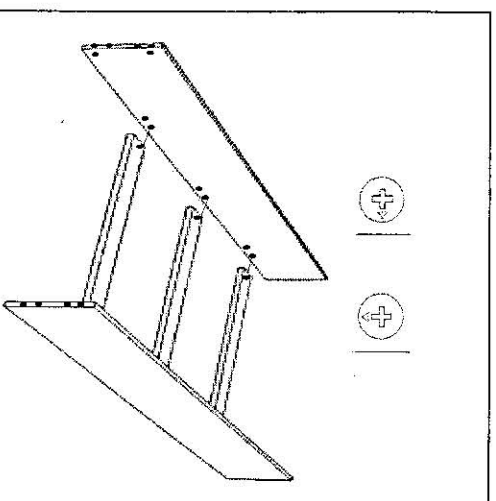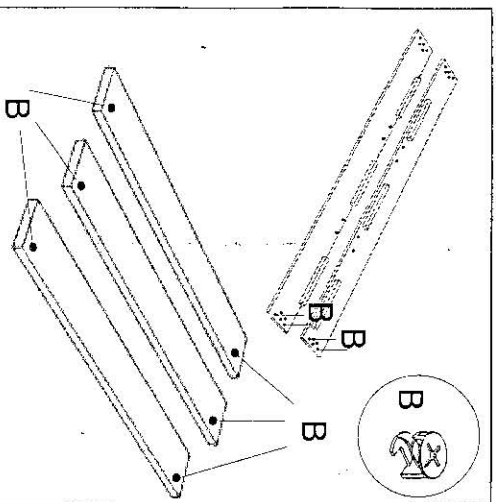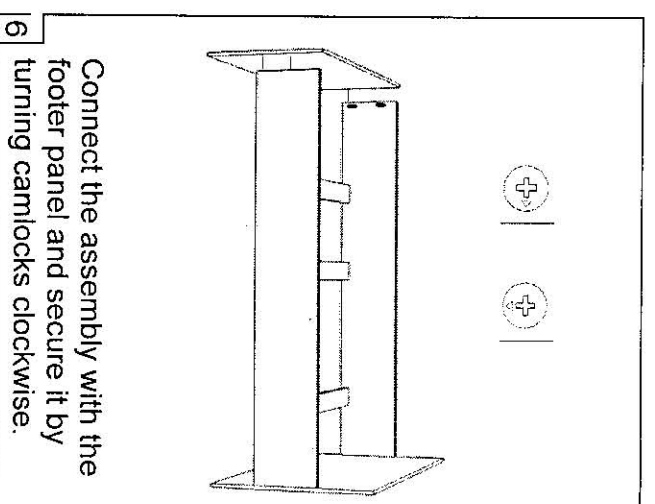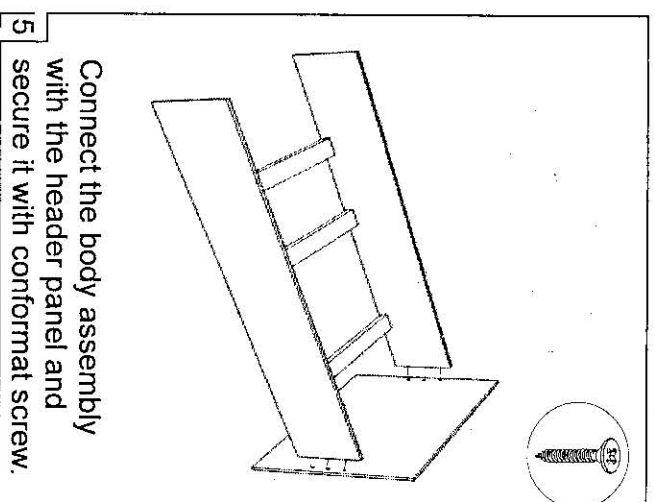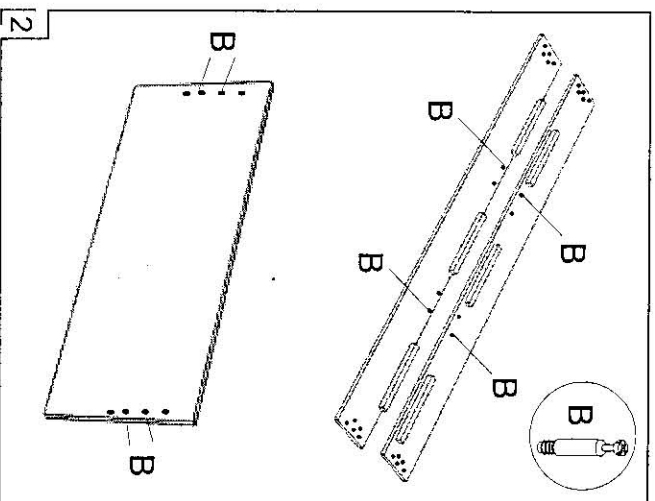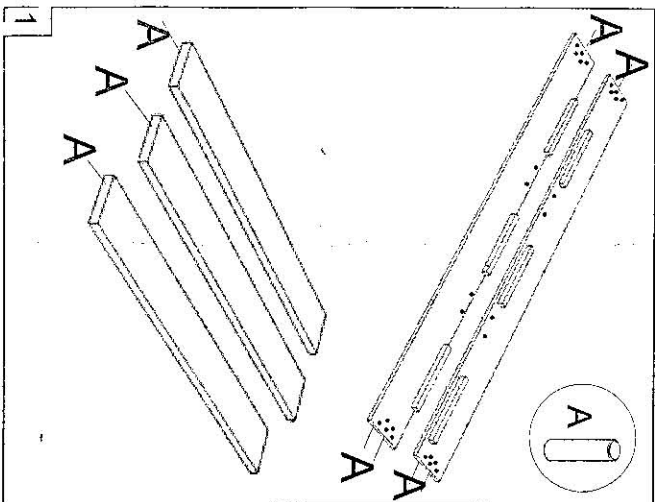

Place the camlocks in selected bores of connecting panels

Connect the side panels with the connecting panels and secure them by moving camlocks clockwise.


Connect the bridge parts as in image to create a main assembly by using wooden dowels and conformat screws.

Place the bridge assembly on top of the bed and secure it on the both sides using conformat screw and double head cam screw.

BOND WARDROBE


BOND WARDROBE

E

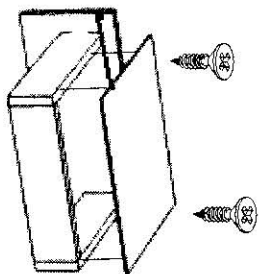


Turn the drawer assembly upside down then fix the bottom drawer panel with the rest of the assembly and secure it by using 16 mm screws

10

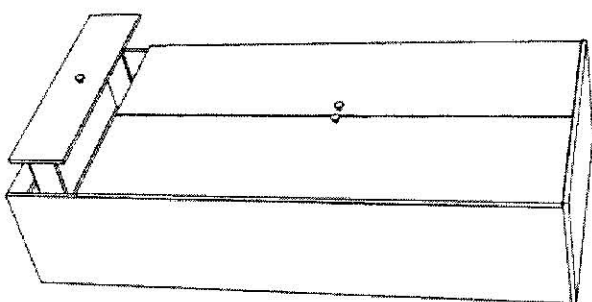


10

COMPONENTS

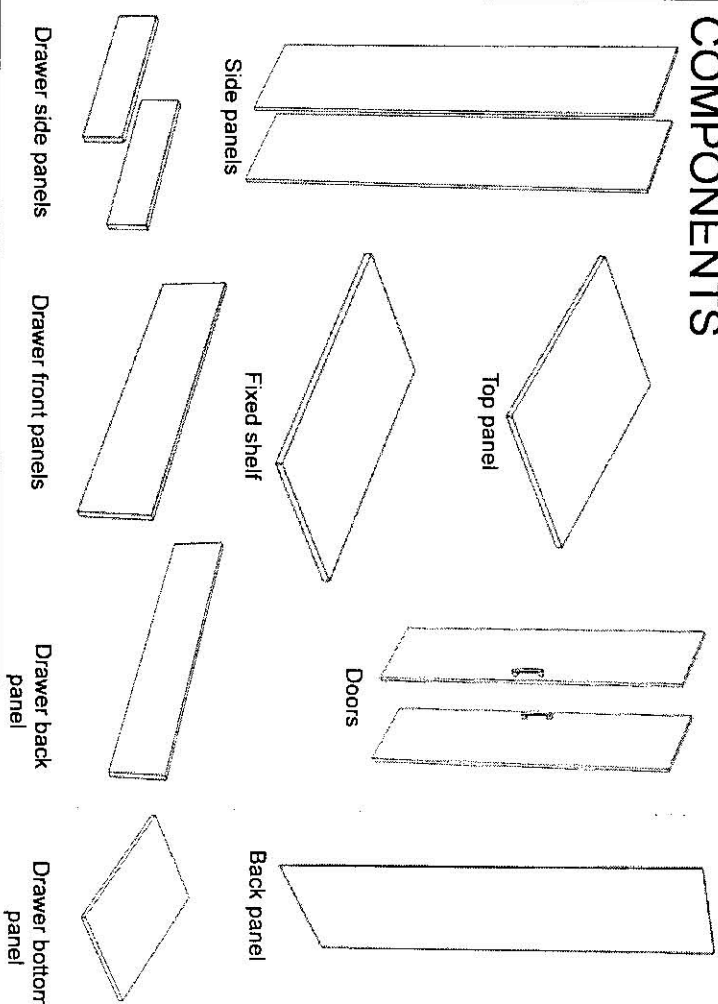

Hardware

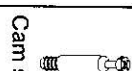

Cam screw



Cam lock



Dowel



Screw 16mm



Conformat handle screw

Tools



Screwdriver




Allen wrench



NOTE:
Tools are not applied by the manufacturer
It's in customer hands to secure them.

BOND WARDROBE


BOND WARDROBE

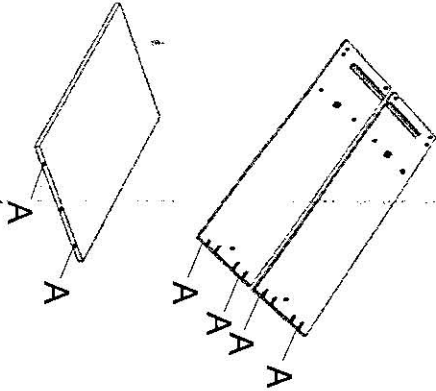


Place wood dowels on the selected holes of side panels and middle and bottom partition panels

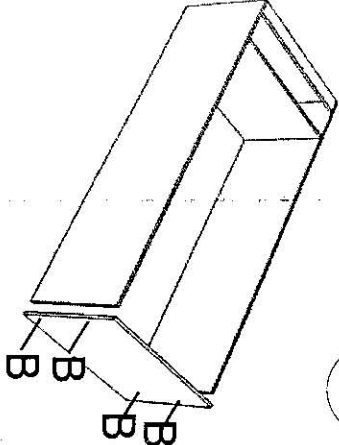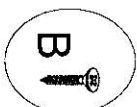


Connect the top panel with the rest of the assembly using conforma screw

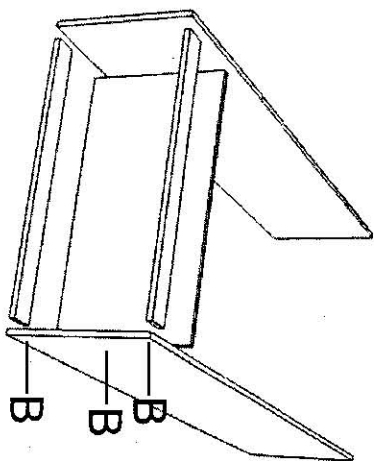


2 Connect side panels with bottom panels and fixed shelf using the conforma screw.

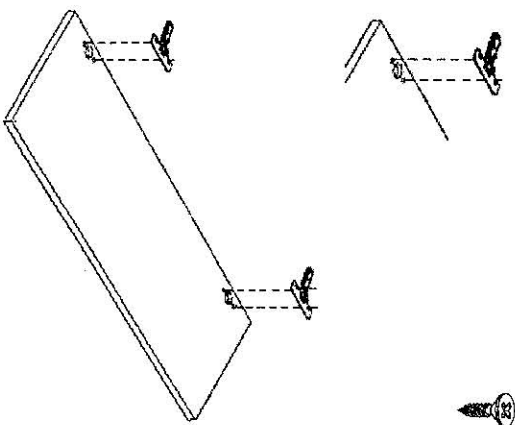


4 Place the hinges in the selected holes and secure them with 16mm screw.

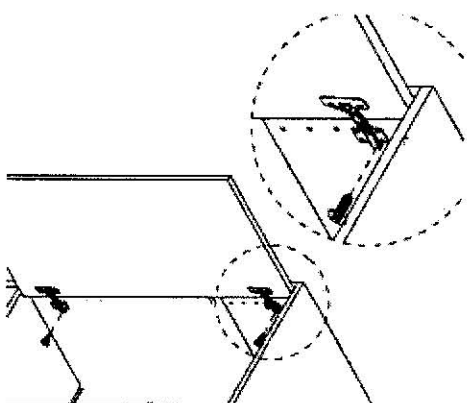


5 Connect the door with the rest of assembly and secure them using hing screws

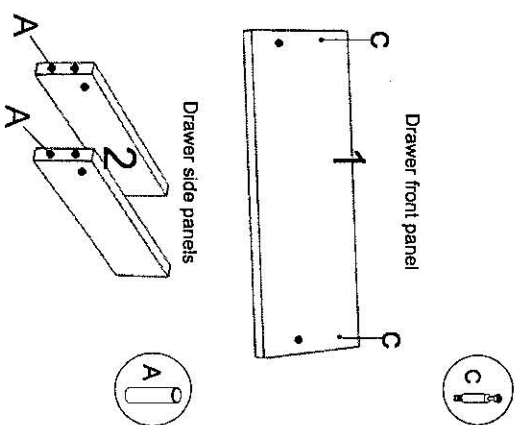

7 1) Place cam screws into the front drawer panel
2) Place dowels into the drawer side panels


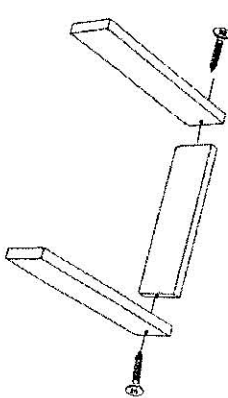


6 Connect the back drawer panel with the side drawer panels and secure the assembly with conforma

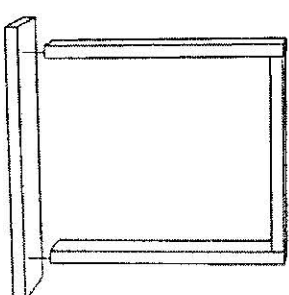


8 Connect drawer assembly with drawer front panel and secure it with cam locks

BOND BED

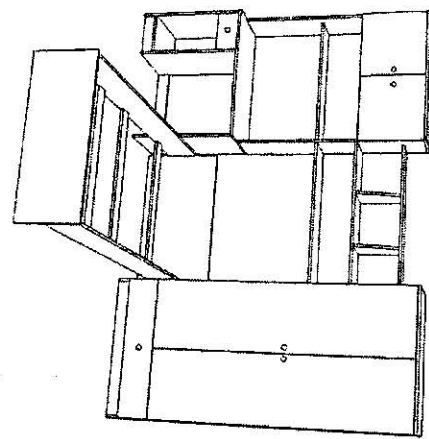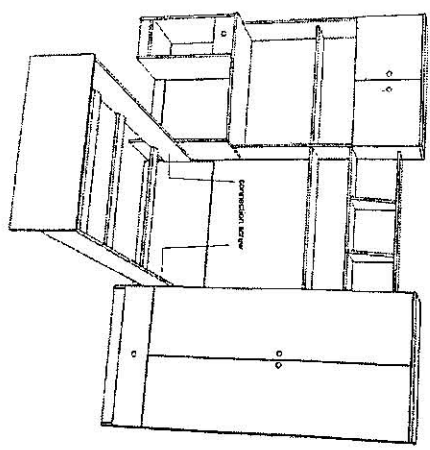


Secure both side of beds with other assembly parts by using connection screws.

10


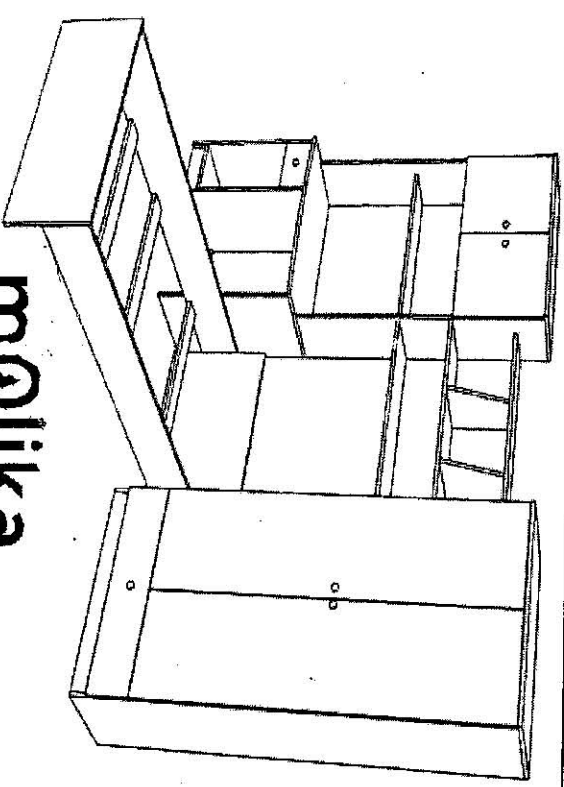


molika
Furniture Factory


BOND BED

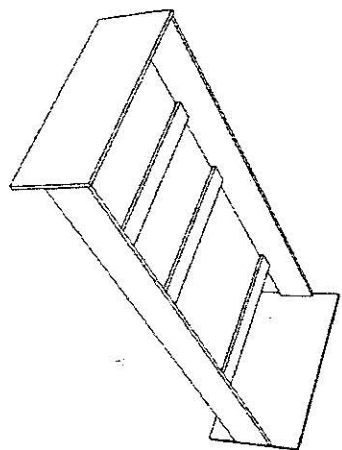

COMPONENTS

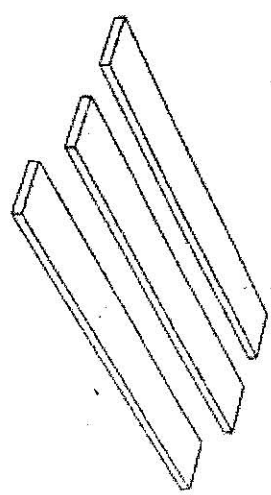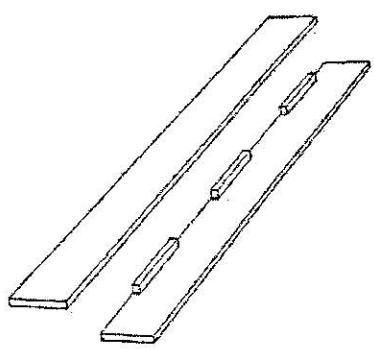

Hardware



Cam screw Cam lock Dowel handle screw



Screw 16mm

Conformat Tools



Screwdriver











Allen wrench

NOTE:
Tools are not applied by the manufacturer
its in costumer hands to secure them.

BOND BED

BOND BED

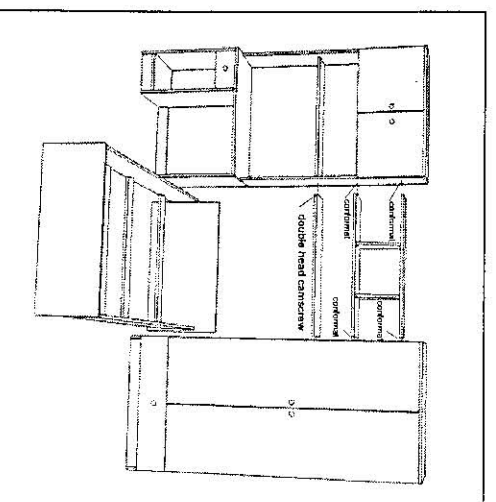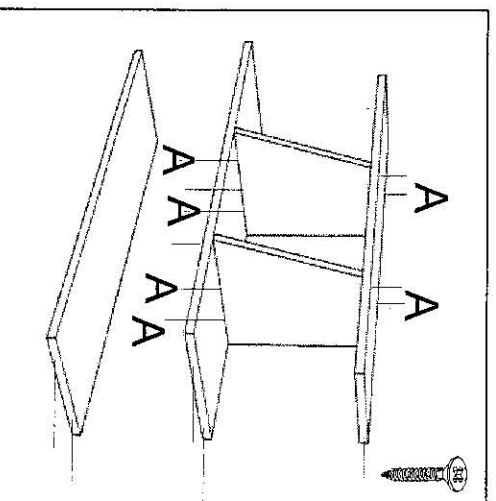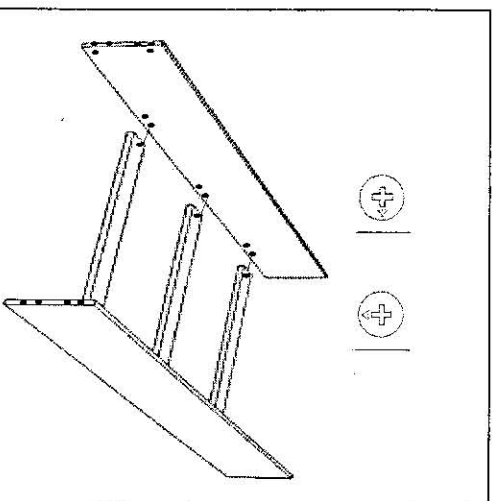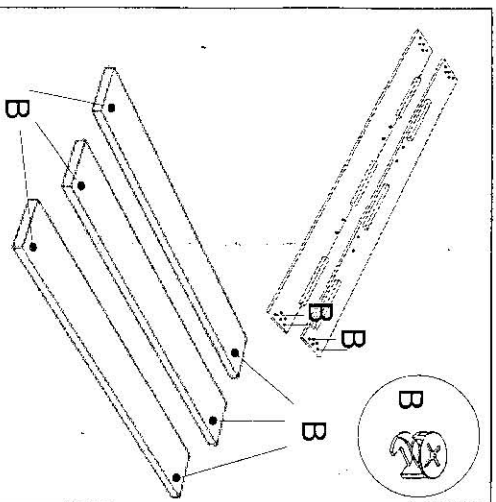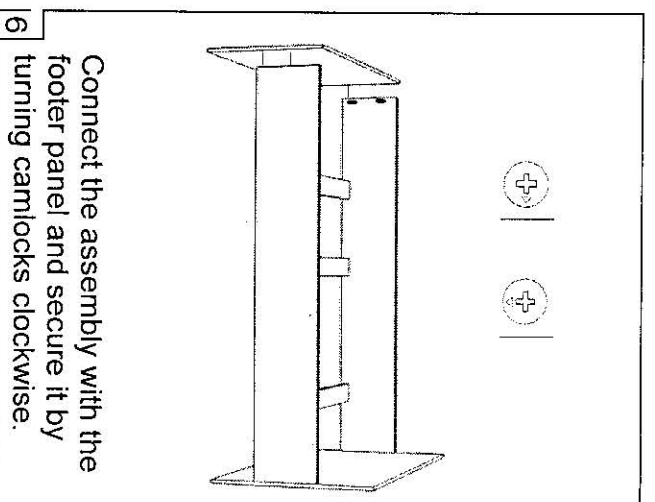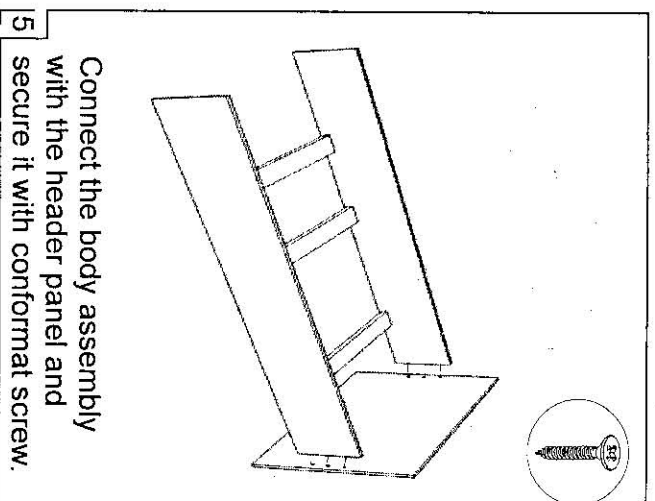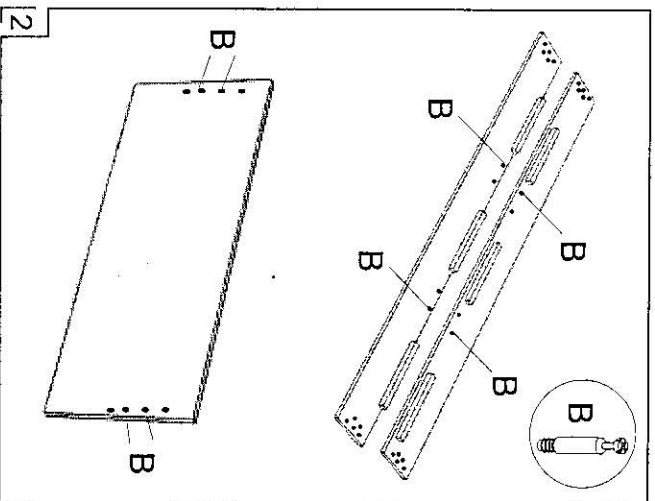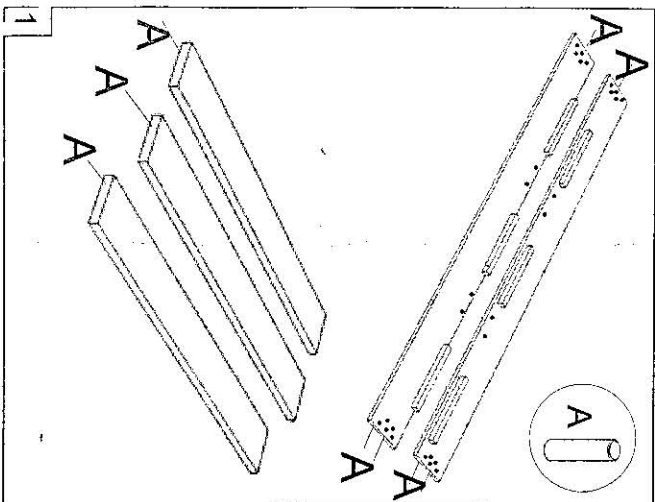

Place the camlocks in selected bores of connecting panels









Connect the side panels with the connecting panels and secure them by moving camlocks clockwise.

Connect the bridge parts as in image to create a main assembly by using wooden dowels and conformat screws.

Place the bridge assembly on top of the bed and secure it on the both sides using conformat screw and double head cam screw.

BOND BED

BOND BED

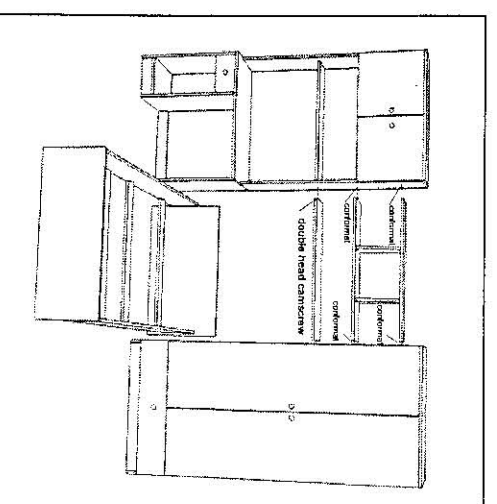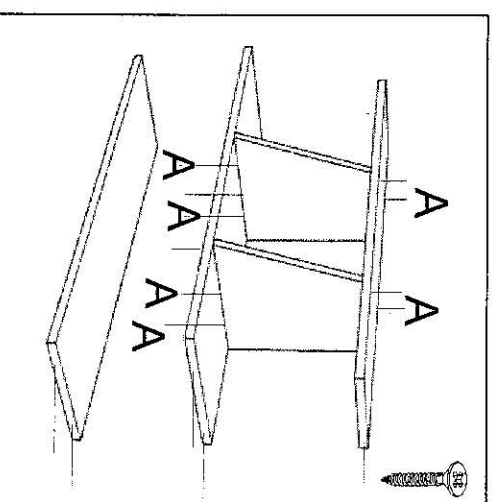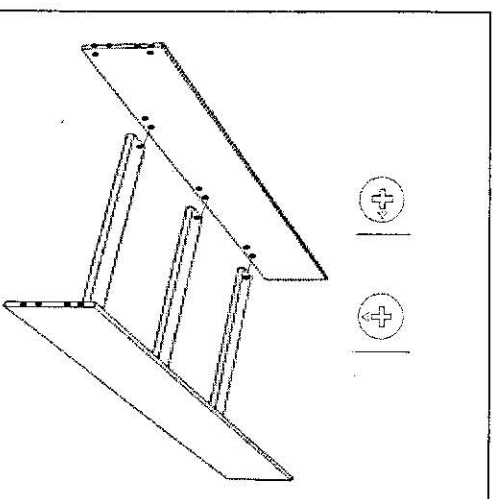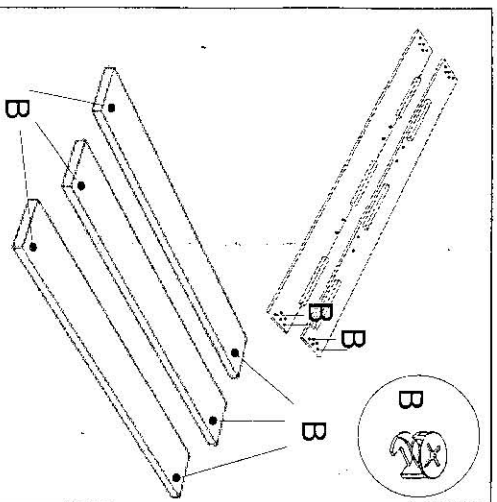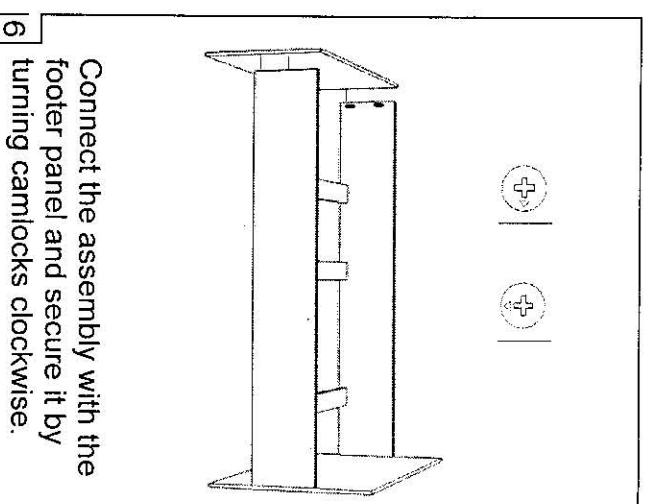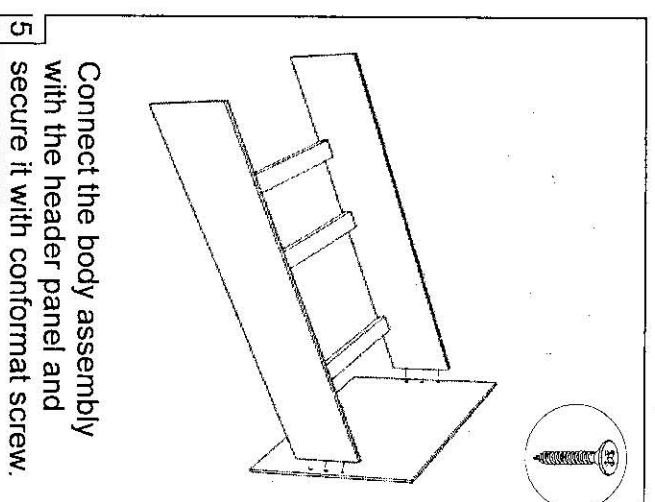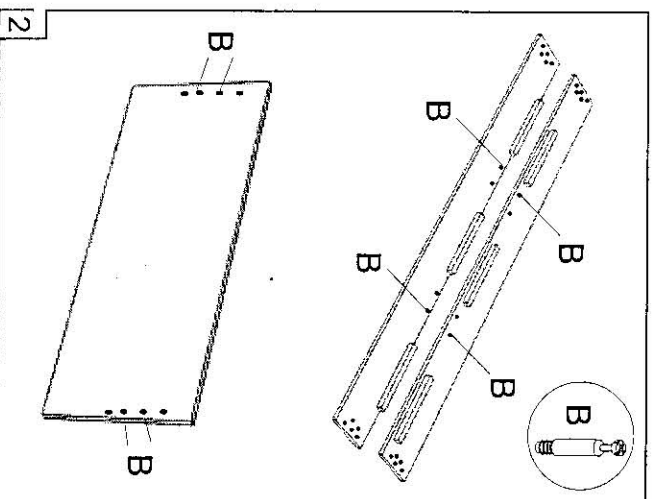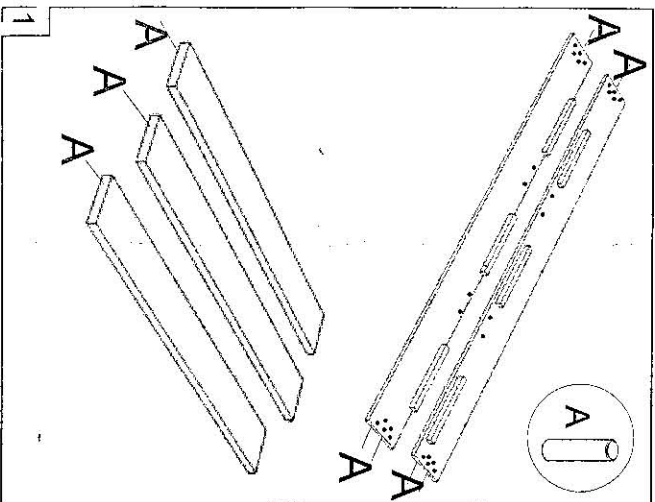

Place the camlocks in selected bores of connecting panels

Connect the side panels with the connecting panels and secure them by moving camlocks clockwise.

Connect the bridge parts as in image to create a main assembly by using wooden dowels and conformat screws.

Place the bridge assembly on top of the bed and secure it on the both sides using conformat screw and double head cam screw.