


Concept Epure MK-012

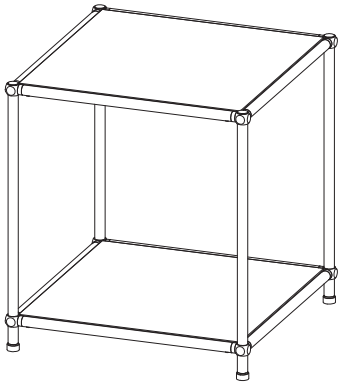

PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY
①		2	⑤		8	(D)		4	(H)		1
②		8	(A)		4	(E)	 φ 3*12	16	(I)		1
③		4	(B)		4	(F)	 (M3)	1			
④		4	(C)	 M6*15	4	(G)	 (M4)	1			

STEP:

1

These holes are all positioned on the same side

2

(E)

	(E)	16
--	-----	----

3


(B)

(D)

(F)

	(B)	4
	(D)	4
	(F)	1


4

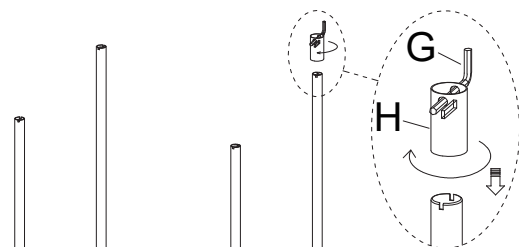

These holes are facing downwards.


	(H)	1
	(G)	1

5

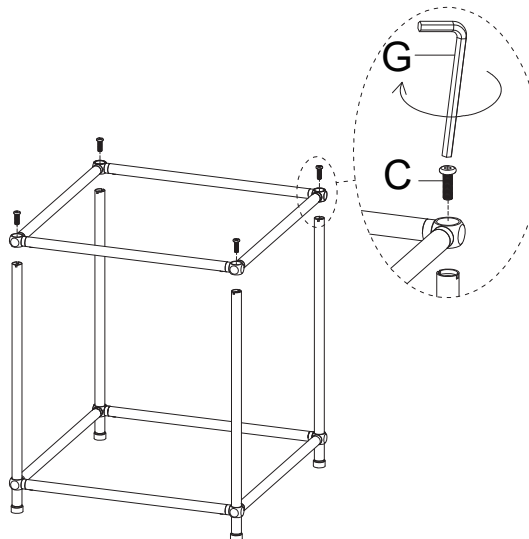

	(C)	4
	(G)	1


6

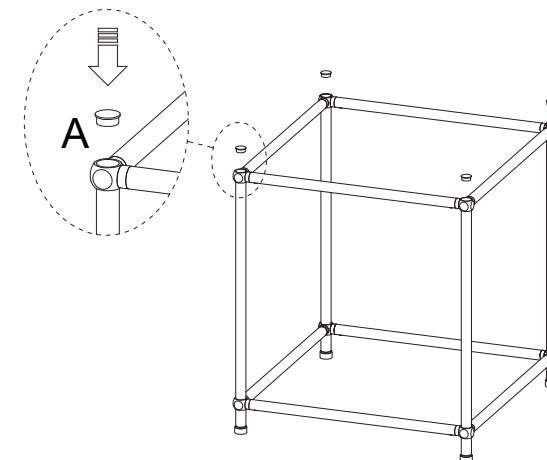

	(A)	4
--	-----	---


7

install panels ①x 2 by pressing them firmly into the frame.  
Tip: press one corner of the panel into place first, then continue along the remaining corners.

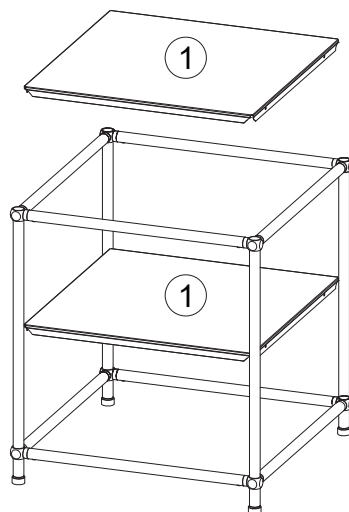


8

Adjust the feet (B) as need.

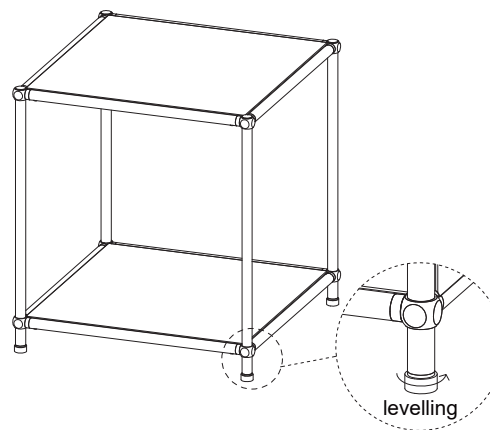

9

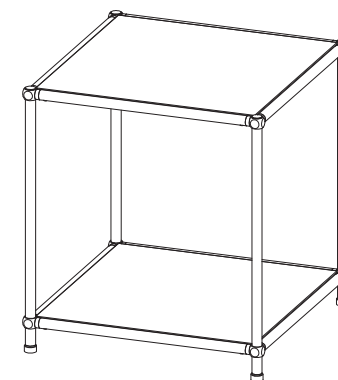

Unsere Marken:



Velvet Trading GmbH / Ost-West Handelsgesellschaft GmbH  
www.floordirekt.com