








Leaf








4020825_001













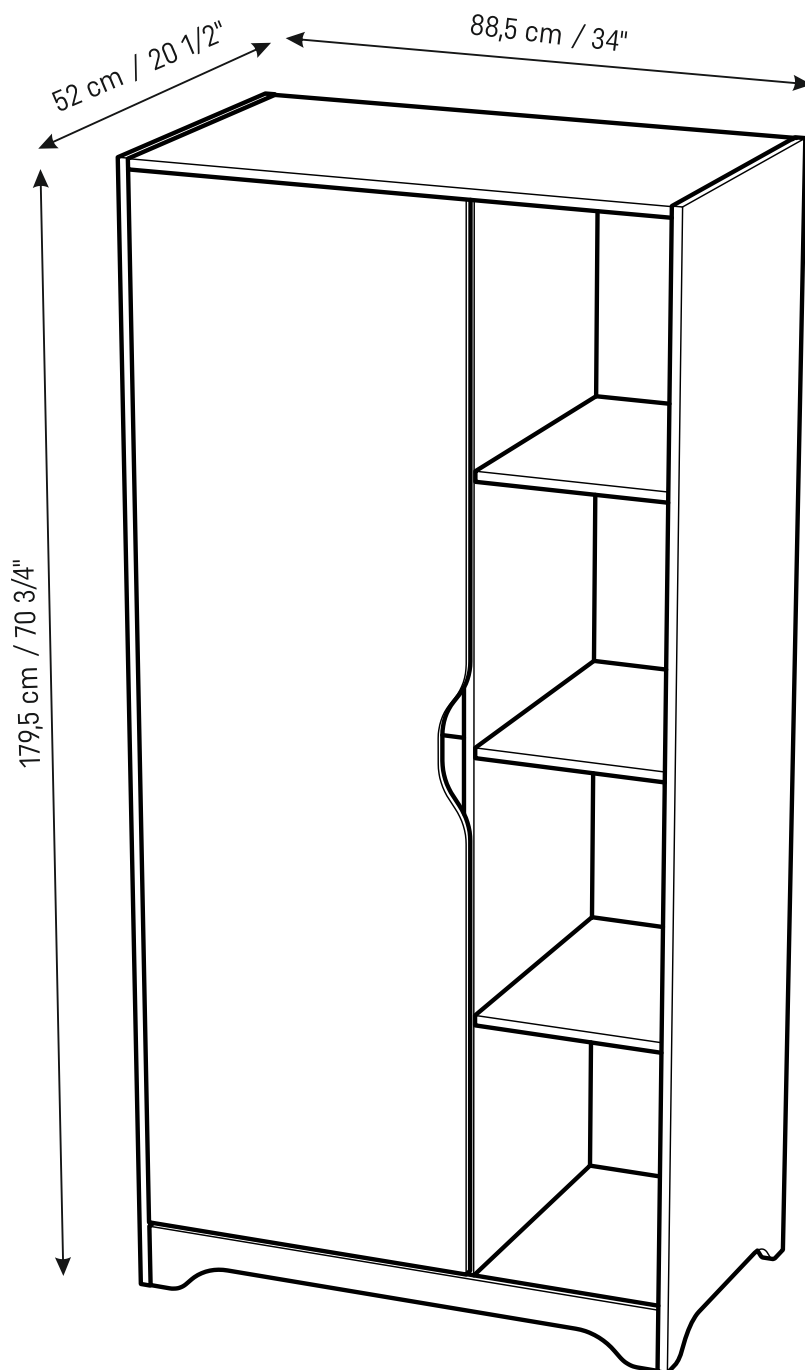



PL • vox.pl
EU • voxfurniture.com
US • voelkelcorp.com

Mebel VOX sp. z o.o. sp. k.
ul. Gdyńska 143
62-004 Czerwonak

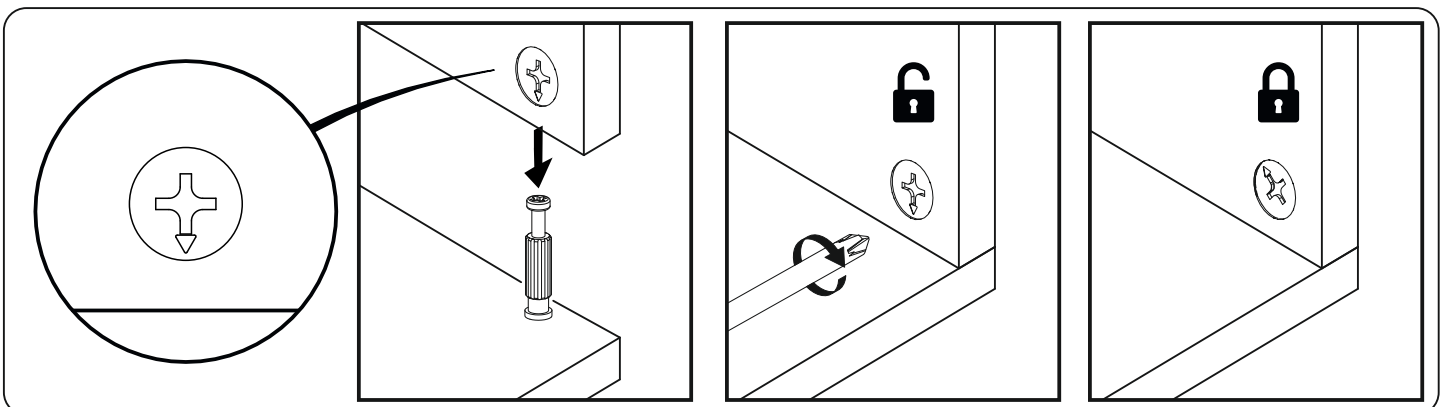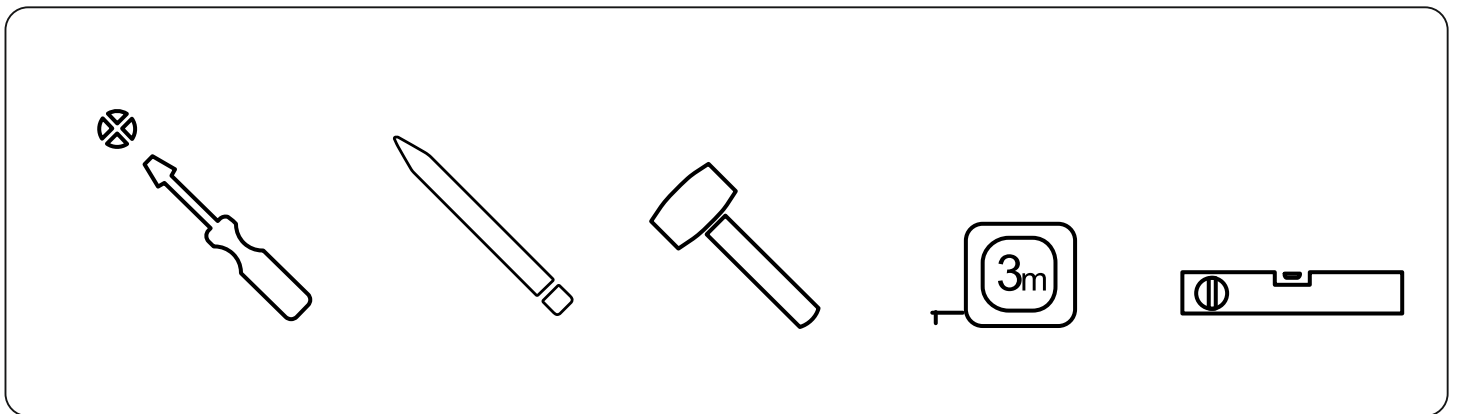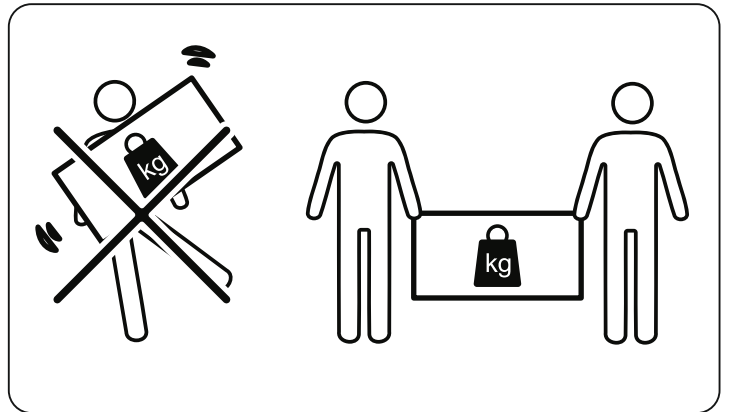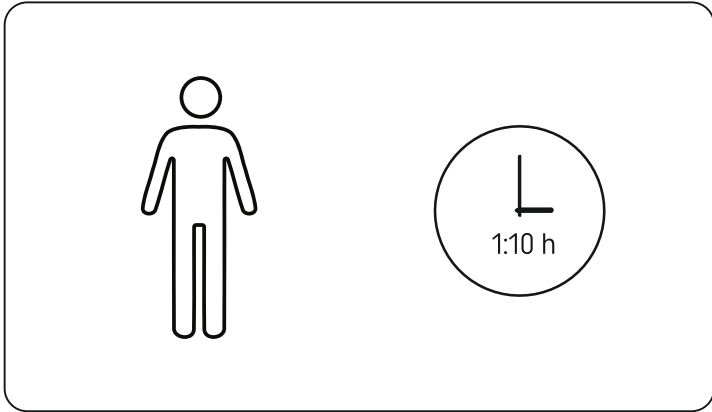
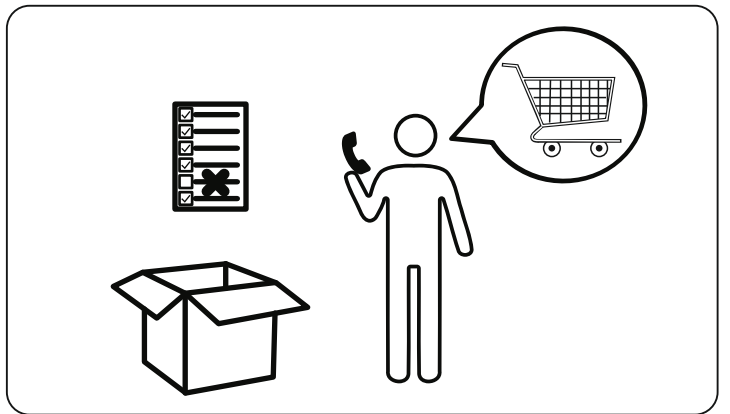
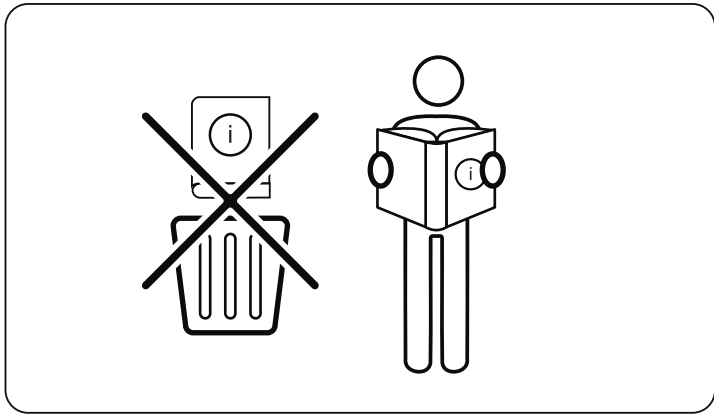


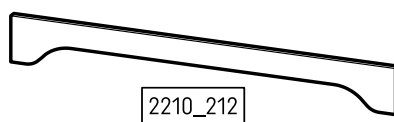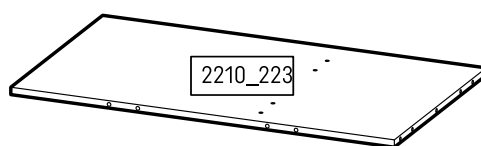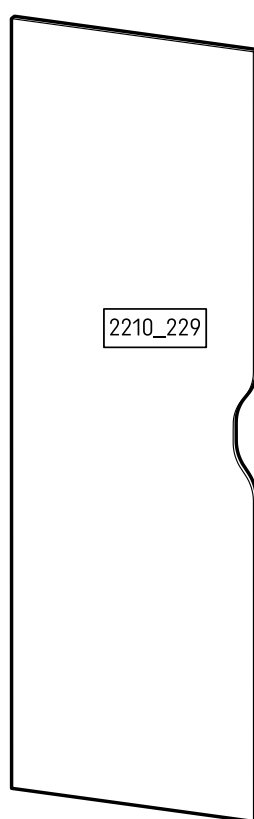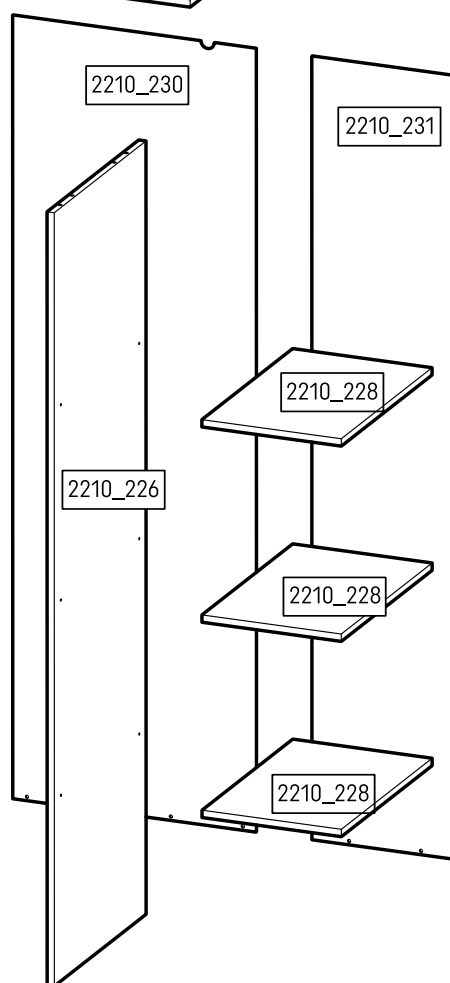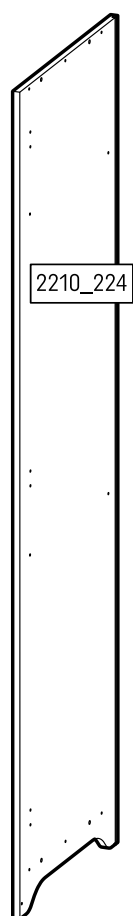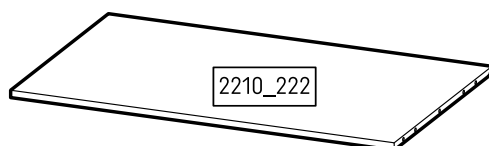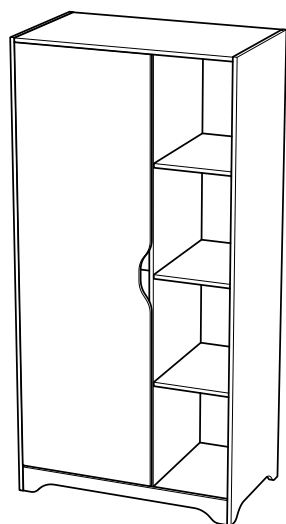

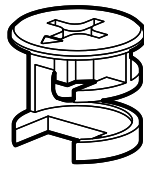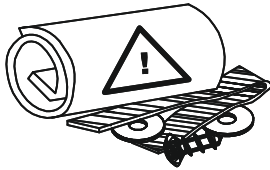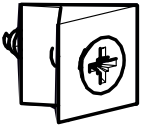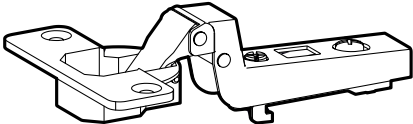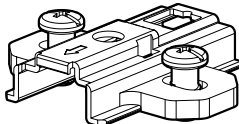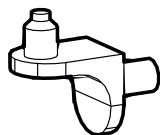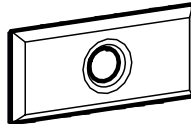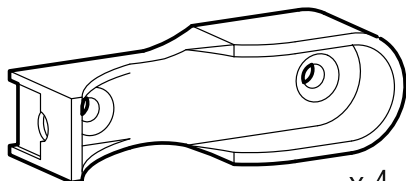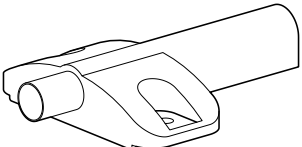
1000806  x 1	1006091  x 18	1005857  x 14
1005367  x 18	1000893  x 1	1006022  x 10
1104028  x 3	1004785  x 3	1110778  x 4
1001262  x 20	1000242  x 11	1005681  x 8
1006012  x 17	1005876  x 2	1000225  x 4
1101321  x 1		

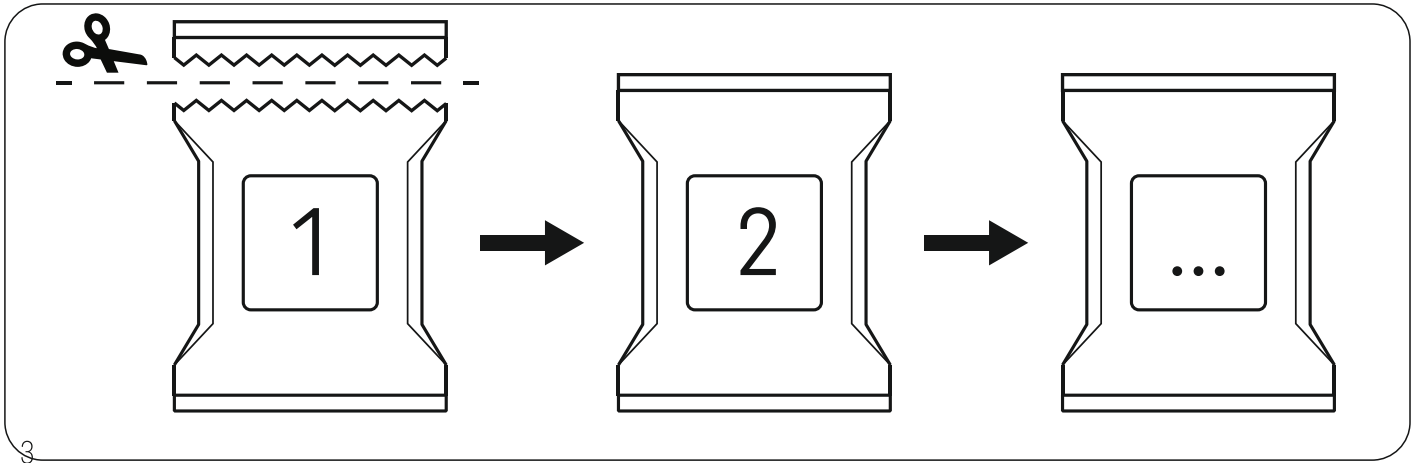


i

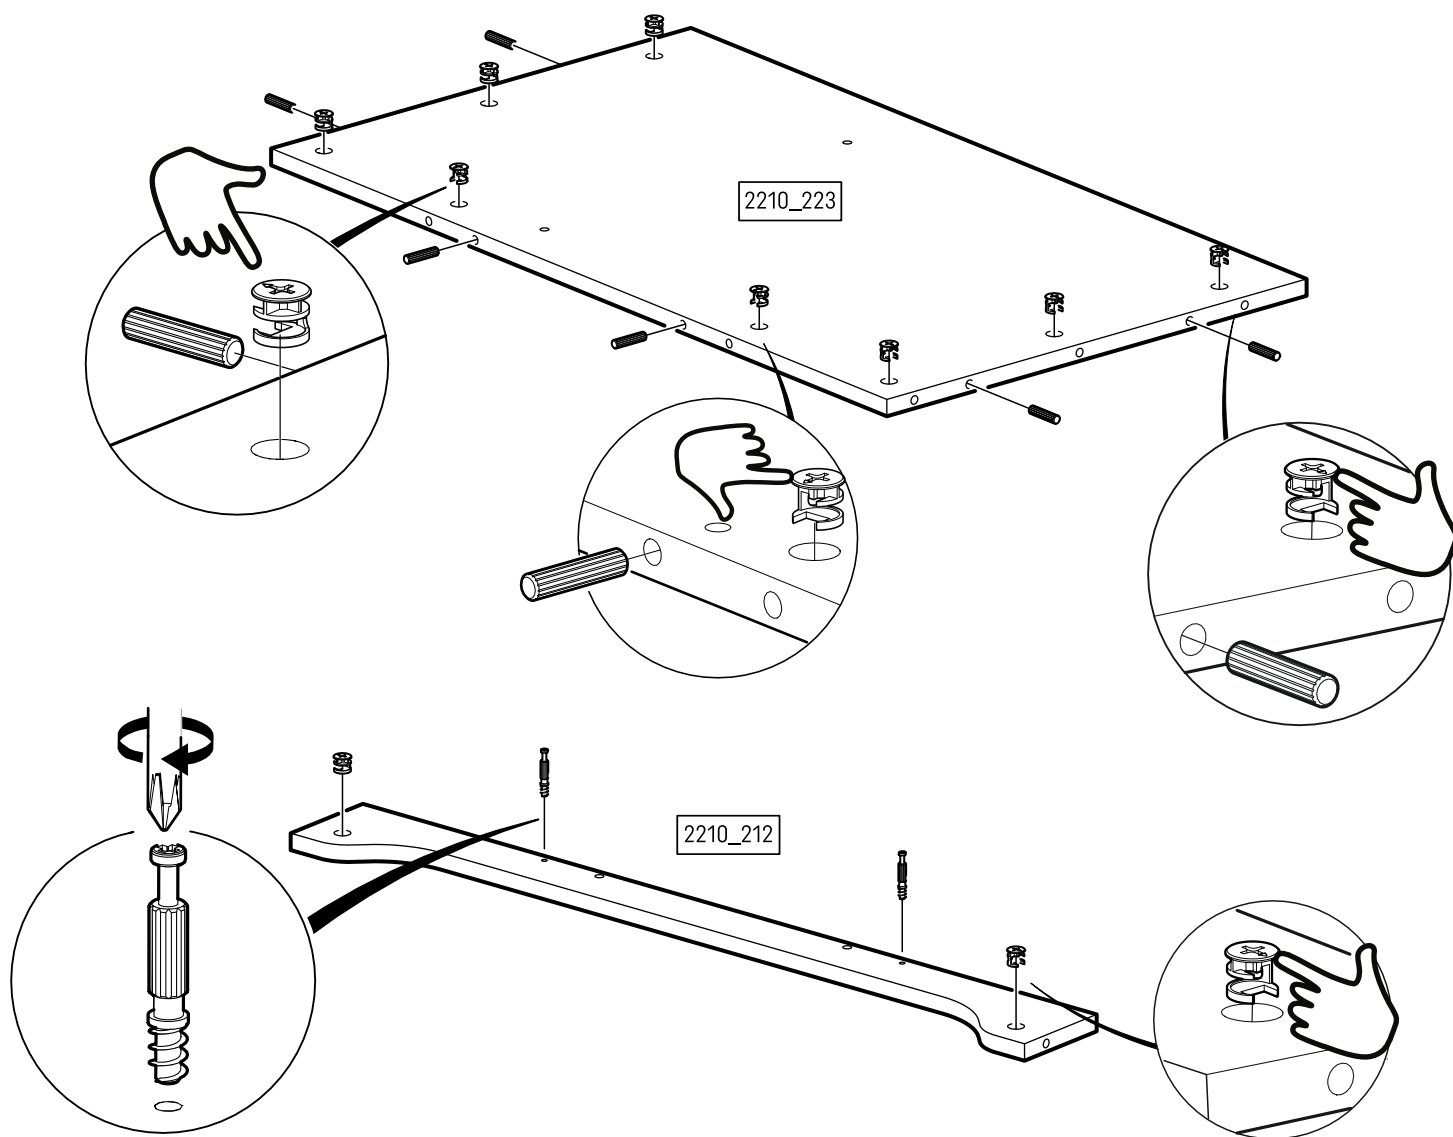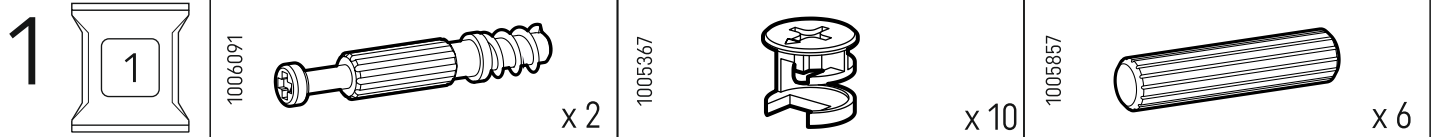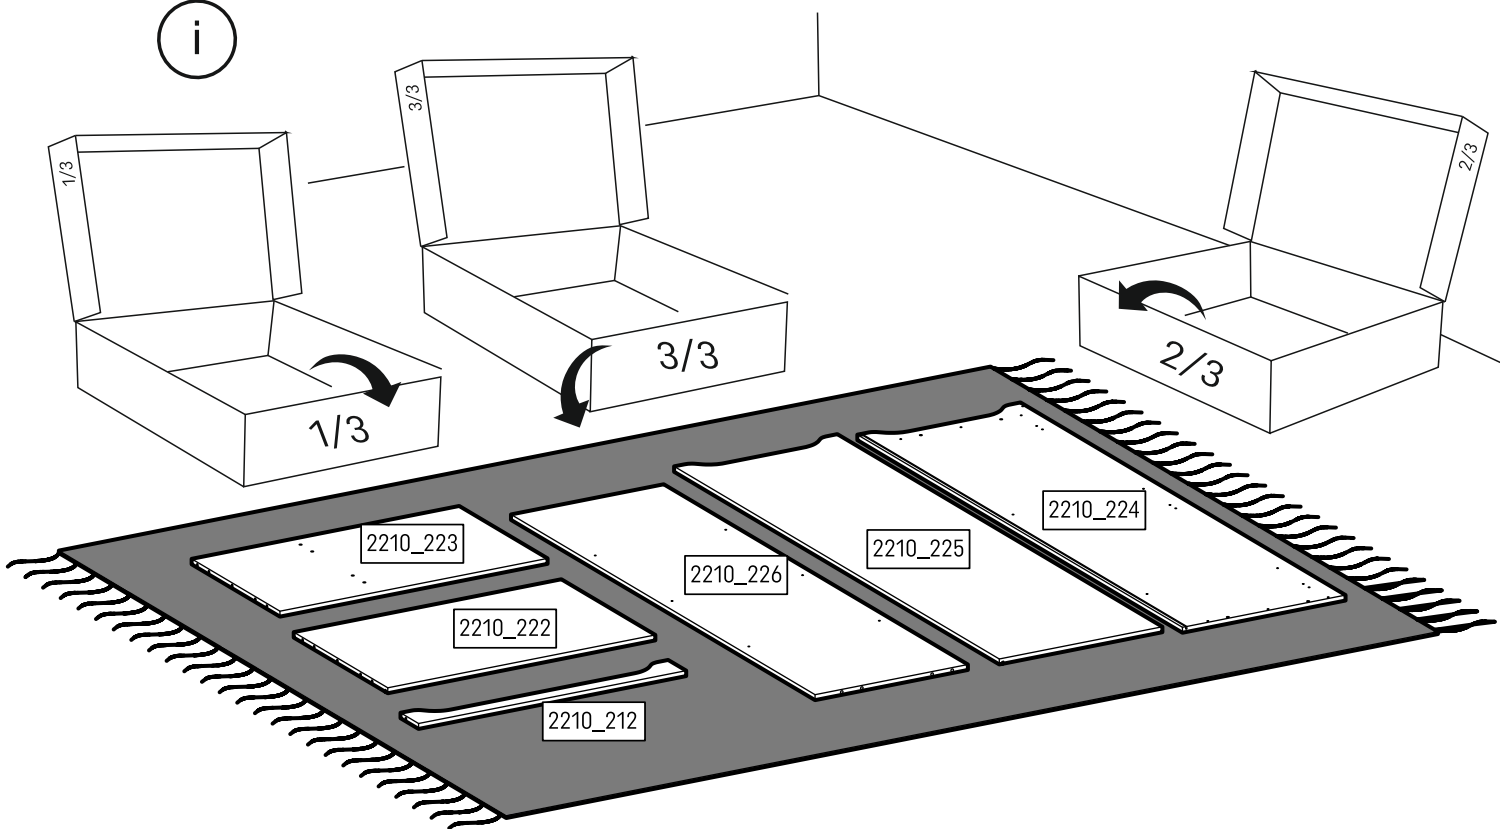


2

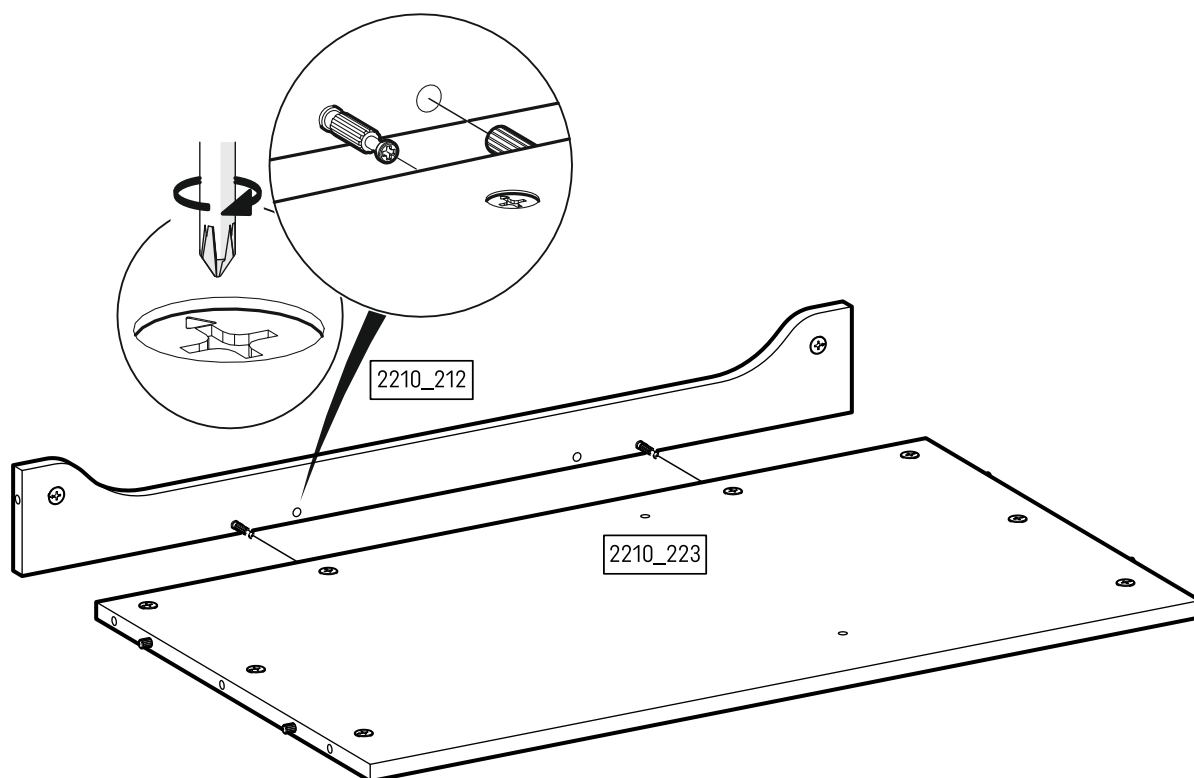



3

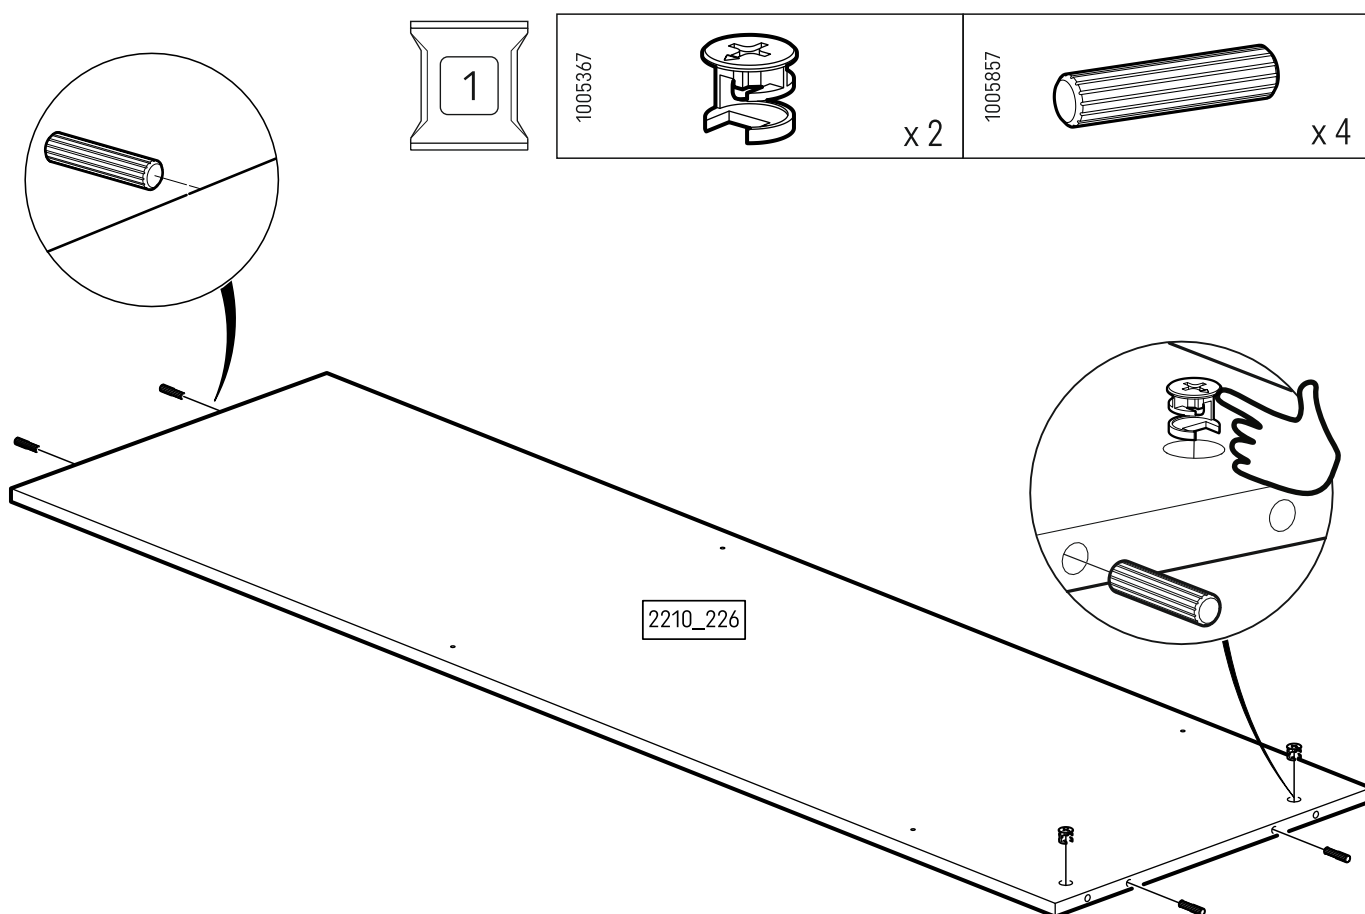

4

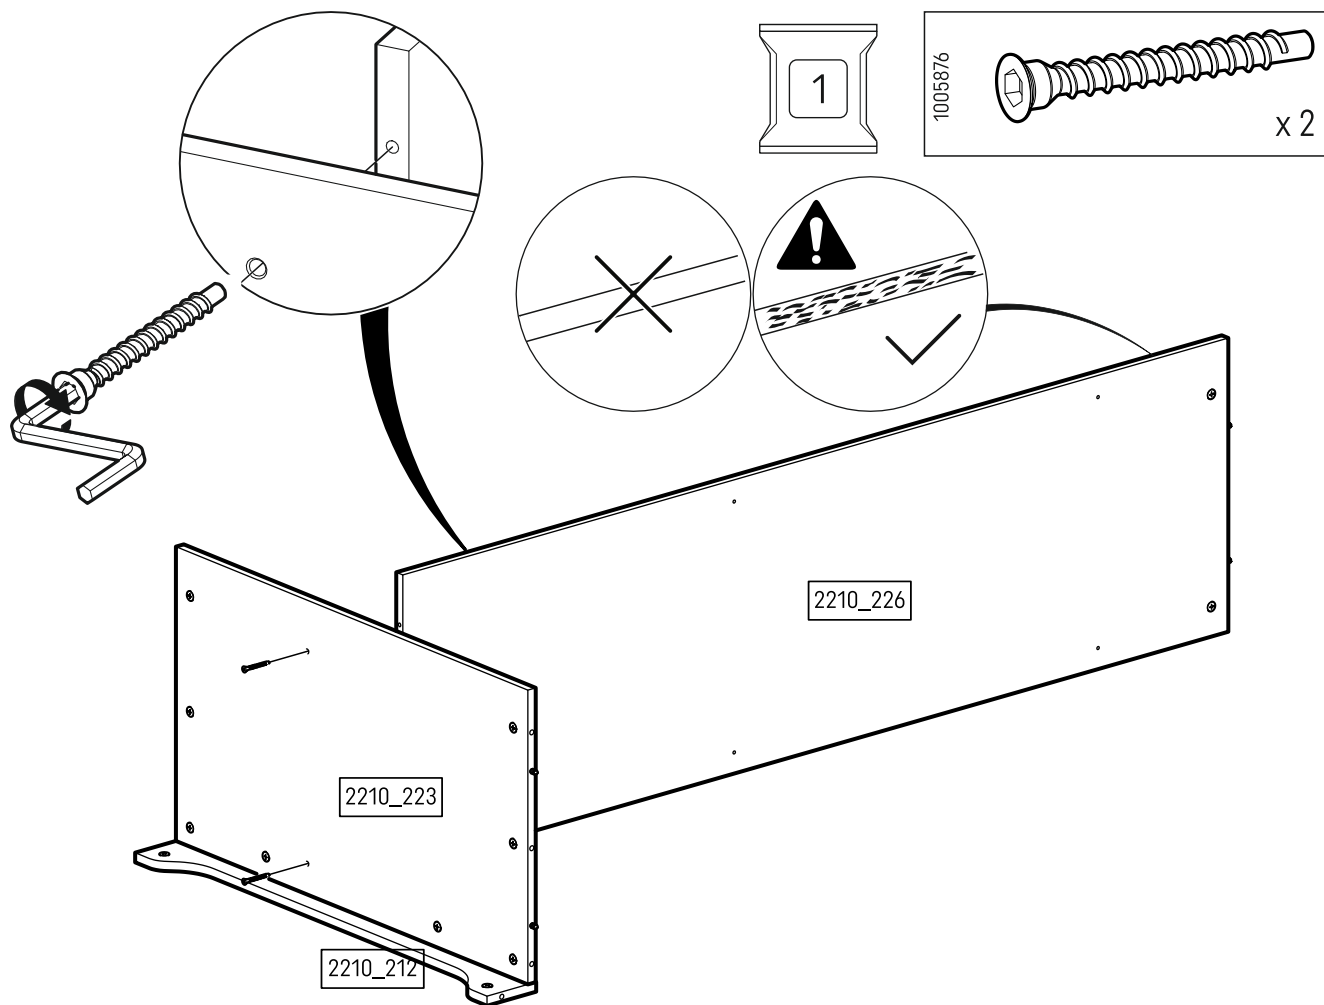

5

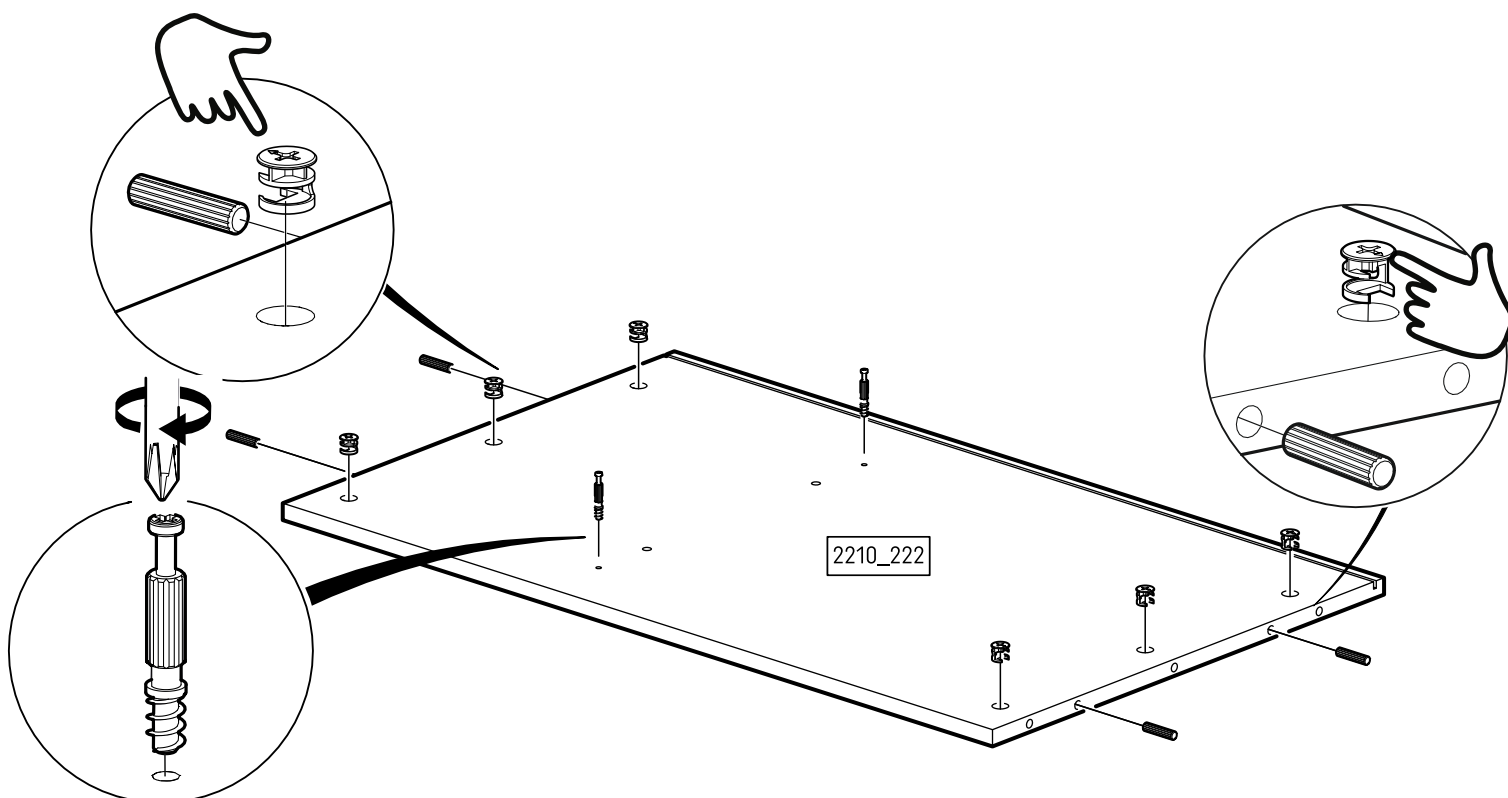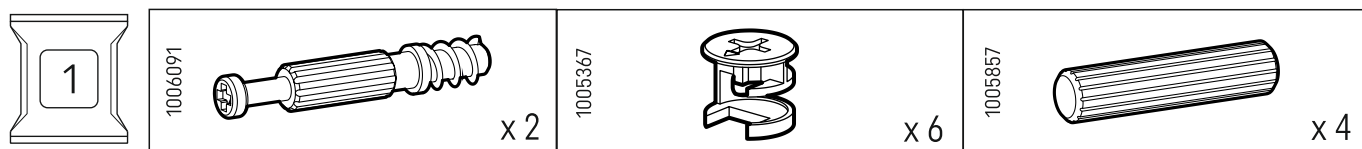

6

2210_212

2210_223

2210_226

7

Diagram illustrating the assembly of a second panel (2210_225) onto a frame (2210_224) using screws (1006091). The diagram shows the panel being attached to the frame, with a callout showing a screw being driven into the panel.

1




1006091

x 14


2210_225

2210_224


8

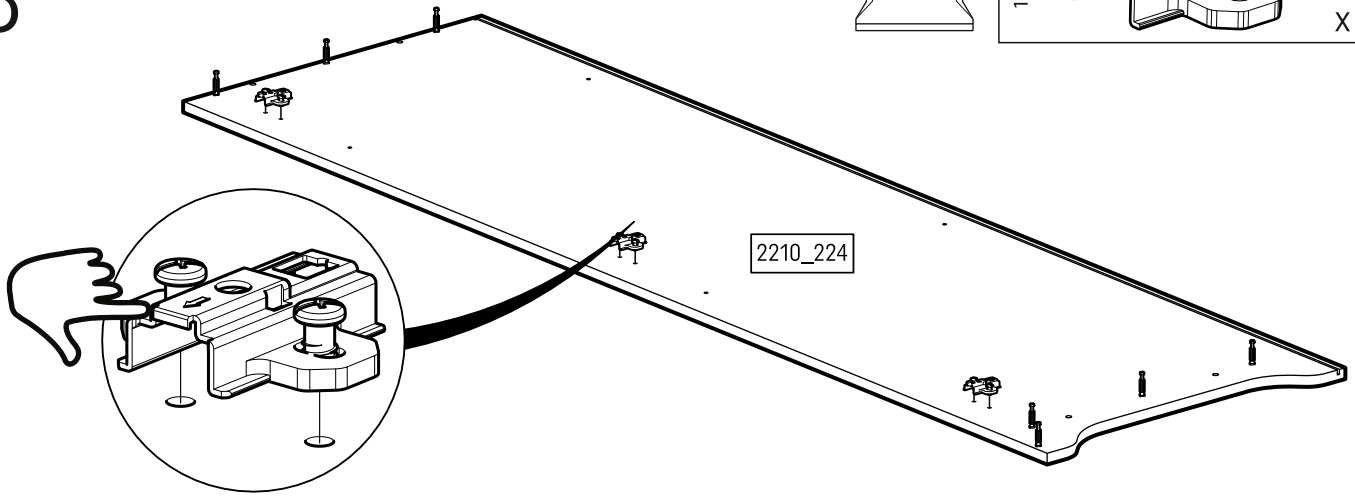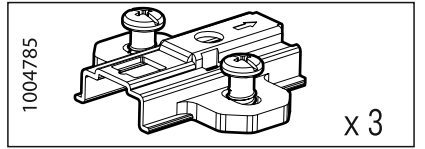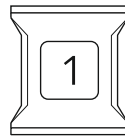


9

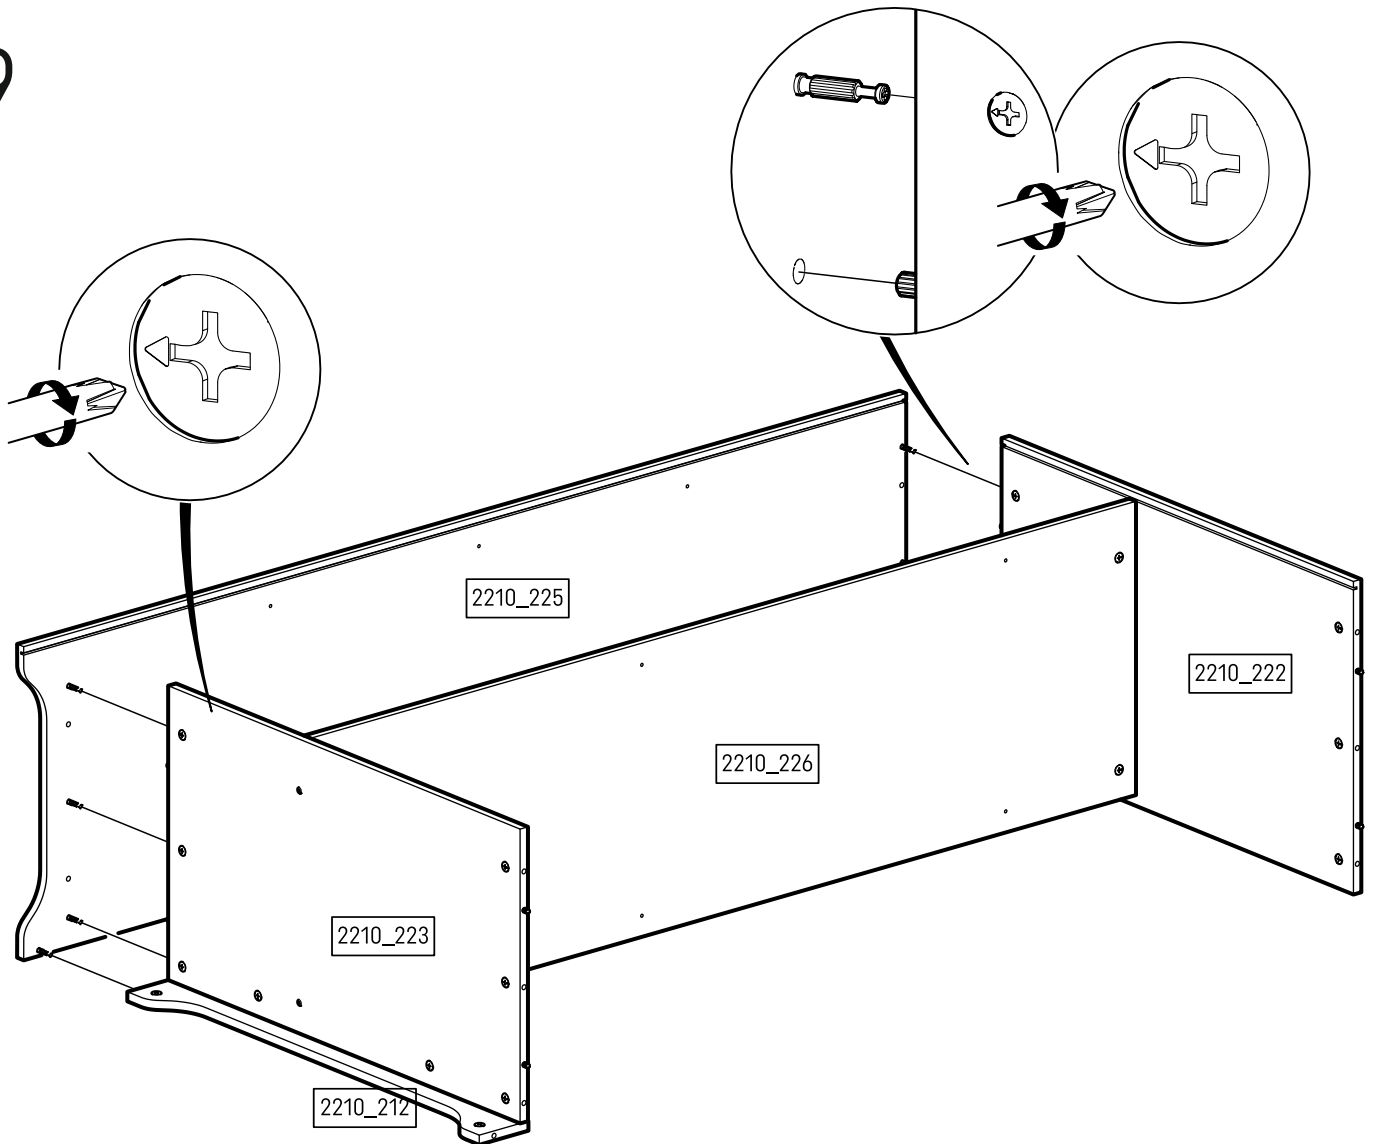


10

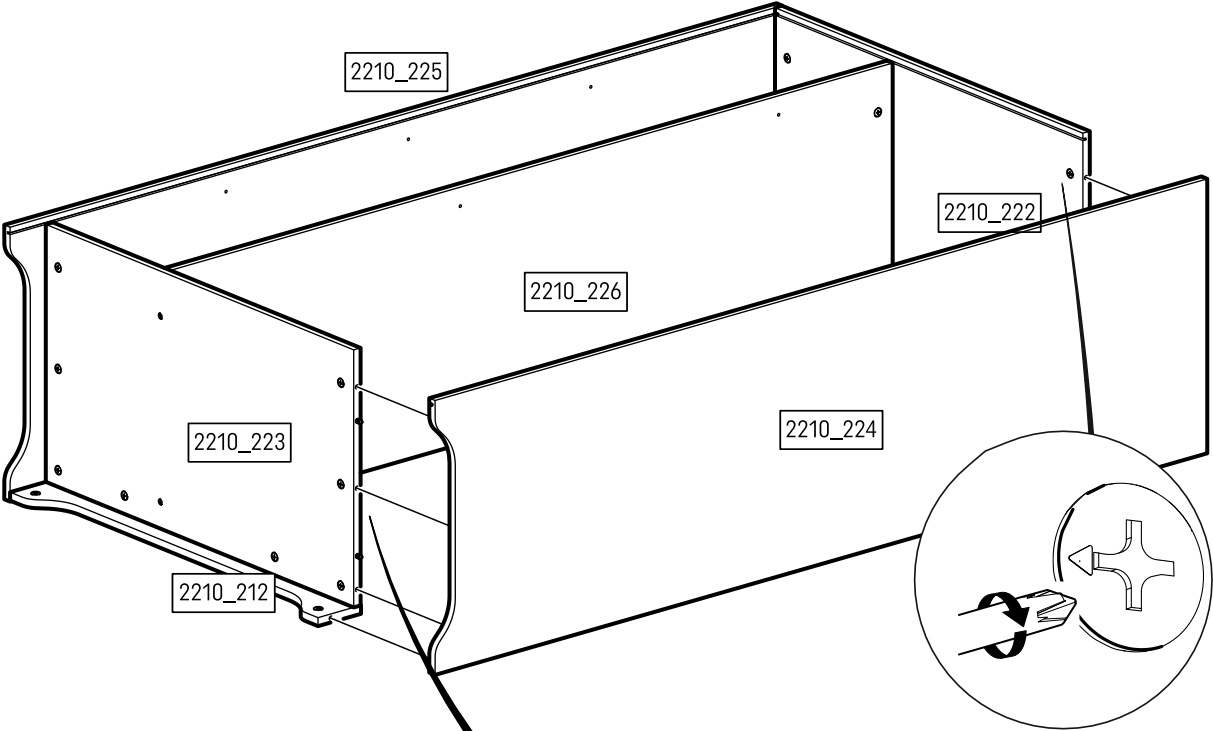


11

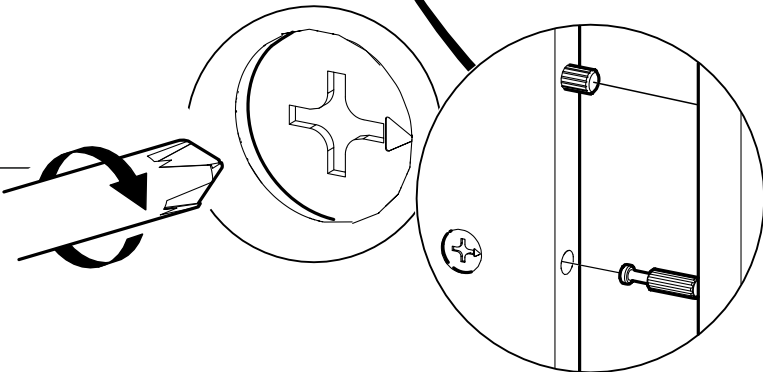



i

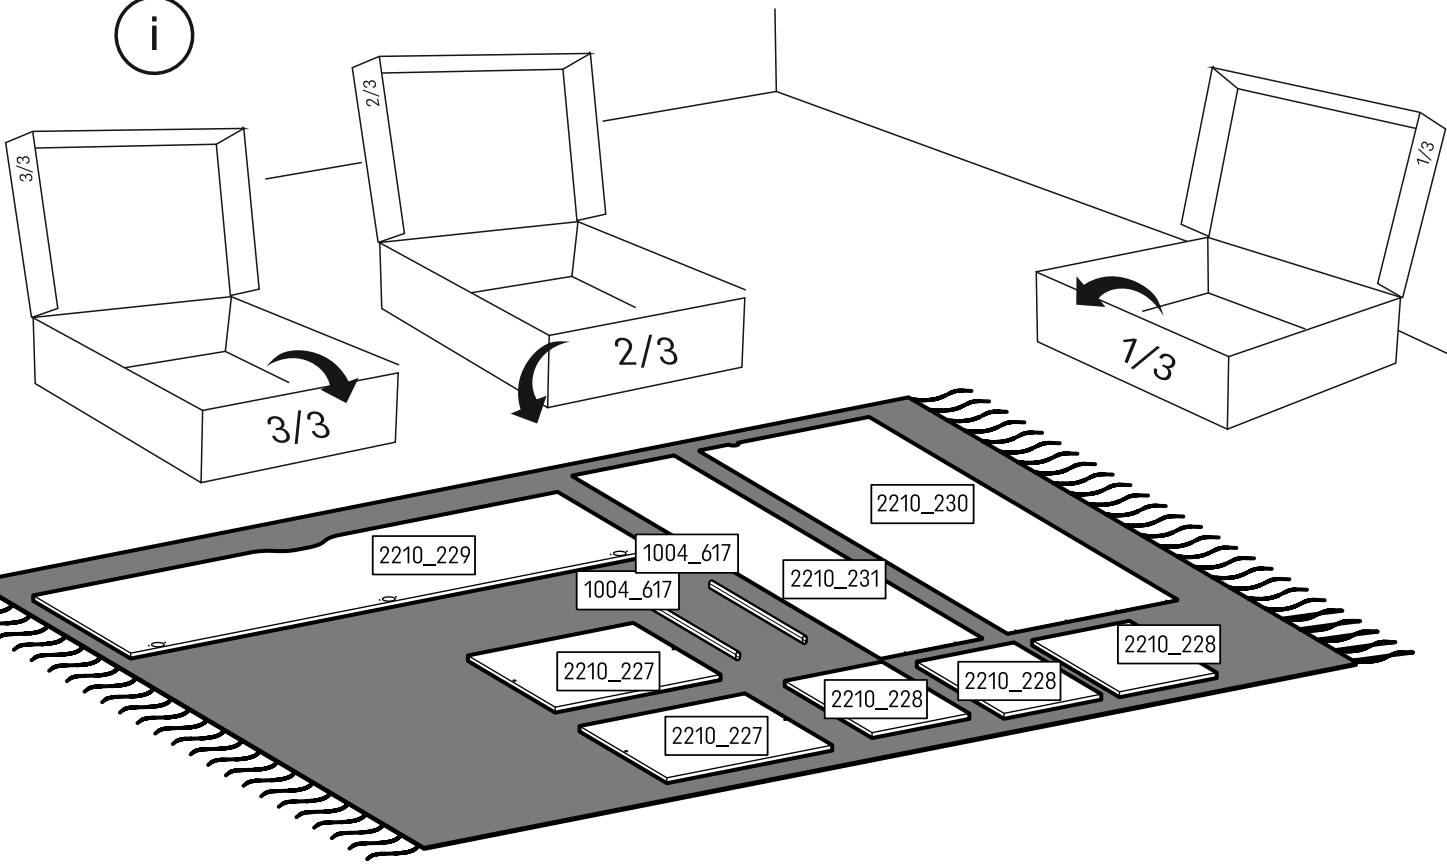




12


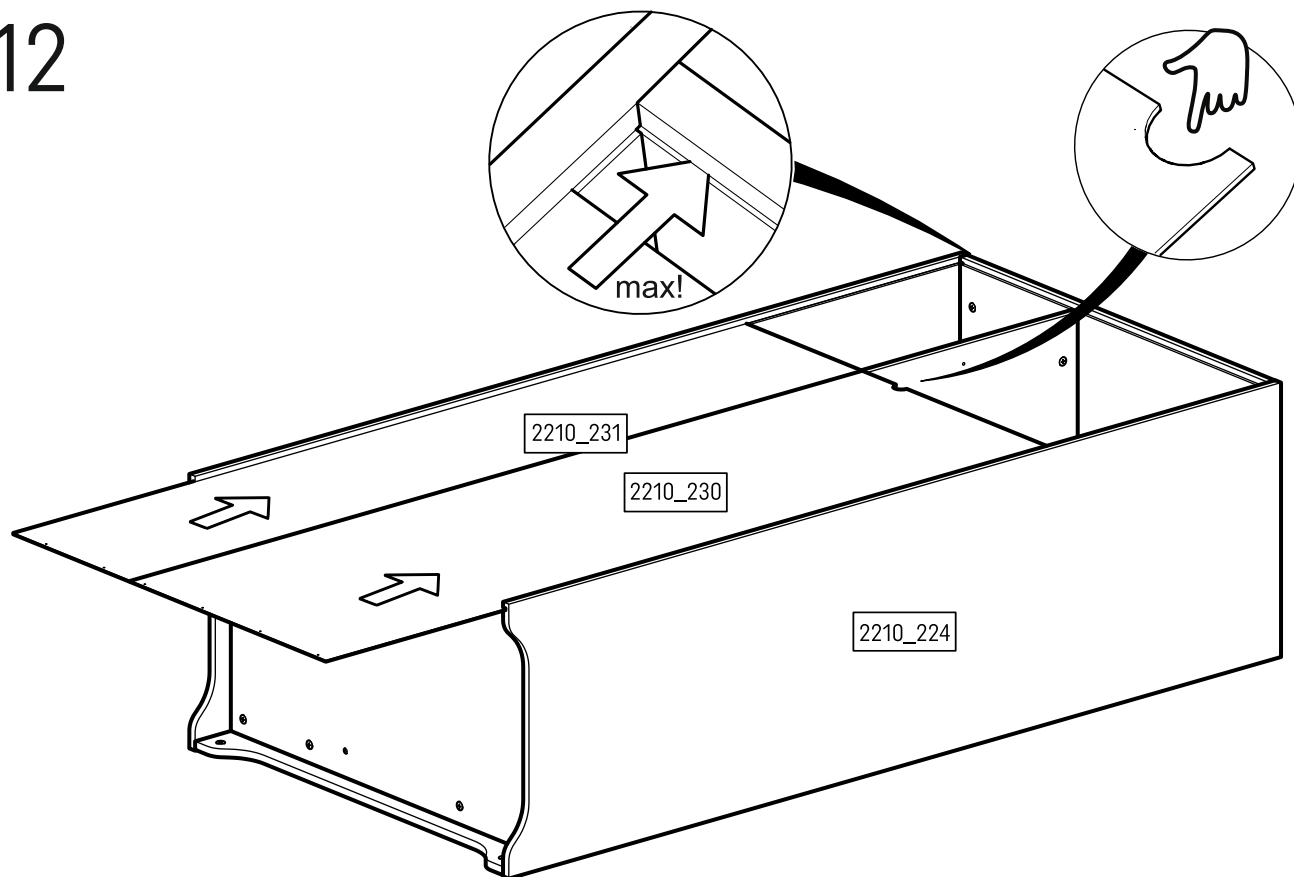








13

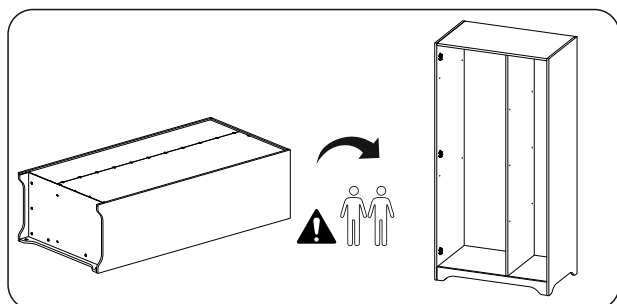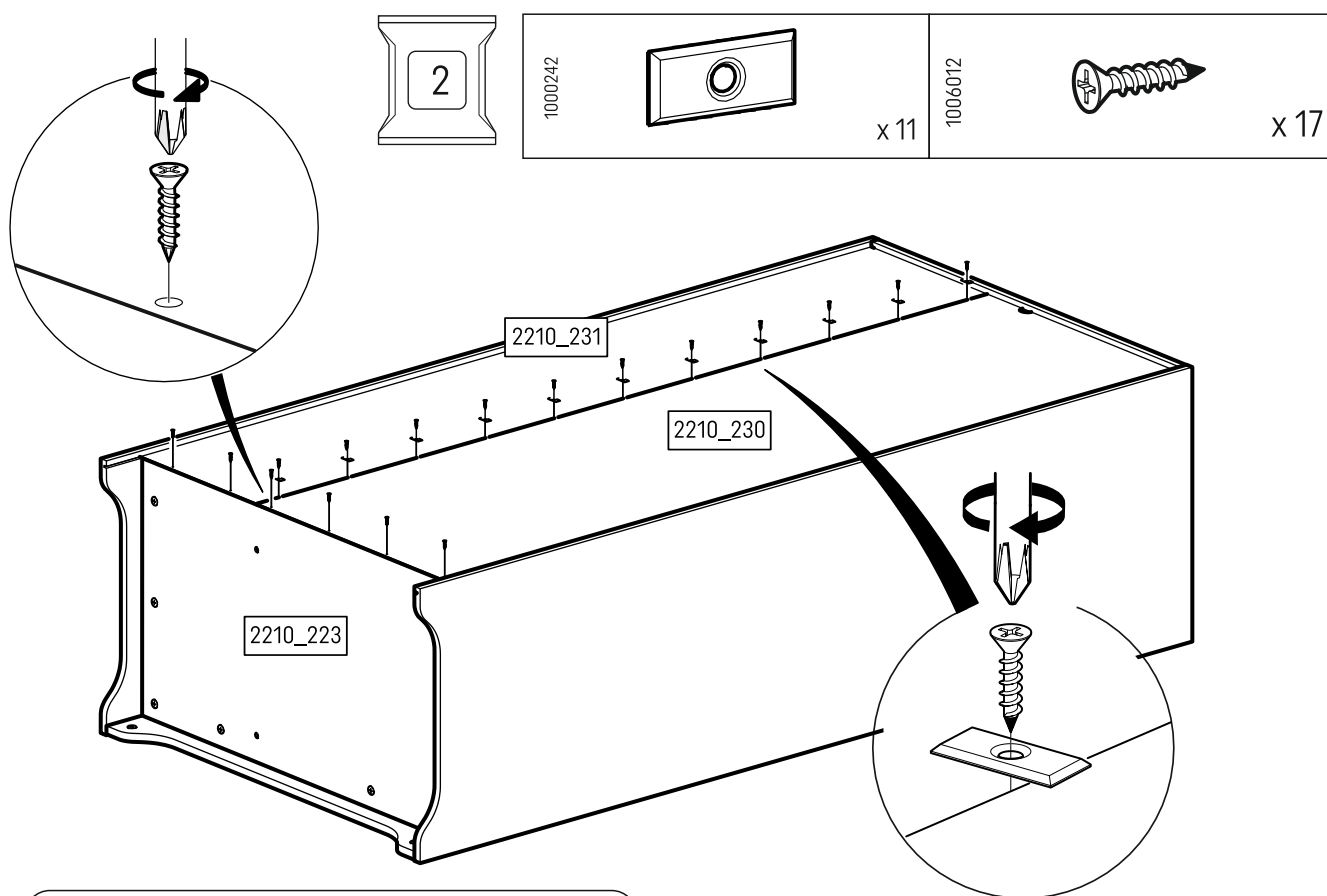


14

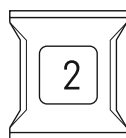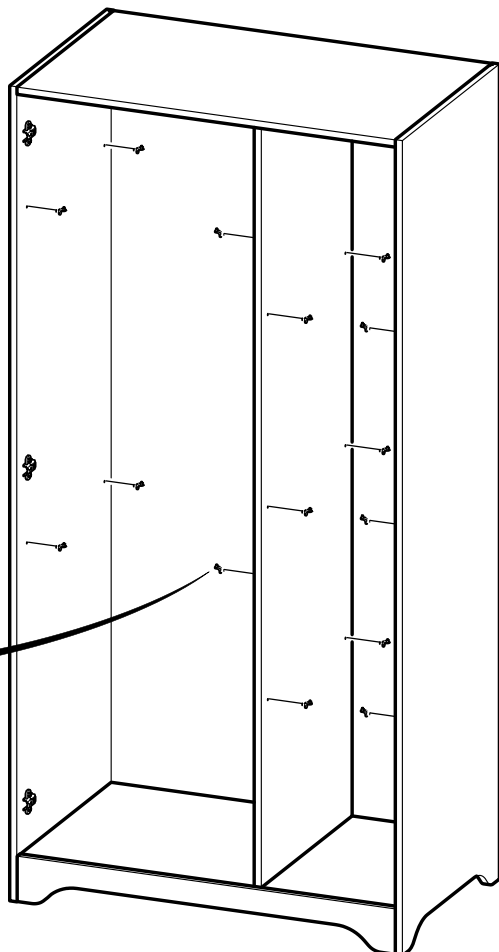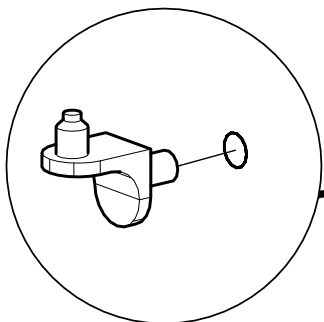

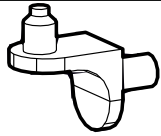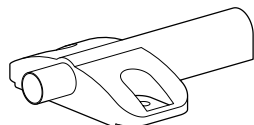
1001262		x 20
1005681		x 2
1101321		x 1

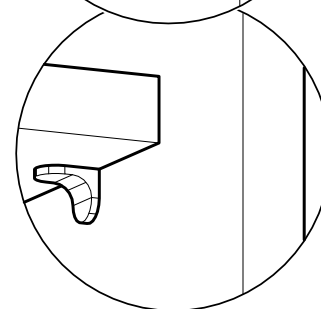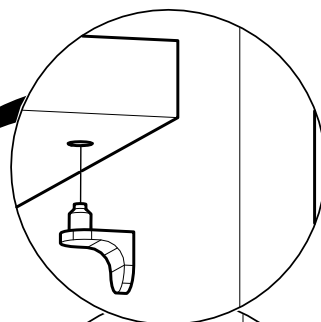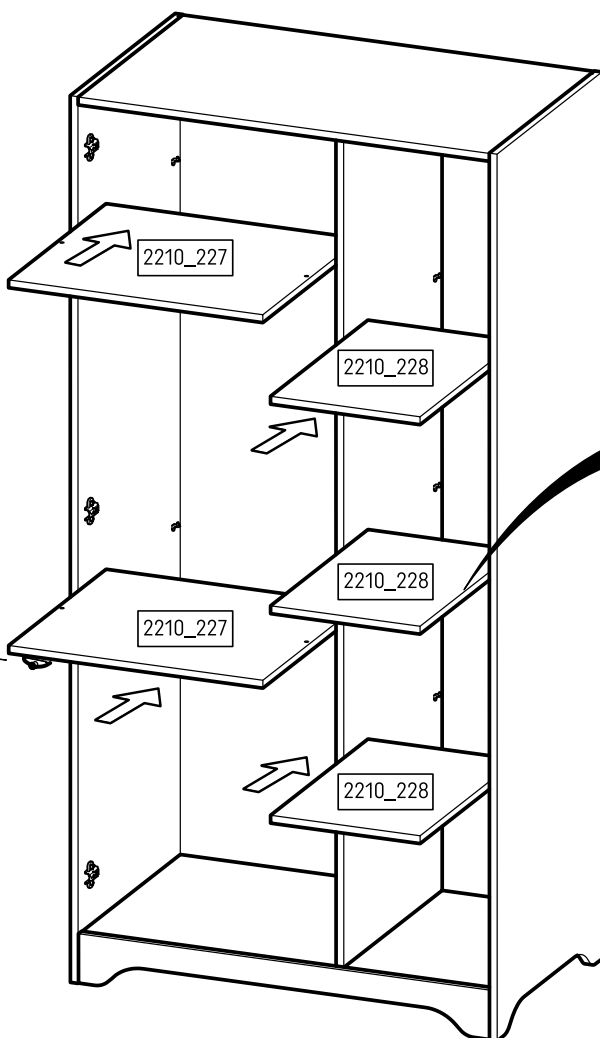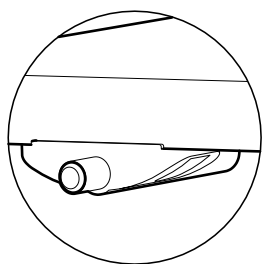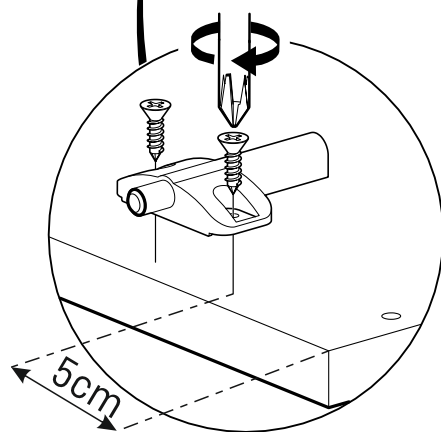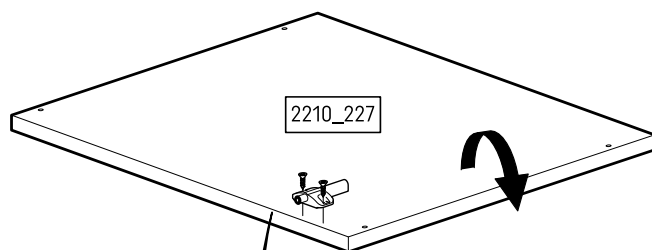

15

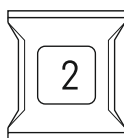


1000225

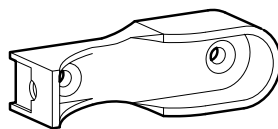


x 4


1110778




x 4

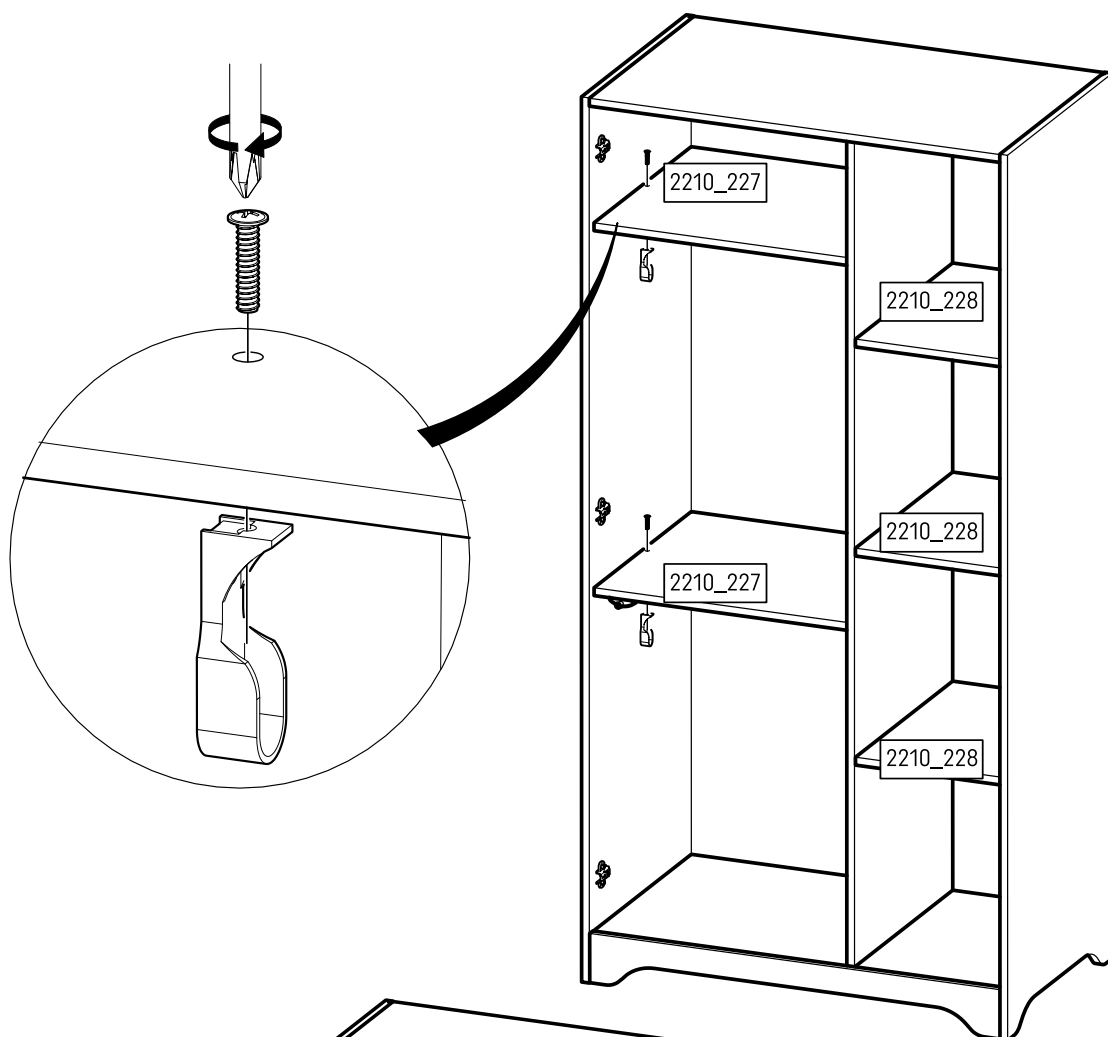


16

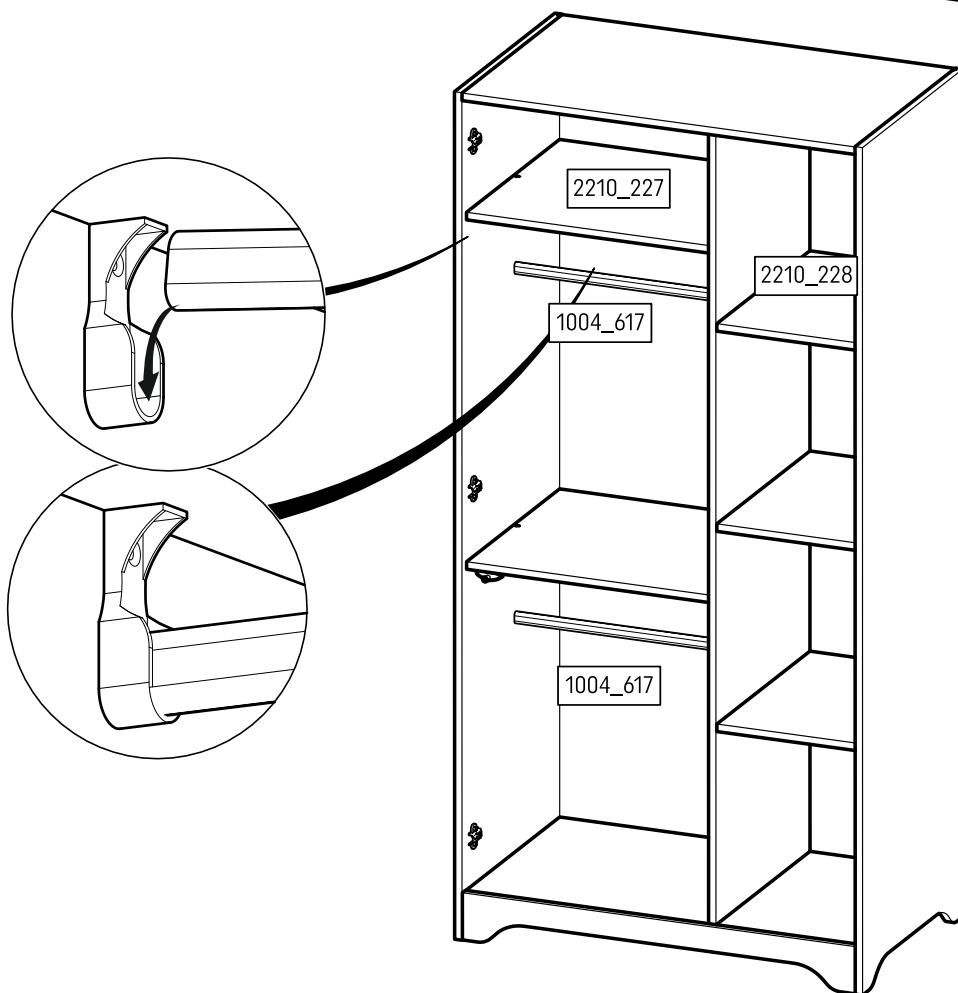



17

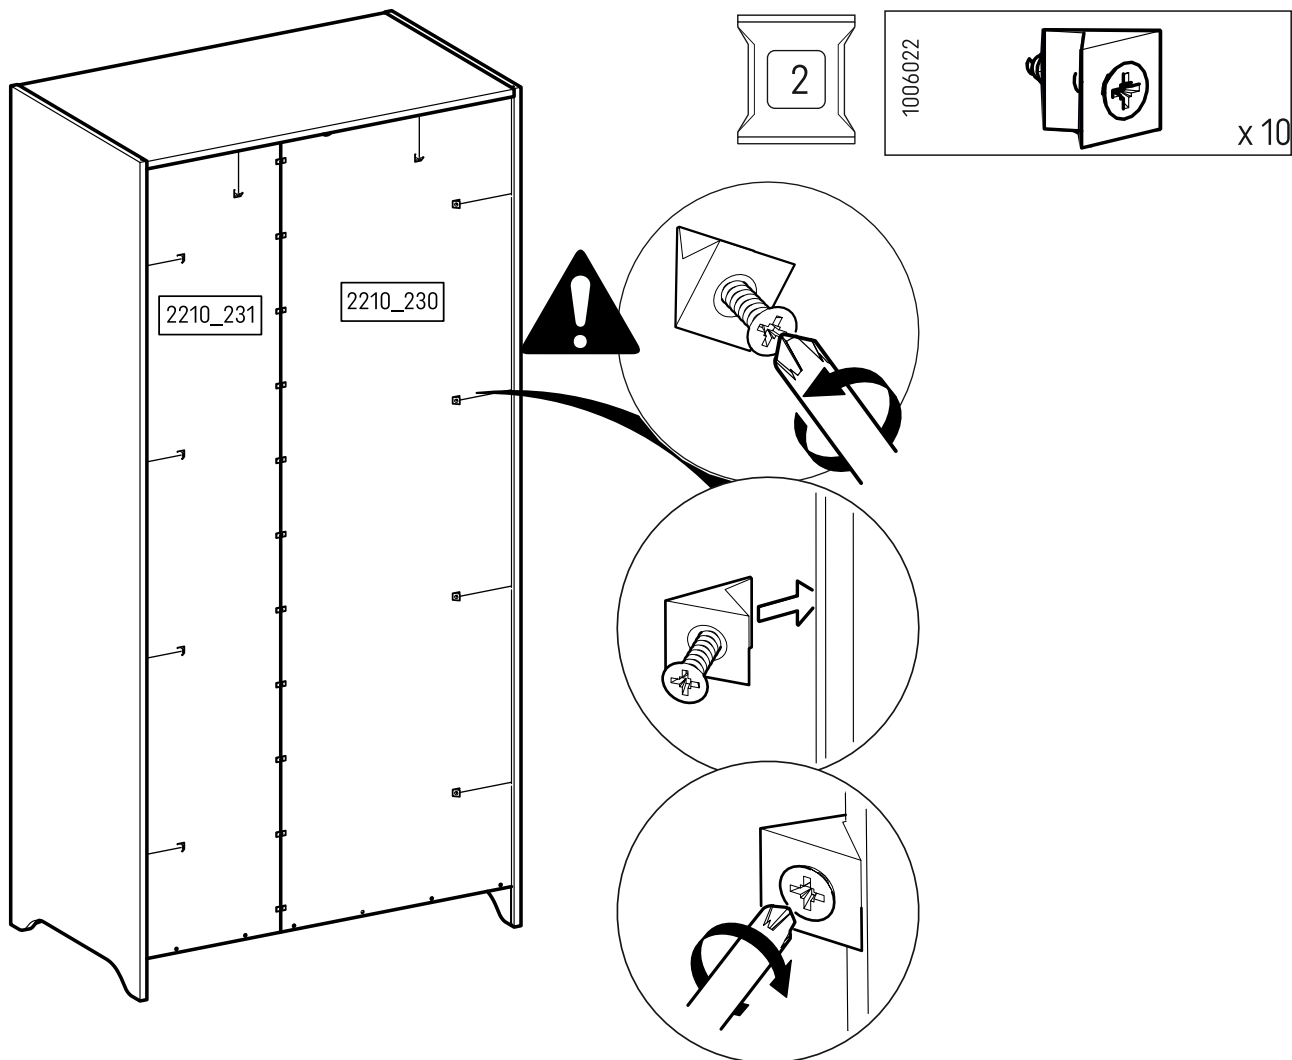




18

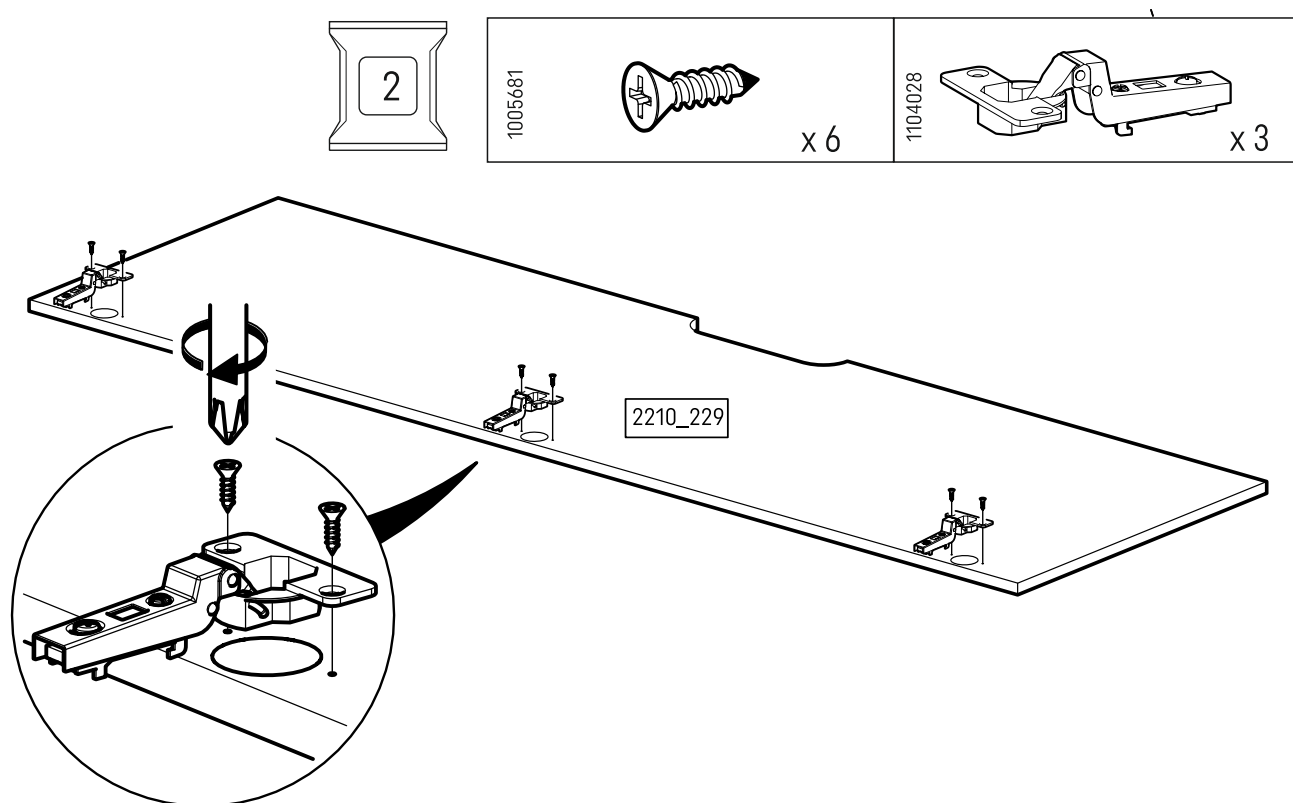

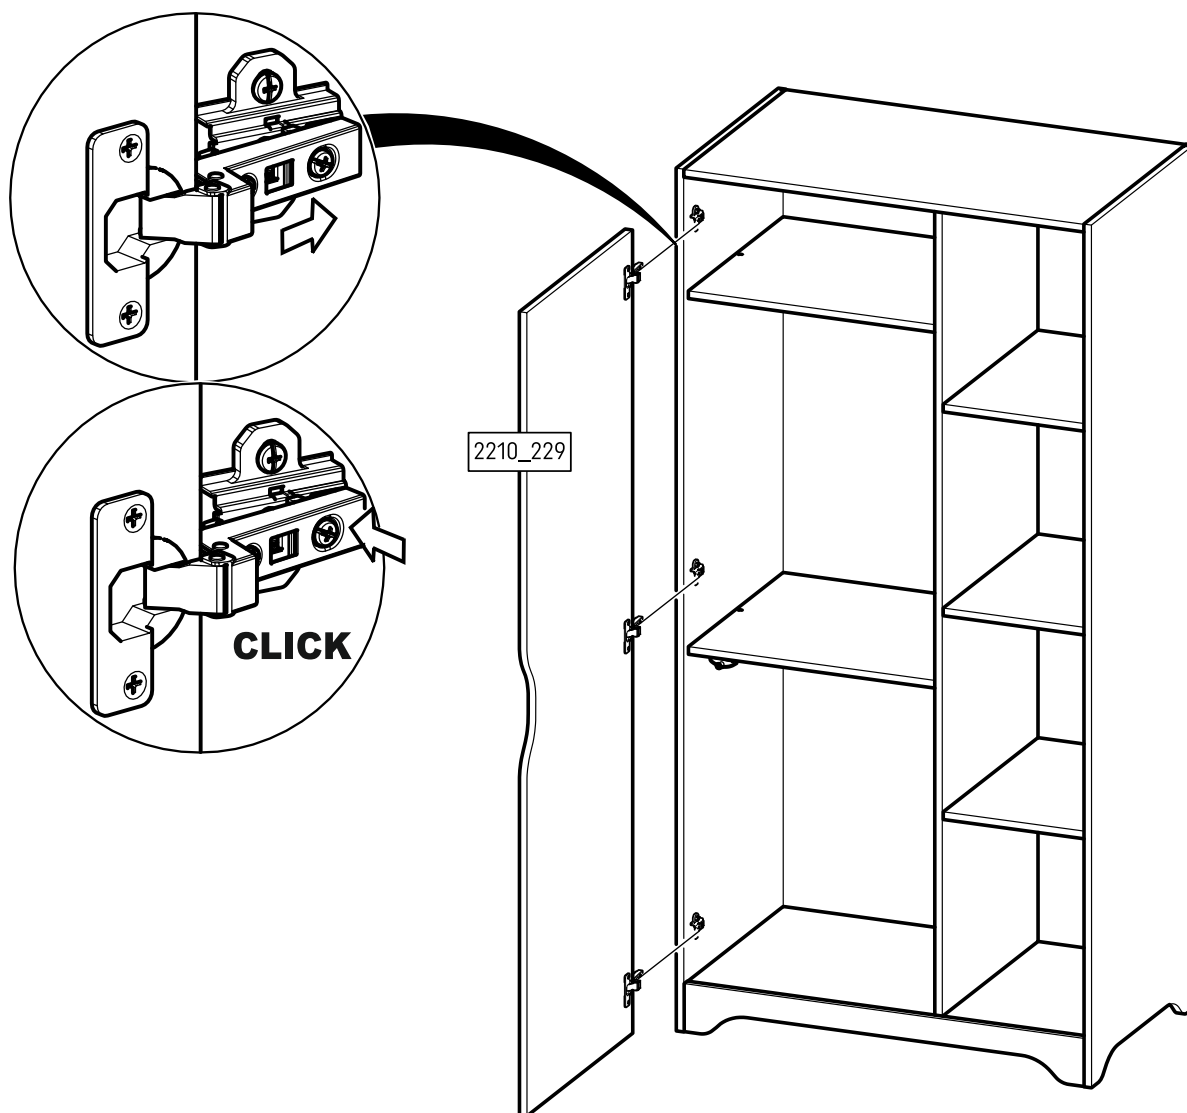

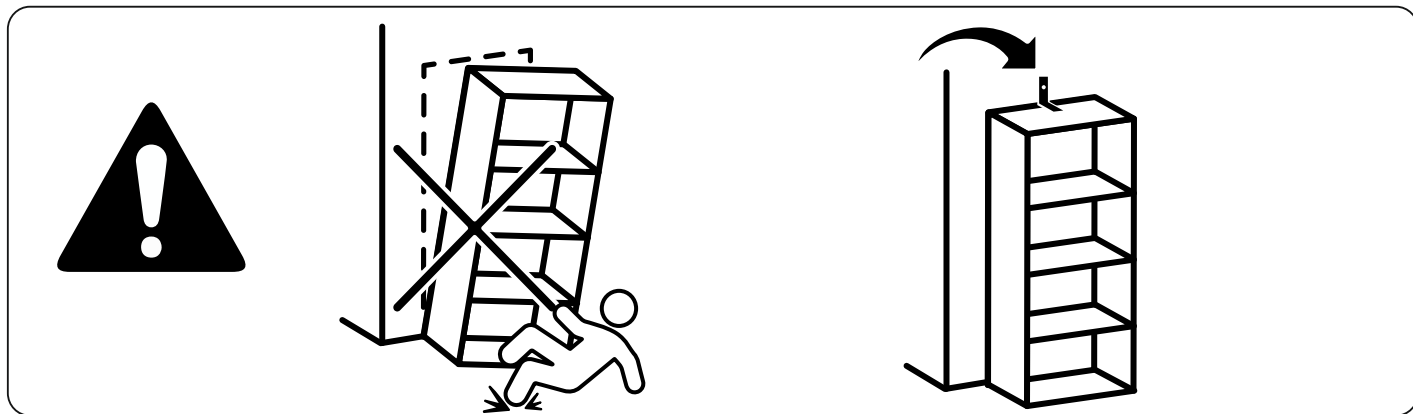

20

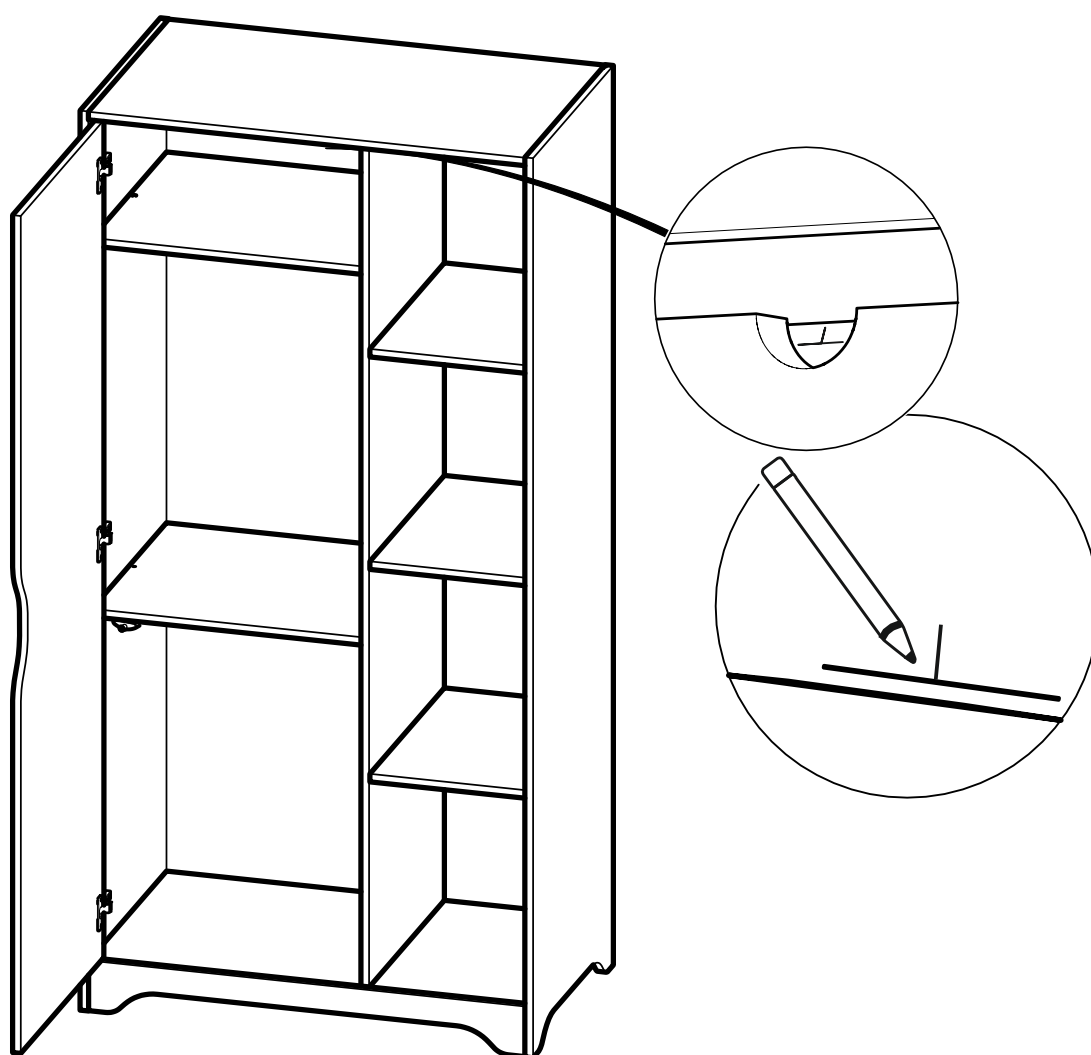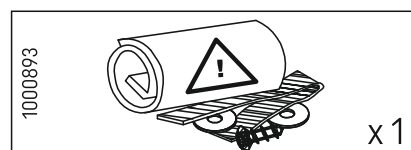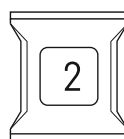

21

