

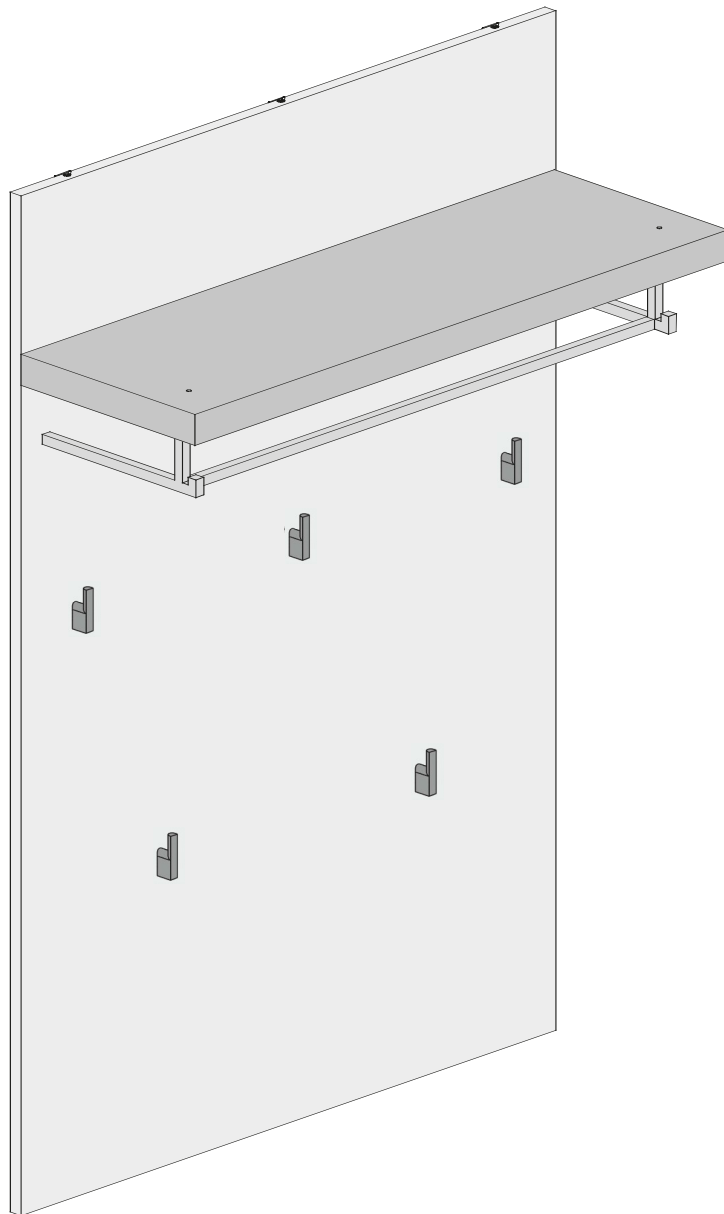
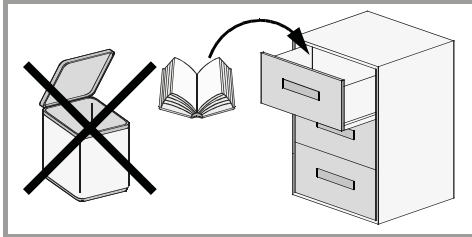
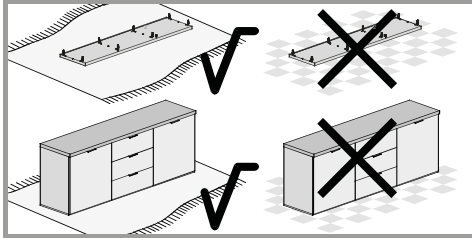






Garderobenpanel 800



IDEA









 F5 Ø3,5x16mm n.6	 F8 Ø7x50mm n.3	 F9 Ø4x16mm n.2	 F10 M4x25mm n.12	 F11 M4x45mm n.2	 F12 Ø5x25mm n.5
 F14 Ø15-Ø5 n.2	 L5 n.5	 N4 n.3	 N5 n.1+1	 N6 n.1	 N7 n.2
 M2 Ø8 n.2	 M3 Ø8 n.2				

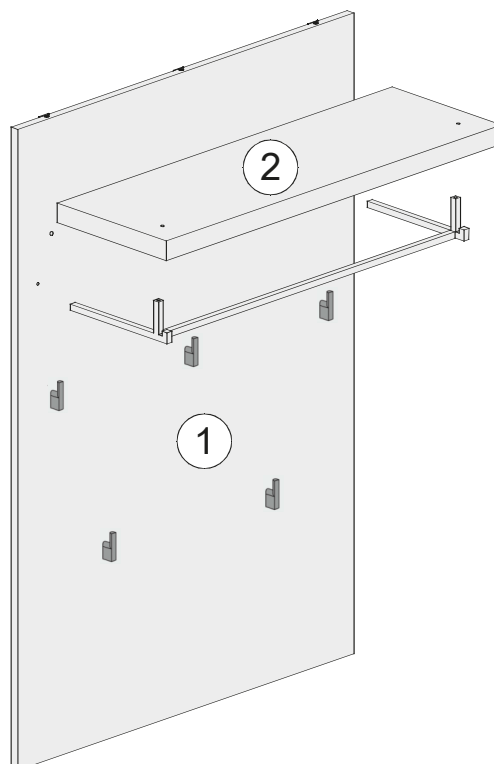





Nr. 1x1 (XP_COIDEPY1-BIA)
Nr. 2x1 (XP_CTIDEPY1-R27)

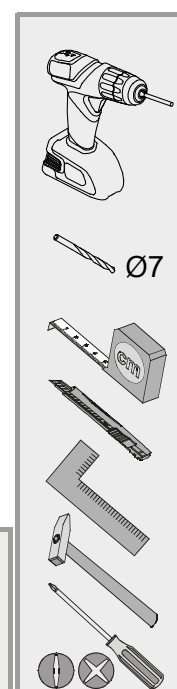

1

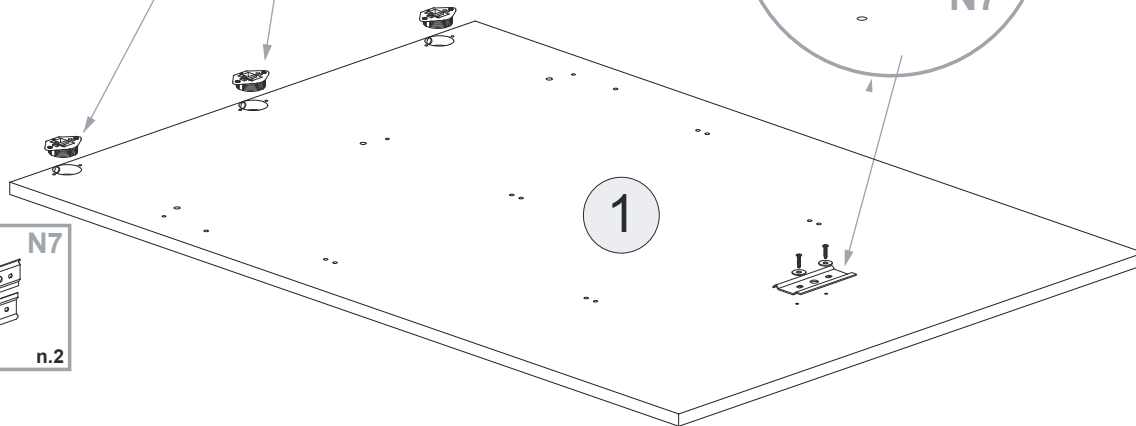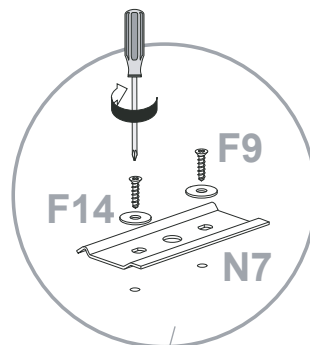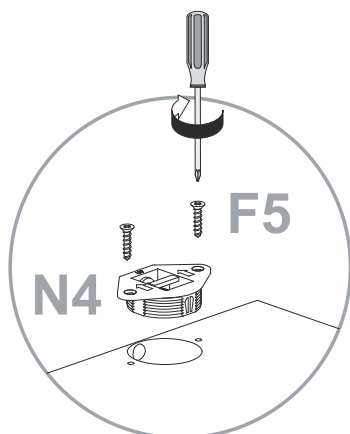
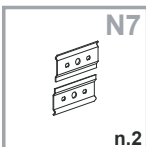
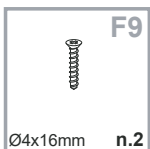
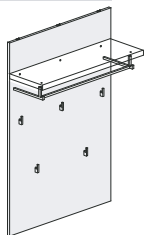


2

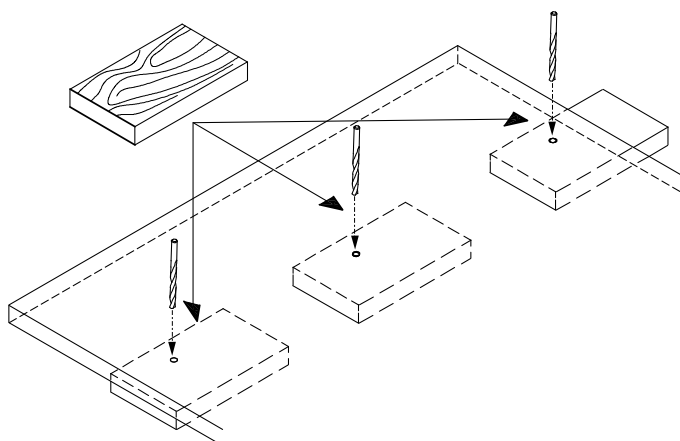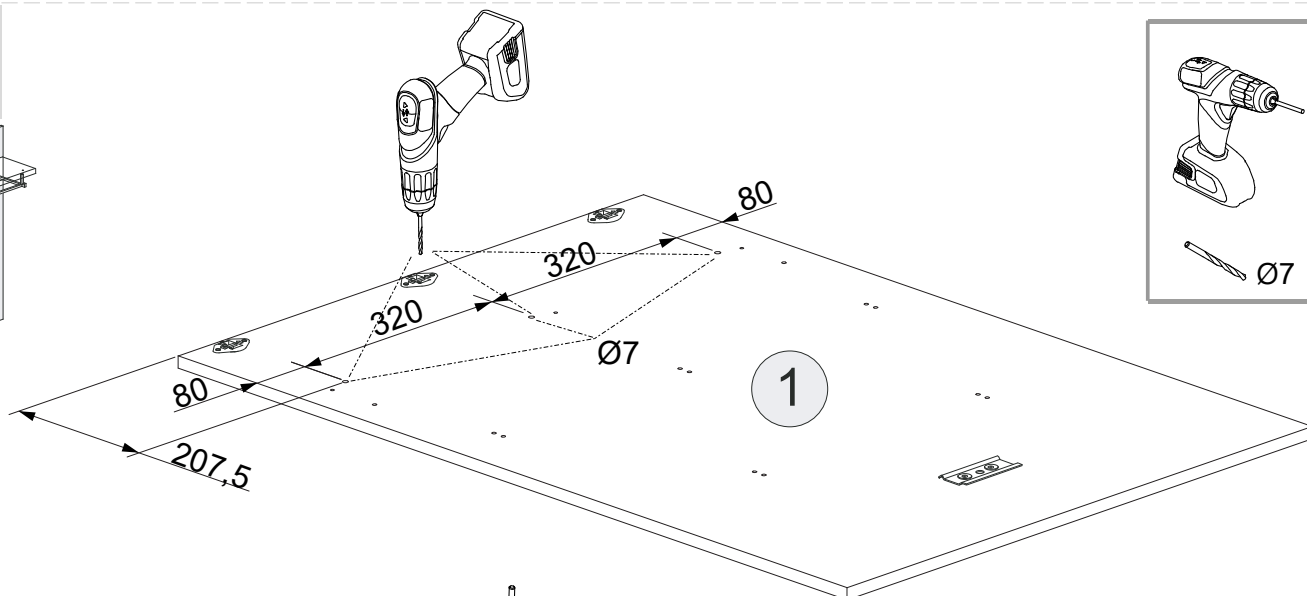
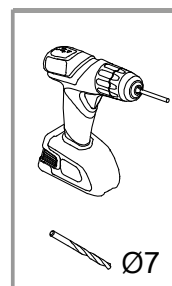
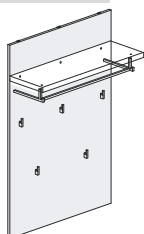


- (D) Um Splitterungen zu vermeiden, benutzen Sie Bitte Ein Stueck Hols bei der Durchbohrung der Löcher!
- (E) To avoid splintering, please use a piece of wood When drilling the holes!
- (F) Afin d'éviter les éclats, veuillez utiliser un morceau de bois puor percer le trous!
- (I) Per evitare schegge, utilizzare un pezzo di legno durante la perforazione dei fori!
- (NL) Gebruik bij het boren van de gaten een stuk hout Om versplintering te voorkomen!






3

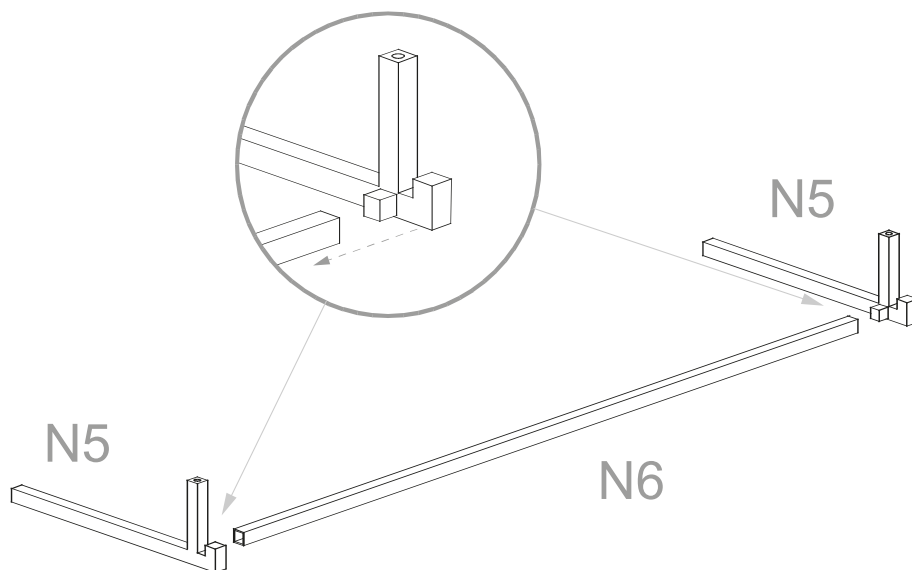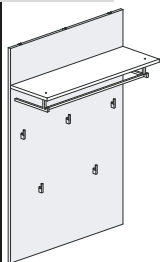






4

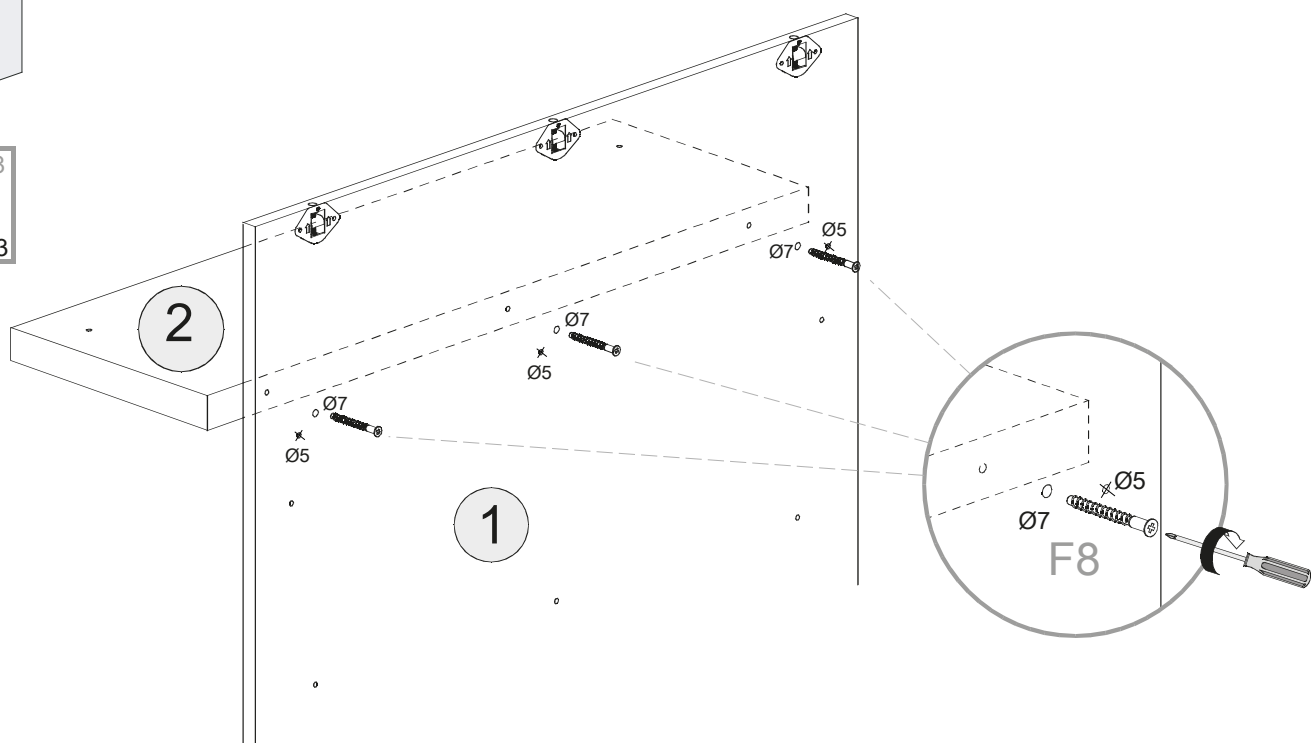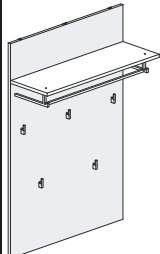









5

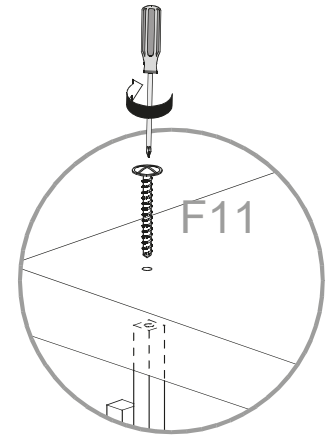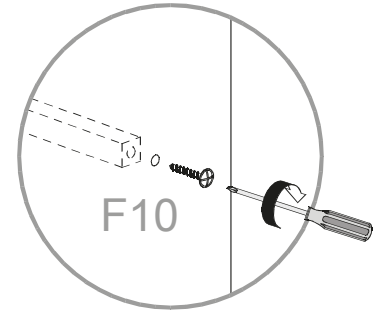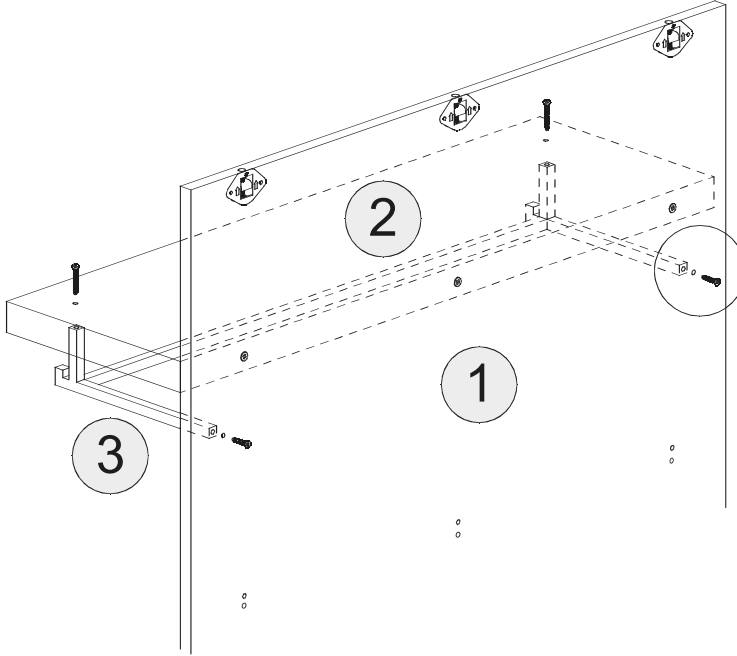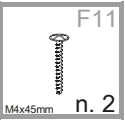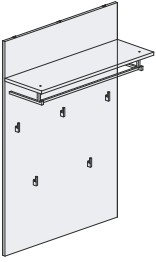




6

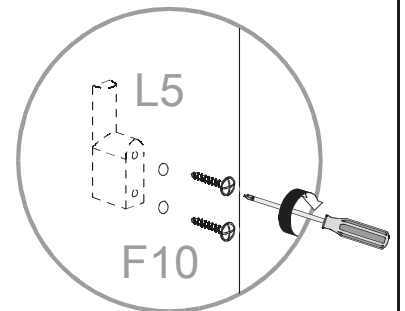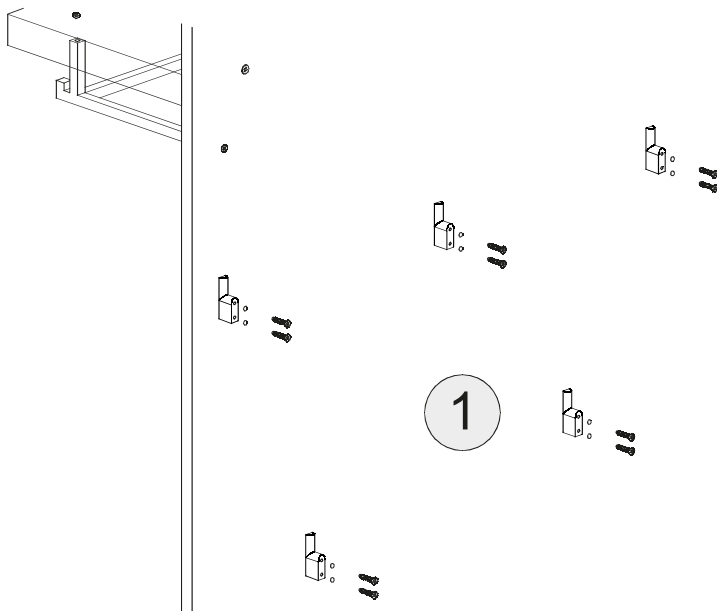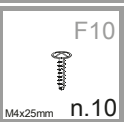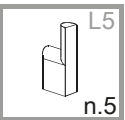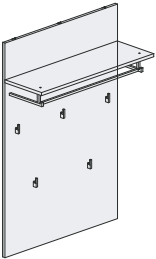

7

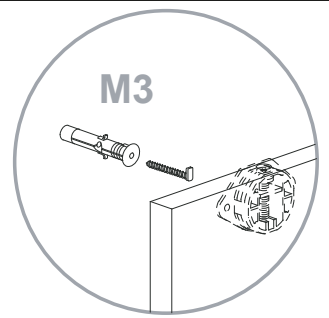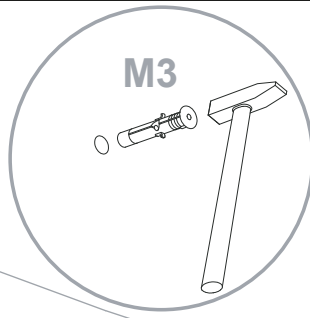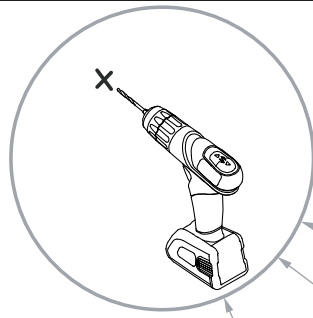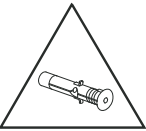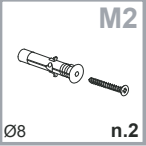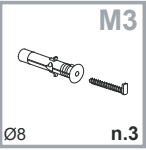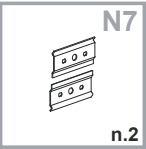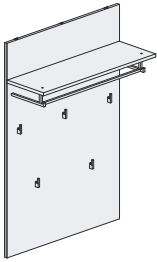

1005 mm

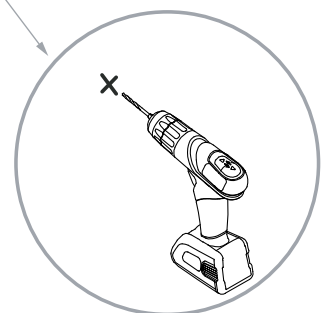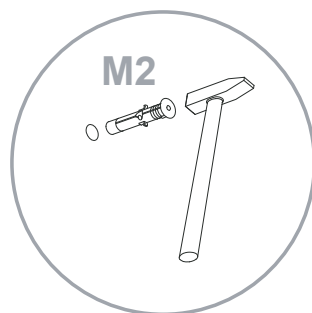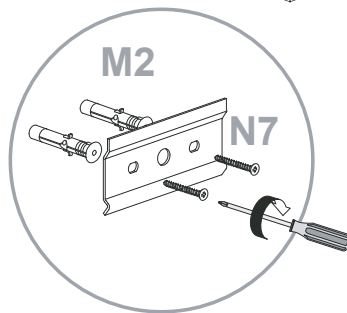

- (D) M2-M3 Nicht für Gipskartonplatten geeignet
 (E) M2-M3 Not suitable for plasterboard
 (I) M2-M3 Non adatta per cartongesso
 (F) M2-M3 Ne convient pas aux plaques de plâtre
 (NL) M2-M3 Niet geschikt voor gipsplaat

