




Garderobe

WL6.903

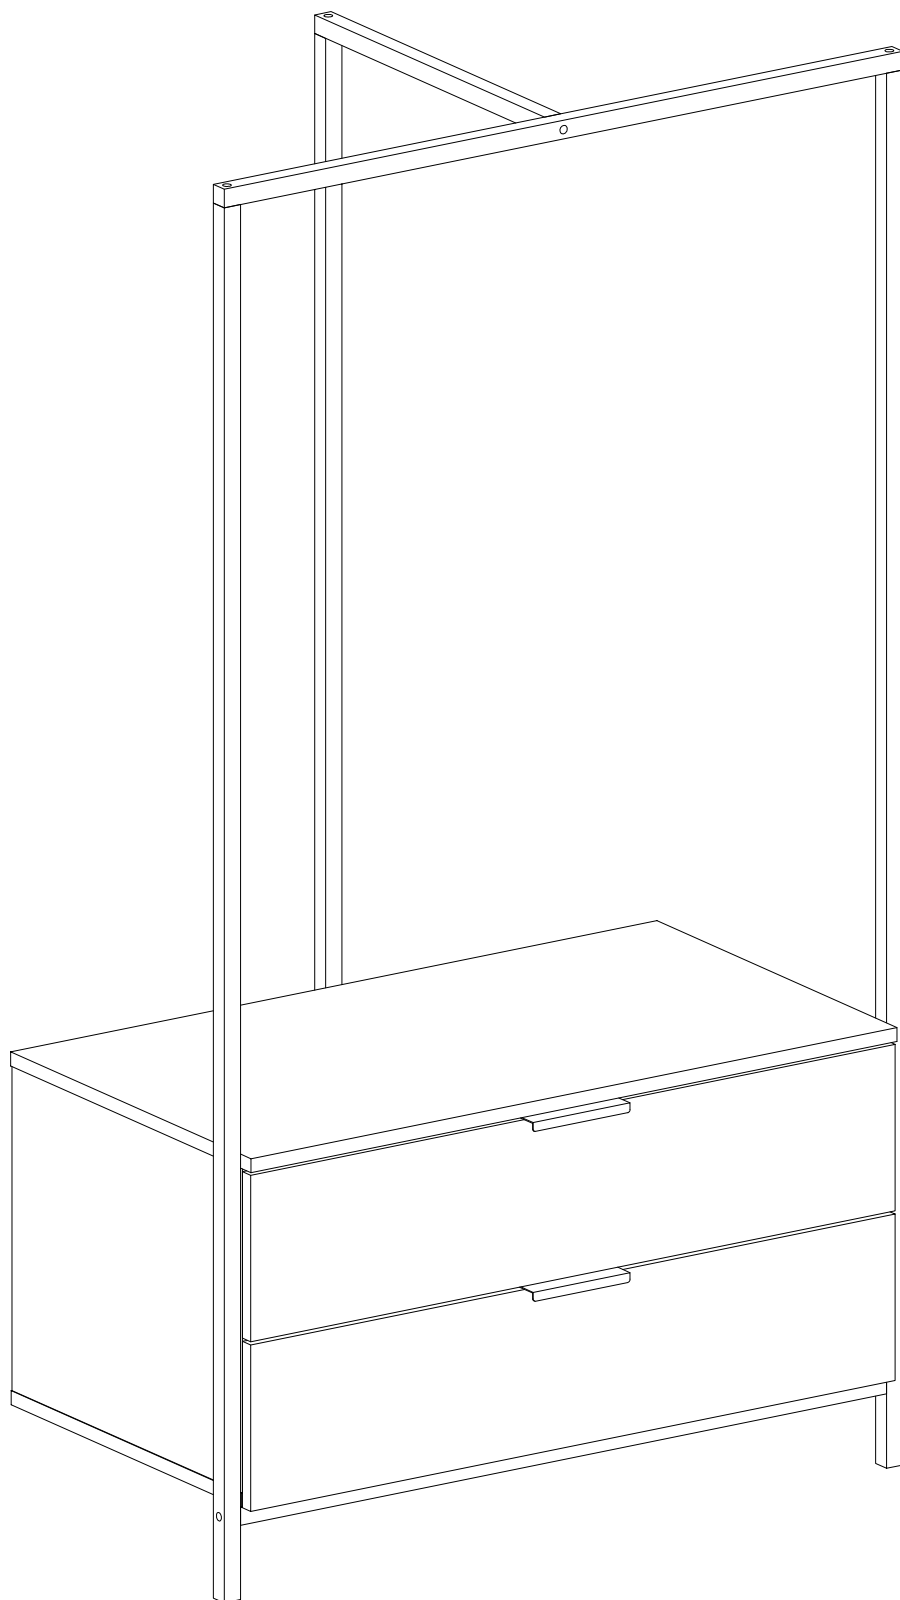


WOHNLING®
Möbel zum Wohlfühlen

Parts List

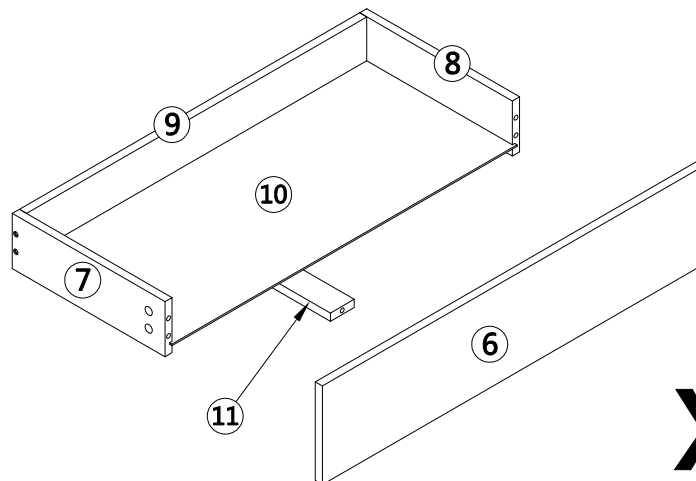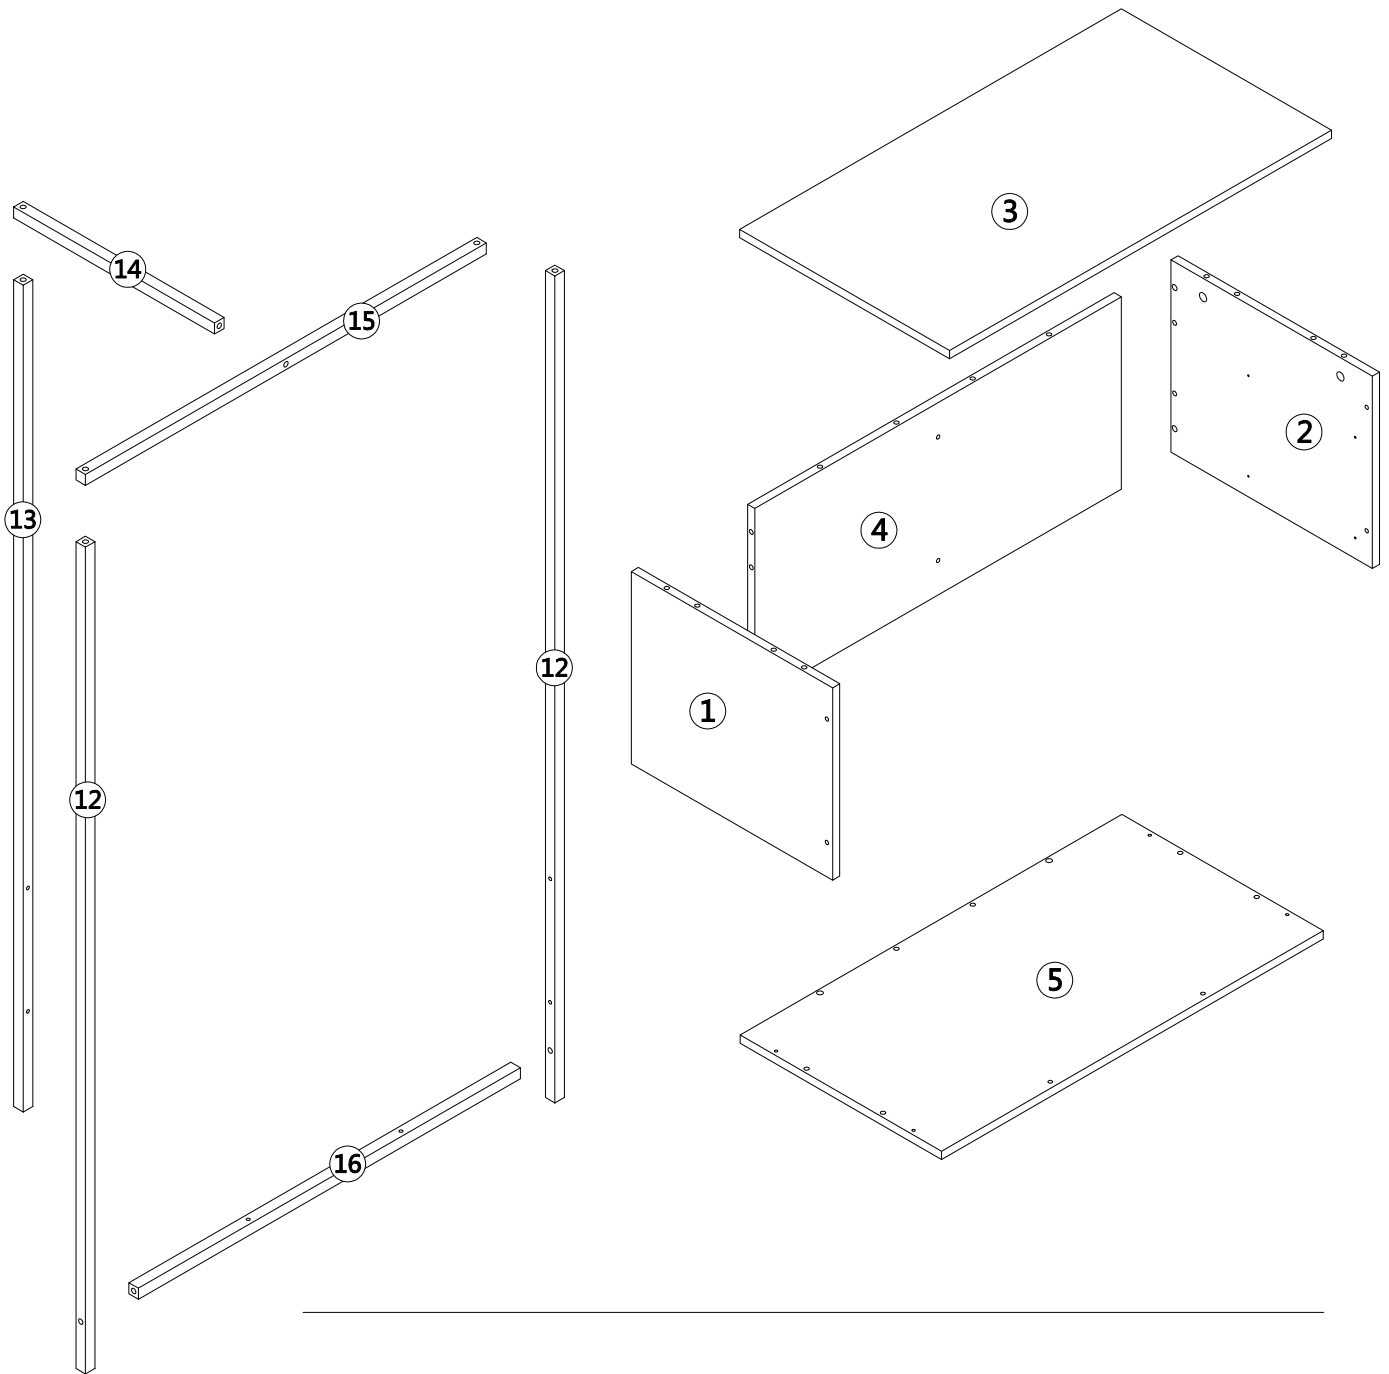

x 2

Hardware

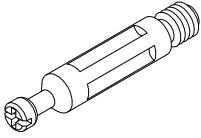


A1




A2

A x 24sets

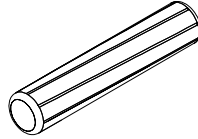


8 x 40MM

B x 16pcs




3.5 x 14MM

C x 20pcs

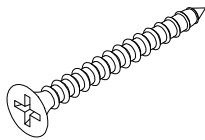


3.5 x 35MM

D x 12pcs

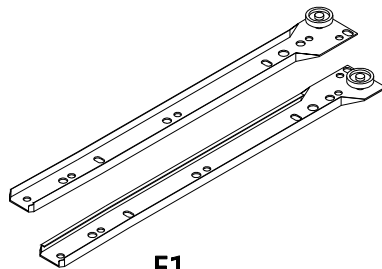


E1

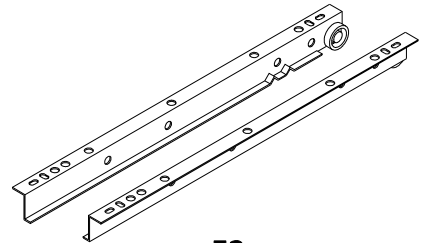


E2

E x 2sets

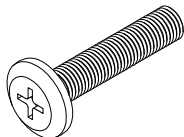


M6 x 30MM

F x 8pcs

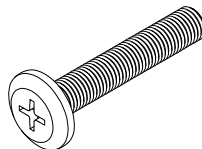

M6 x 35MM




G x 6pcs

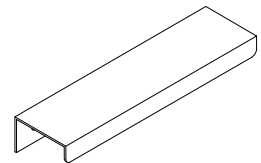

H x 2pcs






Step 1

A1 x 12 B x 16 C x 8 E1 x 4

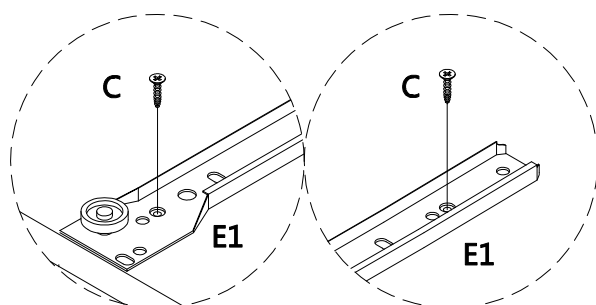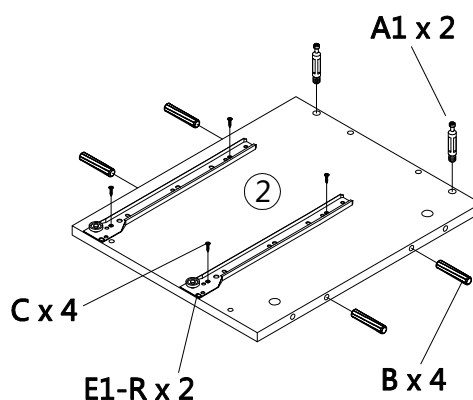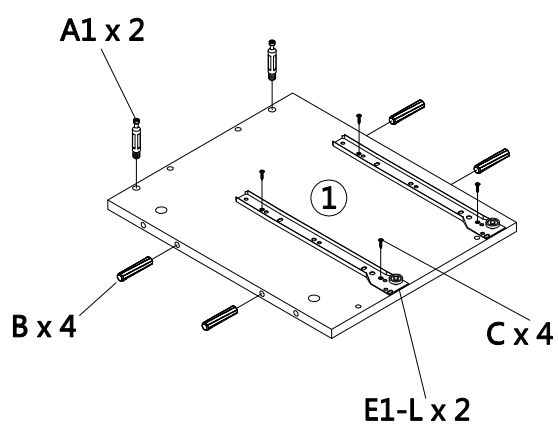


REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

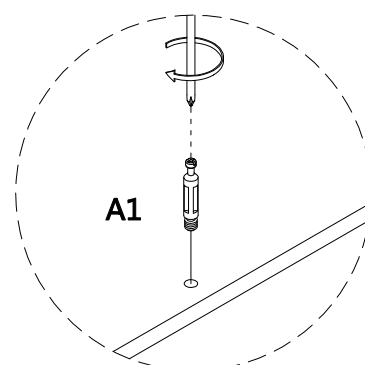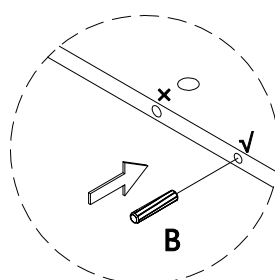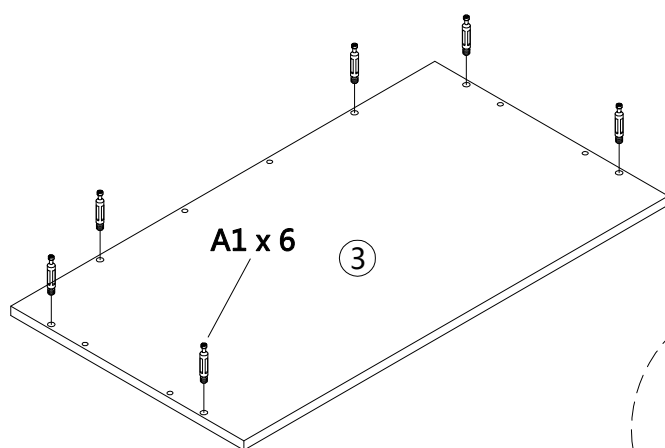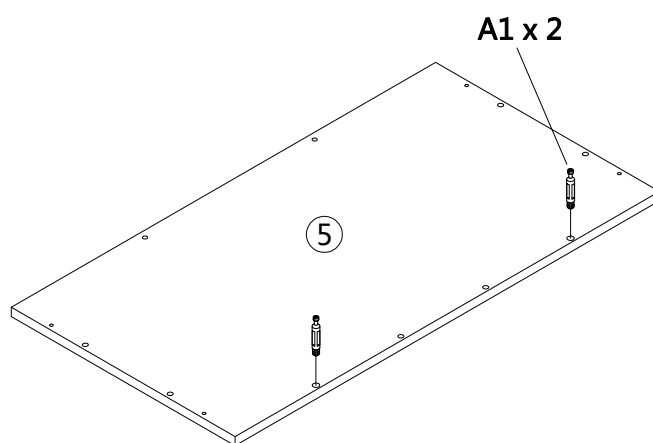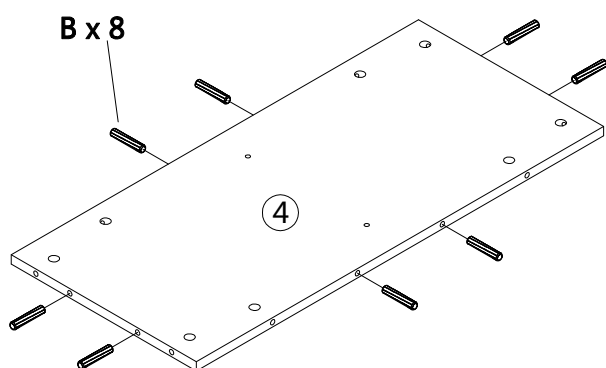


Step 2

A2 x 12 D x 4

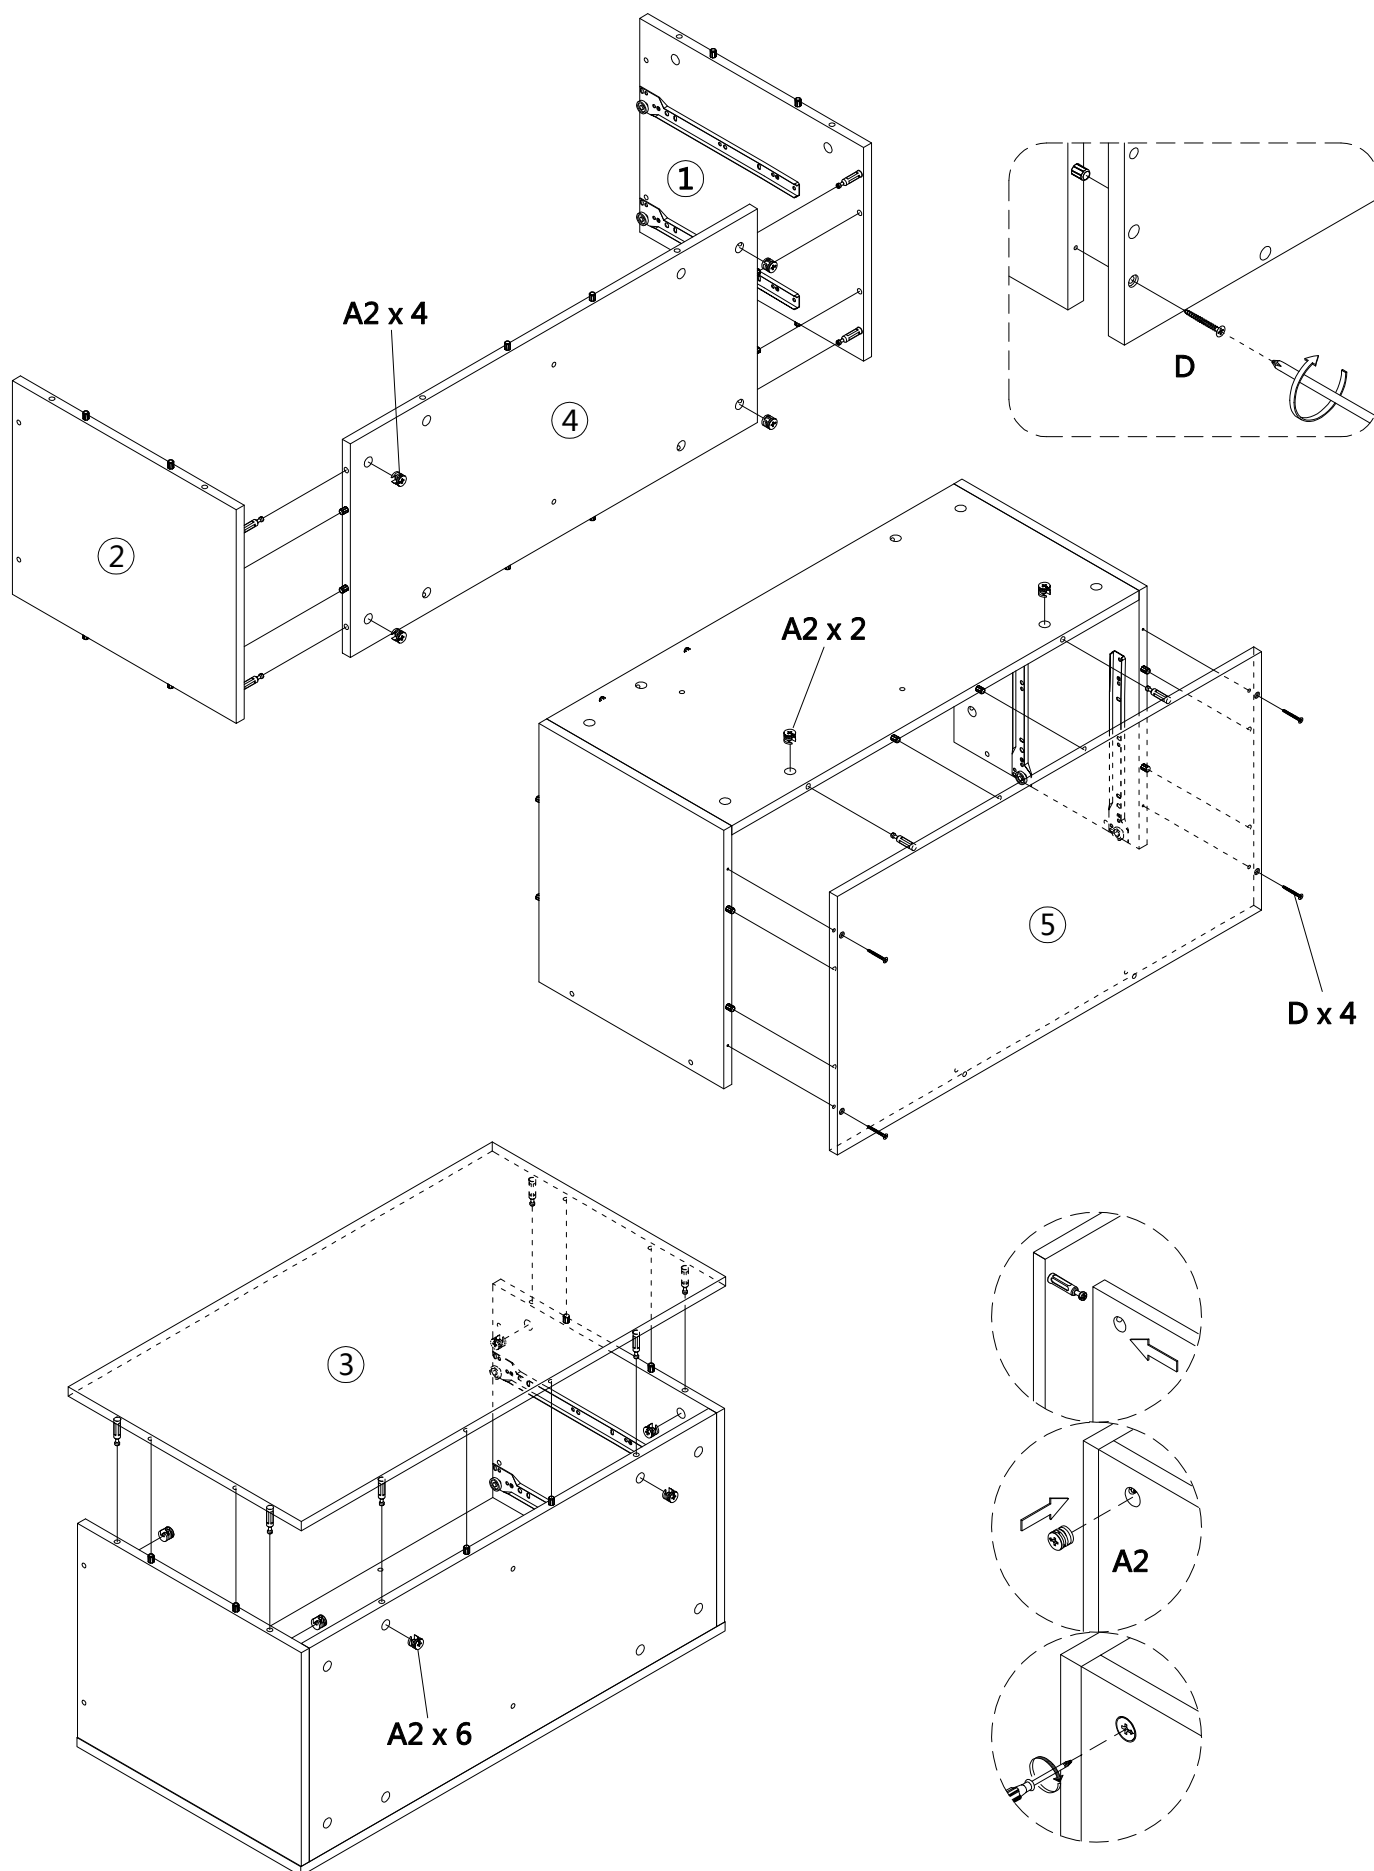




Step 3

F x 6 G x 2

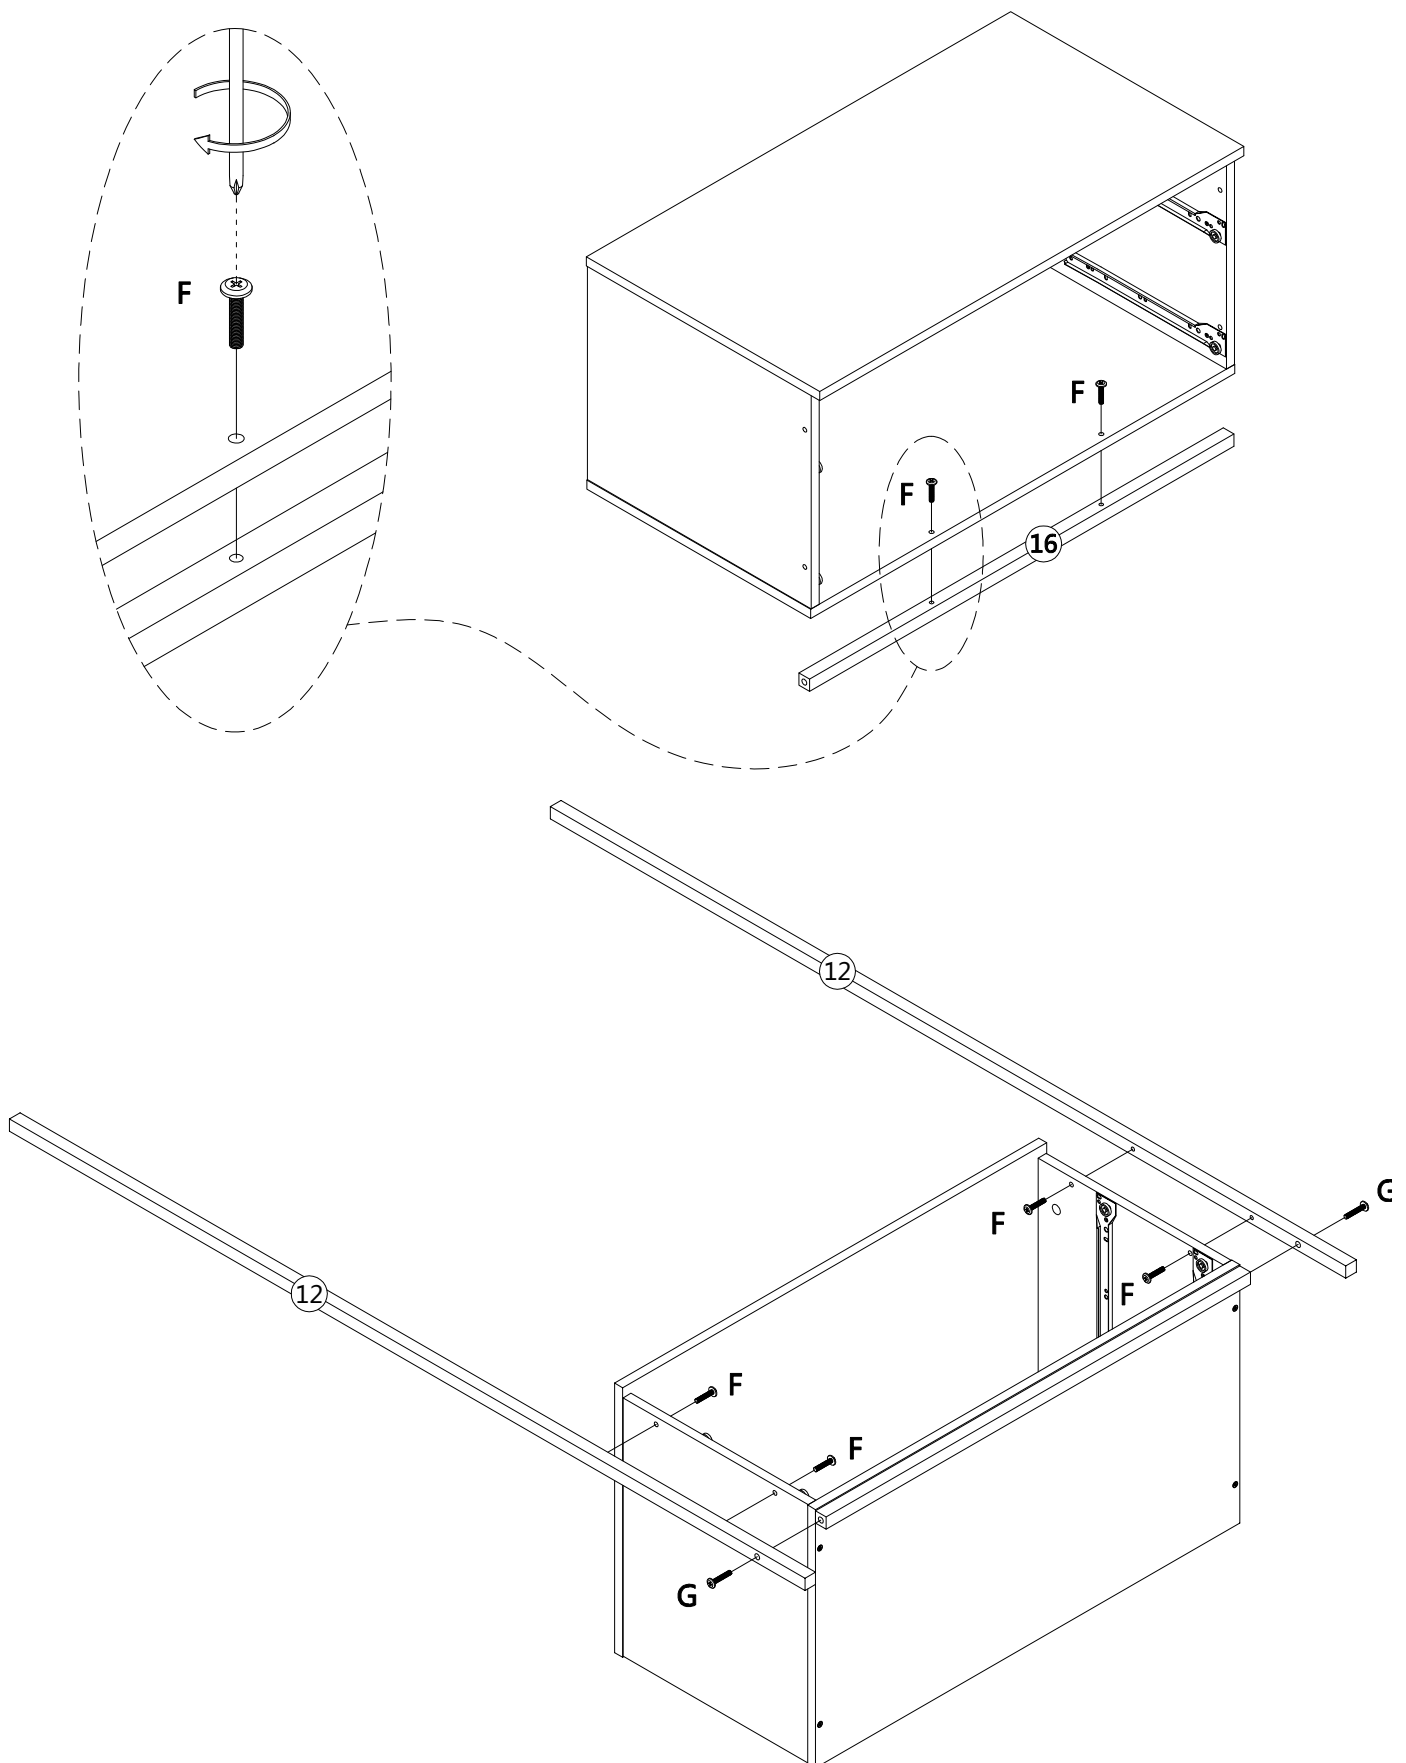

Step 4







F x 2 G x 4

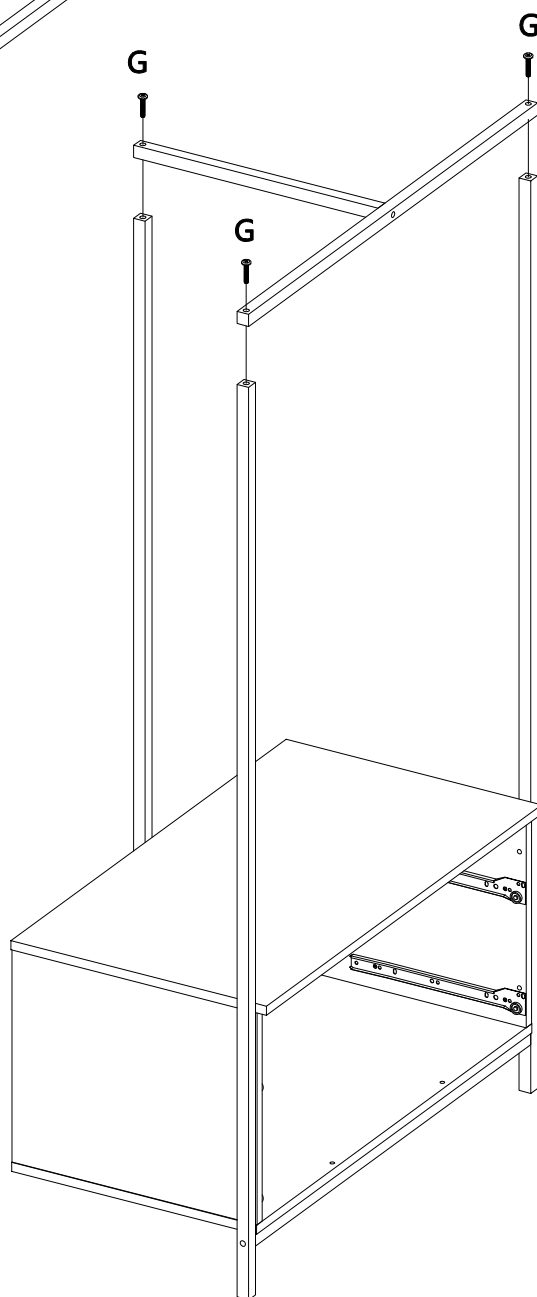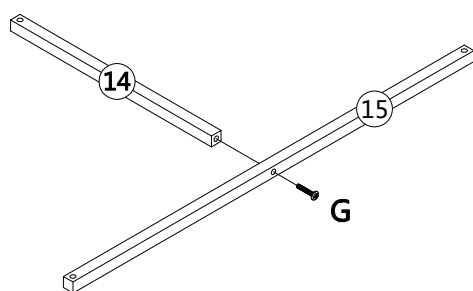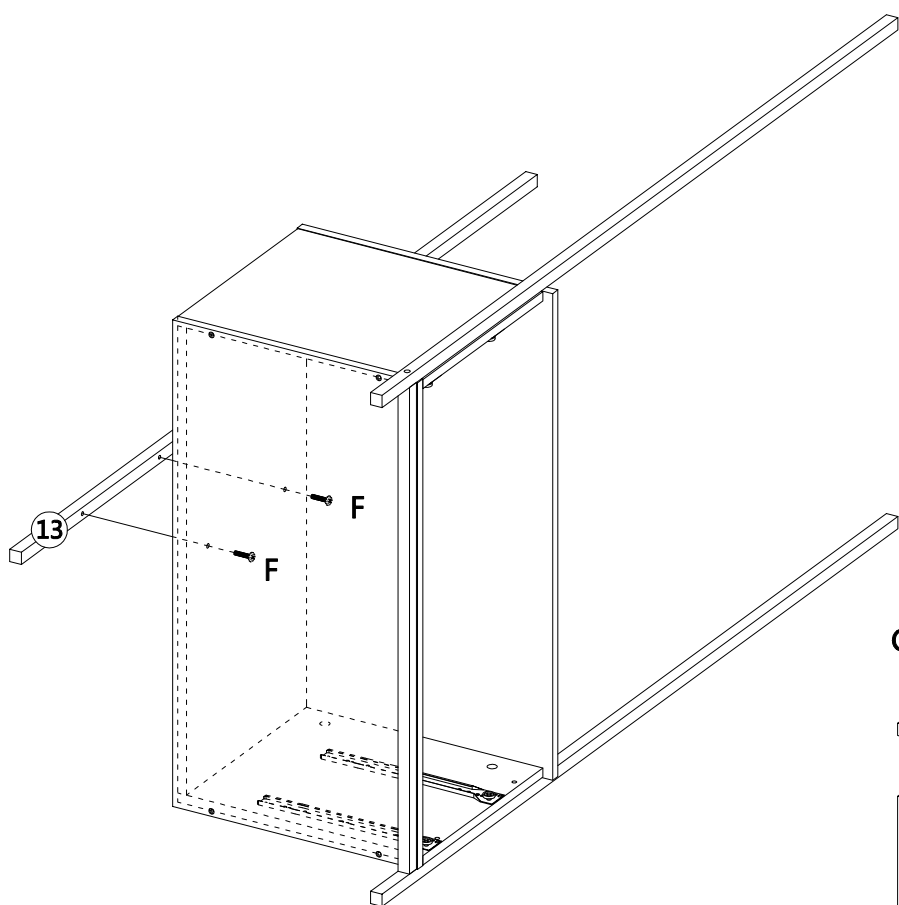

Step 5

A x 12 C x 4 D x 8 H x 2




x 2

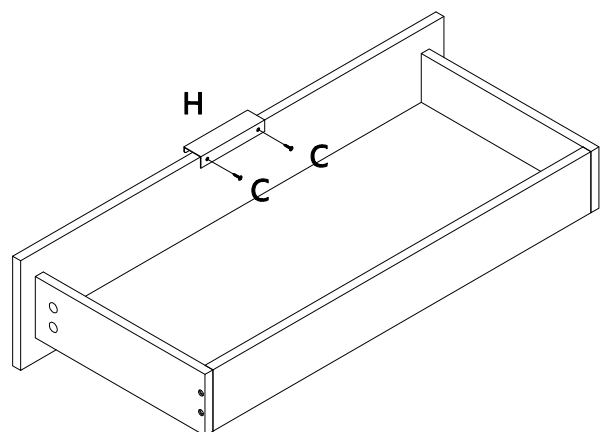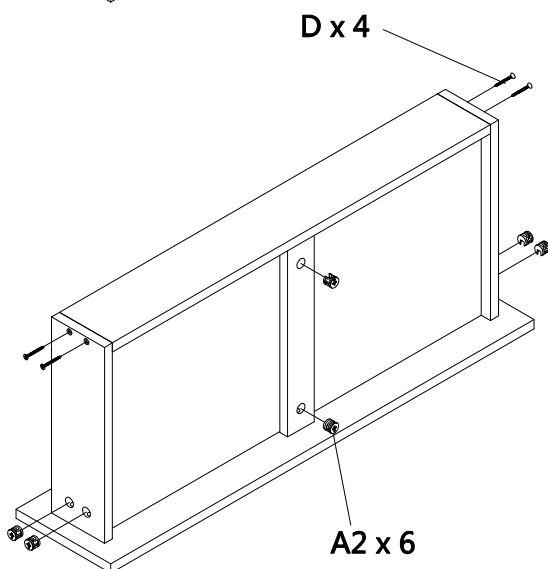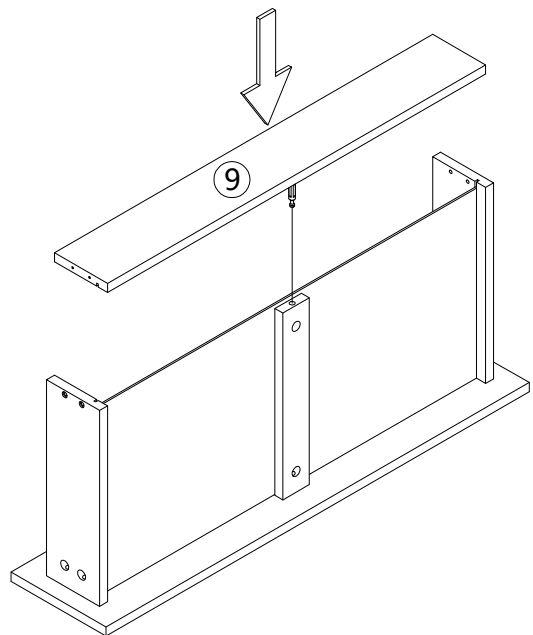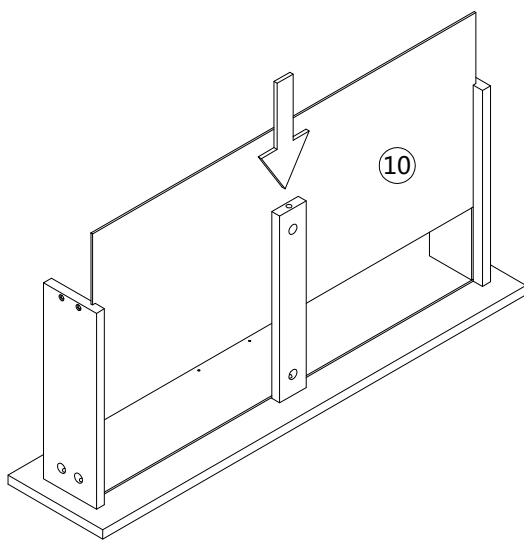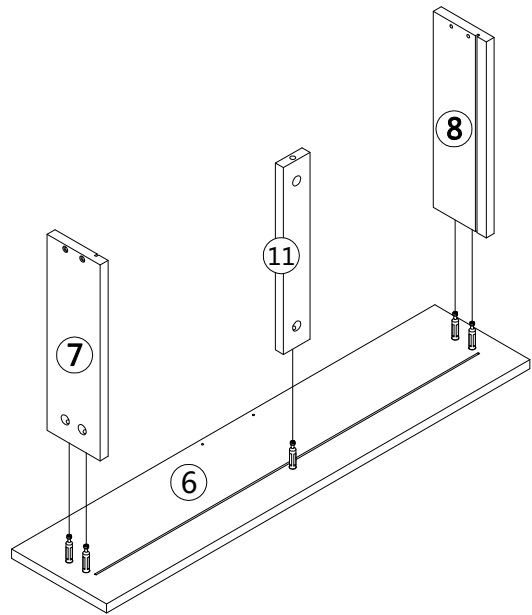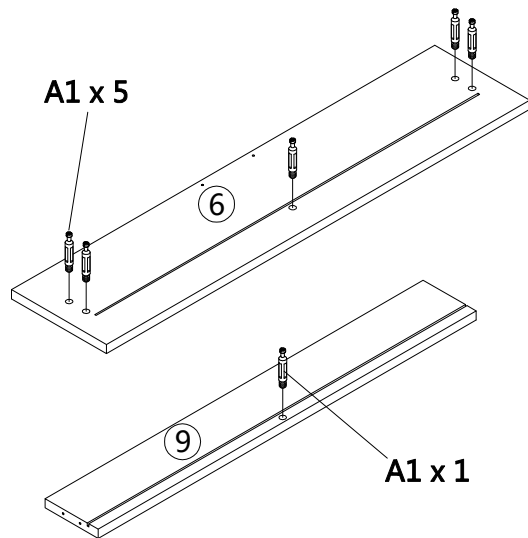

Step 6

C x 8 E2 x 4

x 2

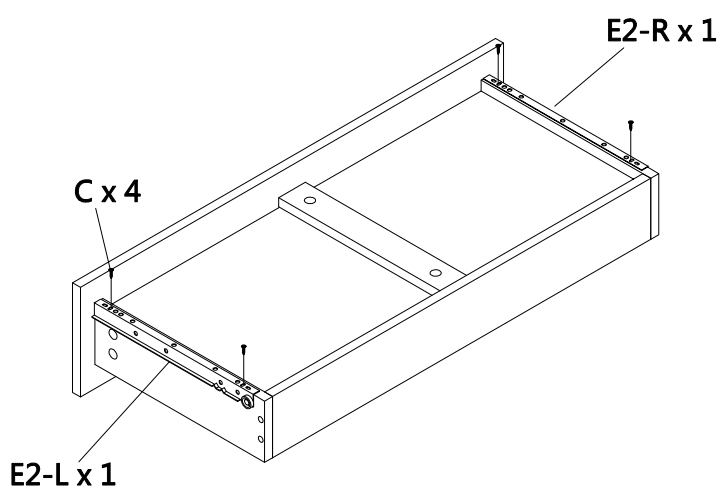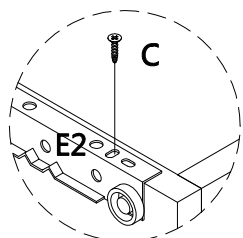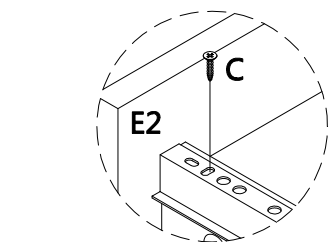

Step 7

