

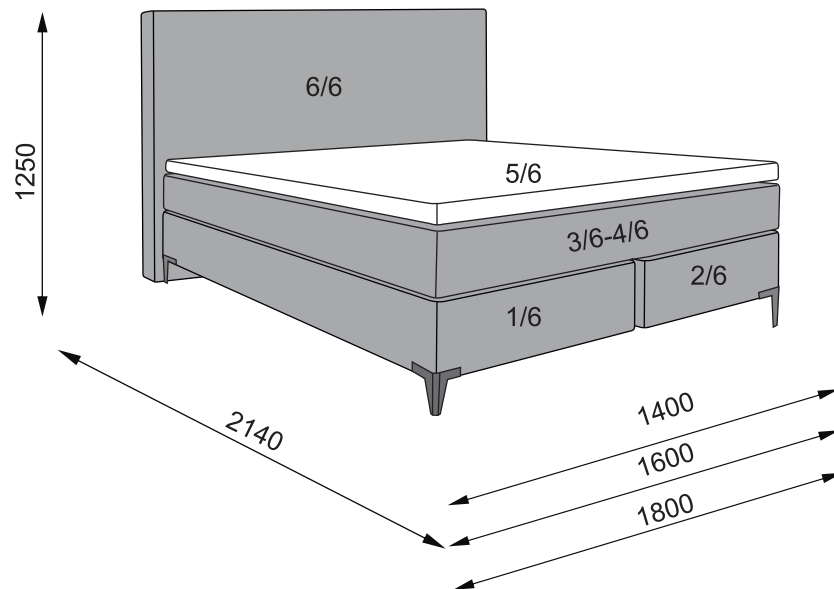
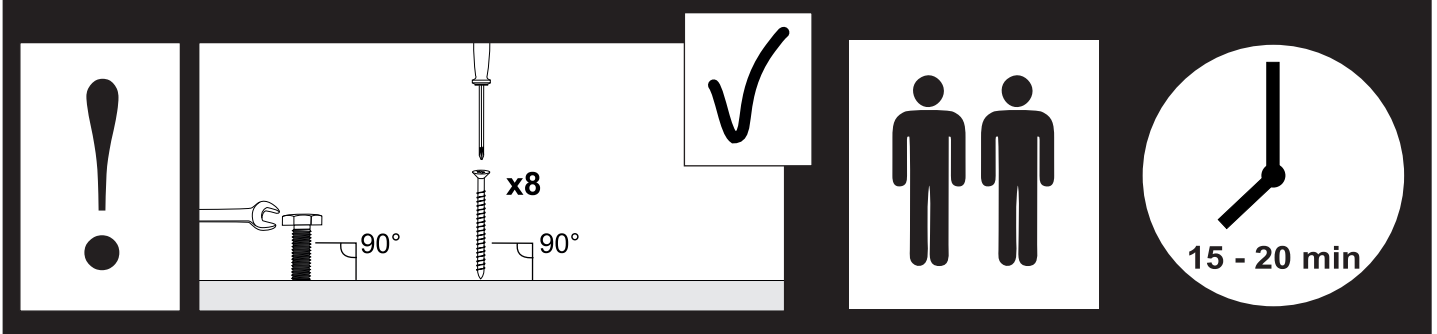







SUMMER 1000


ASSEMBLY INSTRUCTION FOR CONTINENTAL BED




1													
A FUR00761  x4		B FUR00032  18mm x6		C FUR00737  x2		D FUR00089  3,5x30mm x4		F FUR00399  M8-75 x4		G FUR00074  M8 x4		H FUR00479  M8 x4	
						L FUR00480  13 mm x1		M FUR00167  M8-30 x4		N FUR00030  M8 x4			
 1/6		 2/6											

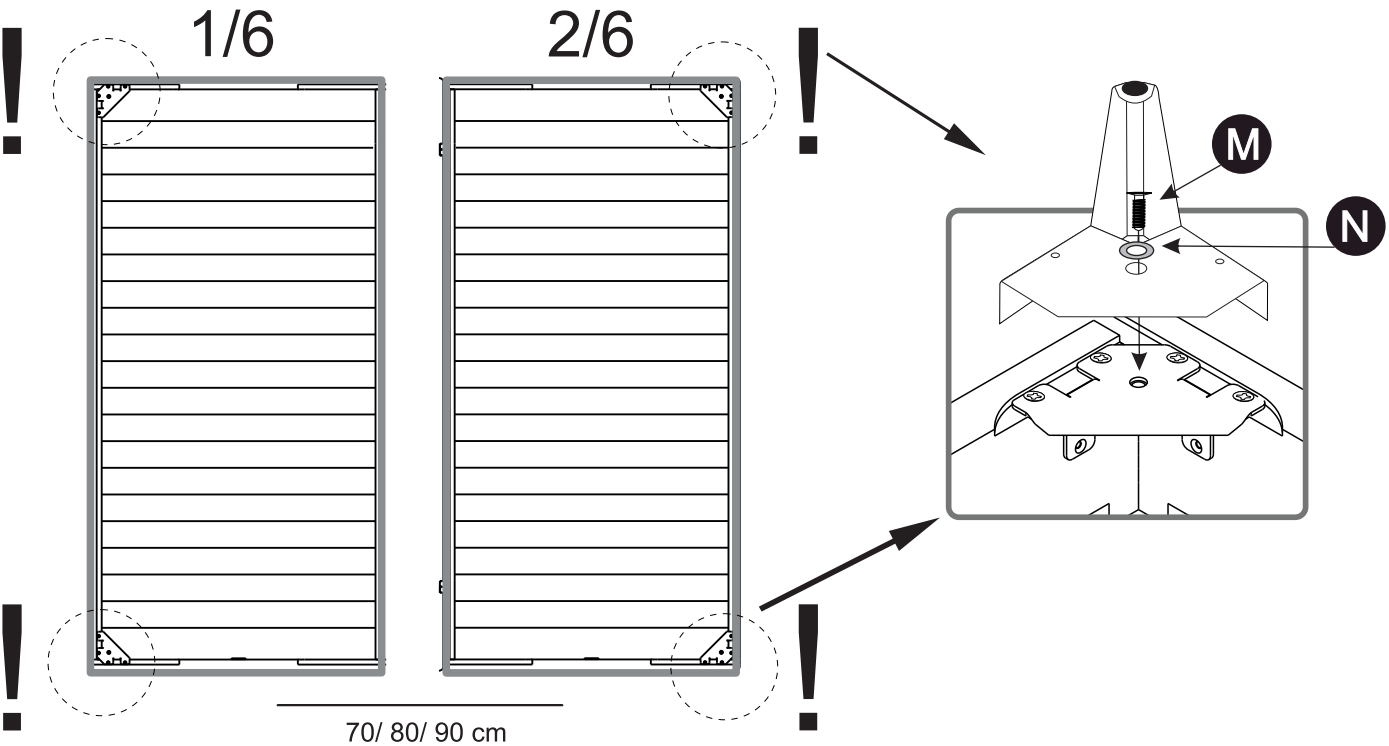






2

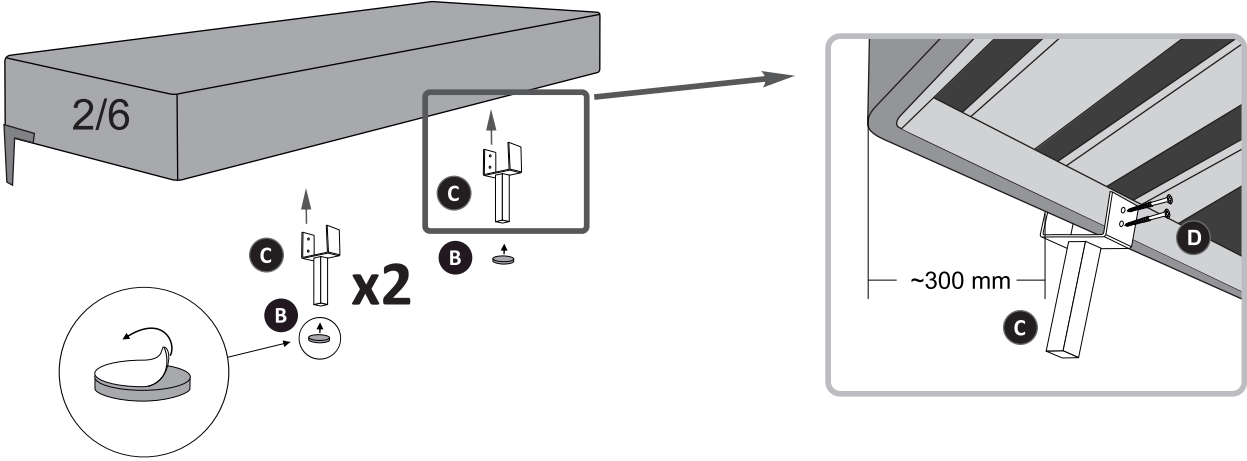





3

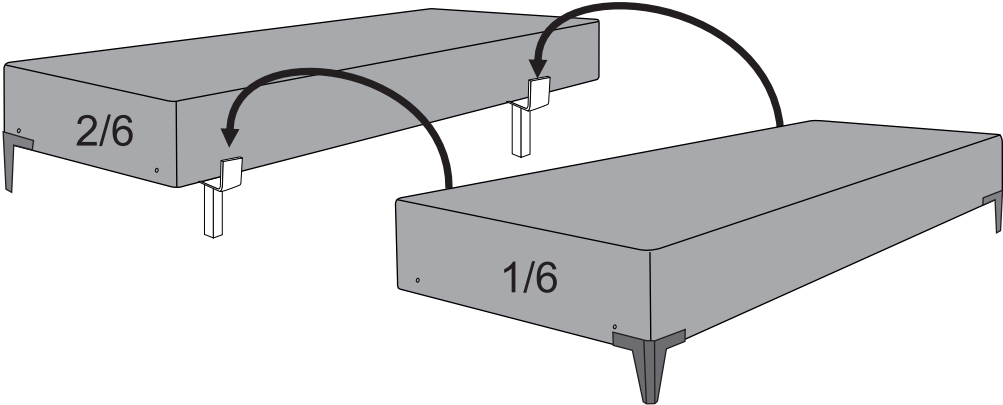




ASSEMBLY INSTRUCTION FOR MATTRESS COVER

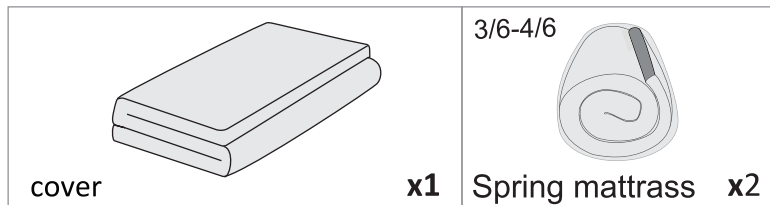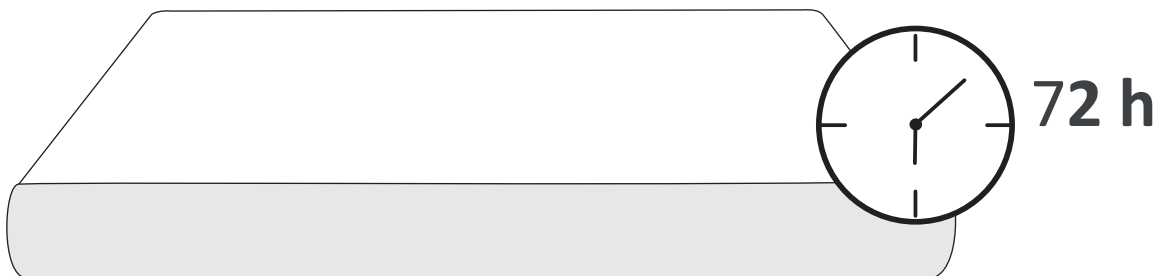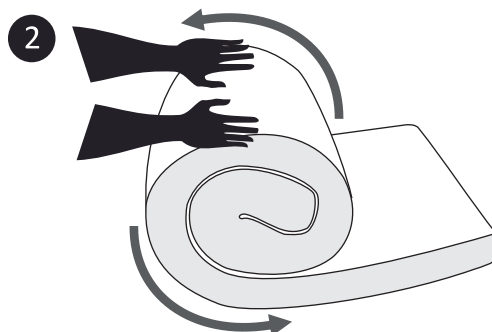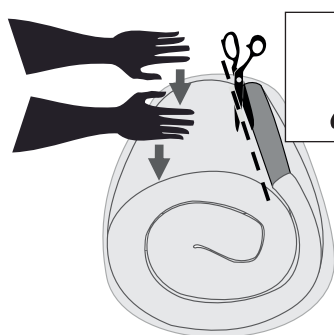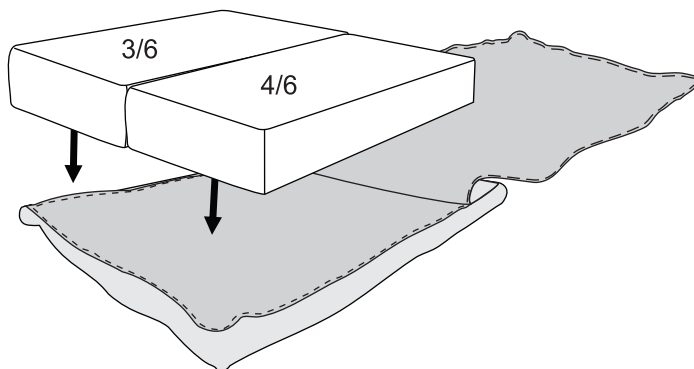**4****5**


6

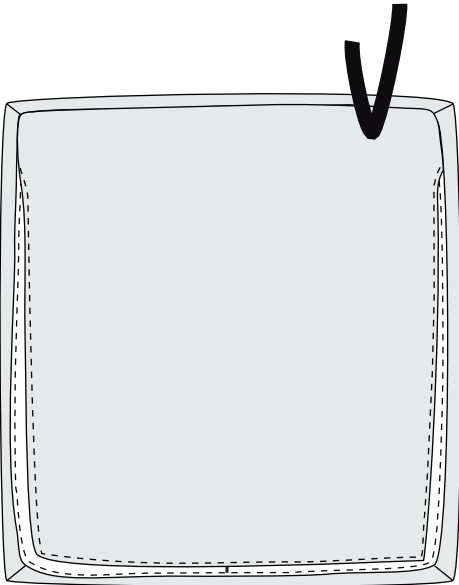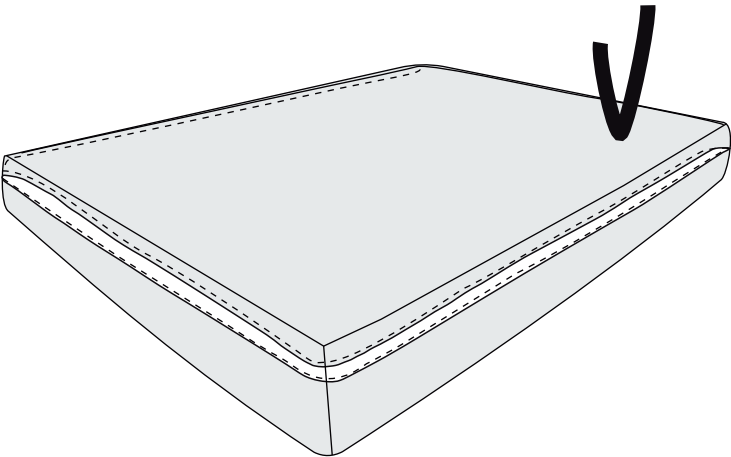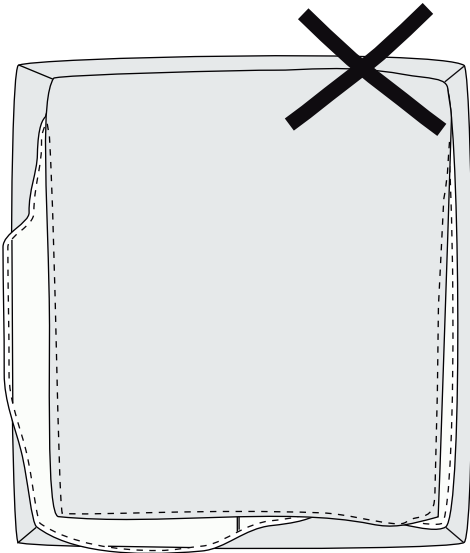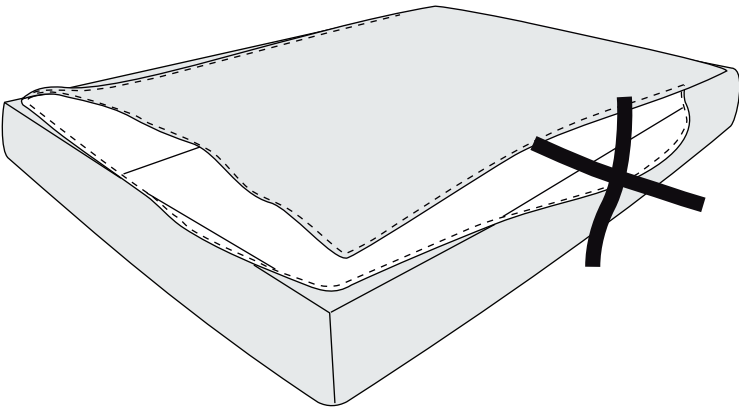



7

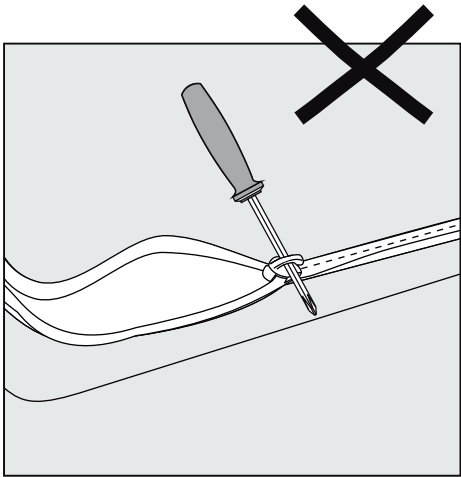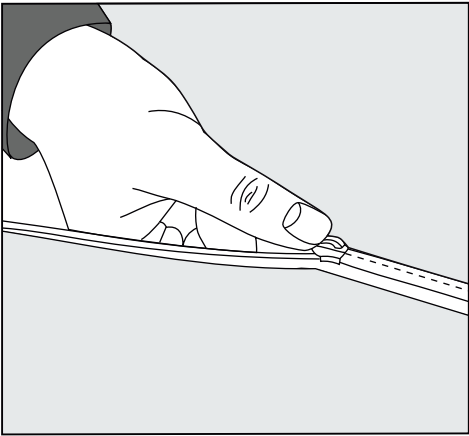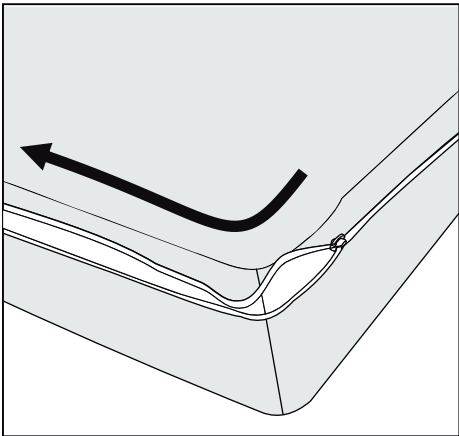


8

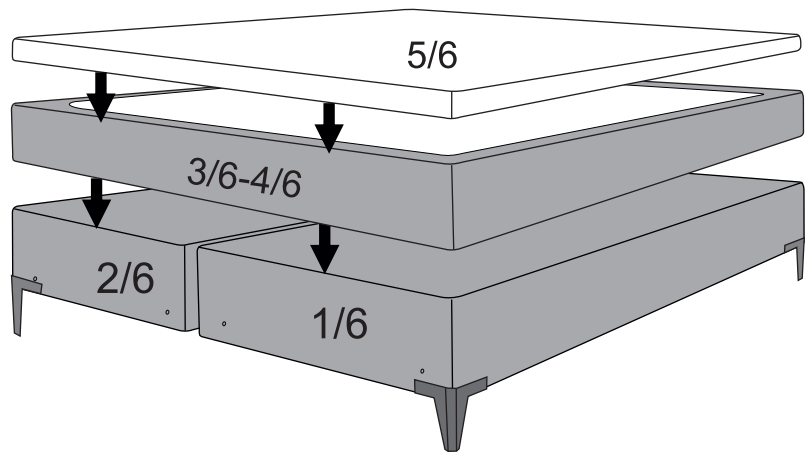

9

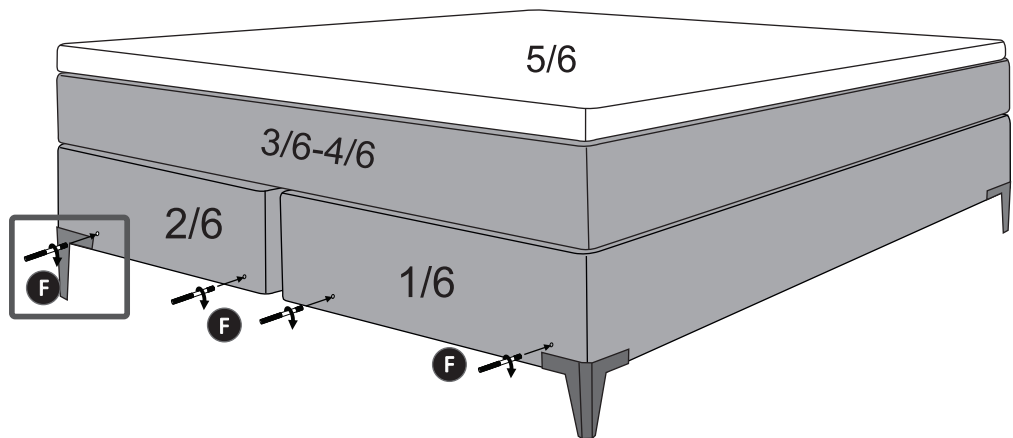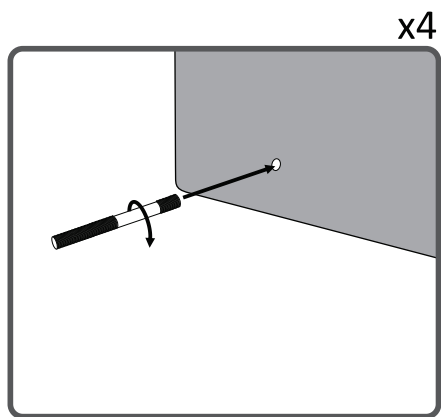

10

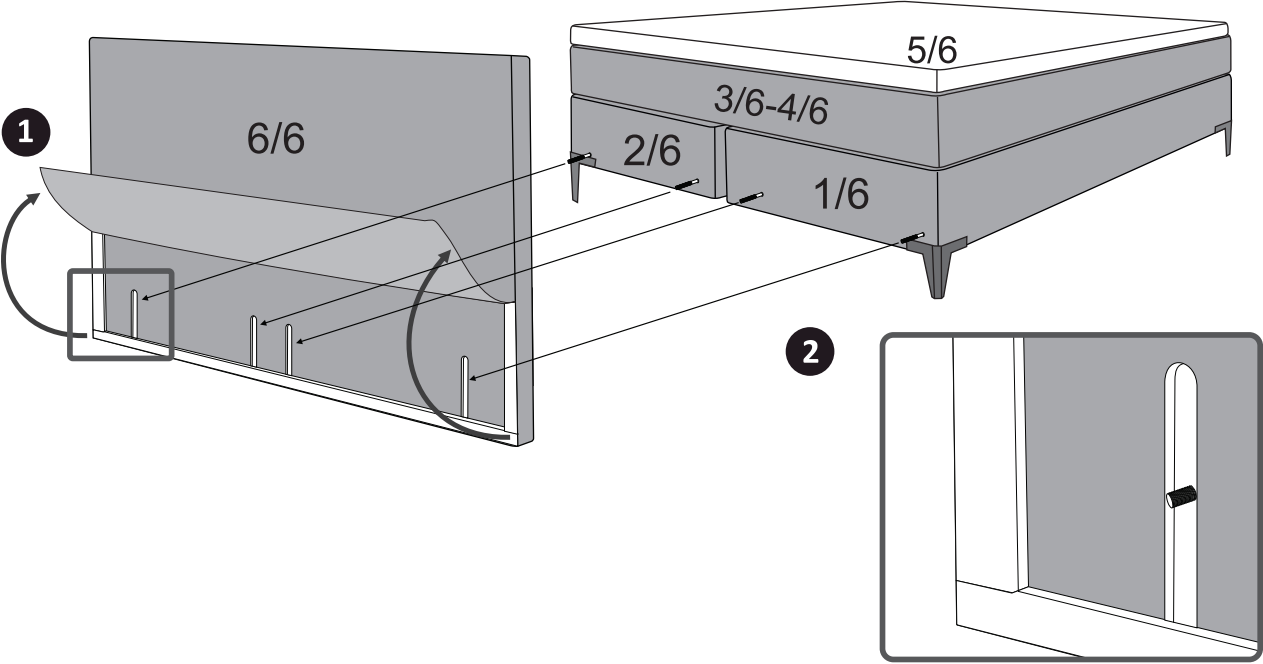

11

