
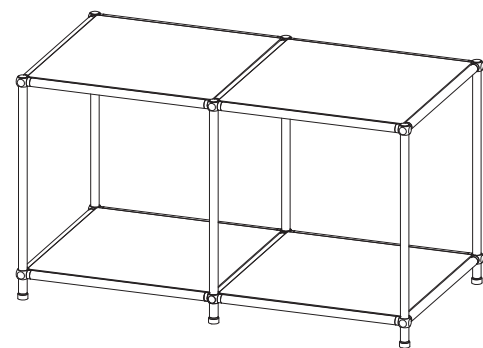




Concept Epure MK-016




PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY
①		4	⑥		4	(E)	 ø3*12	28
②		14	(A)		6	(F)	 (M3)	1
③		6	(B)		6	(G)	 (M4)	1
④		6	(C)	 M6*15	6	(H)		1
⑤		8	(D)		6	(I)		1

STEP:


1

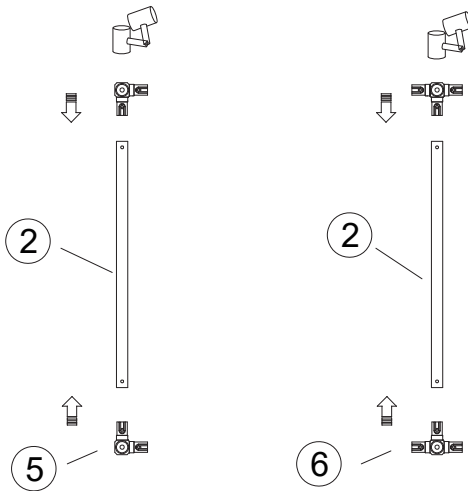


2

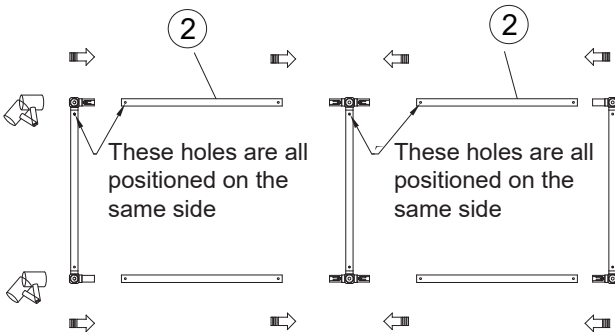

3

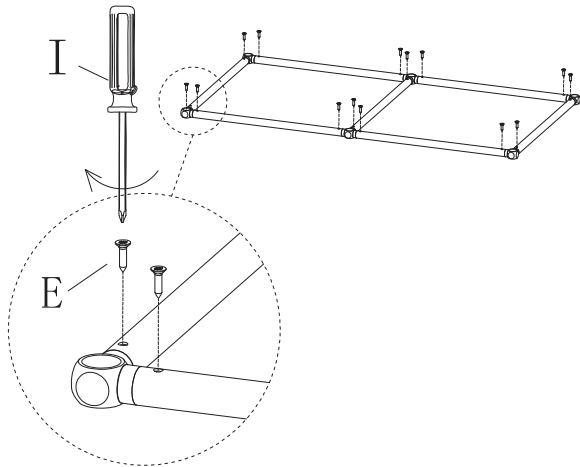


4

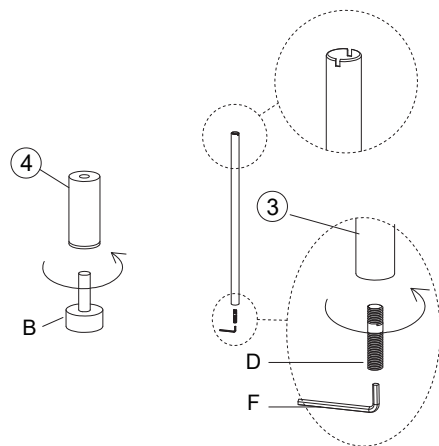


	(B)	6
	(D)	6
	(F)	1

5

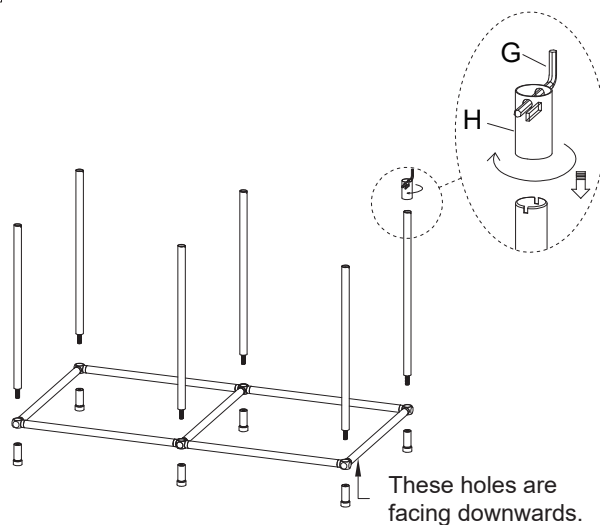


	(H)	1
	(G)	1

6

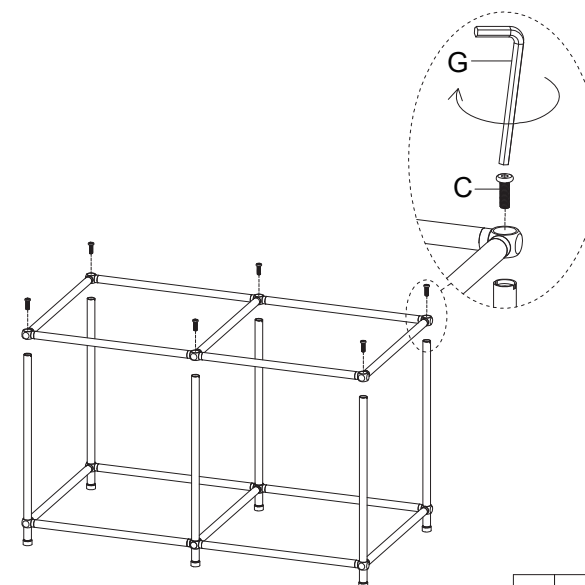

	(C)	6
	(G)	1


7

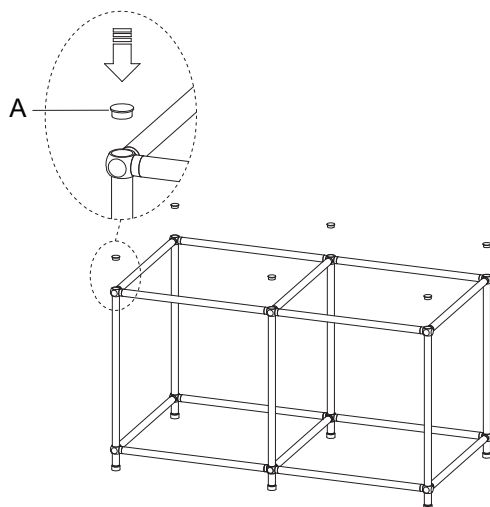

	(A)	6
--	-----	---


8

install panels ①x4 by pressing them firmly into the frame. Tip: press one corner of the panel into place first, then continue along the remaining corners.

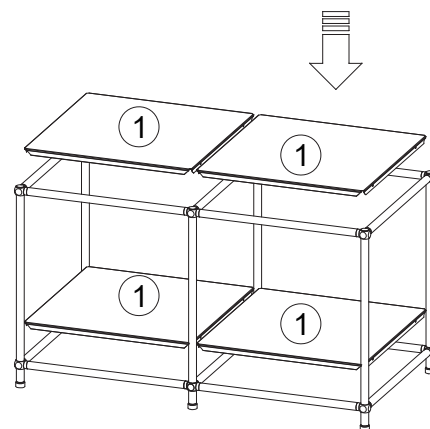


9

Adjust the feet (B) as need.

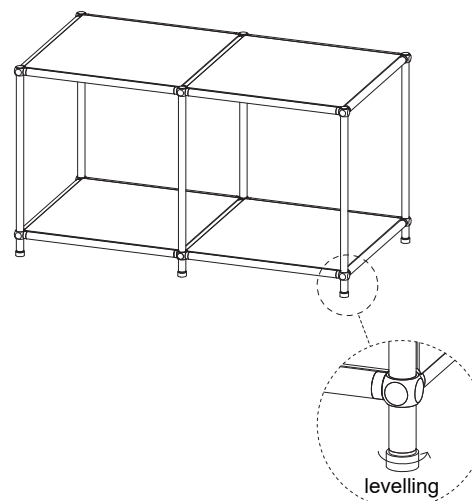

10

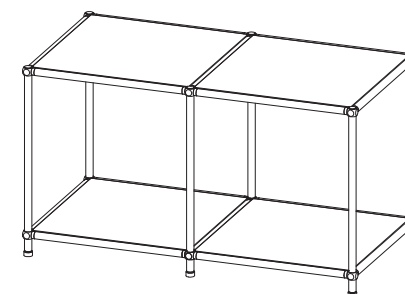

Unsere Marken:

Floordirekt KARAT Günstig etm Meister für Möbel office marshal SKY

Velvet Trading GmbH / Ost-West Handelsgesellschaft GmbH
www.floordirekt.com