




# FLORENCE 1800

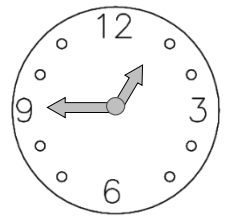


45 min



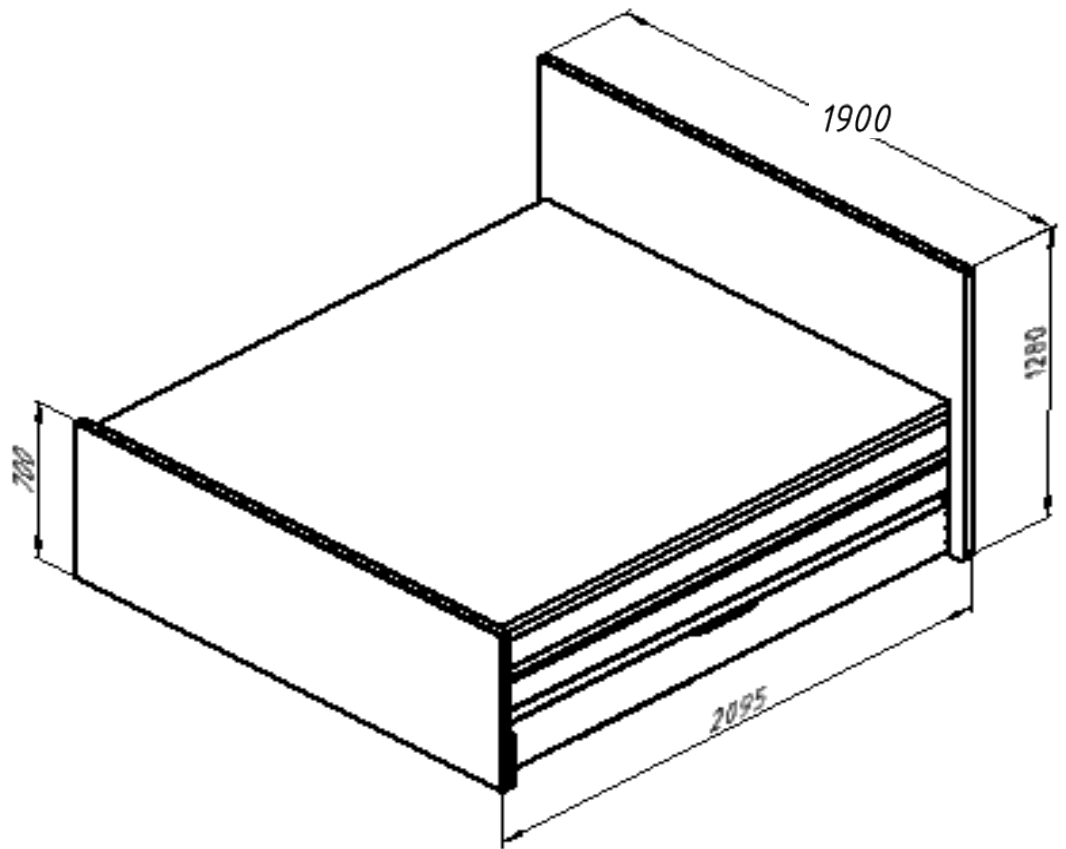



DE	Montageanleitung	HR	Upute za montažu
SE	Installation manual	HU	Telepítési útmutató
CZ	Montážní návod	SK	Inštalačná príručka
EN	Installation manual	SL	Navodila za montažo

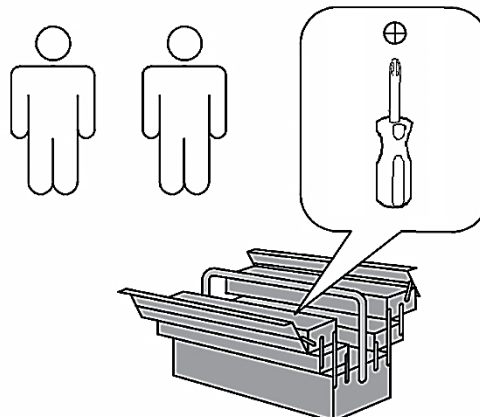



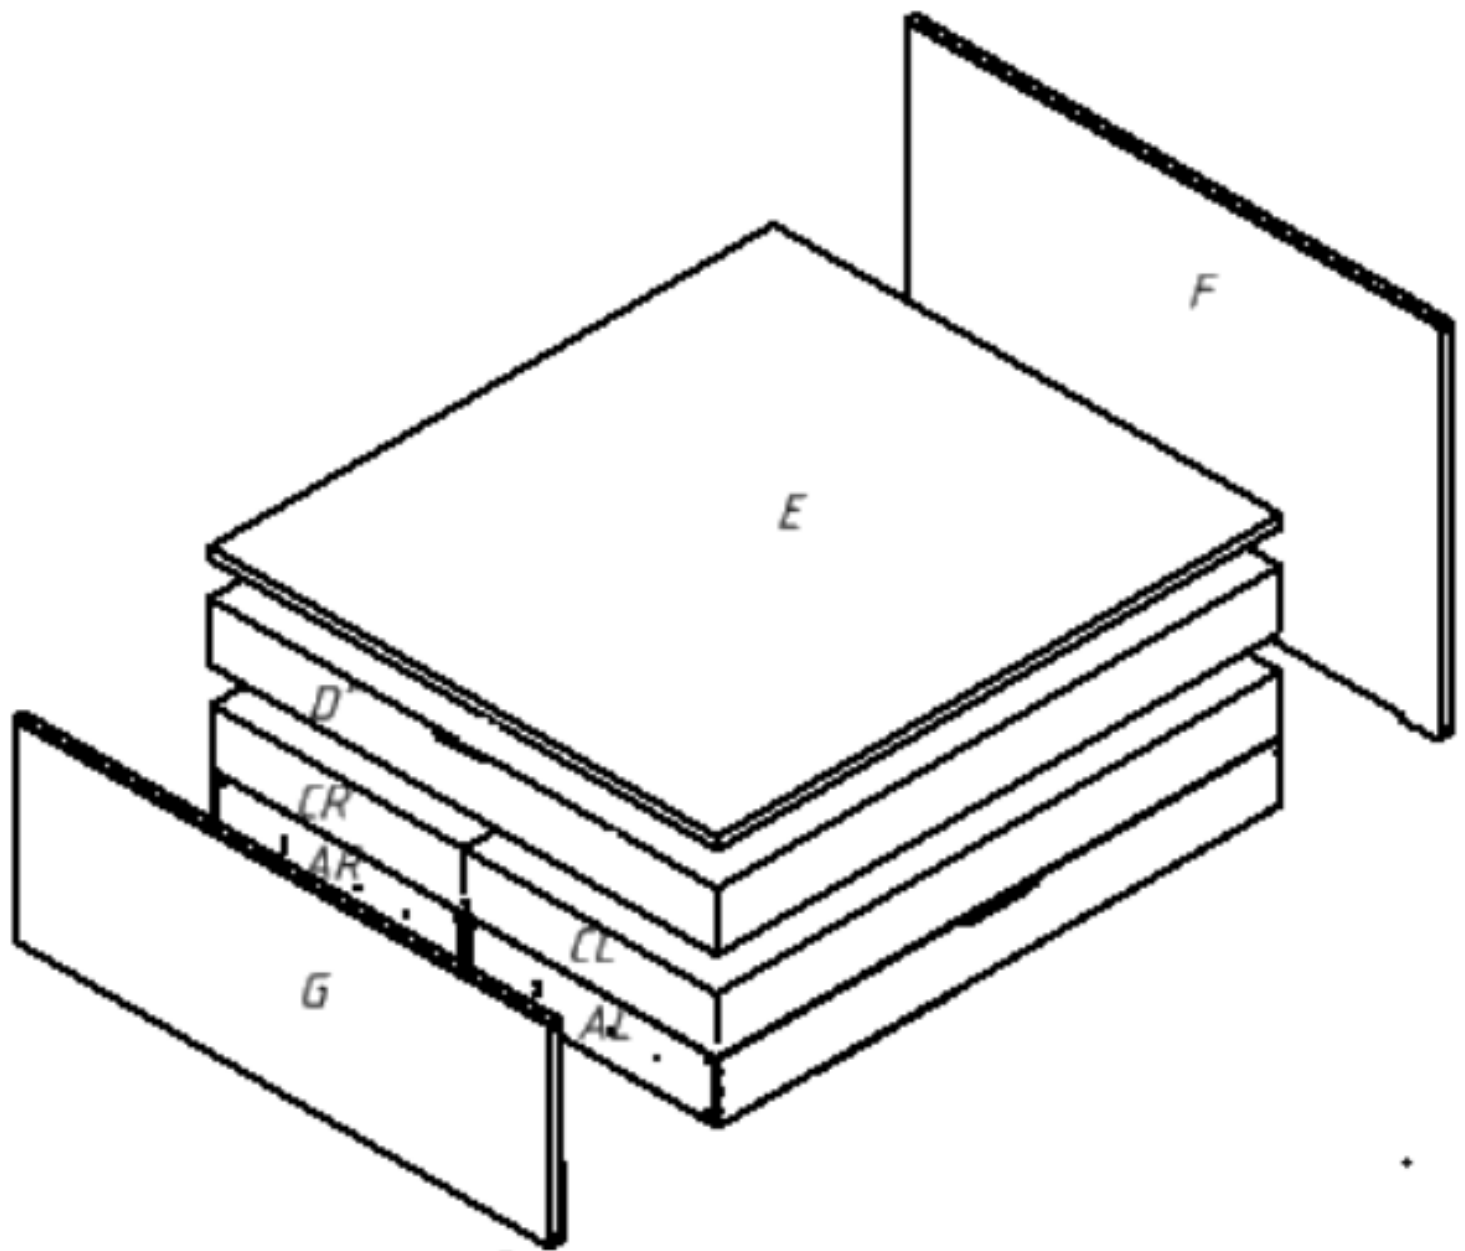


<i>Nº</i>		<i>Size (mm)</i>	<i>Quantity</i>	<i>Nº Pack</i>
1	AL	1995x895x210	1	1/4
2	AR	1995x895x210	1	2/4
3	CL	2000x900x200	1	1/4
4	CR	2000x900x200	1	2/4
5	D	2000x1800x190	1	3/4
6	G	1840x710x75	1	4/4
7	F	1900x1280x75	1	4/4
8	E	2000x1800x40	1	3/4

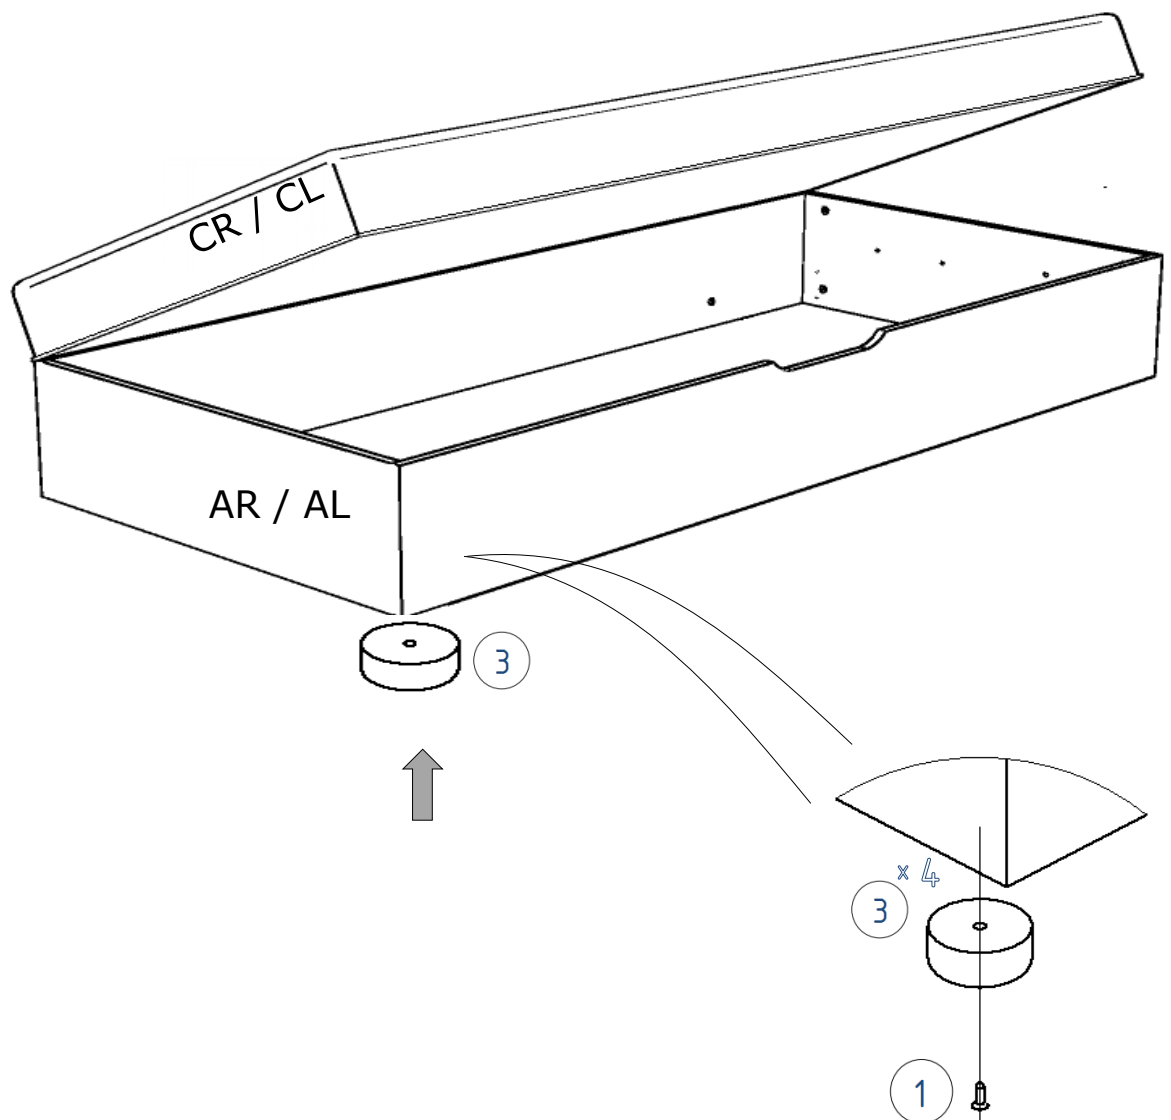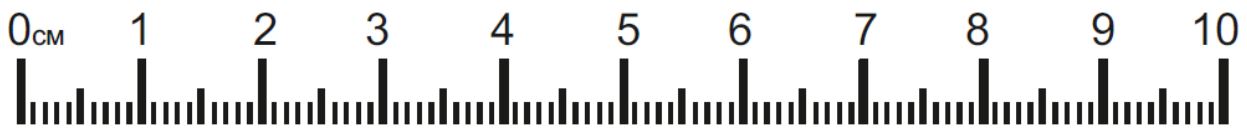
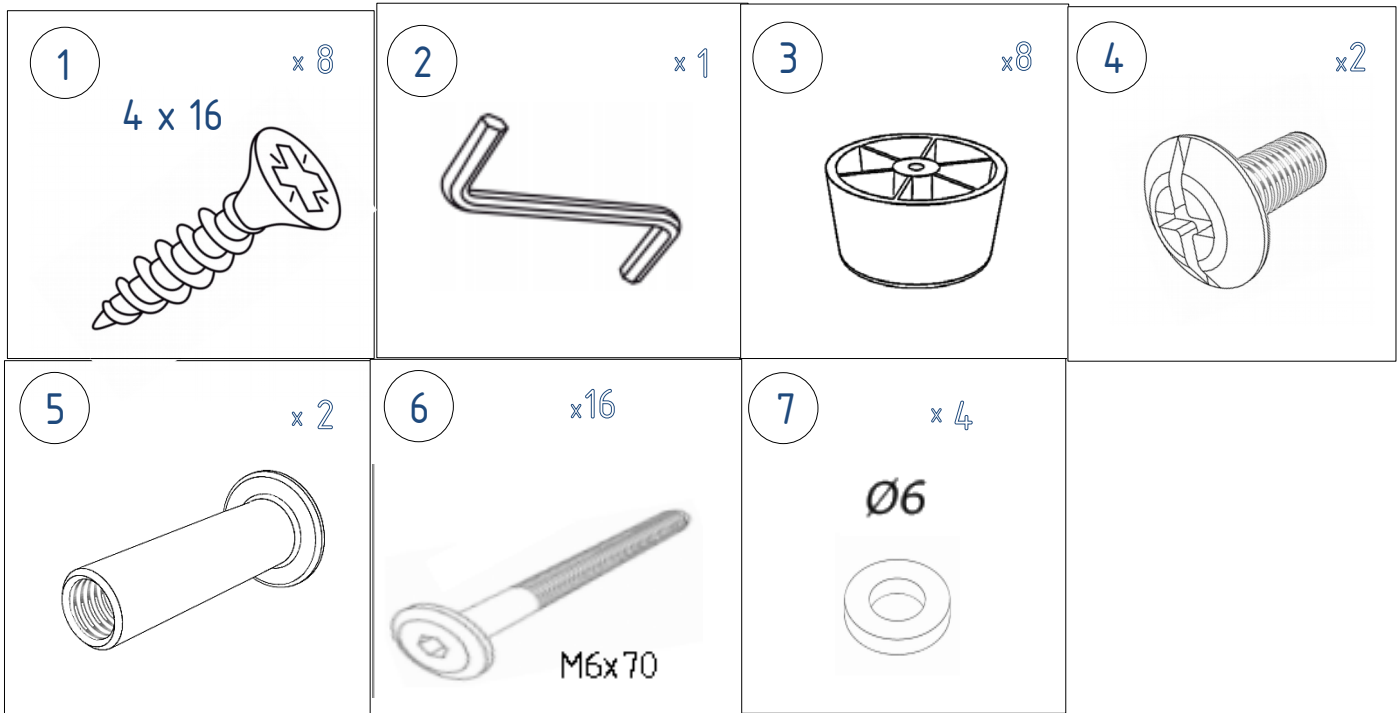


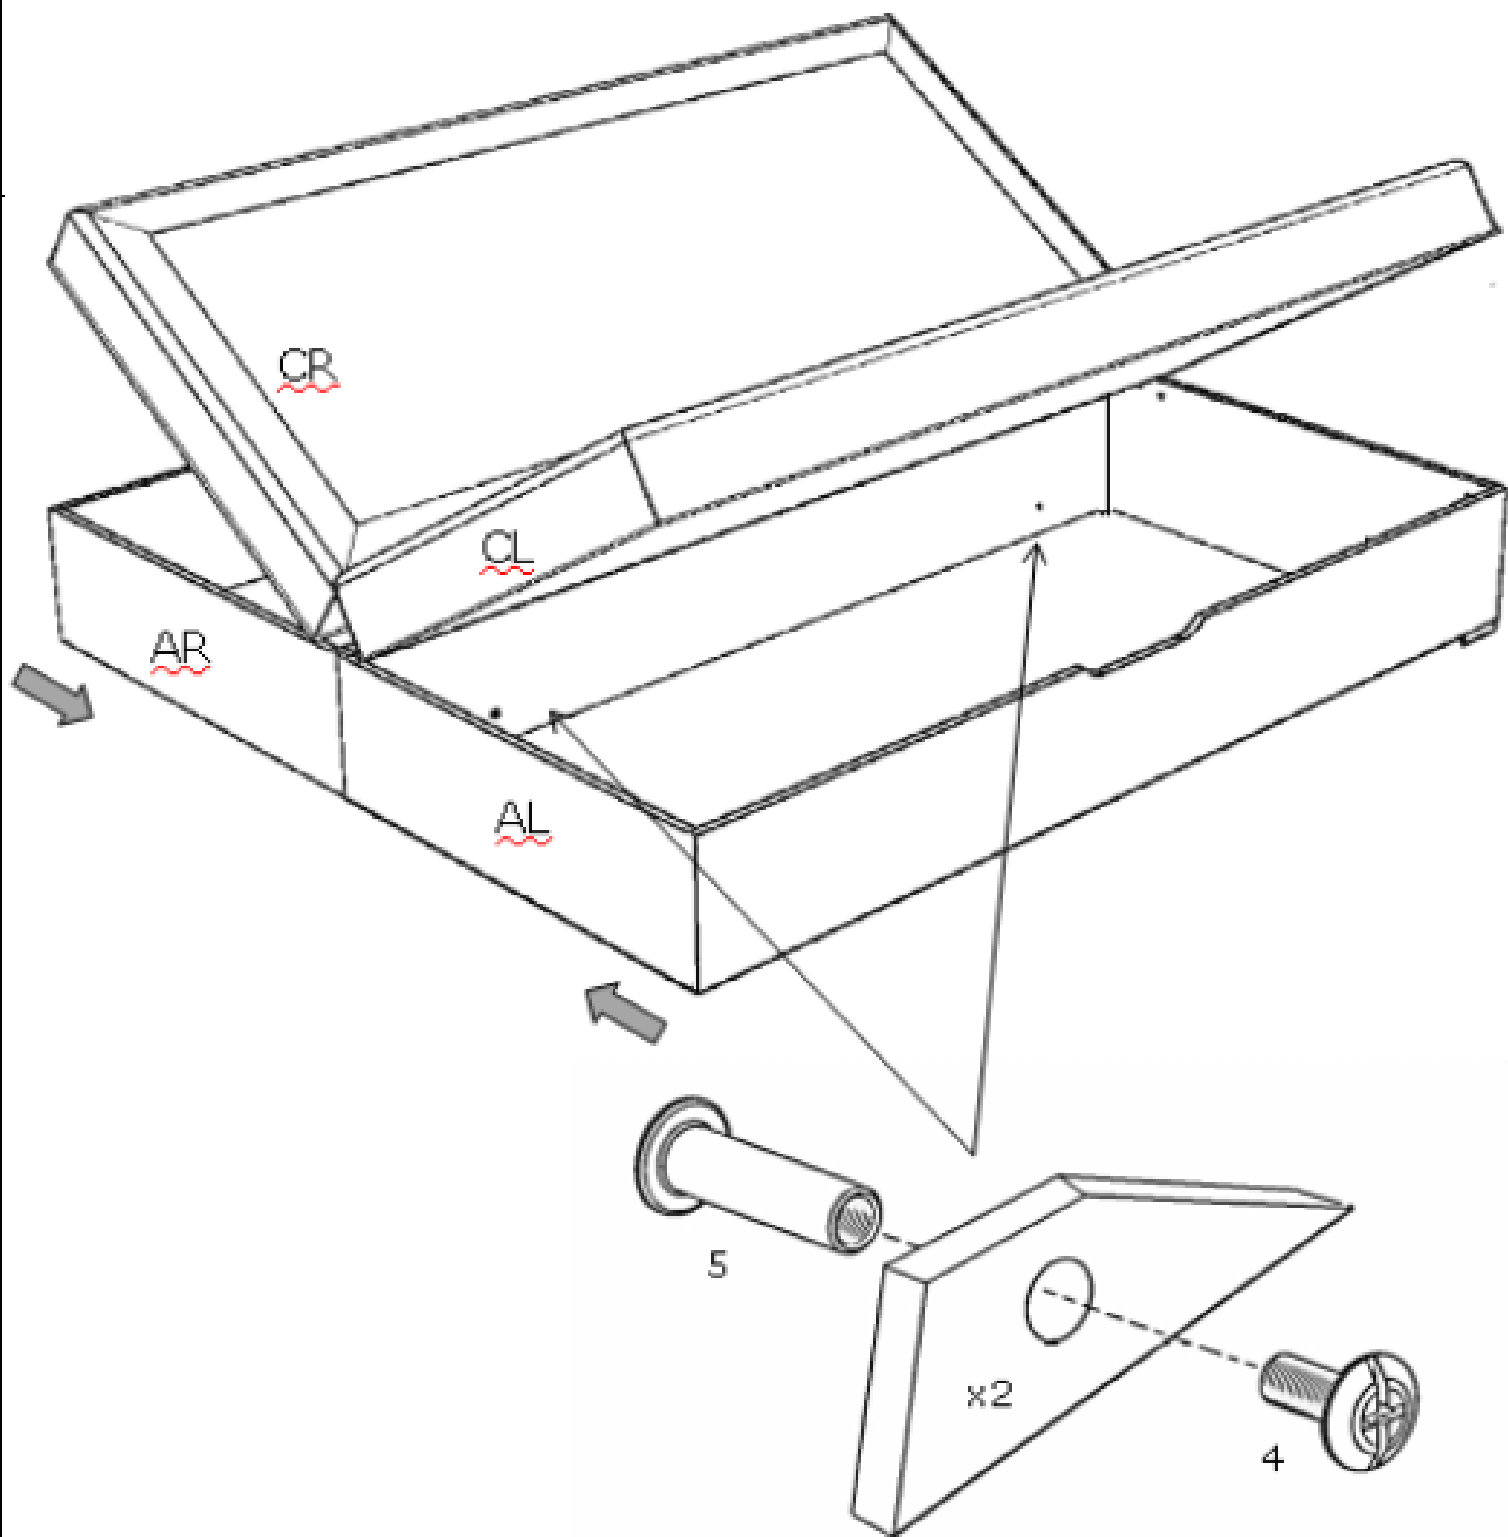

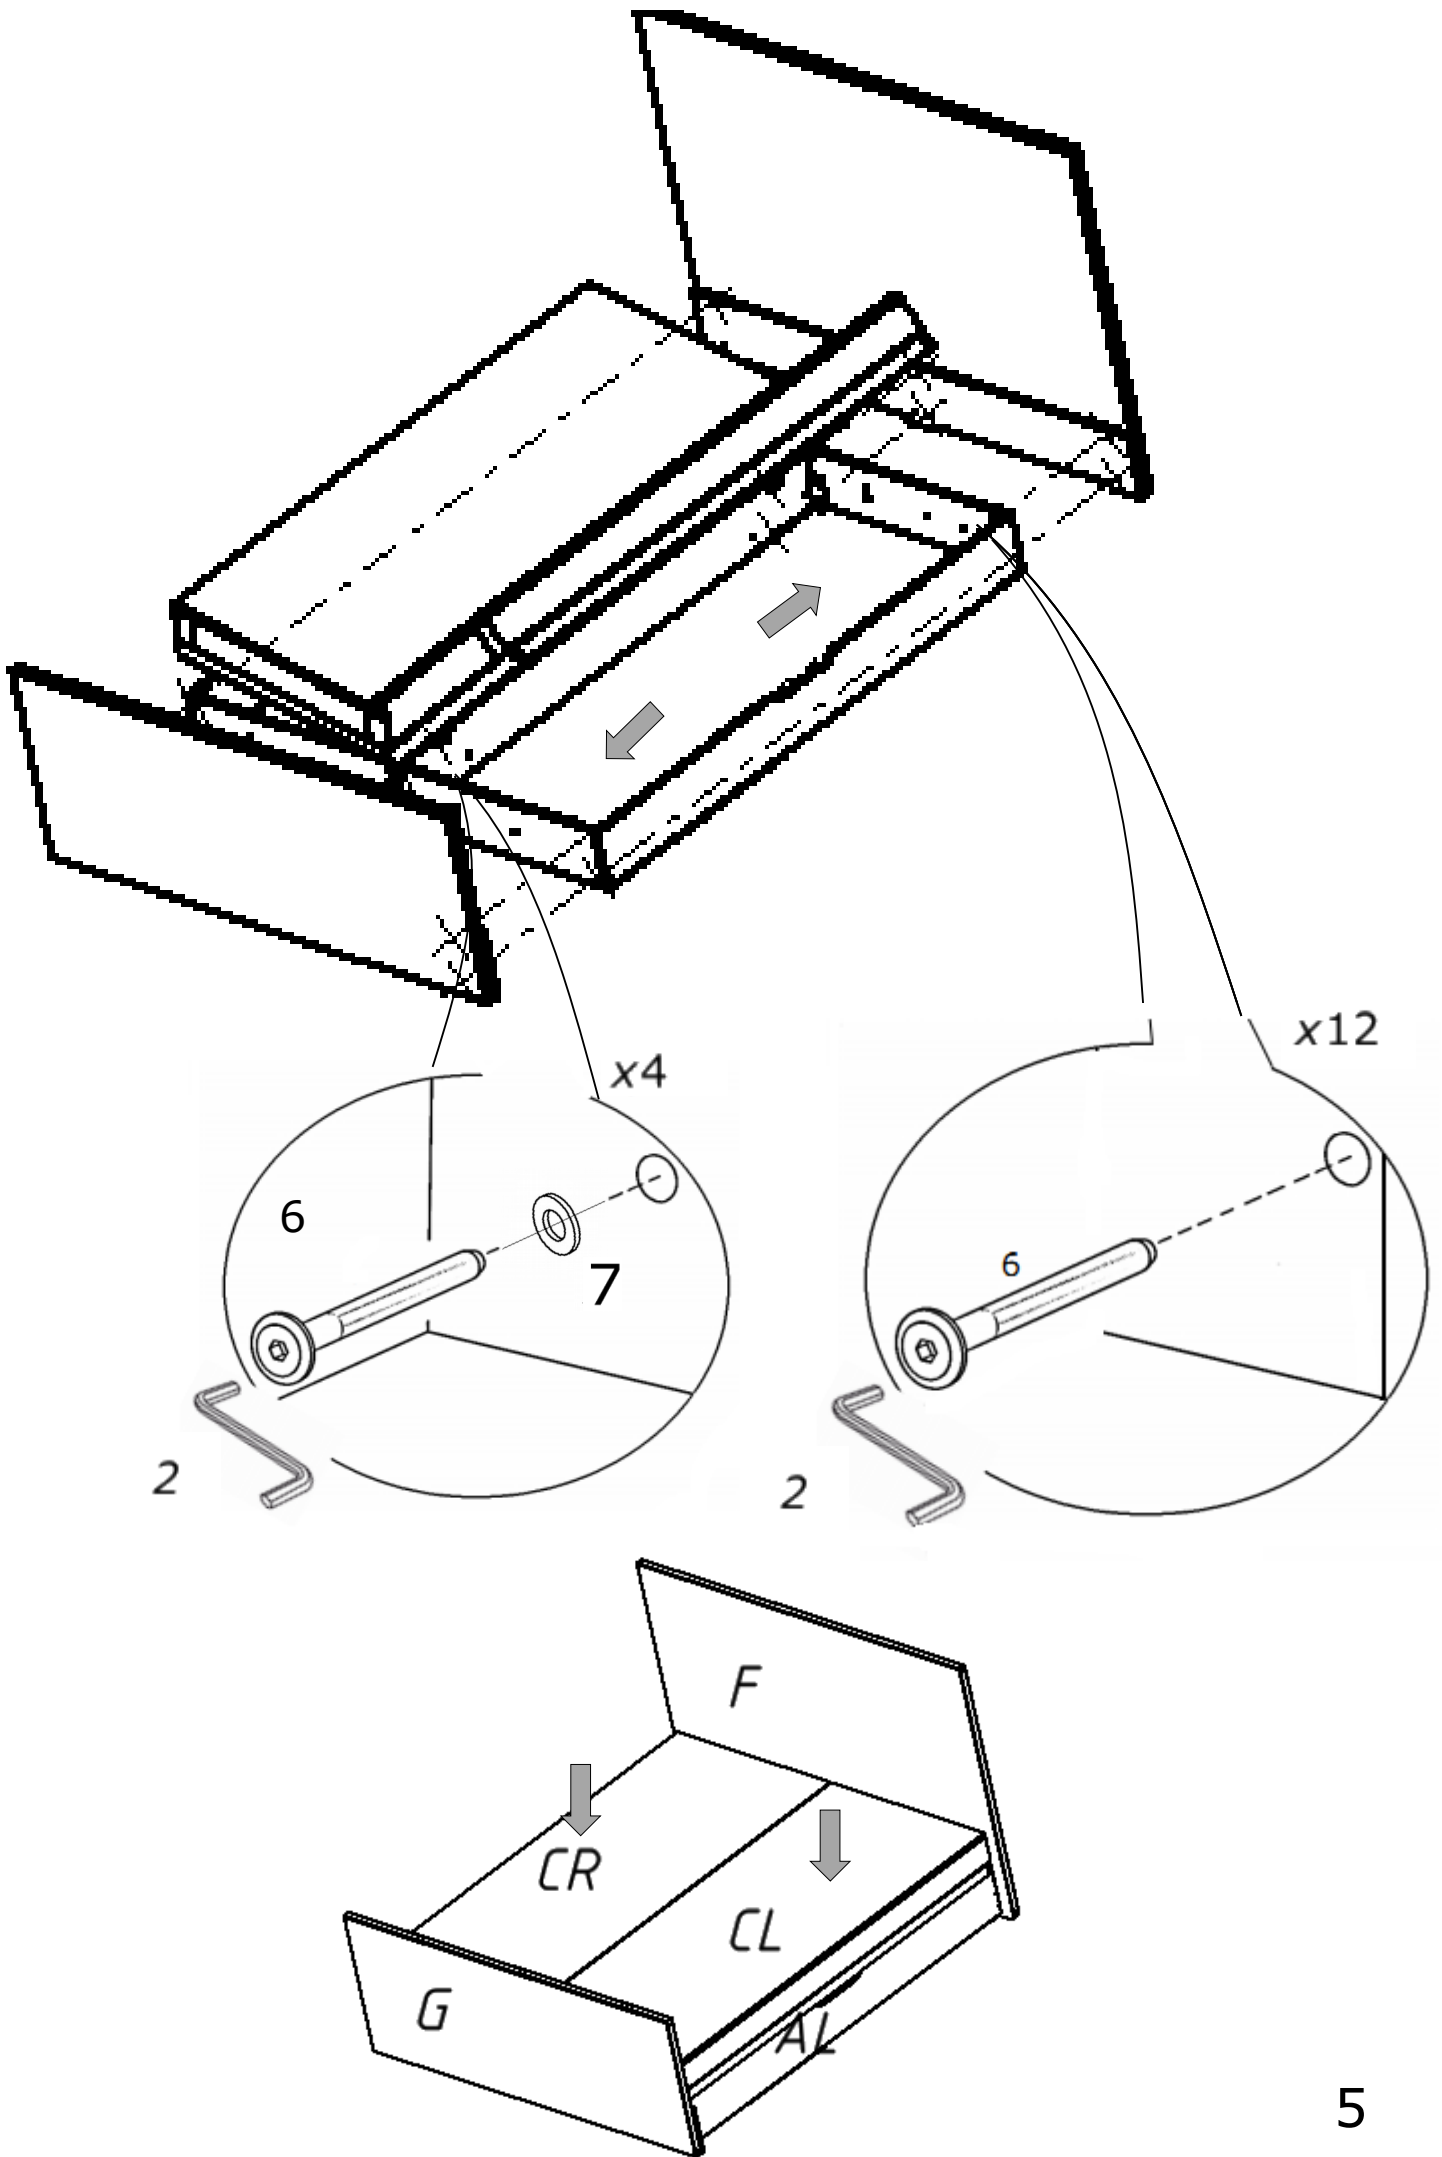


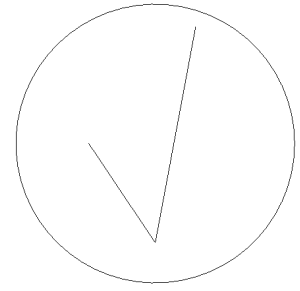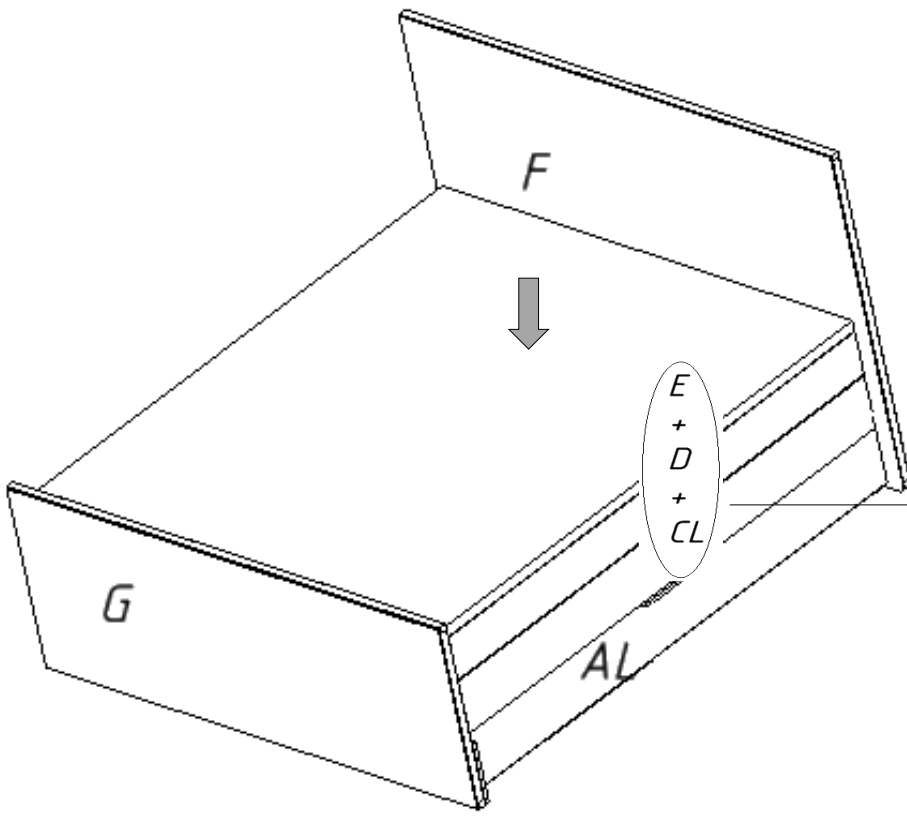

$E + D + CL + AL$

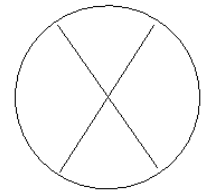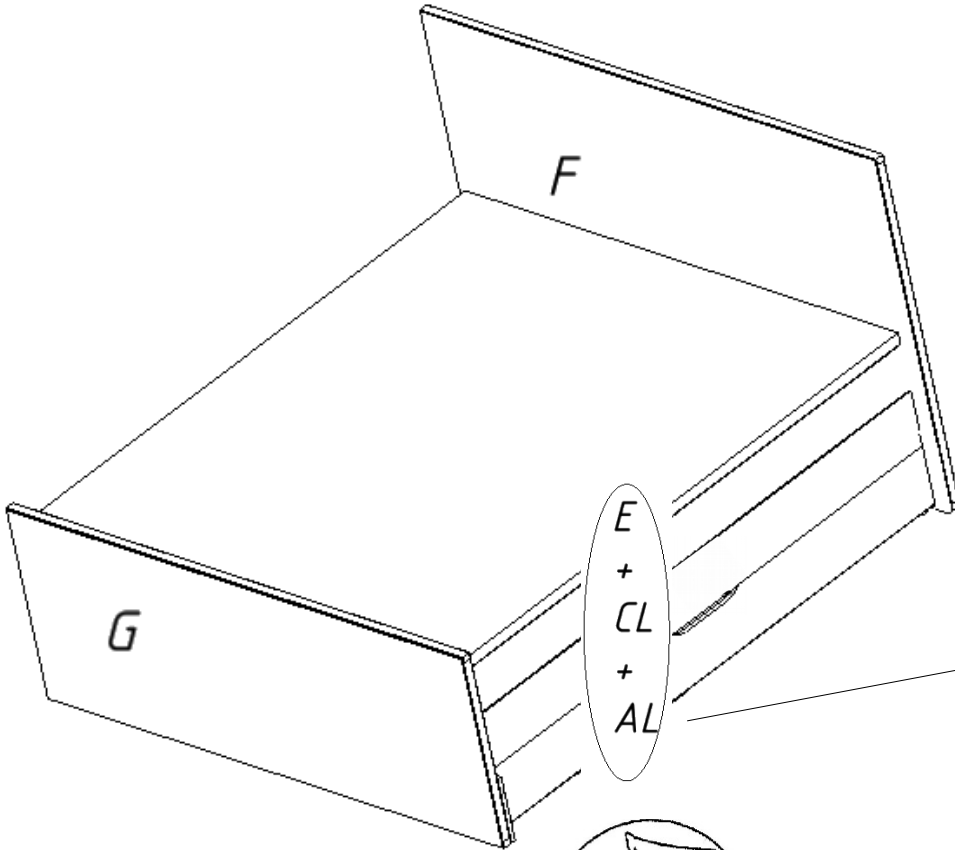

$E + CL + AL$

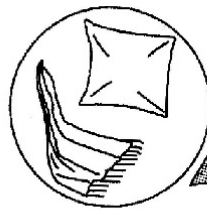

max 10 kg

