
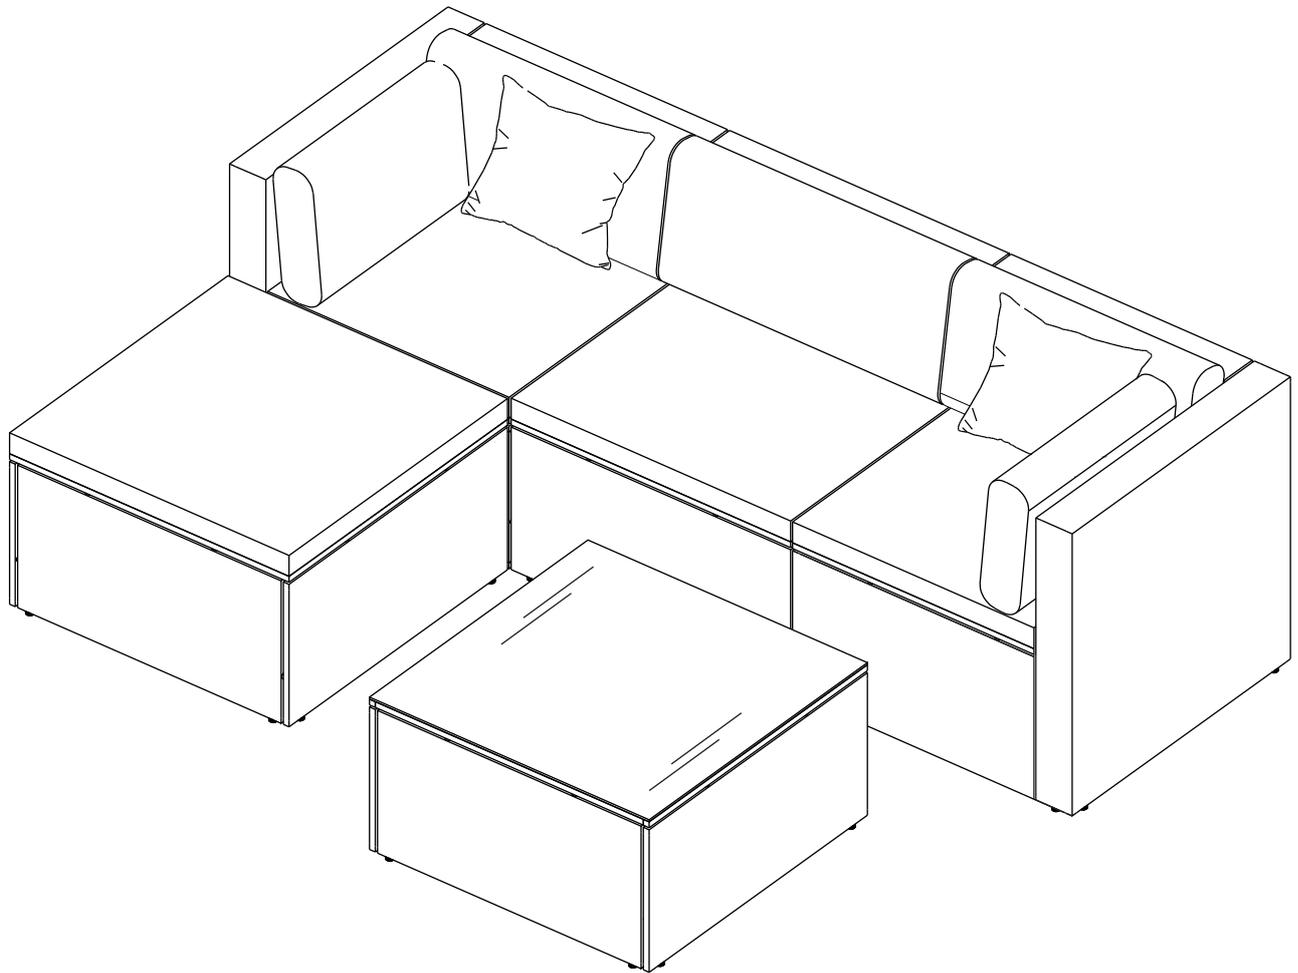
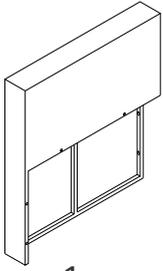
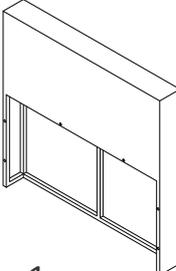
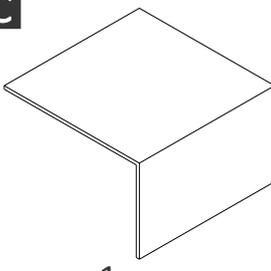
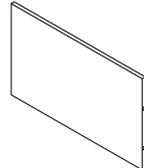
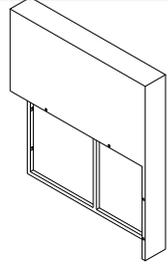
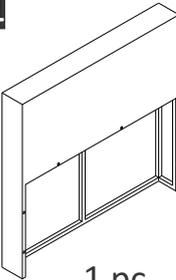
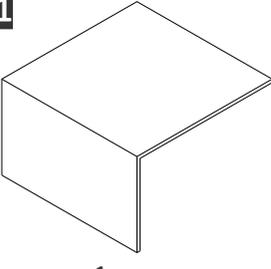
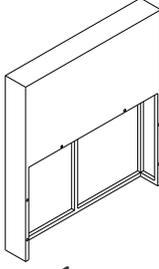
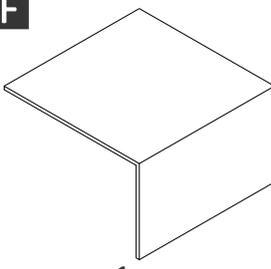
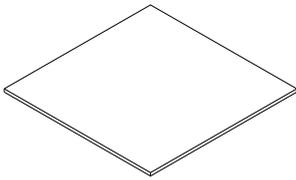
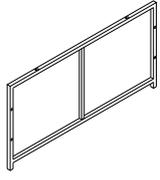
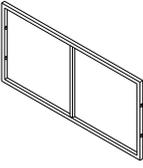
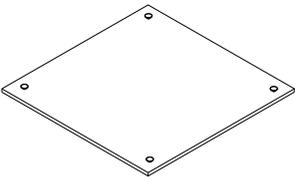
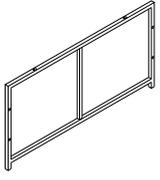
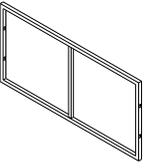
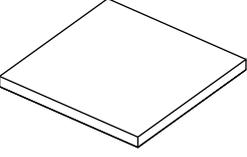
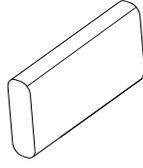

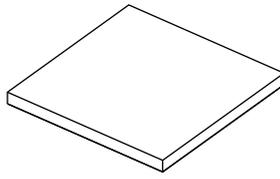


ASSEMBLY INSTRUCTION

23060027-09

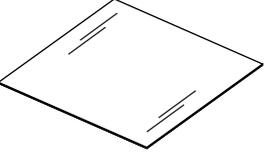


PART LIST

A  1 pc	B  1 pc	C  1 pc	D  4 pcs	A1  1 pc
B1  1 pc	C1  1 pc	E  1 pc	F  1 pc	
G2  1 pc	H  2 pcs	I2  2 pcs	J  1 pc	K  2 pcs
L  2 pcs	M  3 pcs	N  3 pcs	O  2 pcs	P  1 pc
Q  1 pc	R  2 pcs			


HARDWARE

1  M6x35mm (70 pcs)	2  M6 (70 pcs)	3  2 pcs	4  6 pcs	
---	--	--	--	--


STEP 1 - RIGHT CORNER SOFA ASSEMBLE

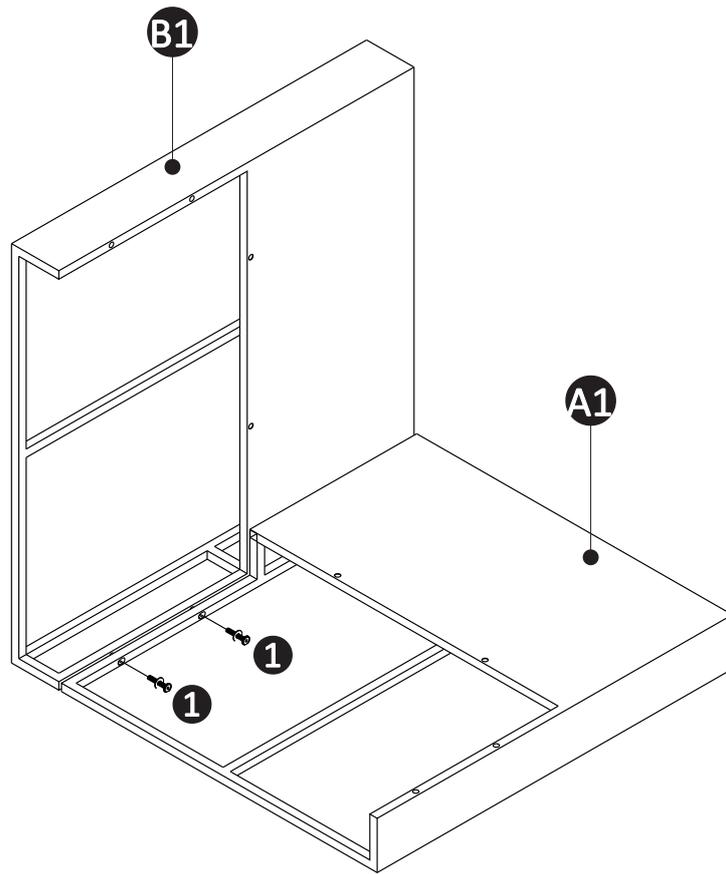


STEP 2

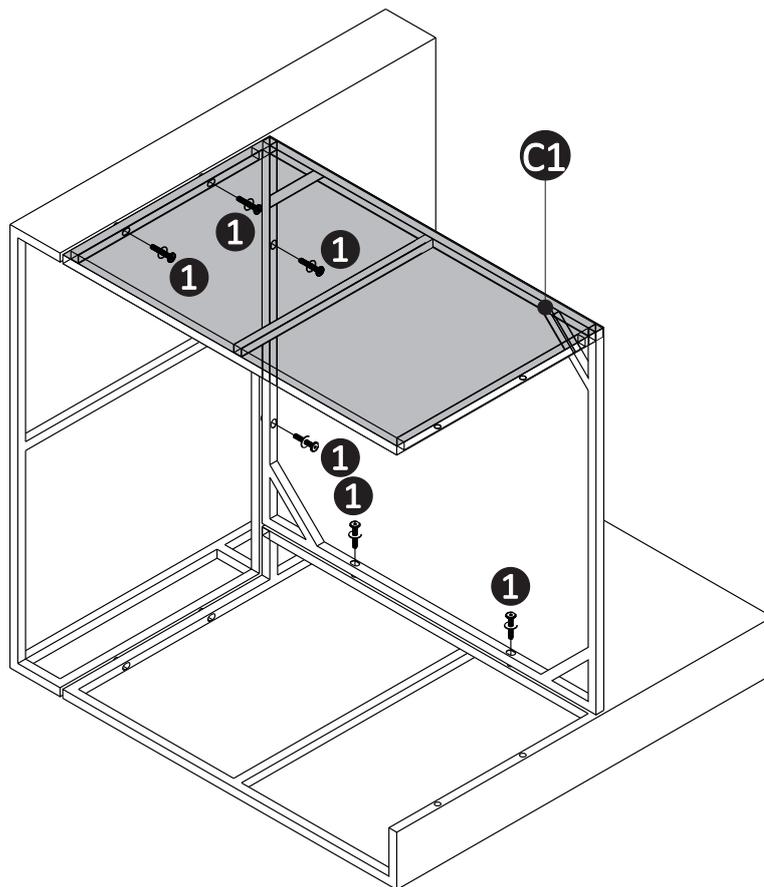



STEP 3

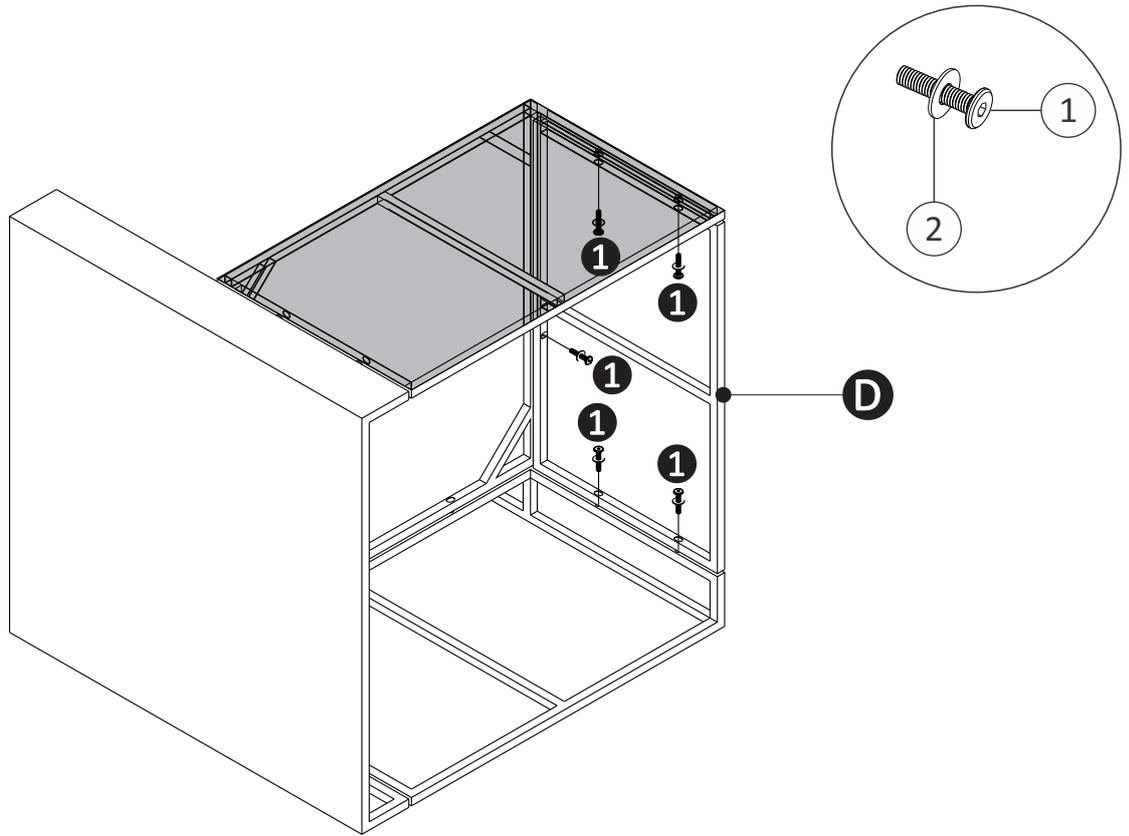



STEP 4

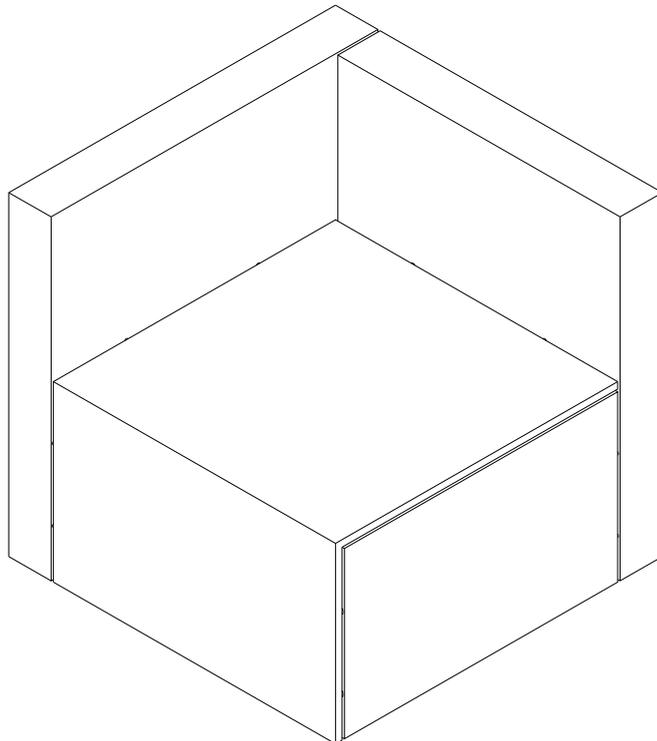



STEP 5 - LEFT CORNER SOFA ASSEMBLE

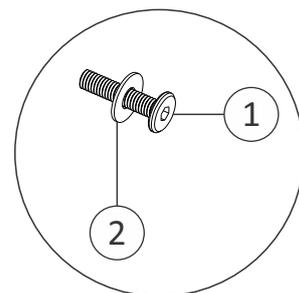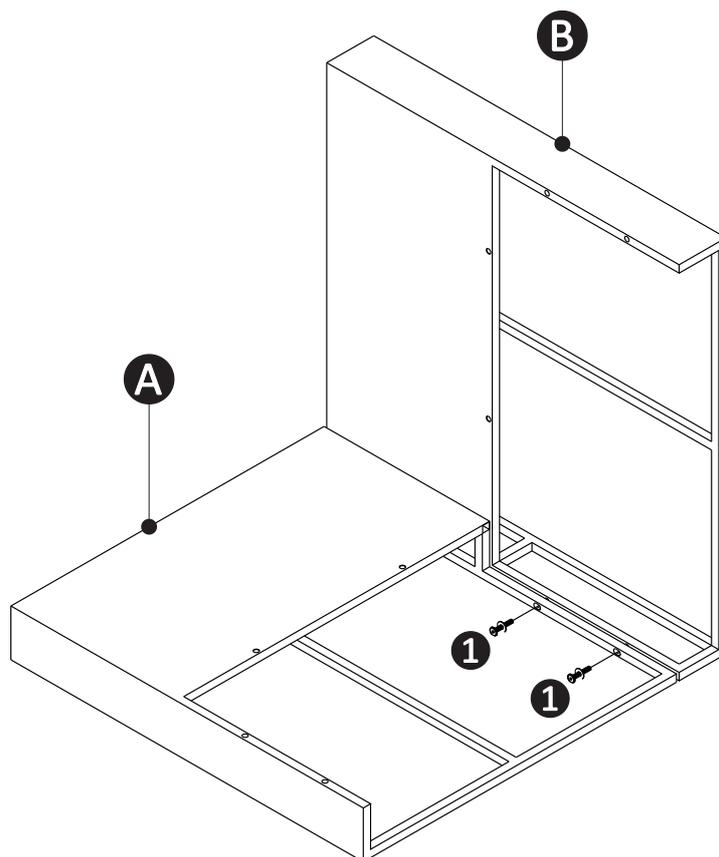


STEP 6

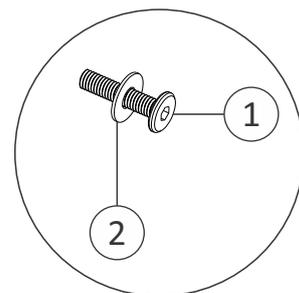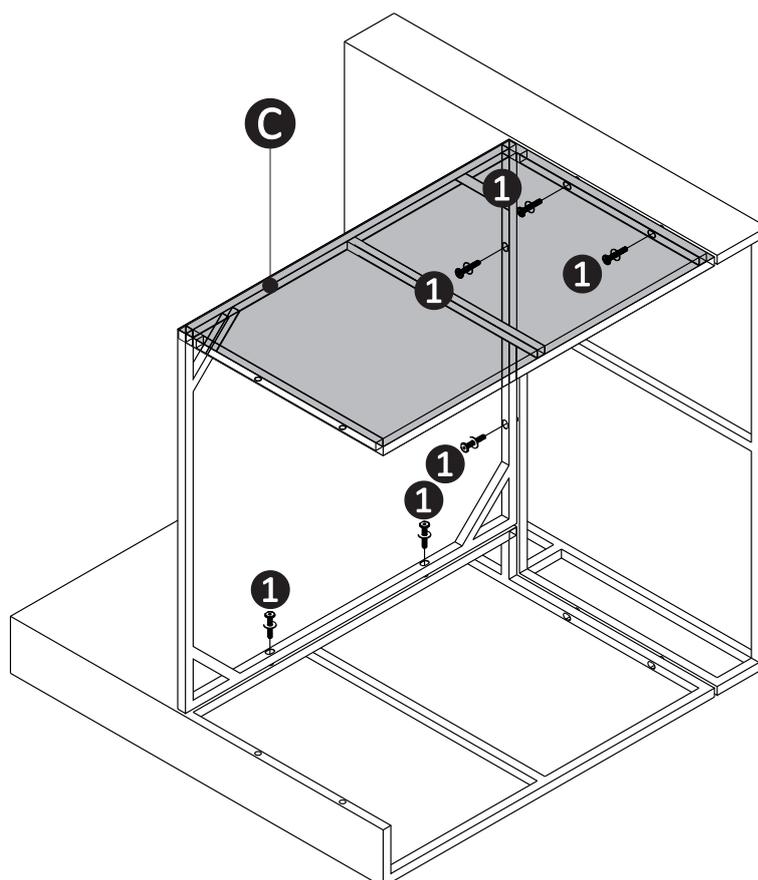



STEP 7

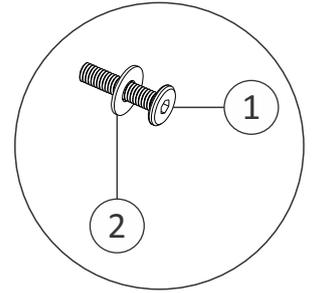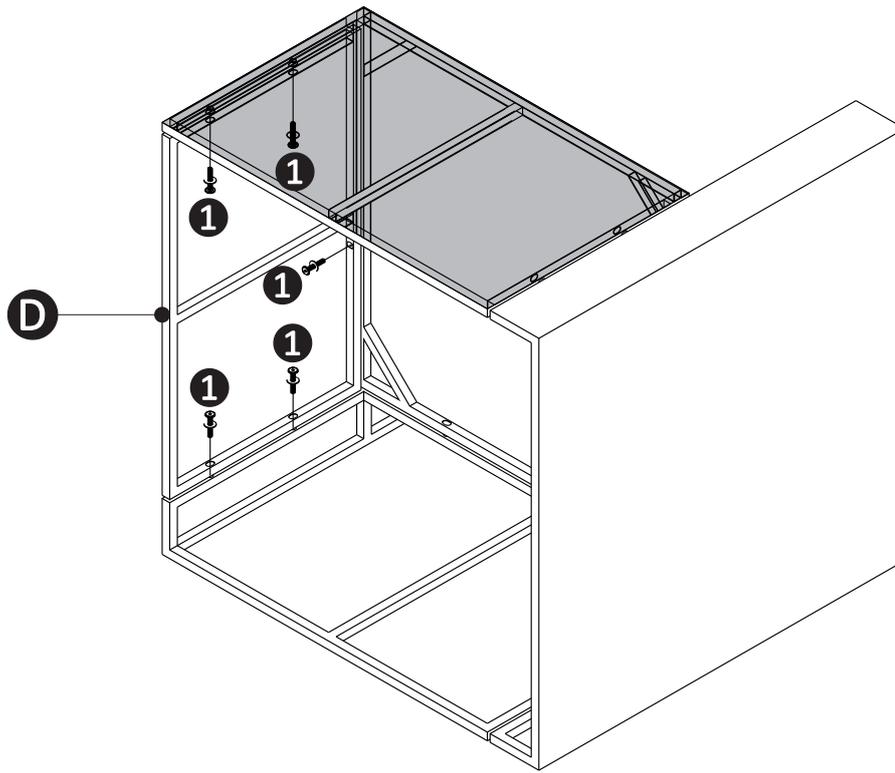



STEP 8

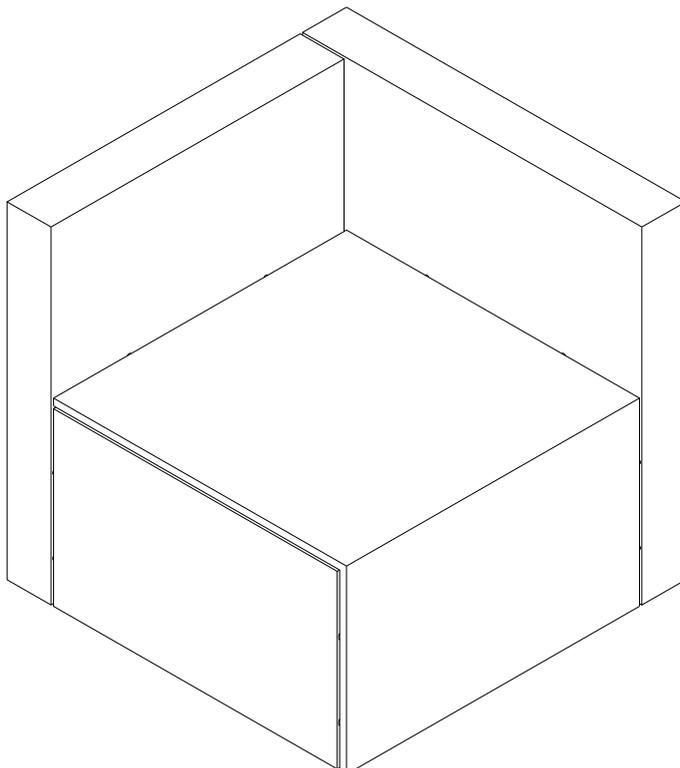


STEP 9 - MIDDLE SOFA ASSEMBLE

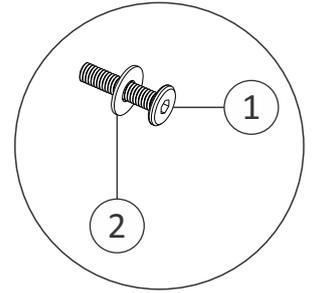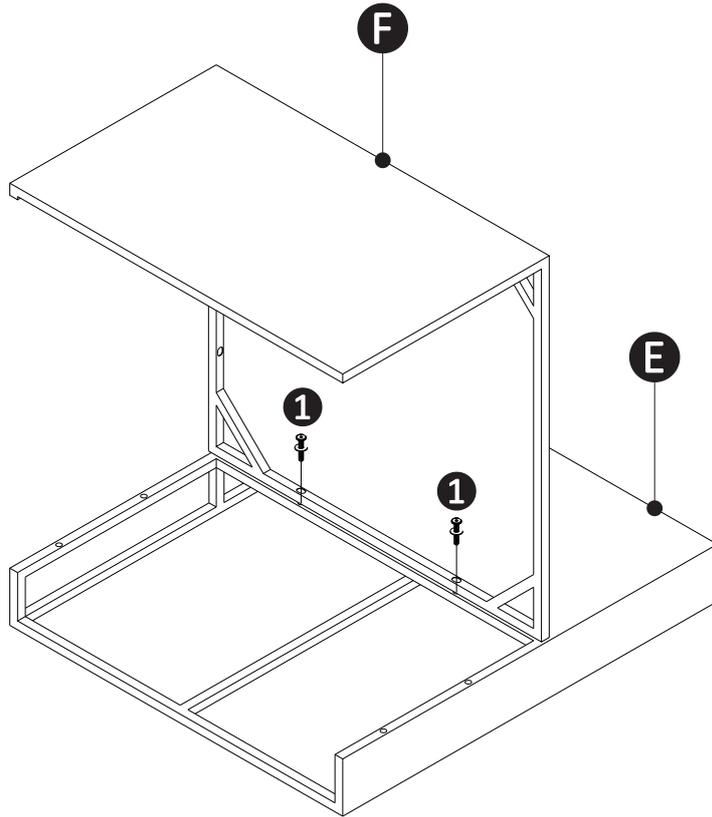



STEP 10

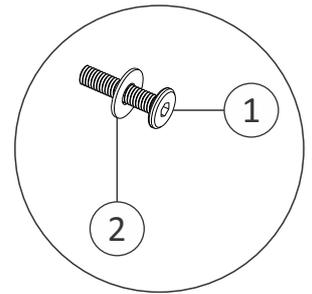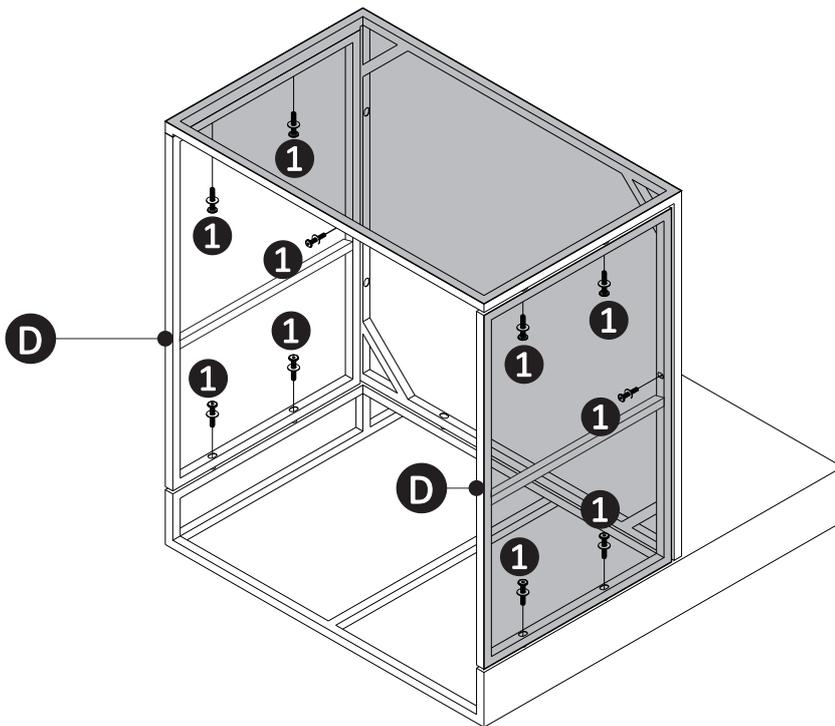



STEP 11

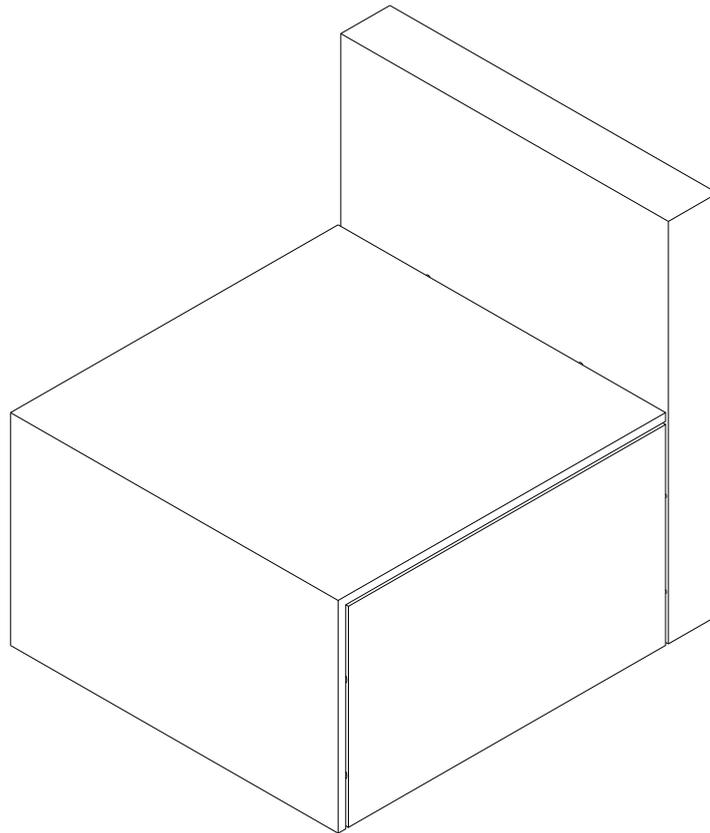


STEP 12 - OTTOMAN ASSEMBLE

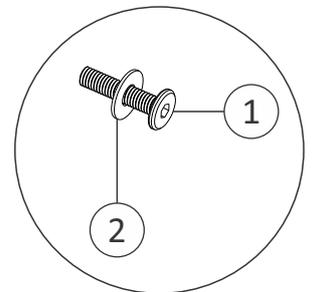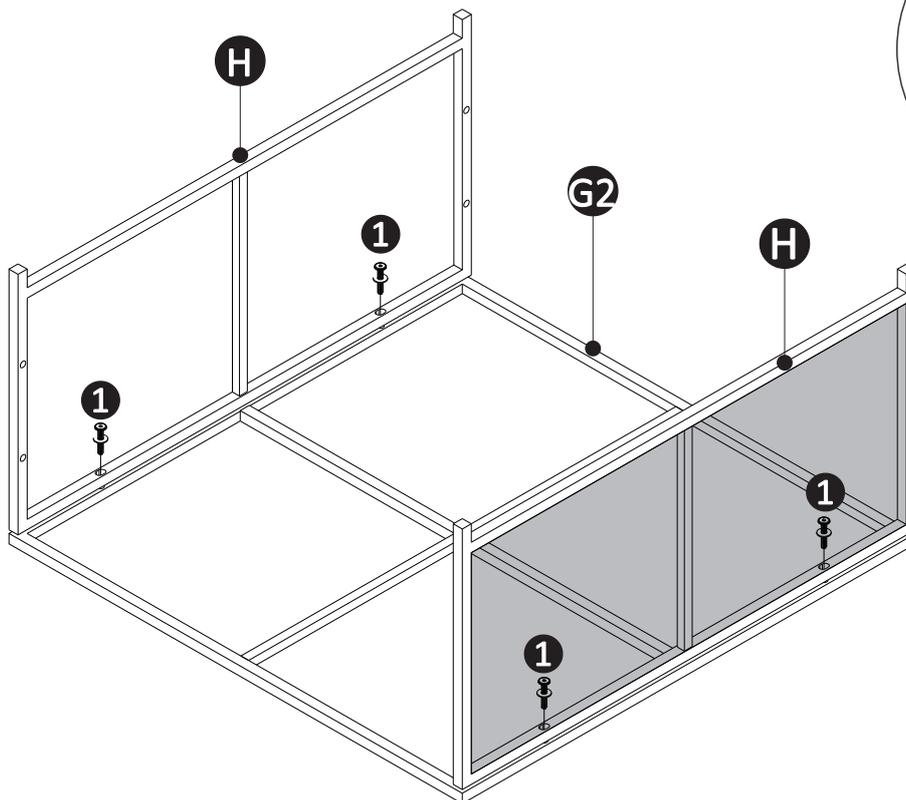



STEP 13

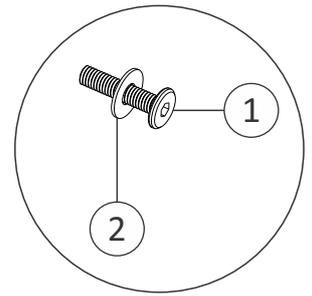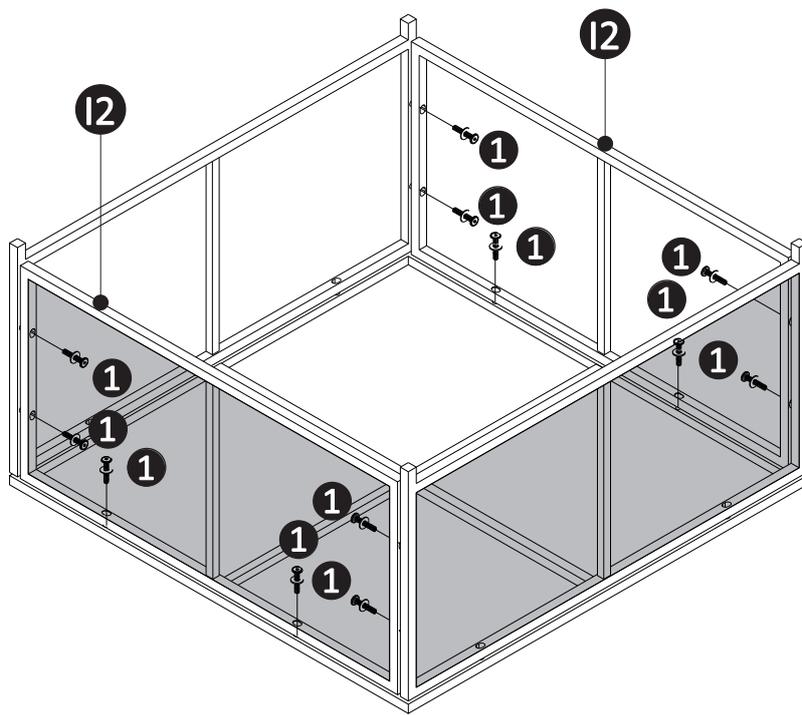



STEP 14

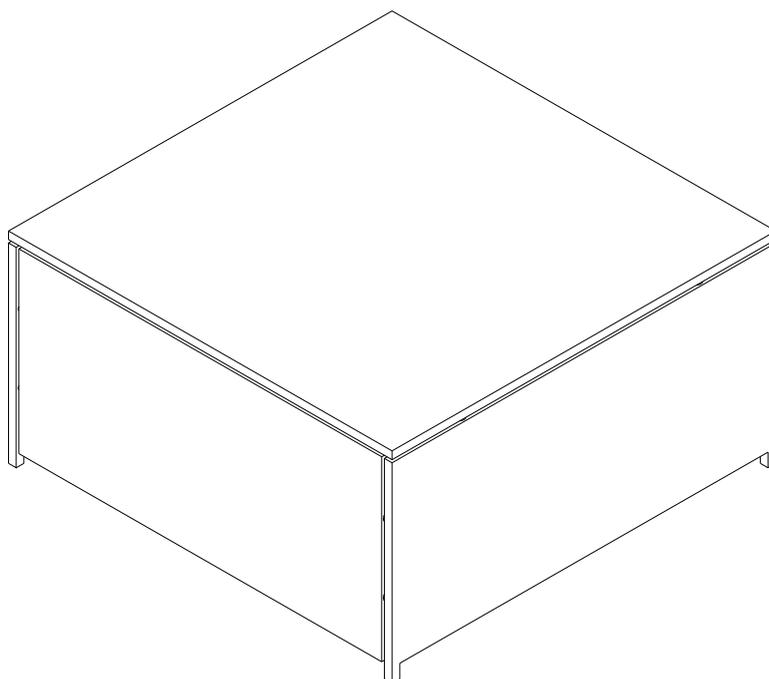


STEP 15 - TABLE ASSEMBLE

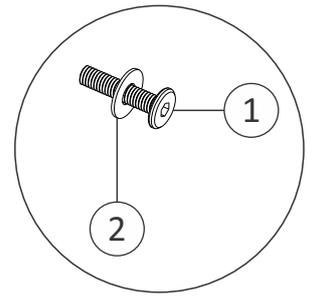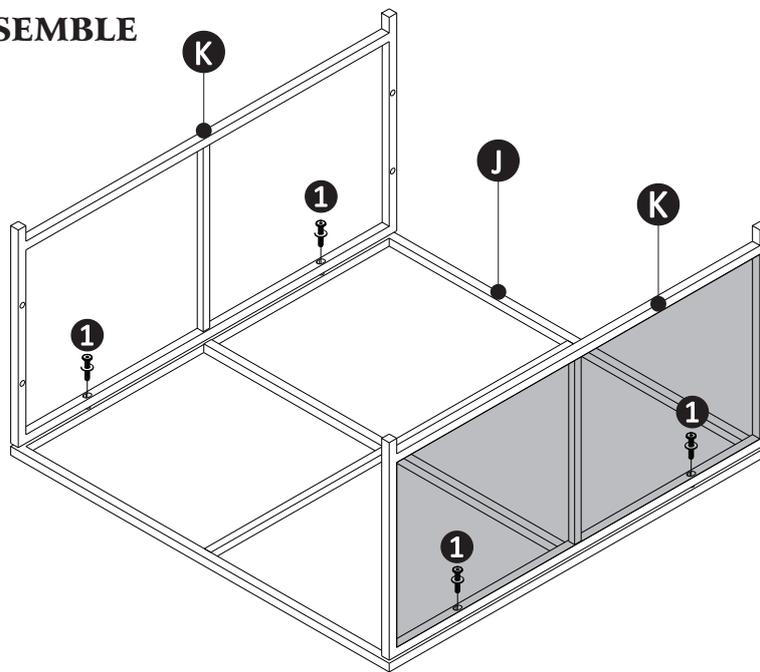


STEP 16

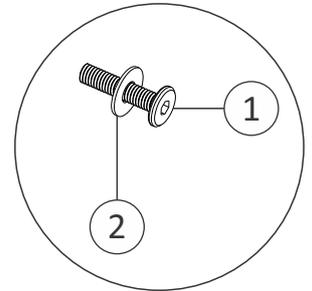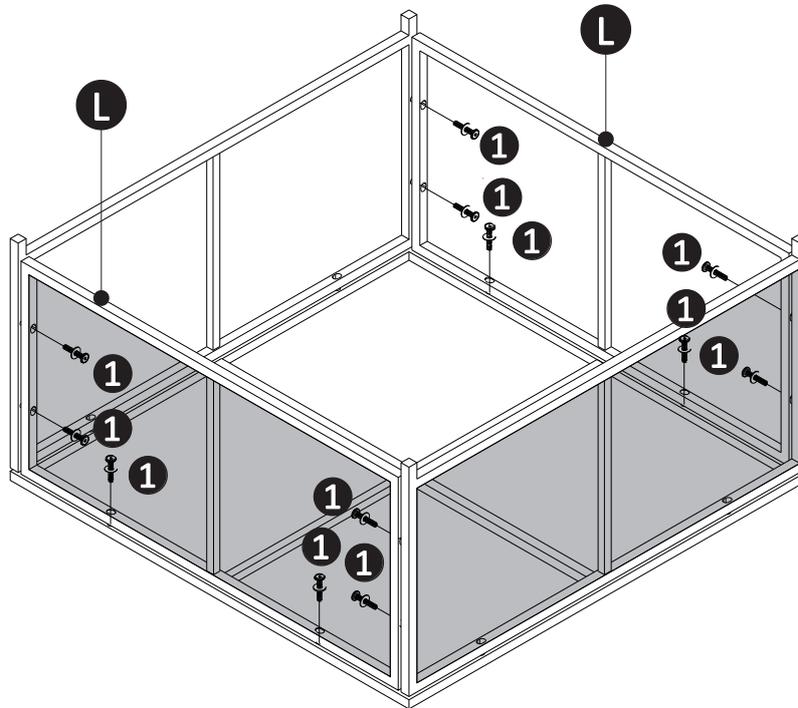

STEP 17

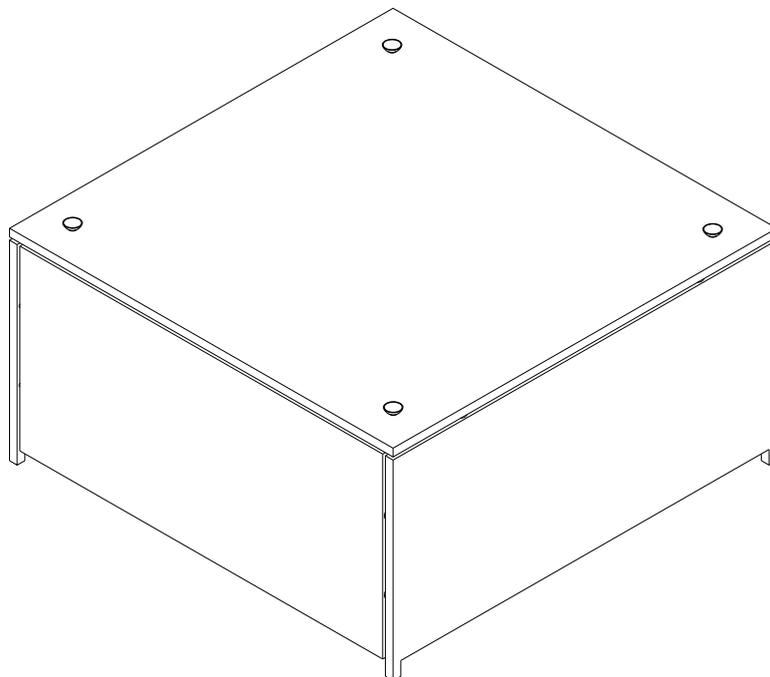

STEP 18 - CONNECTOR SOFA

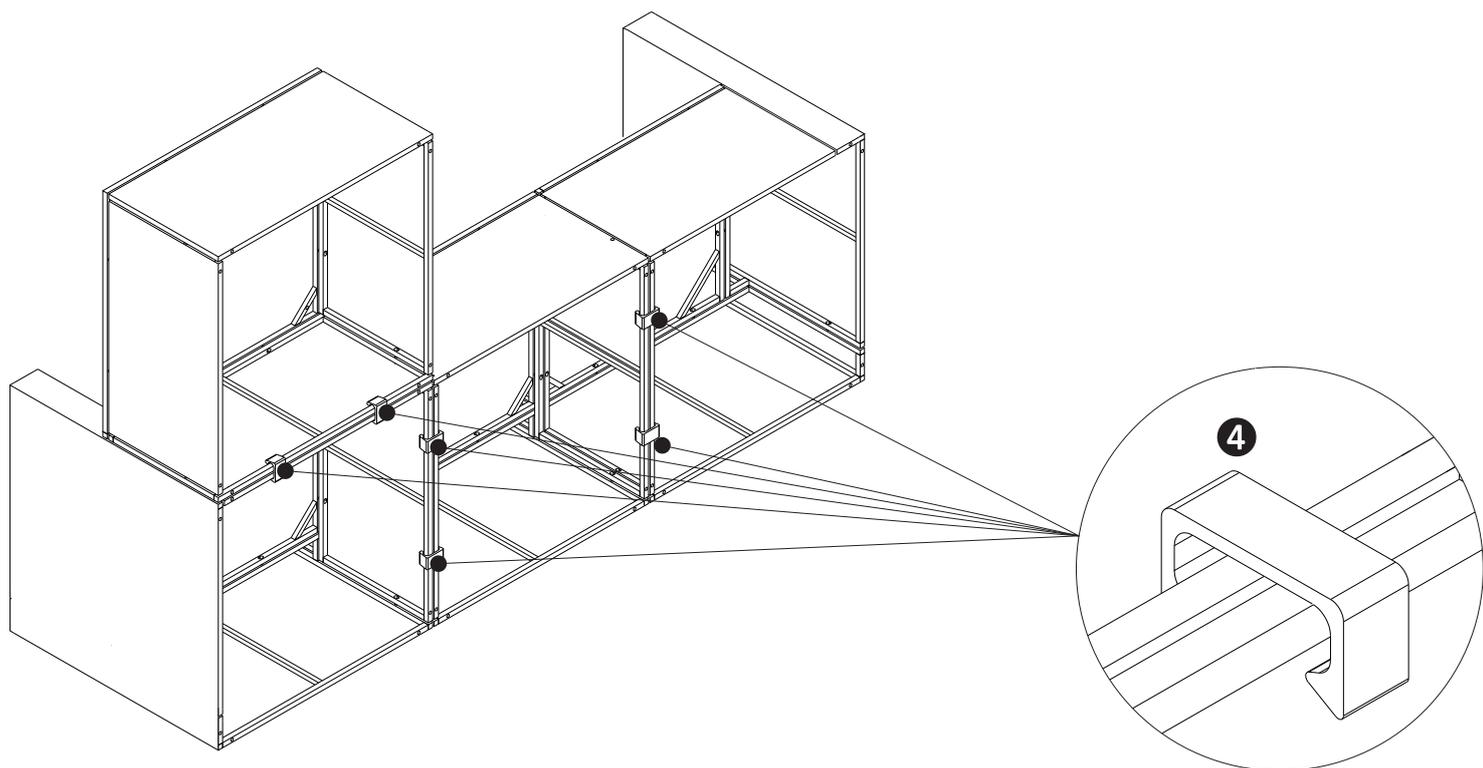

STEP 19 - PUT CUSHION TO FINISH

