

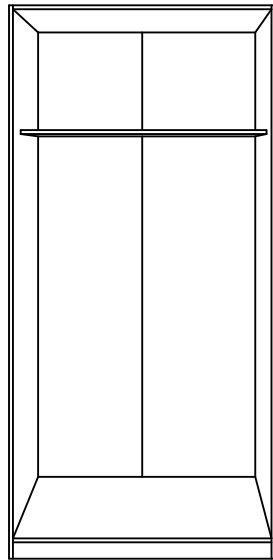







1089

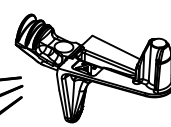



1

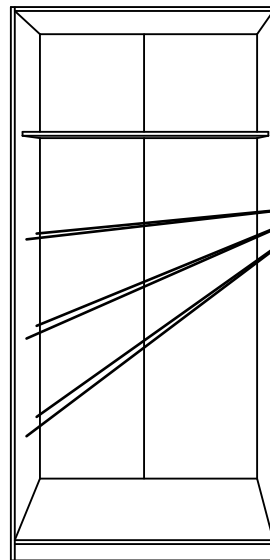


1089

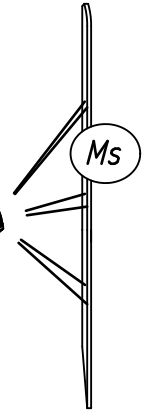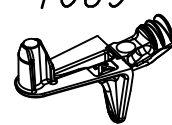

2

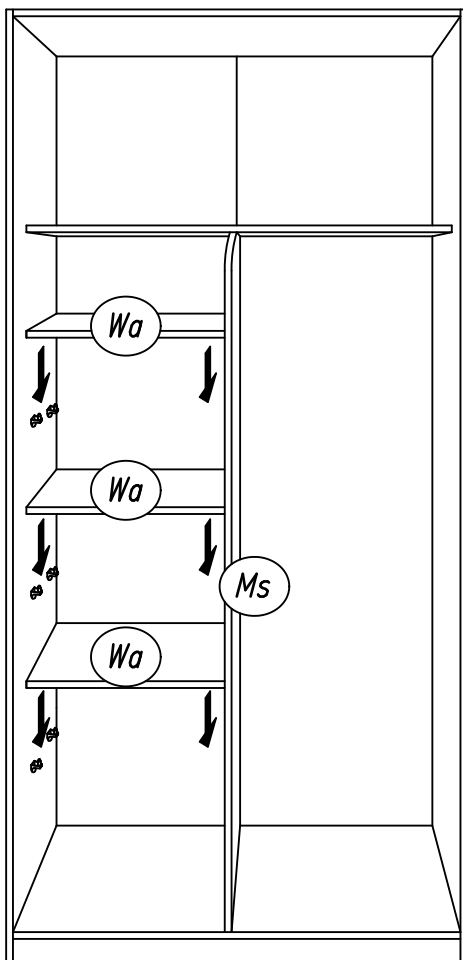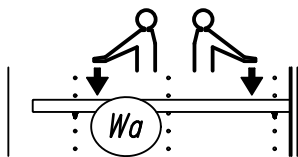




3

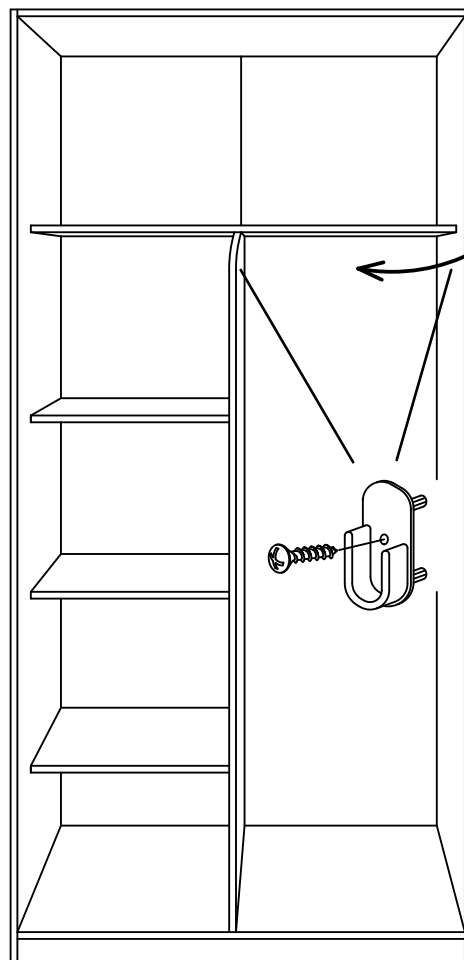






1.

MD105_03

rauch


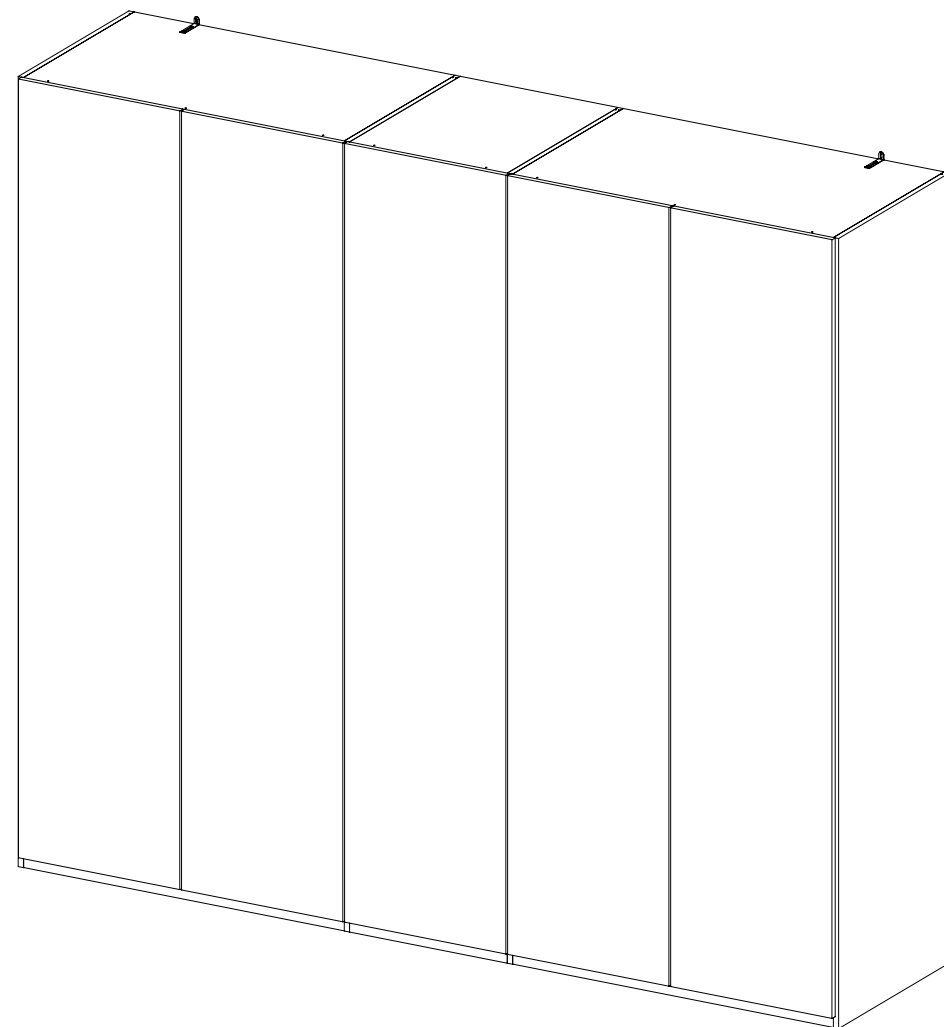
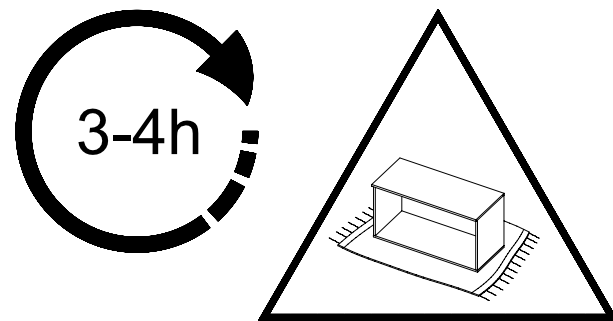
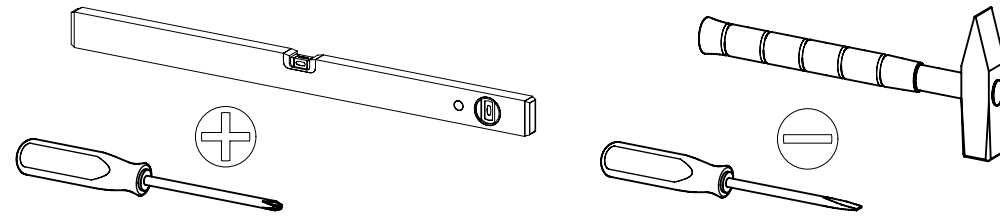














2.

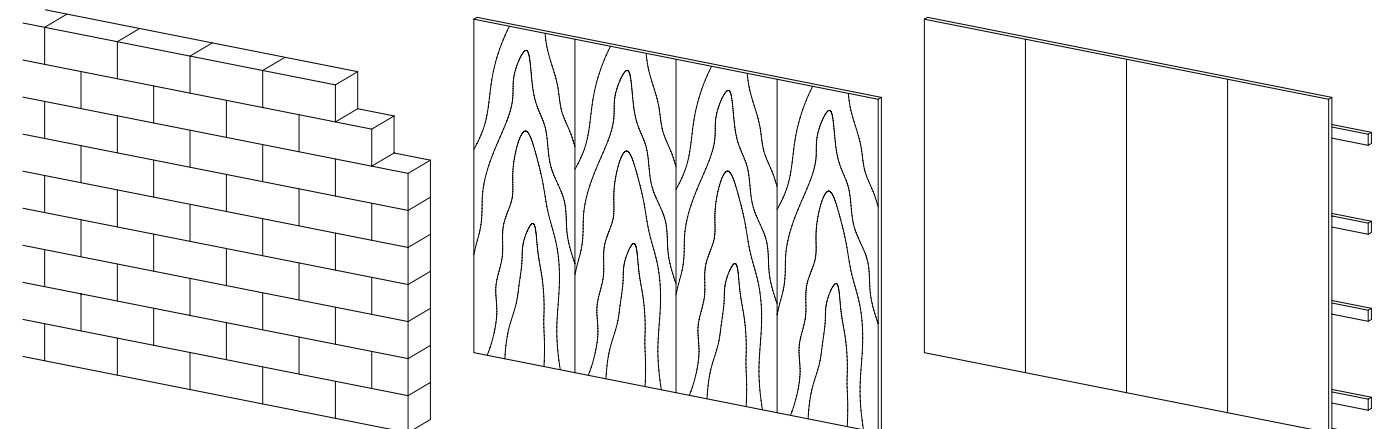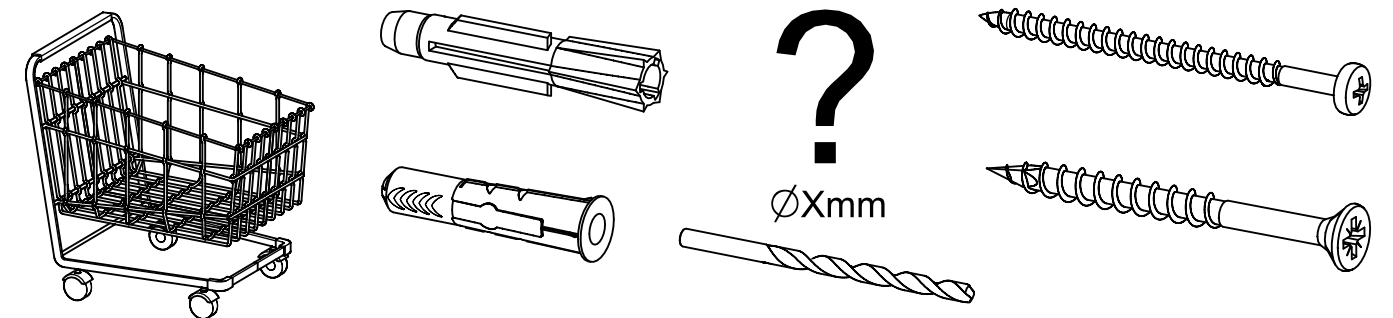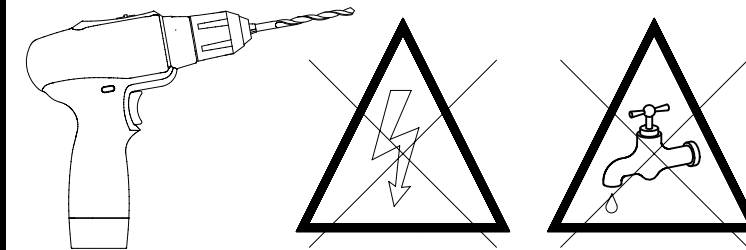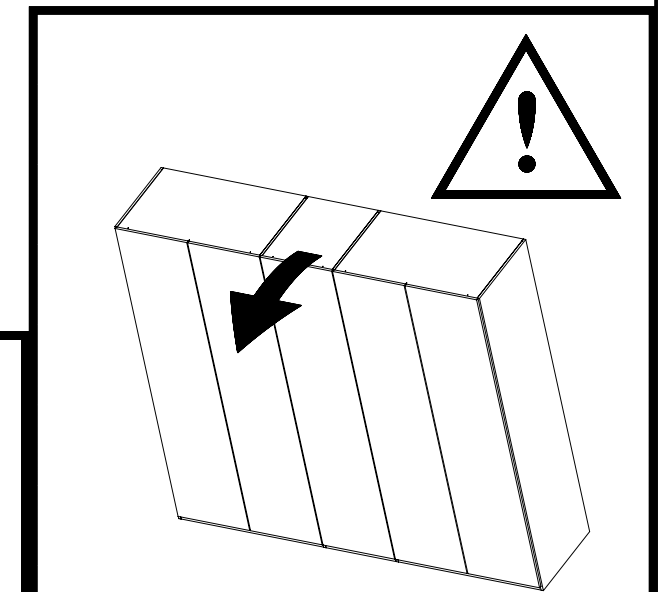
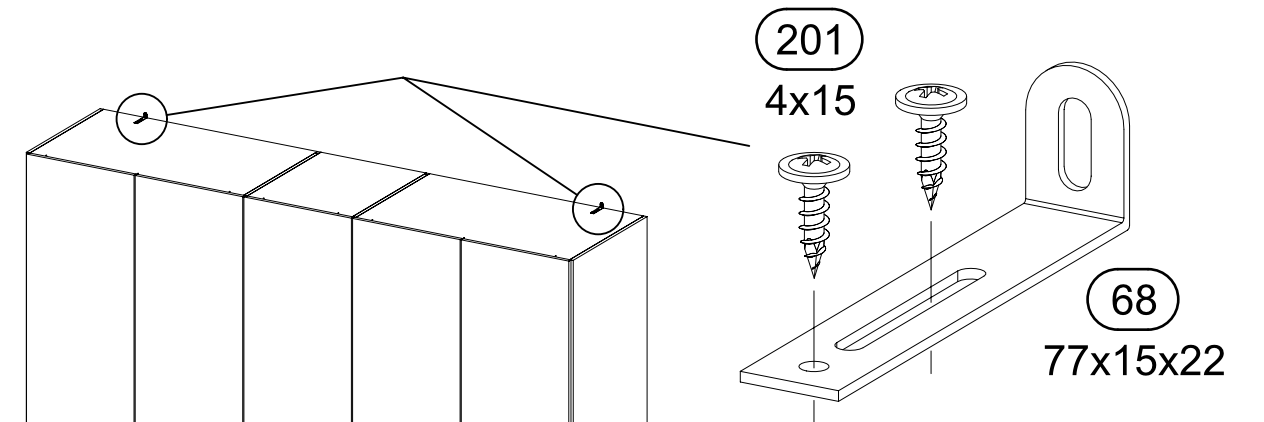





SE020 = SE030

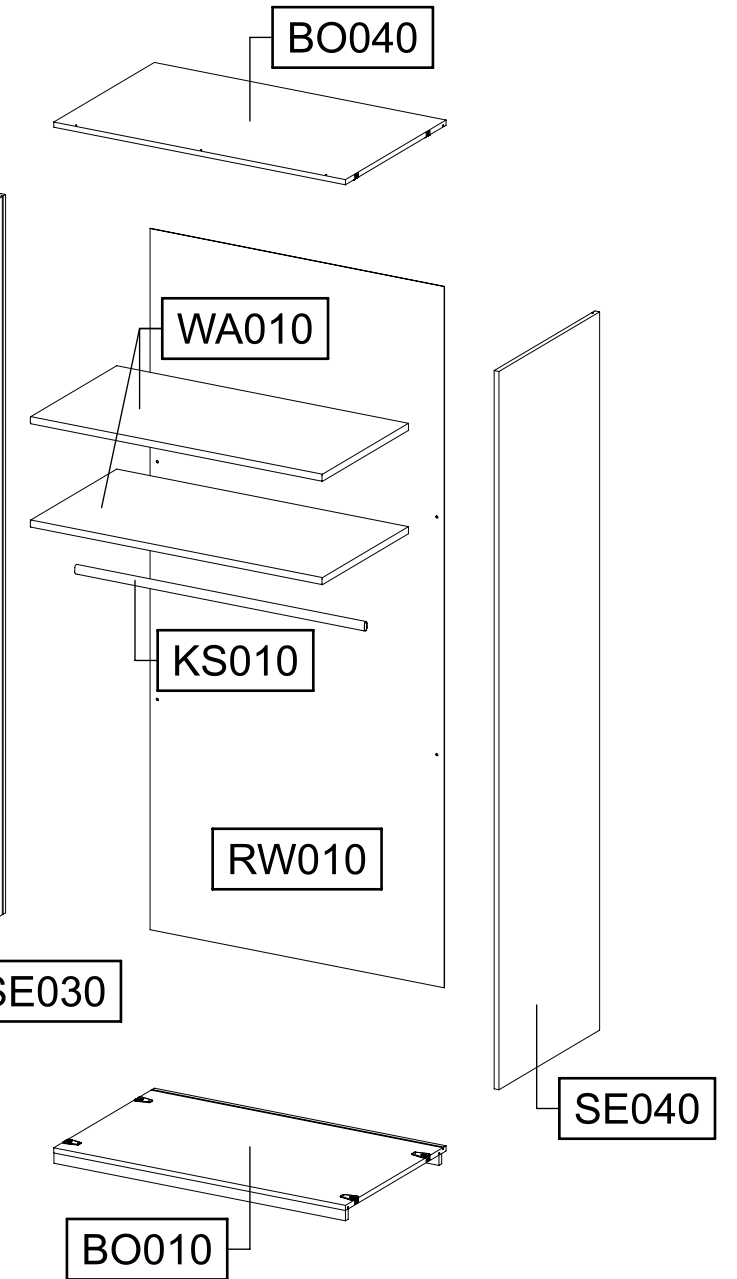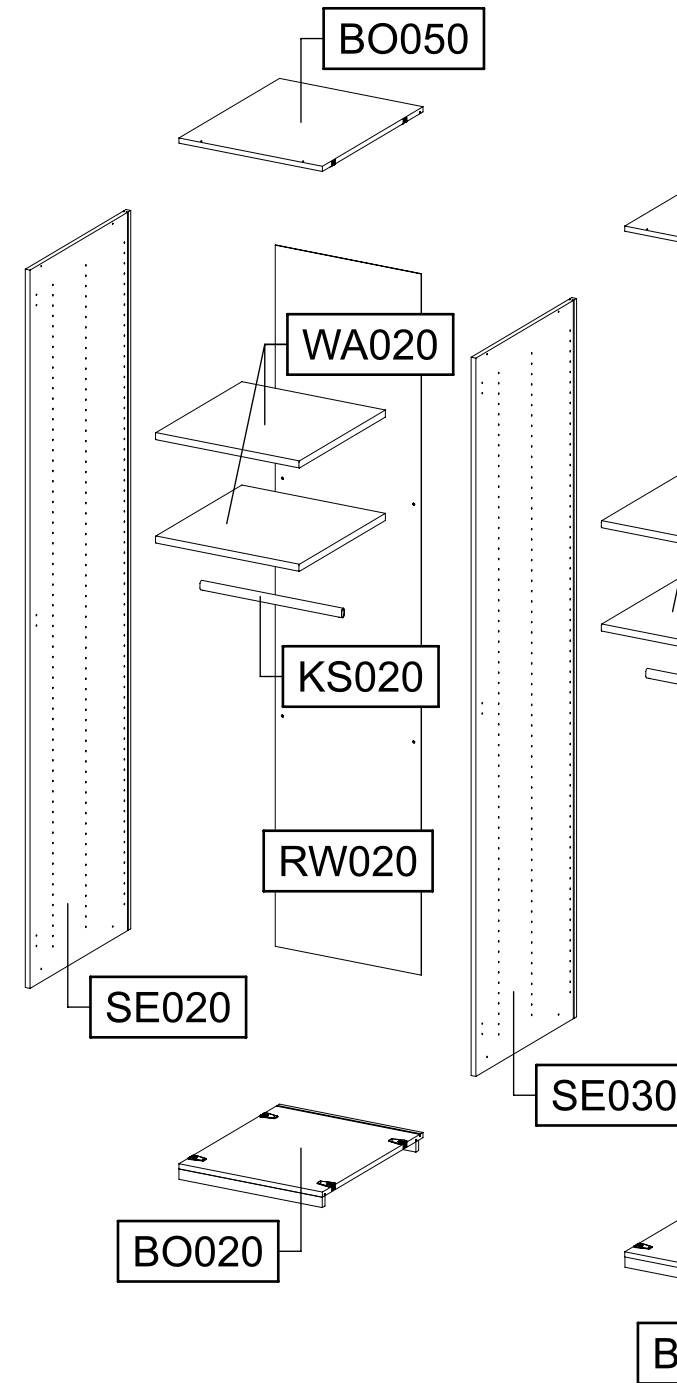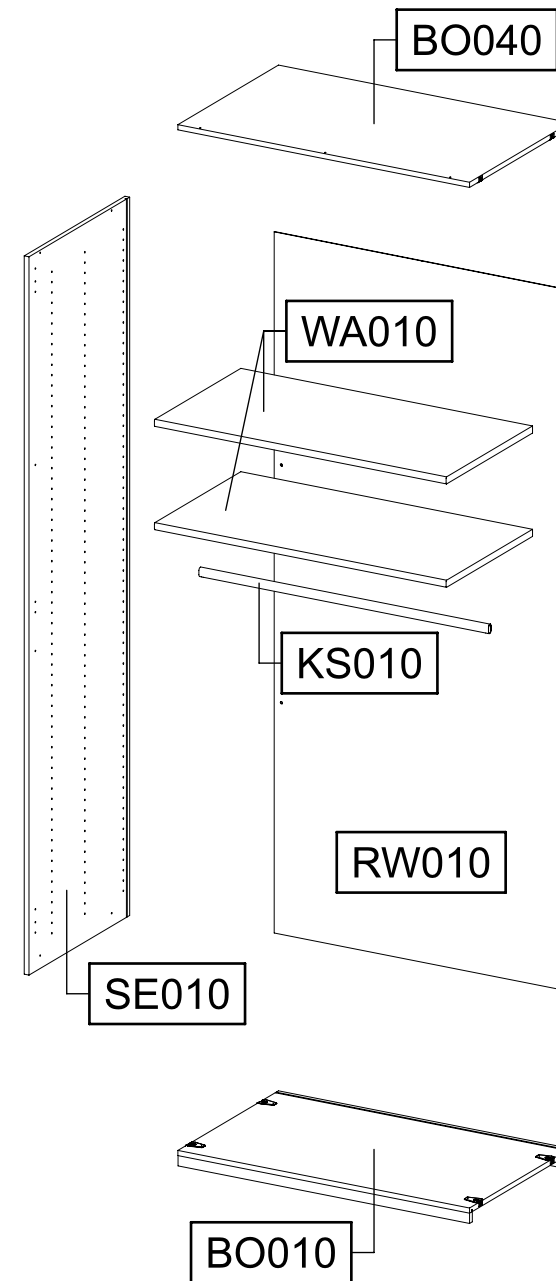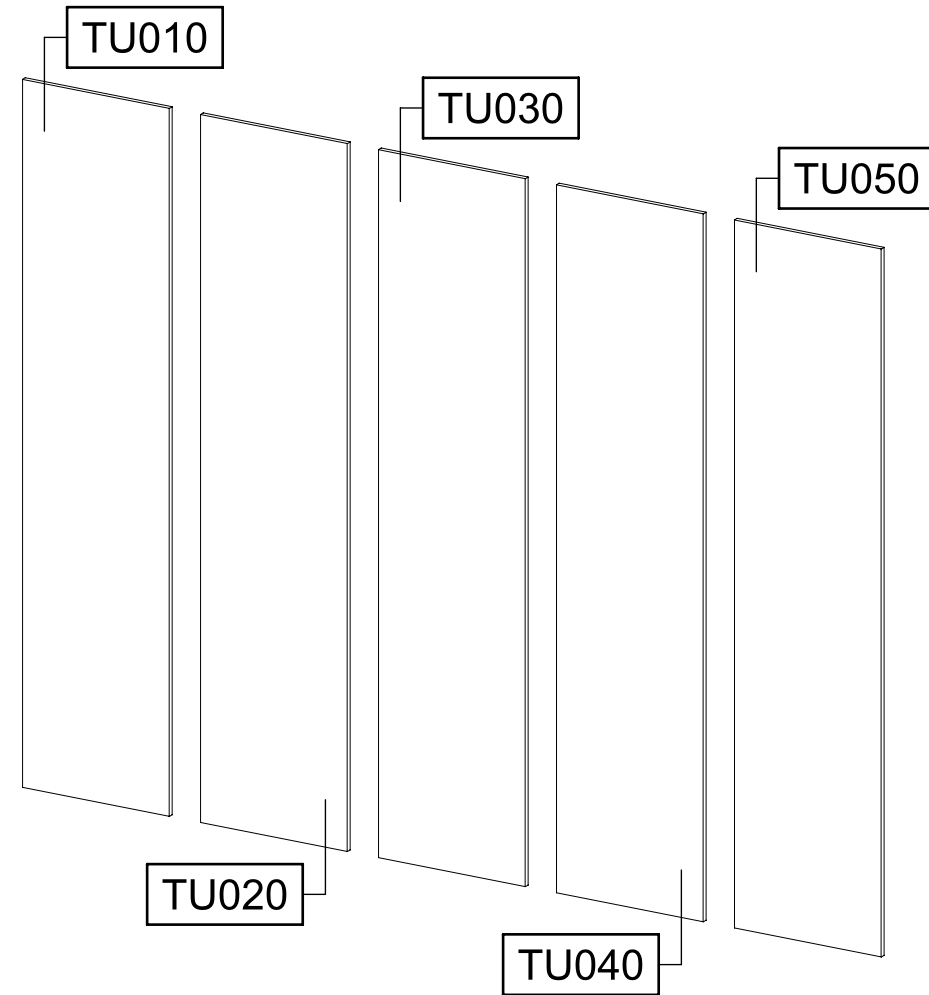

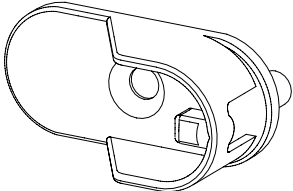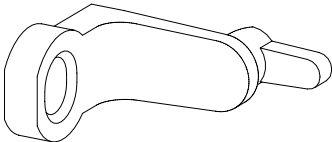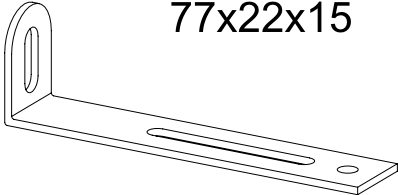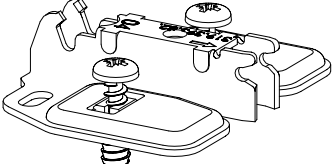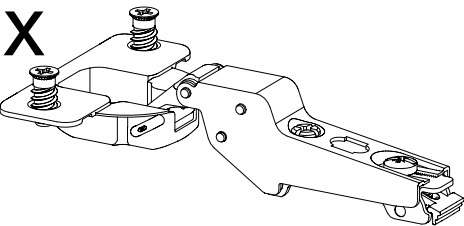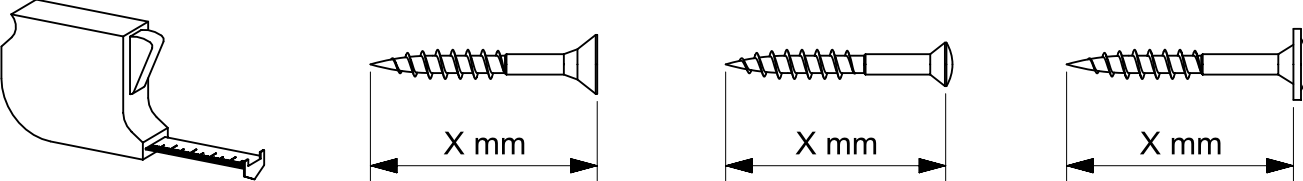8x 55x16x6,2 12 	6x 29 
12x 47 	2x 77x22x15 68 
4x 4x15 201 	6x 3,5x15 205 
30-40x 4x13 621 	12x 6,5x12 779 
8x 1085 	8x 1086 
24x 1089 	15-20x 1291 
15-20x 1292 	
	

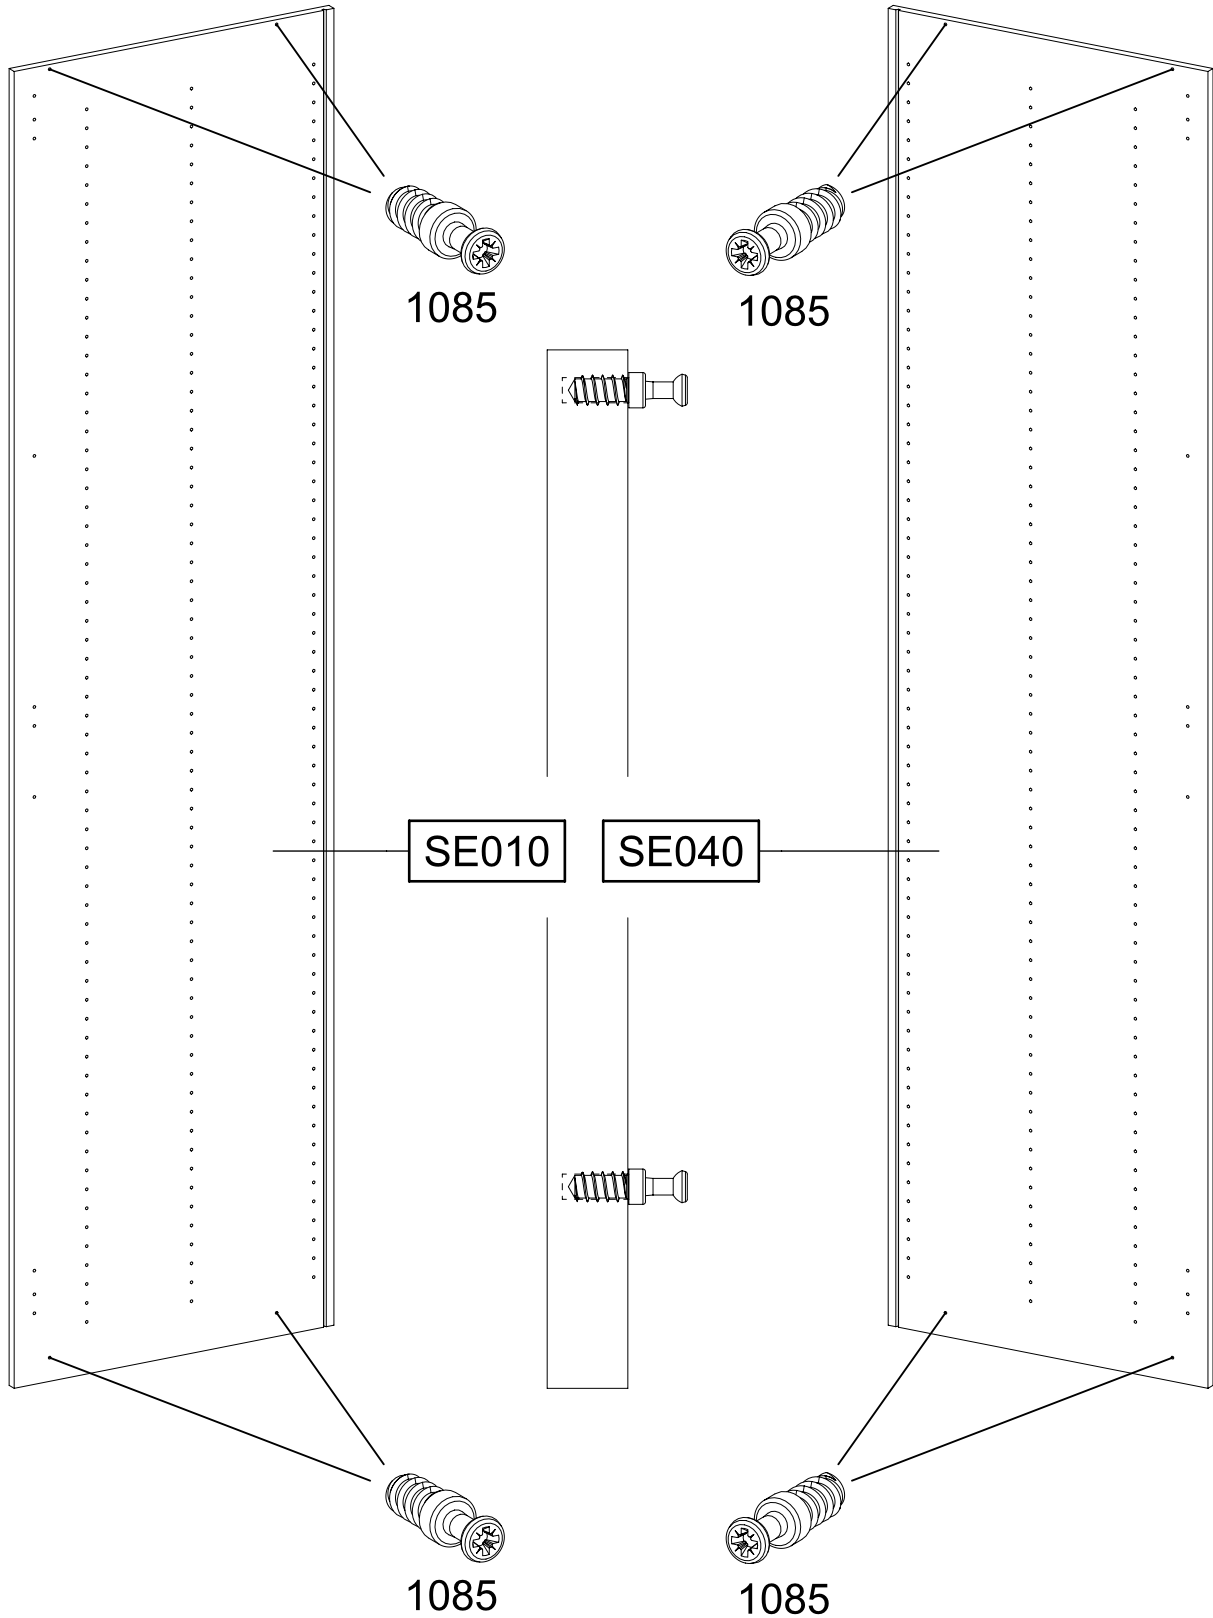
1	8x 1085 	
		

7.


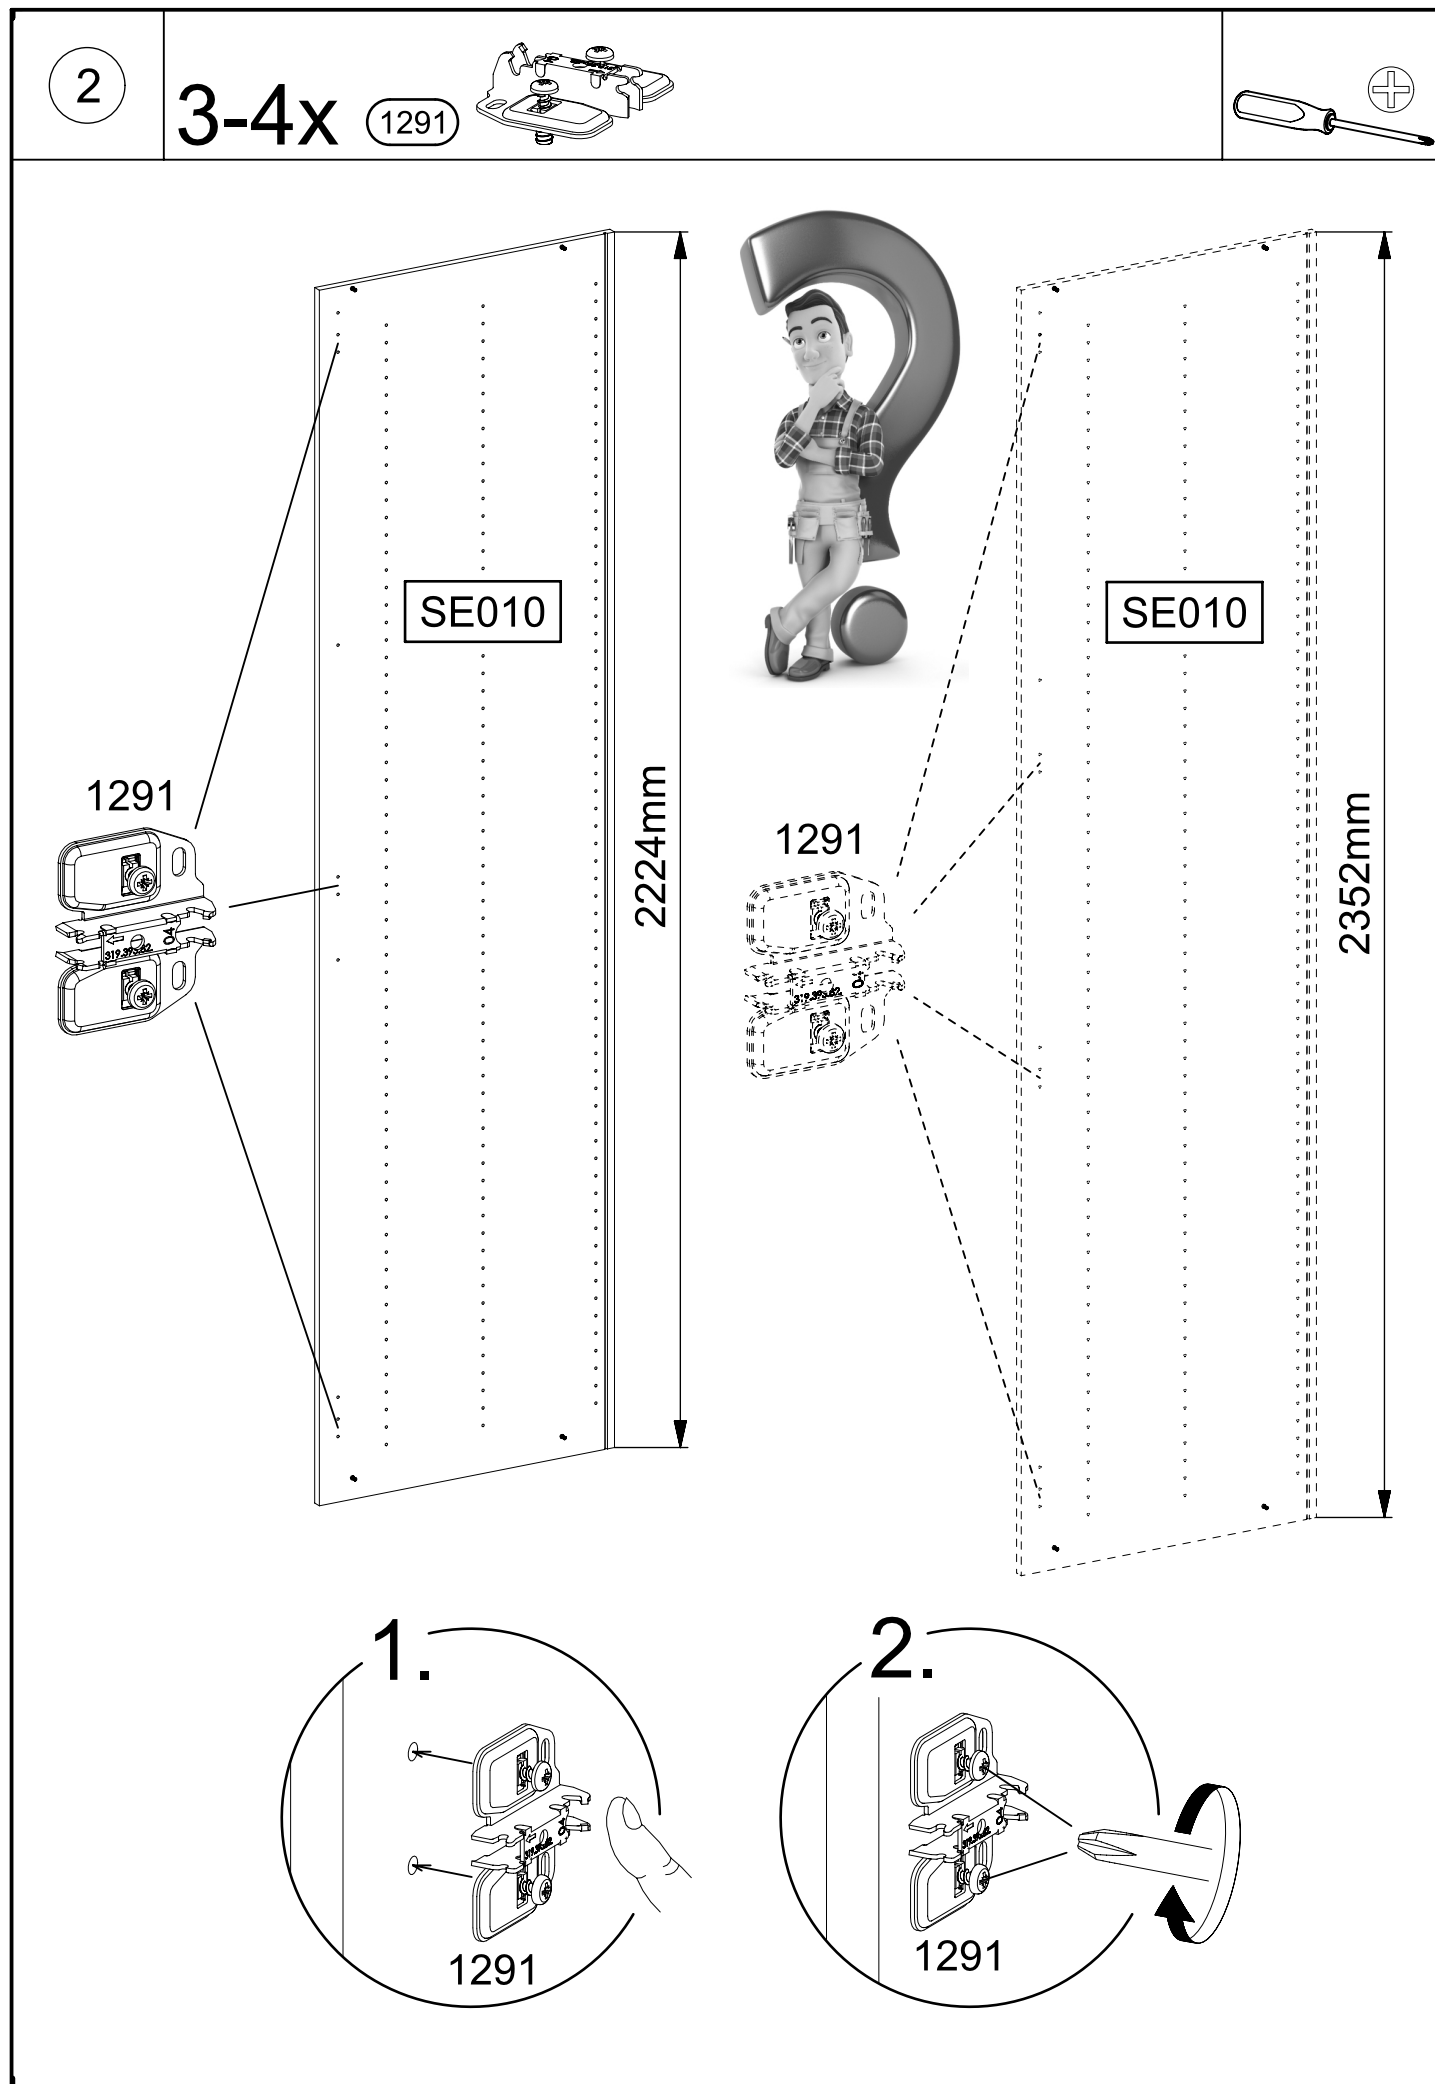




MD105



8.

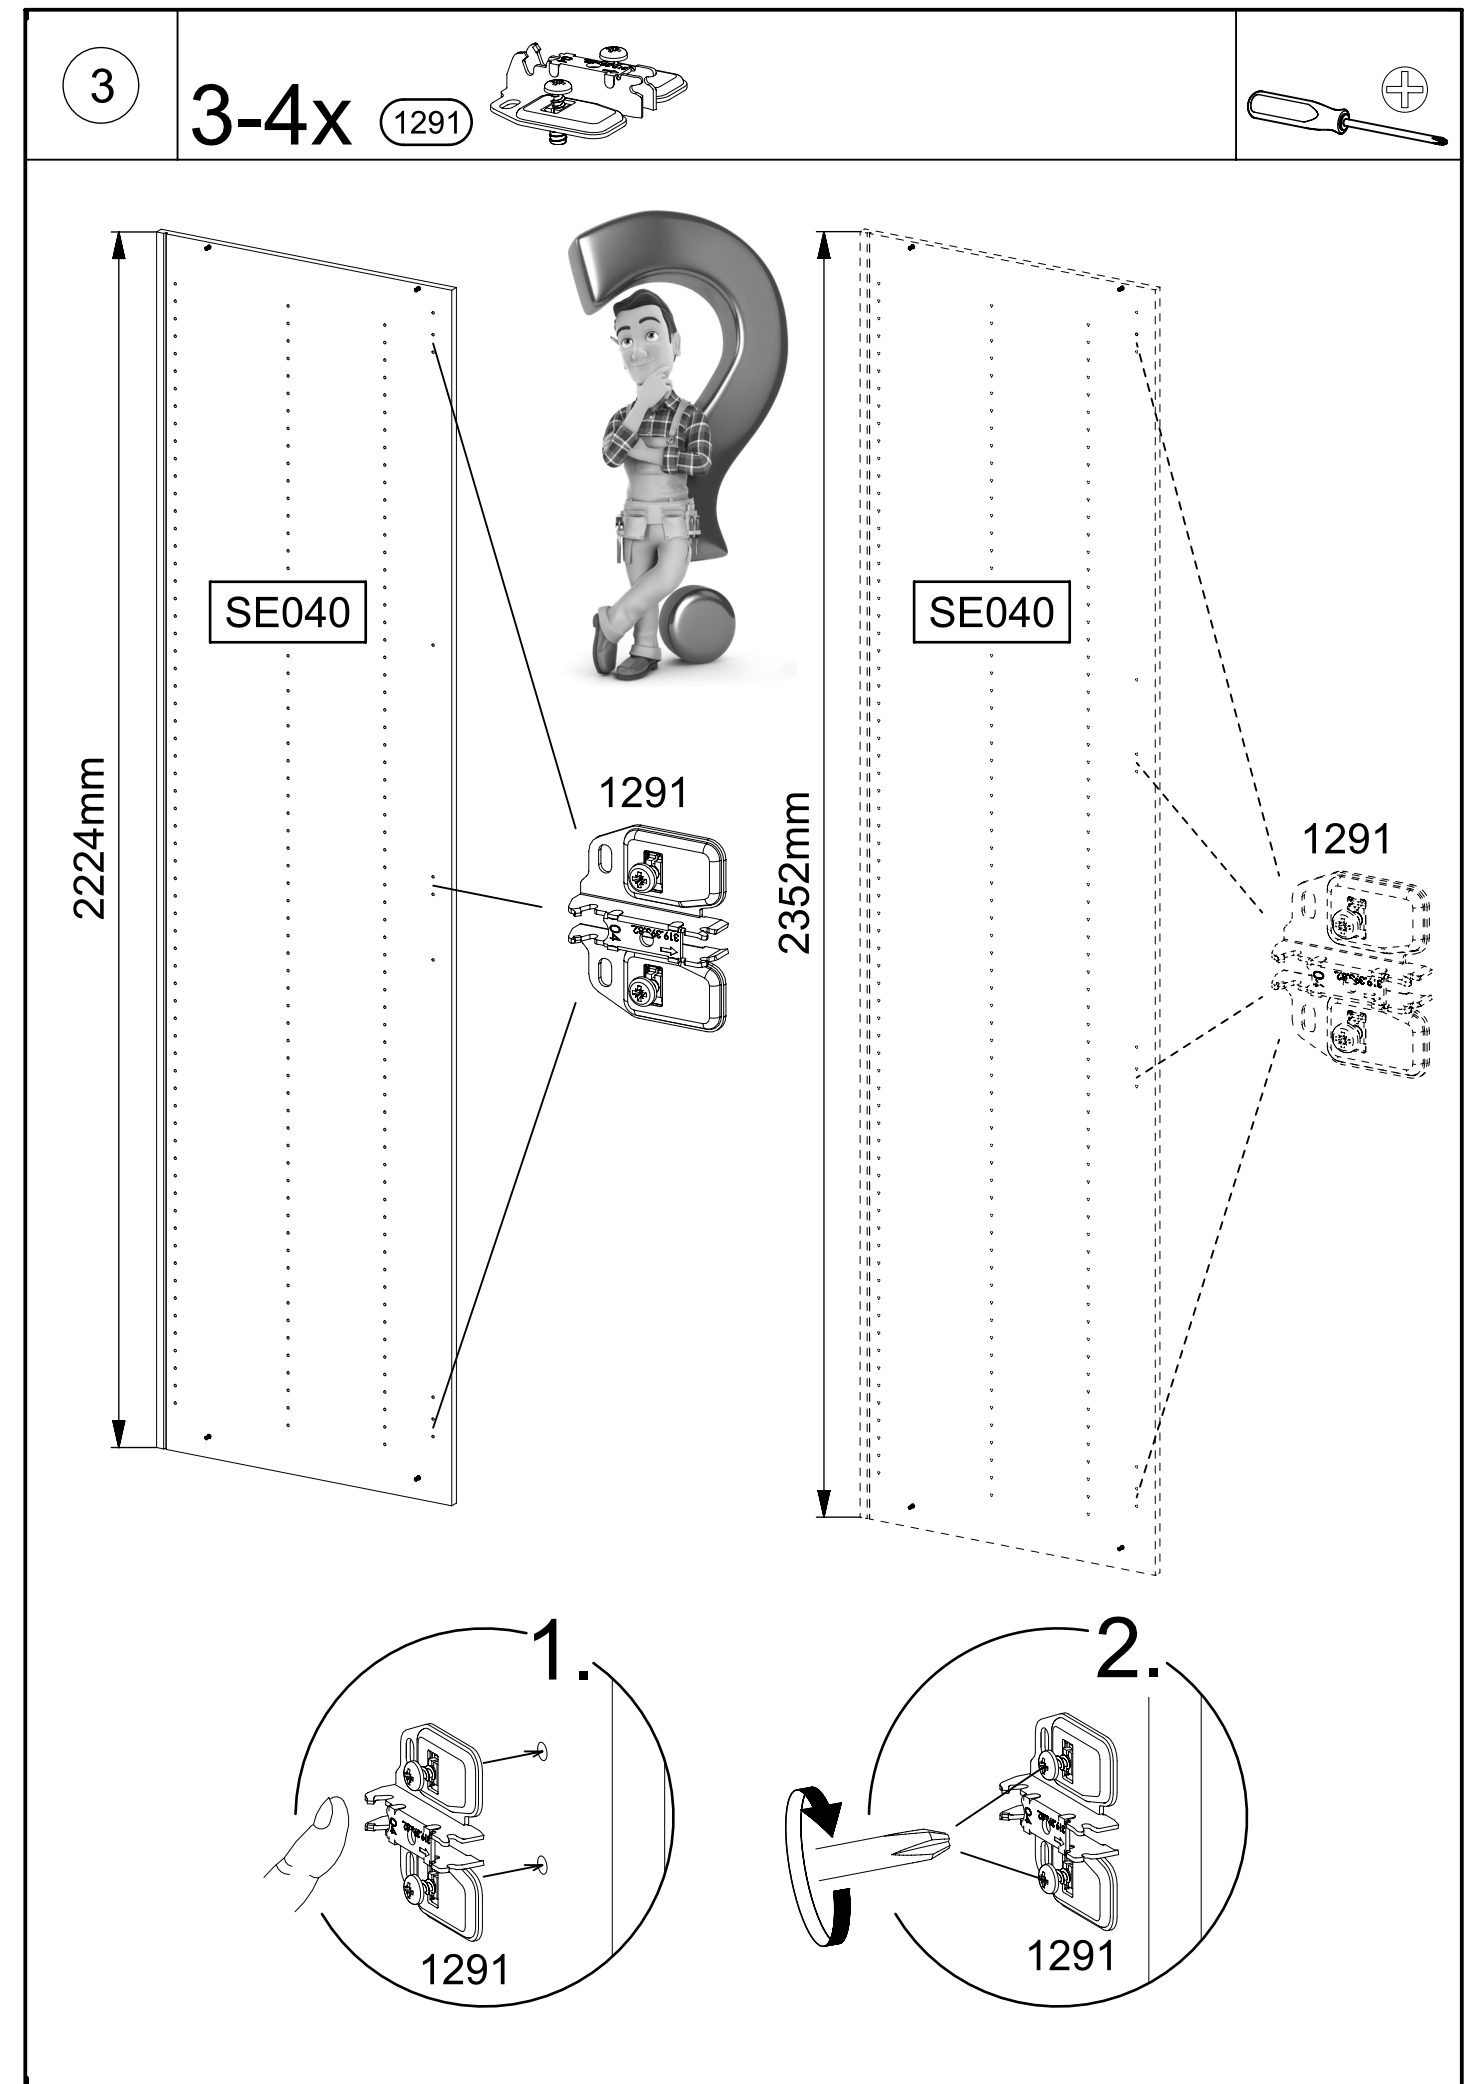


MD105

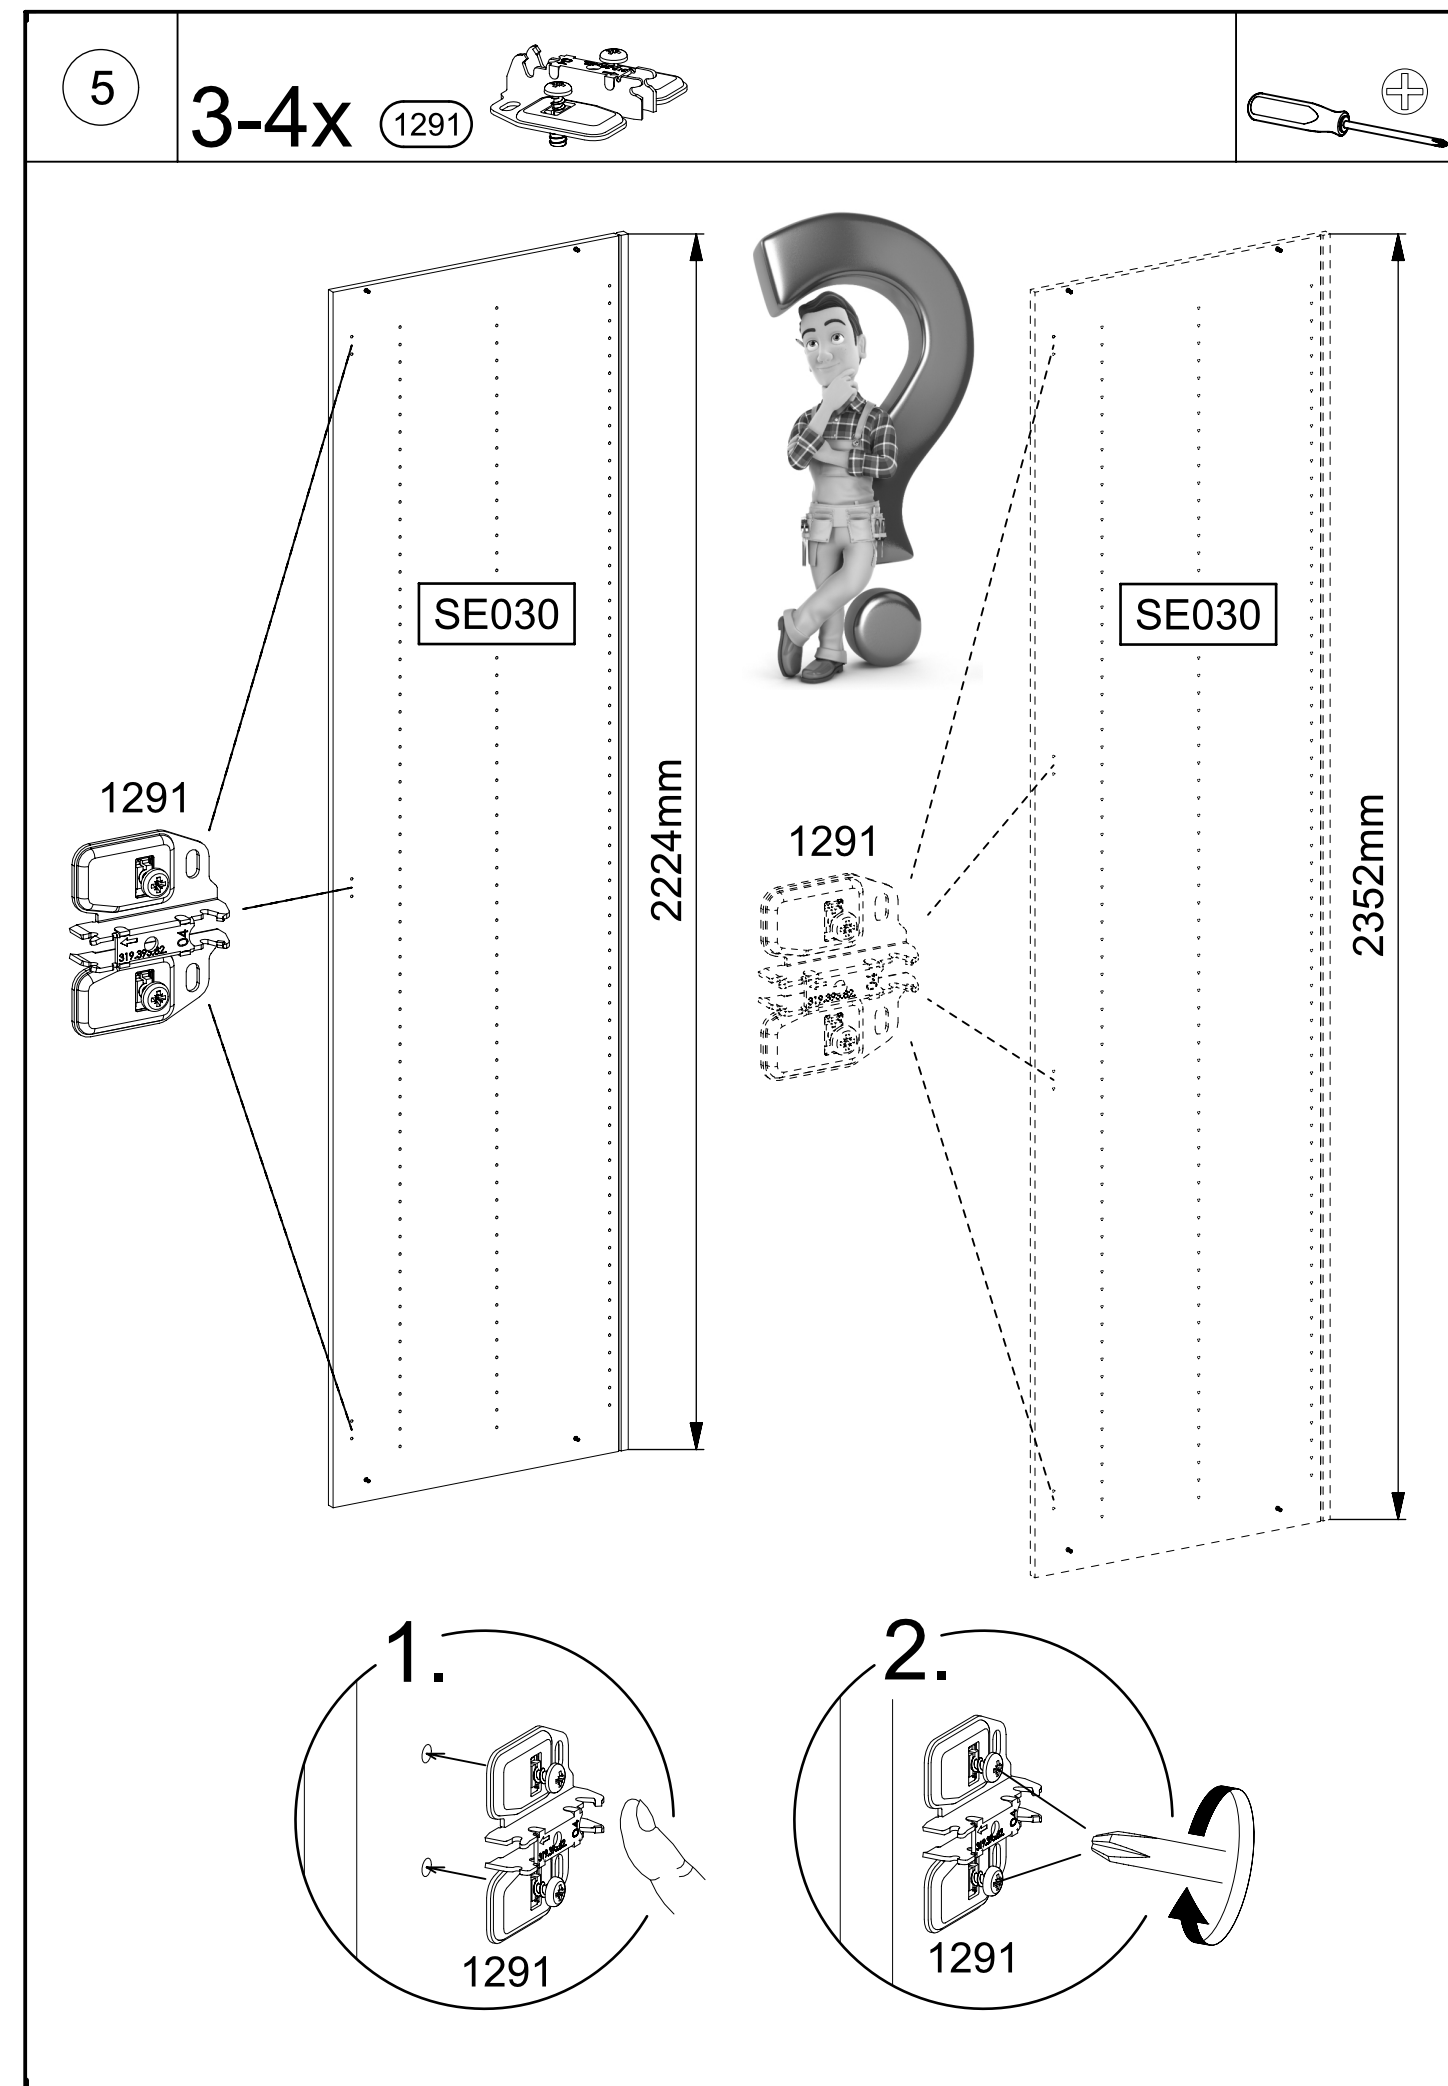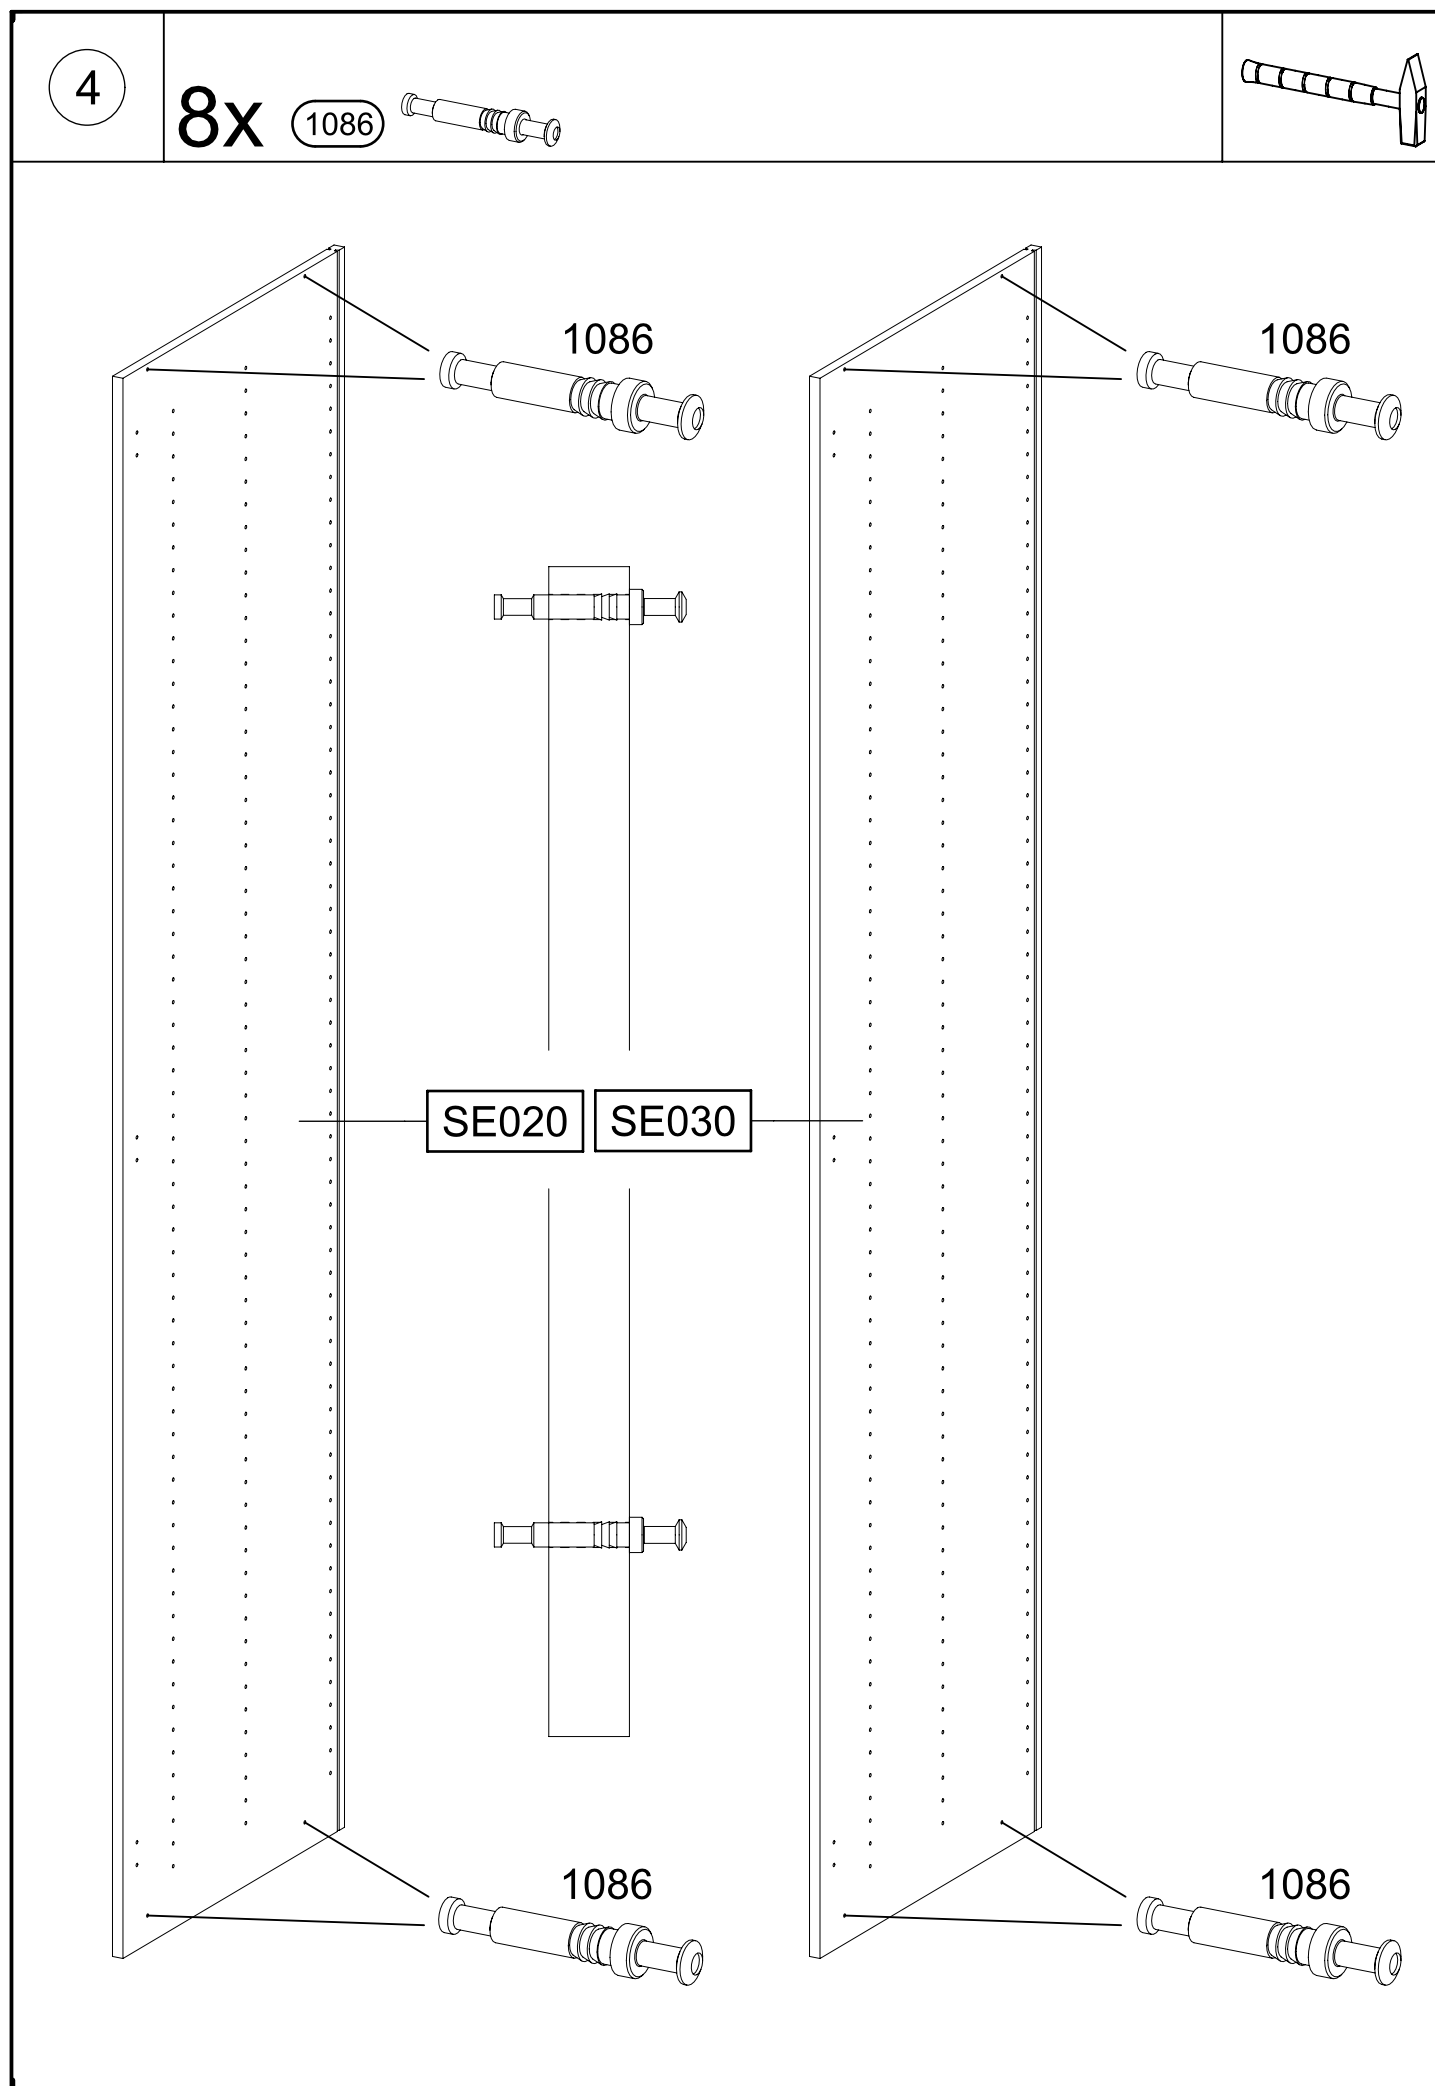

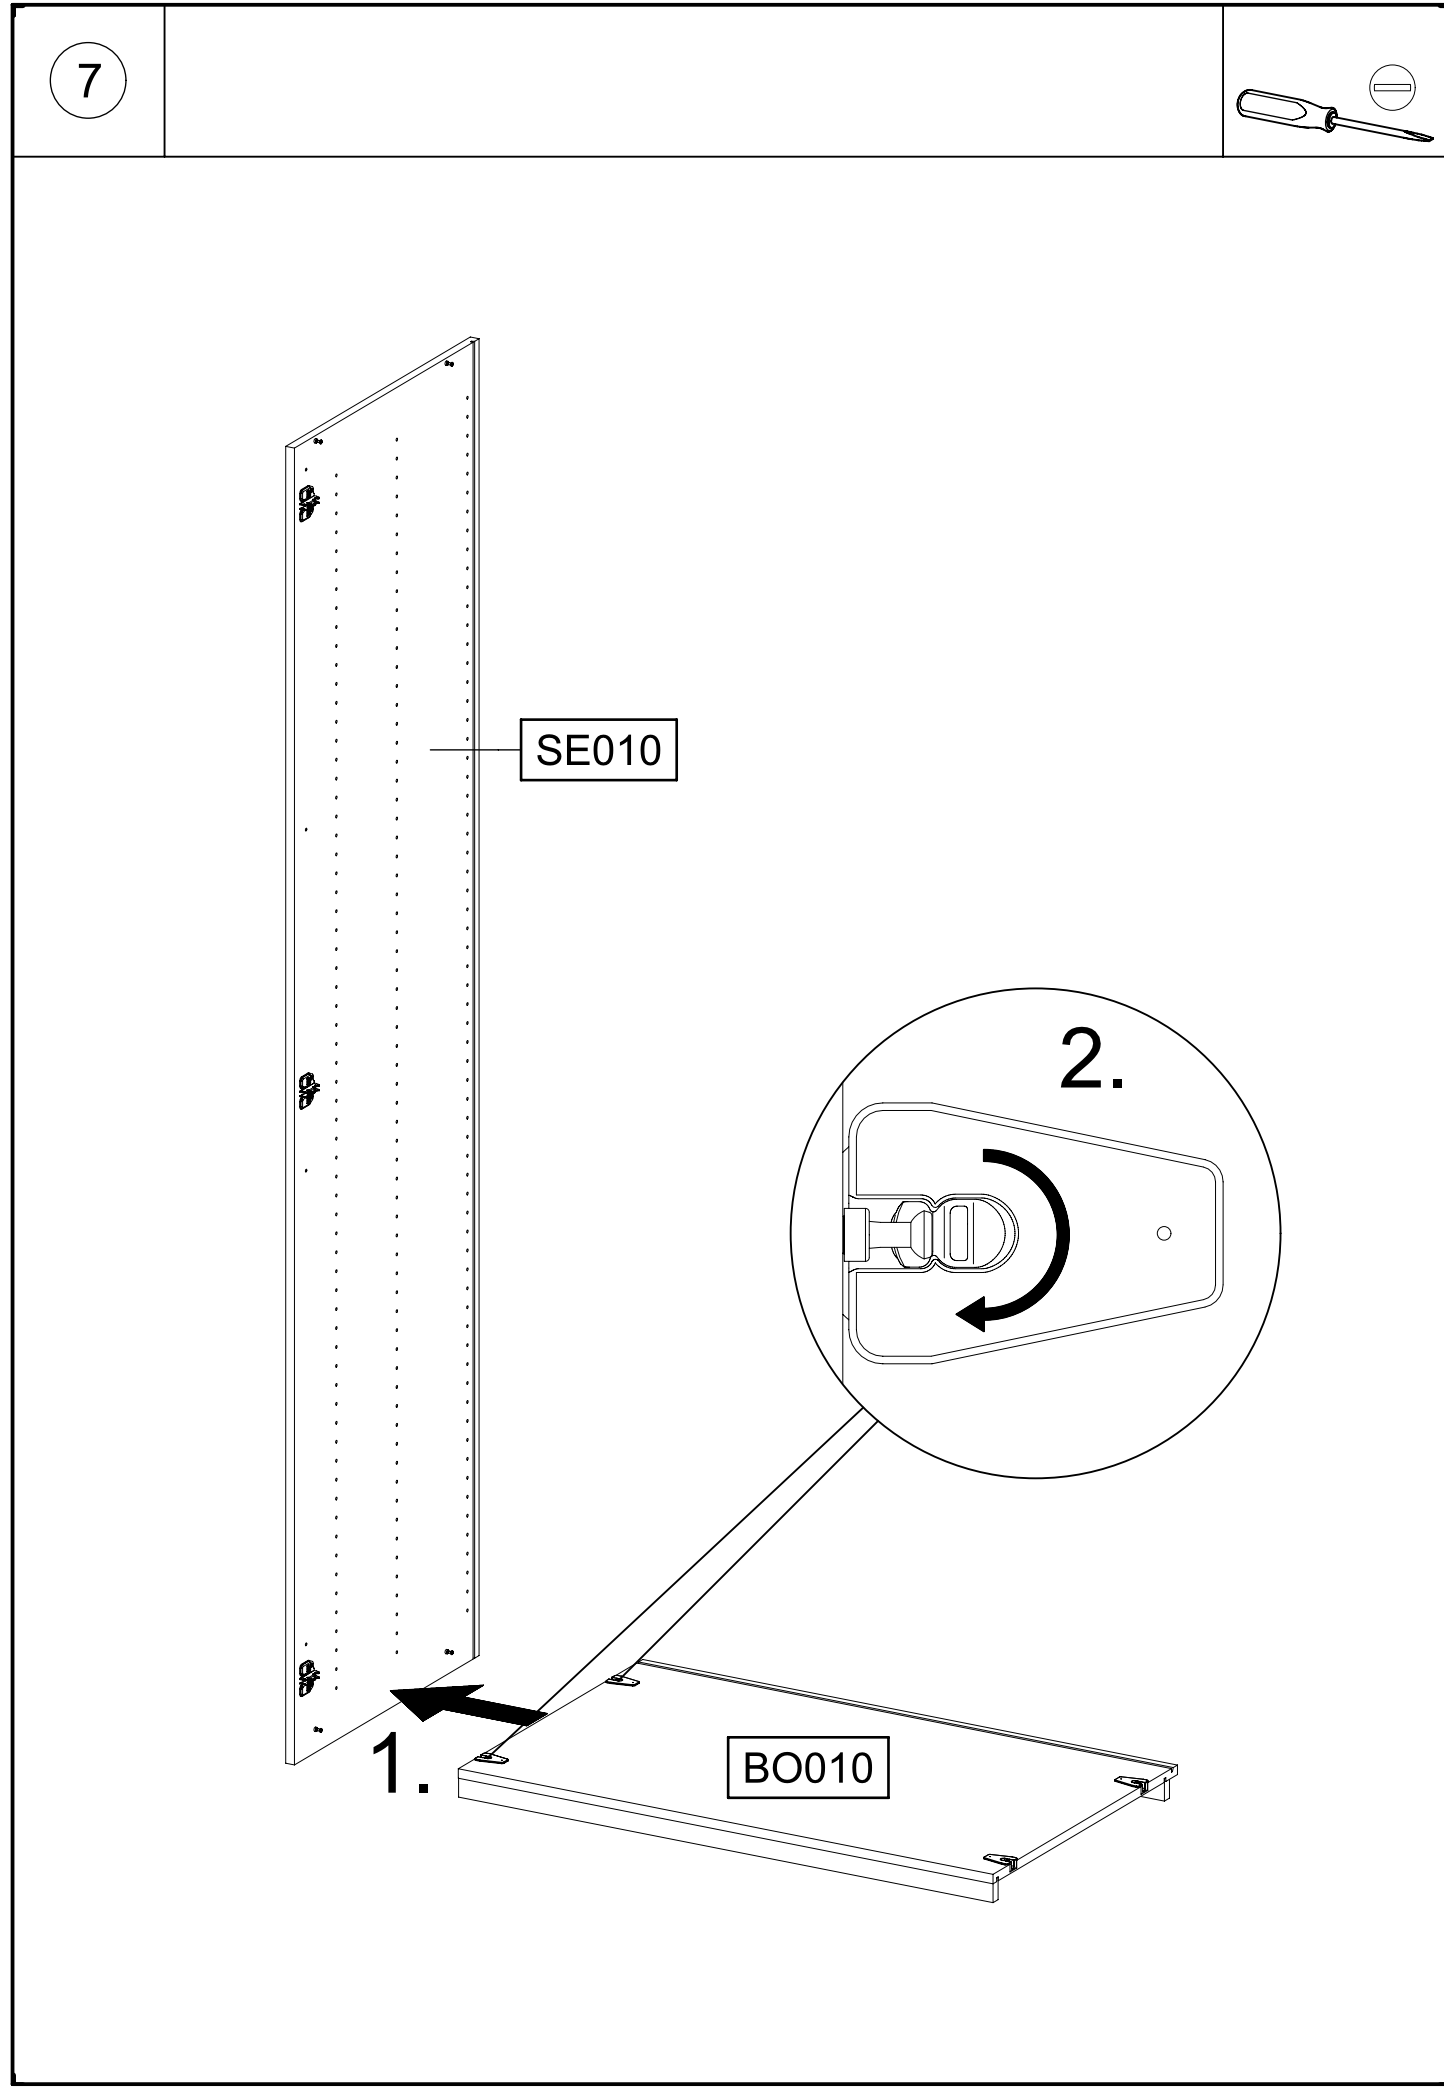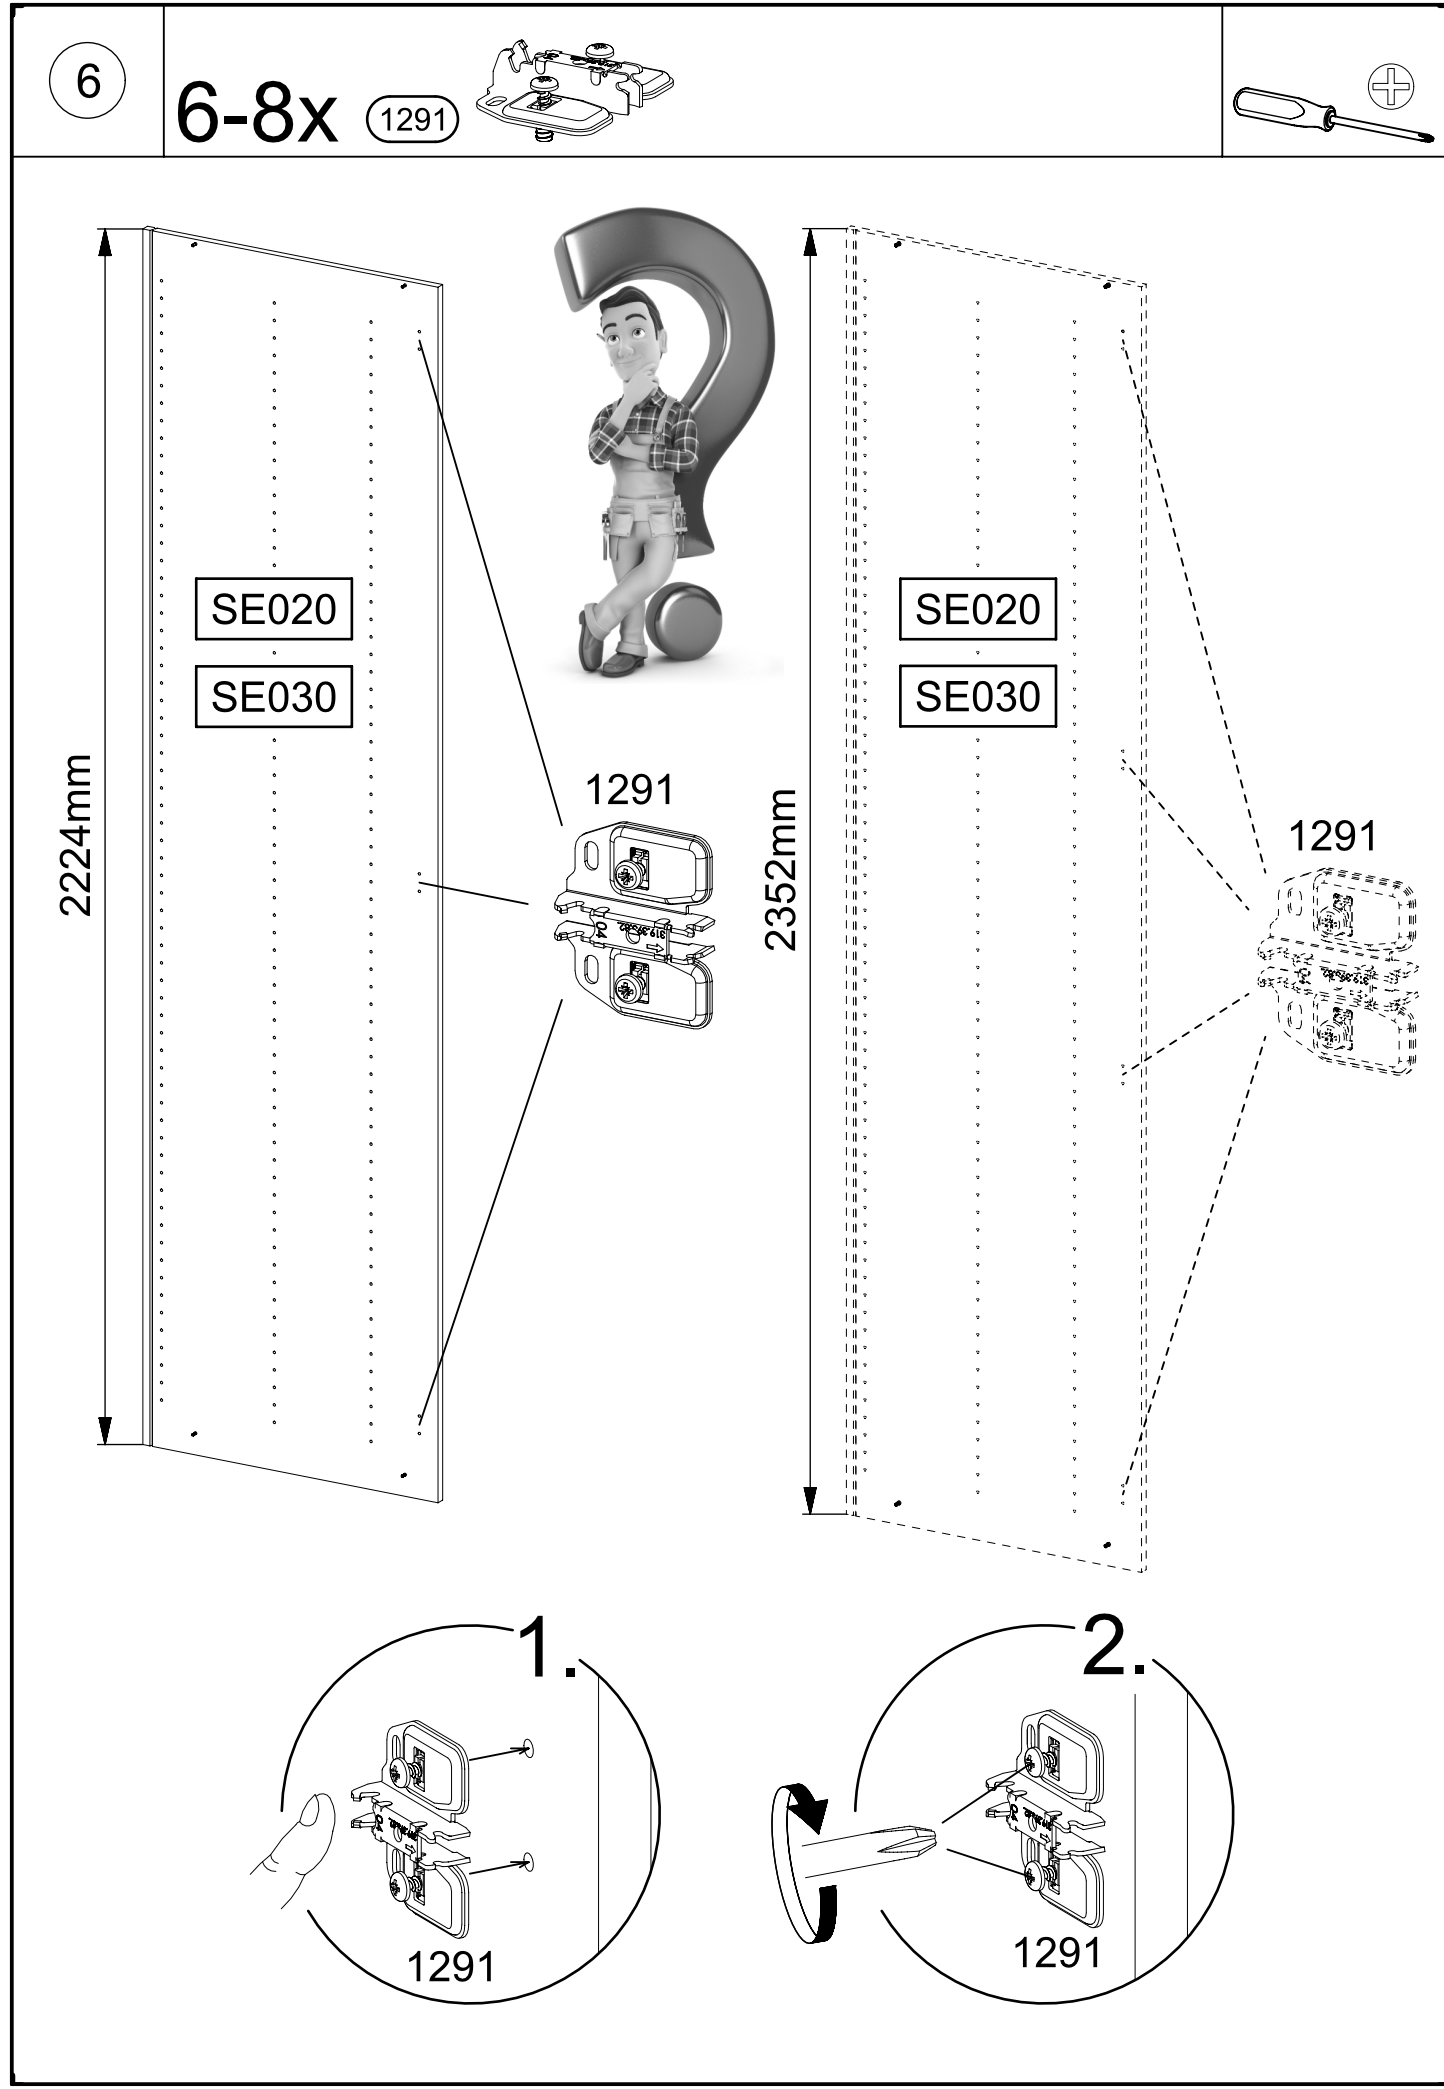

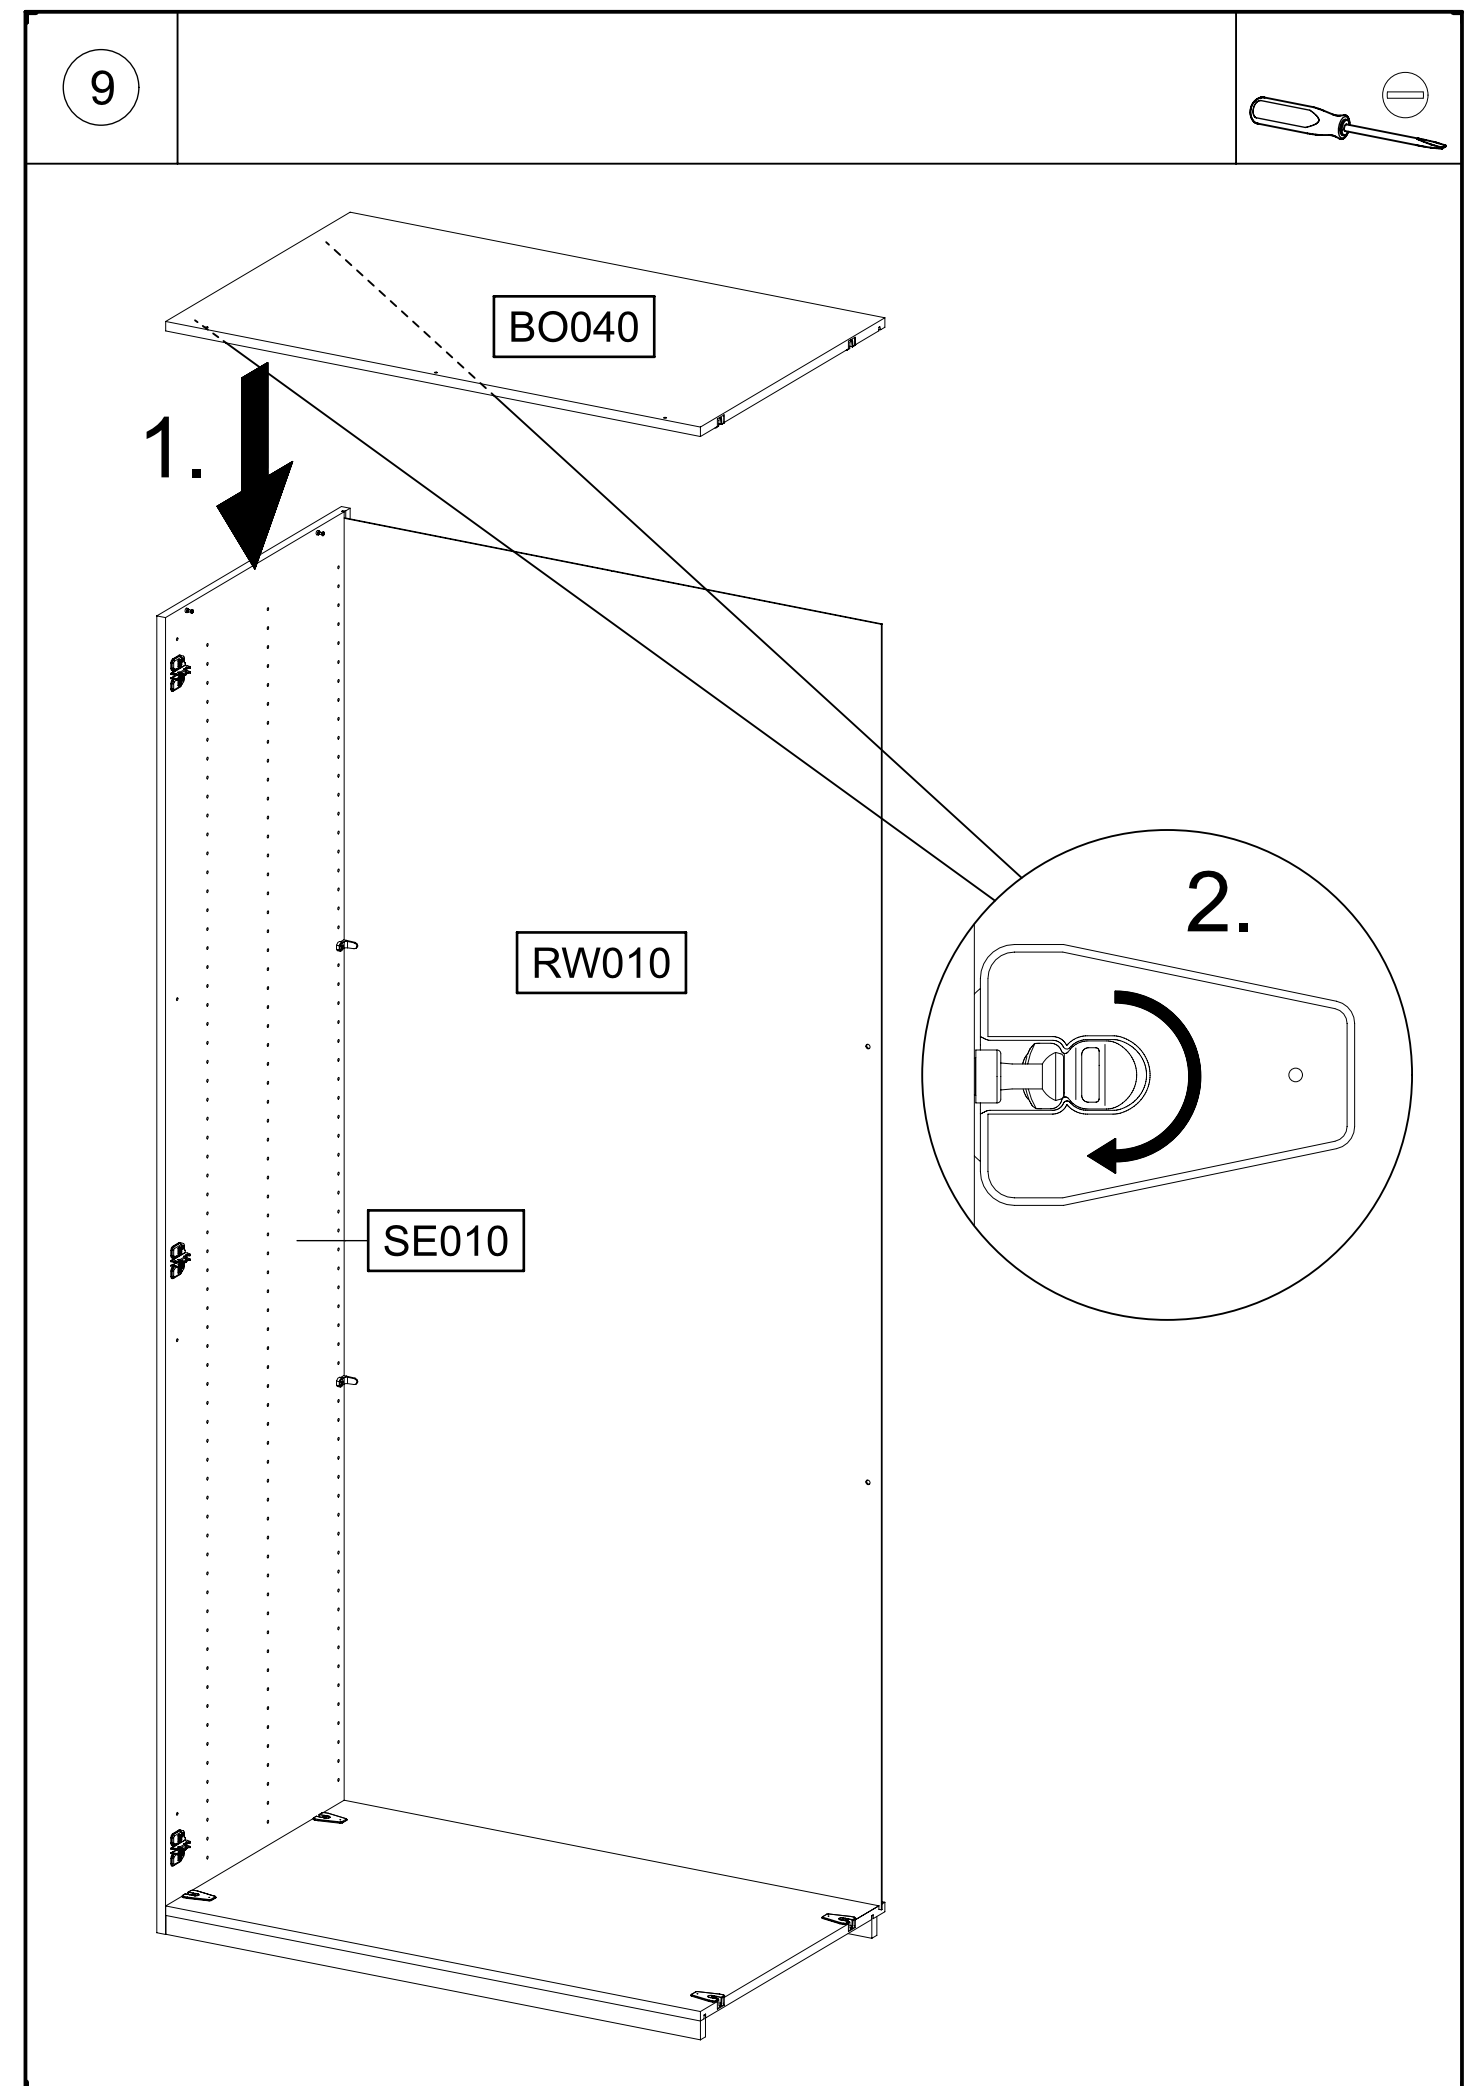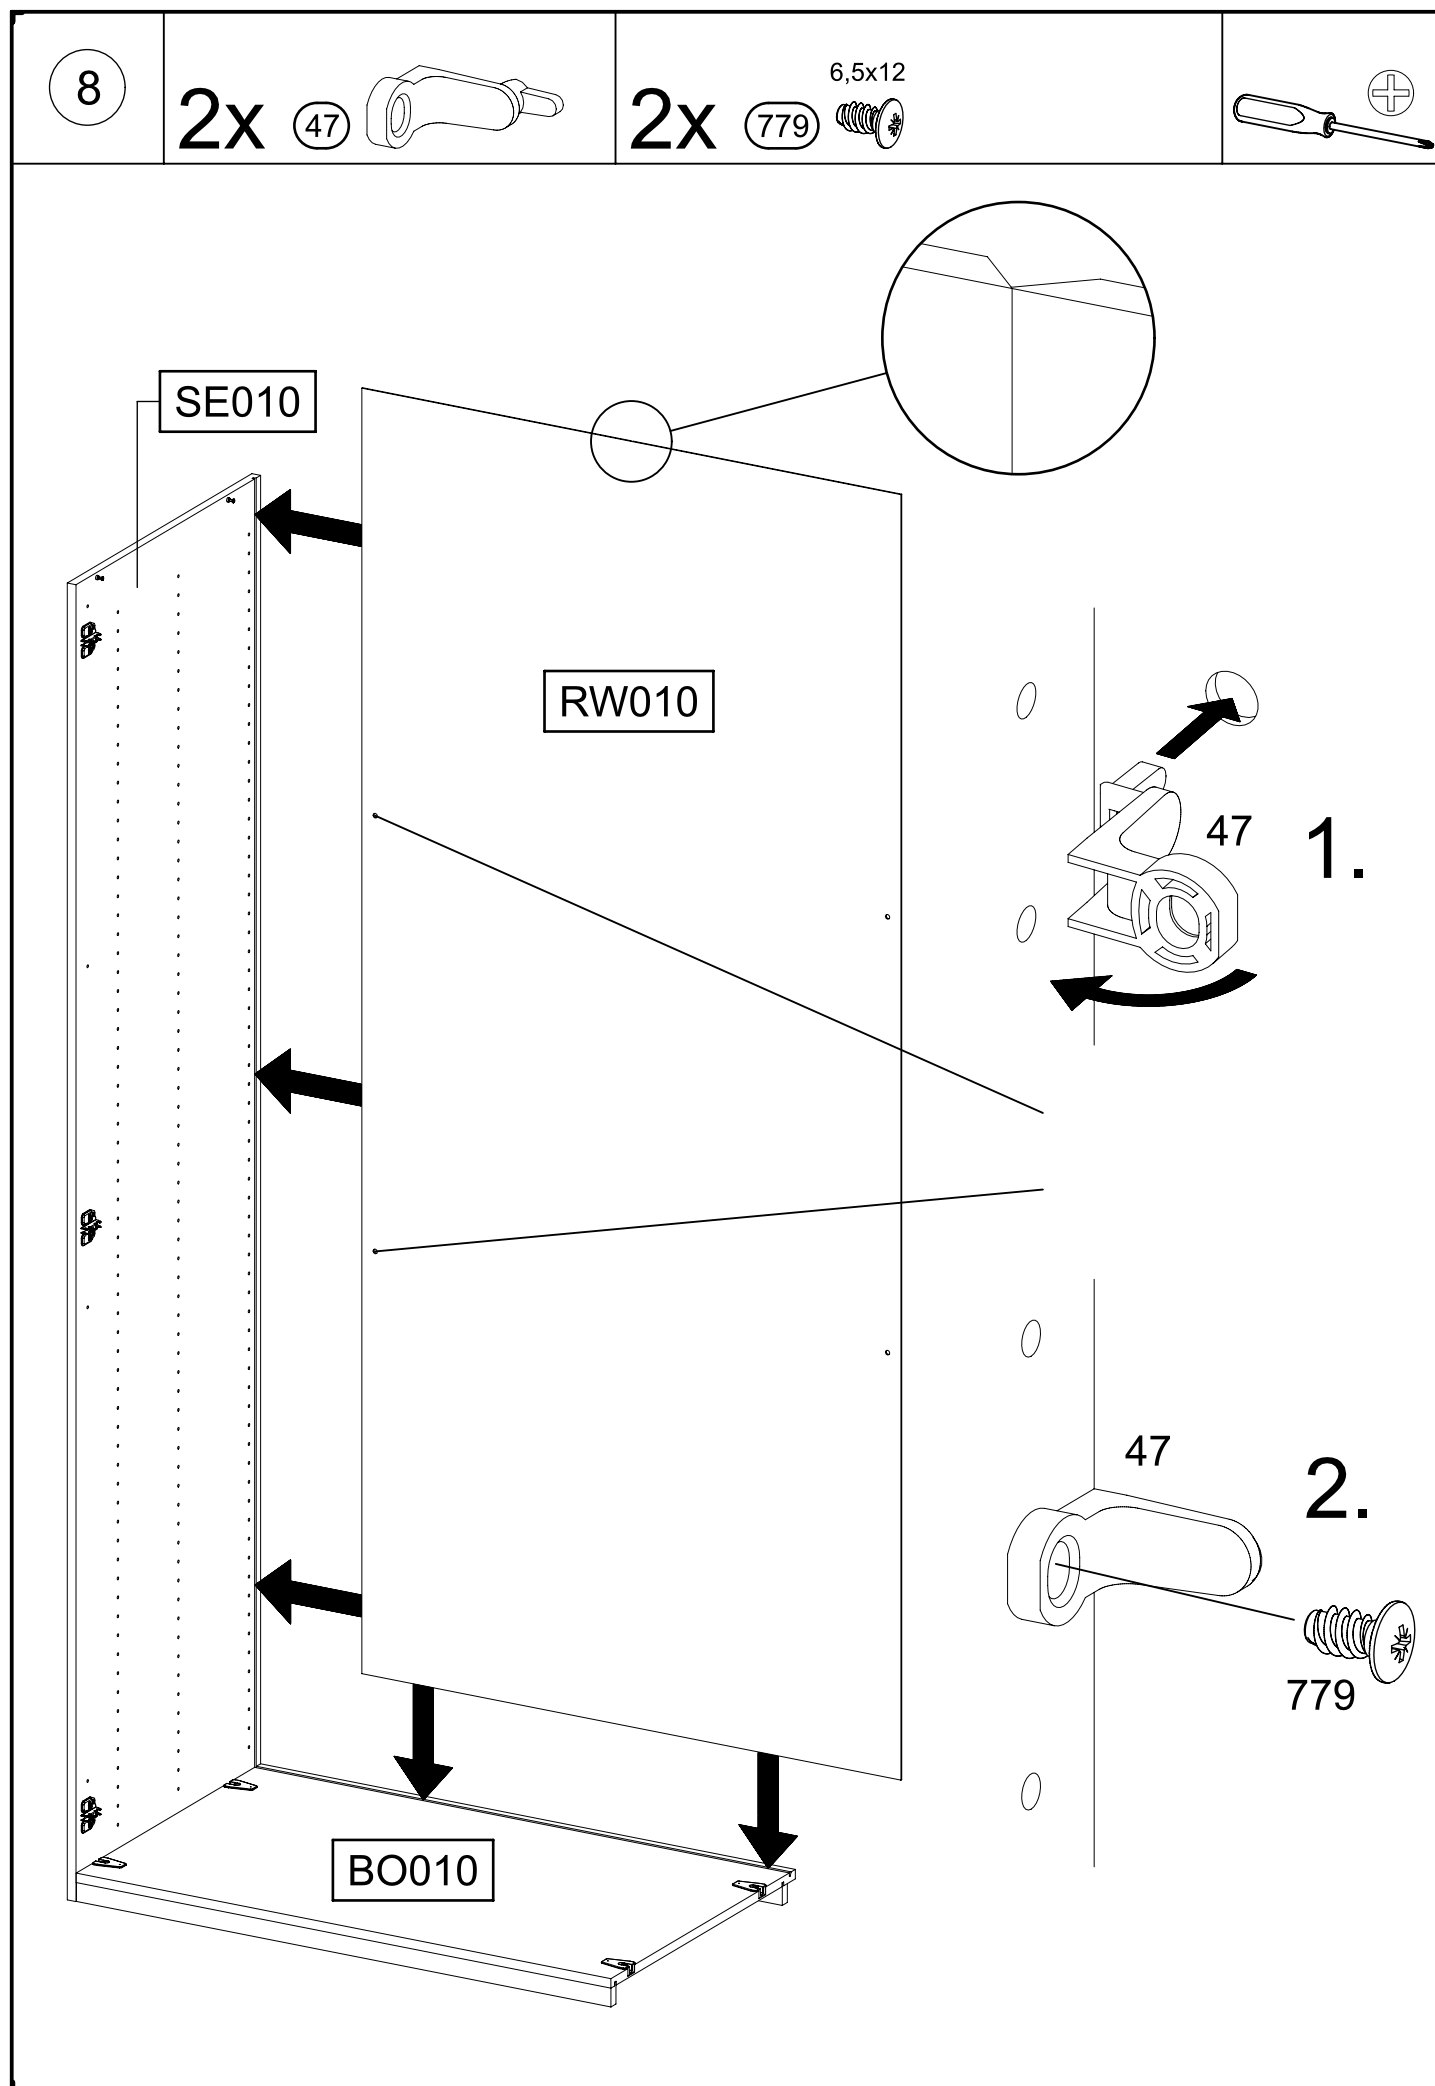


15.

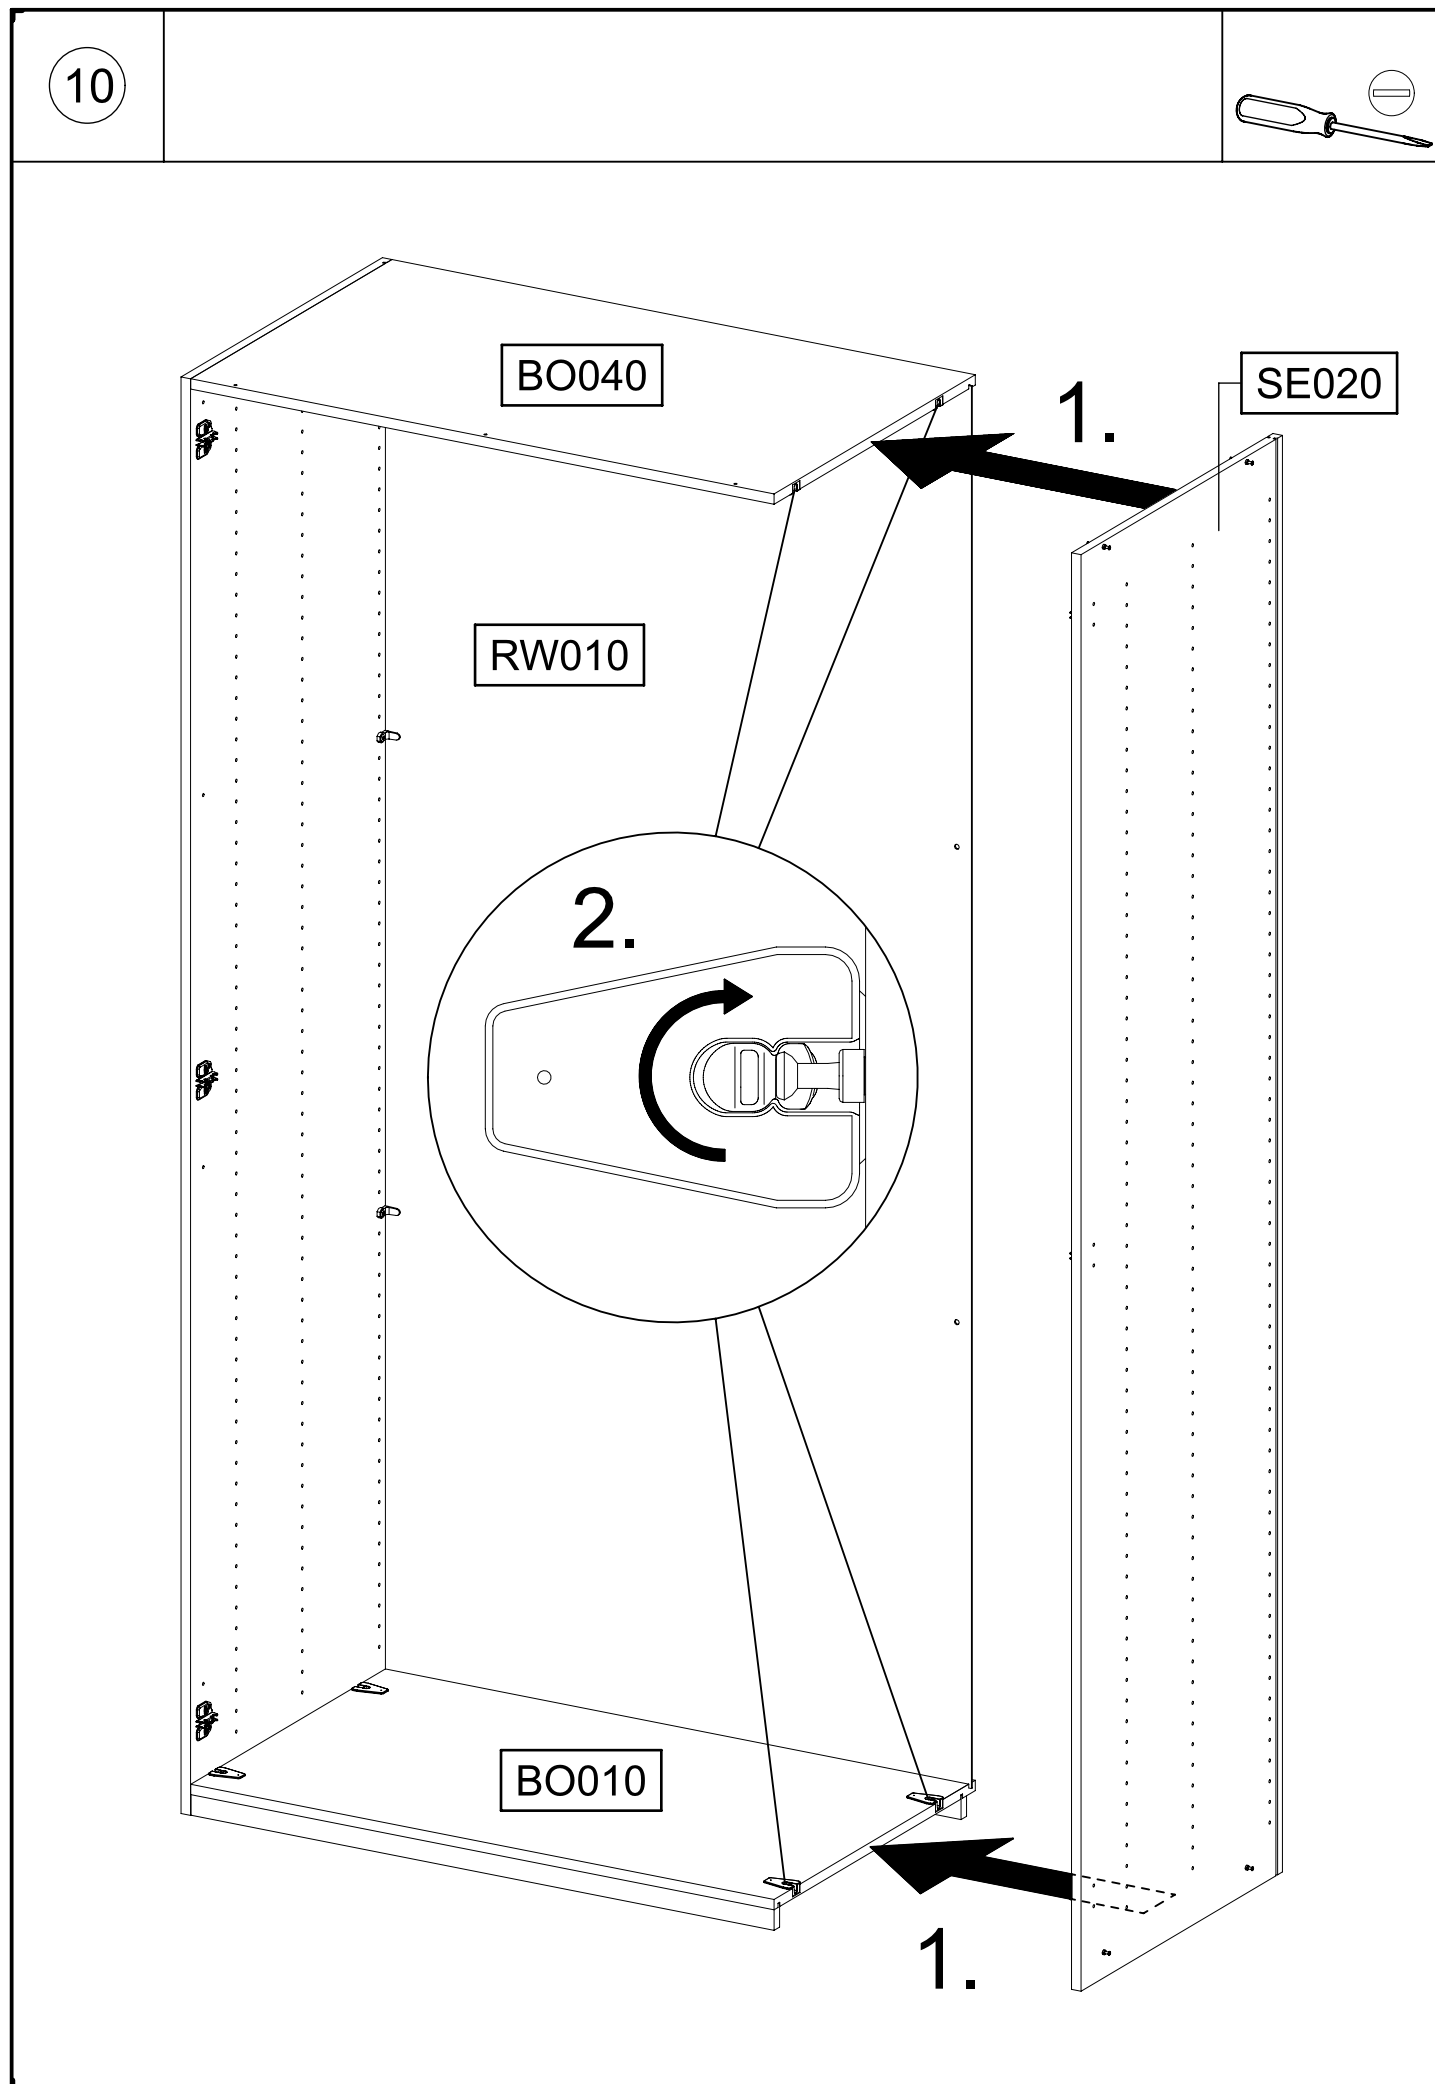


MD105

16.

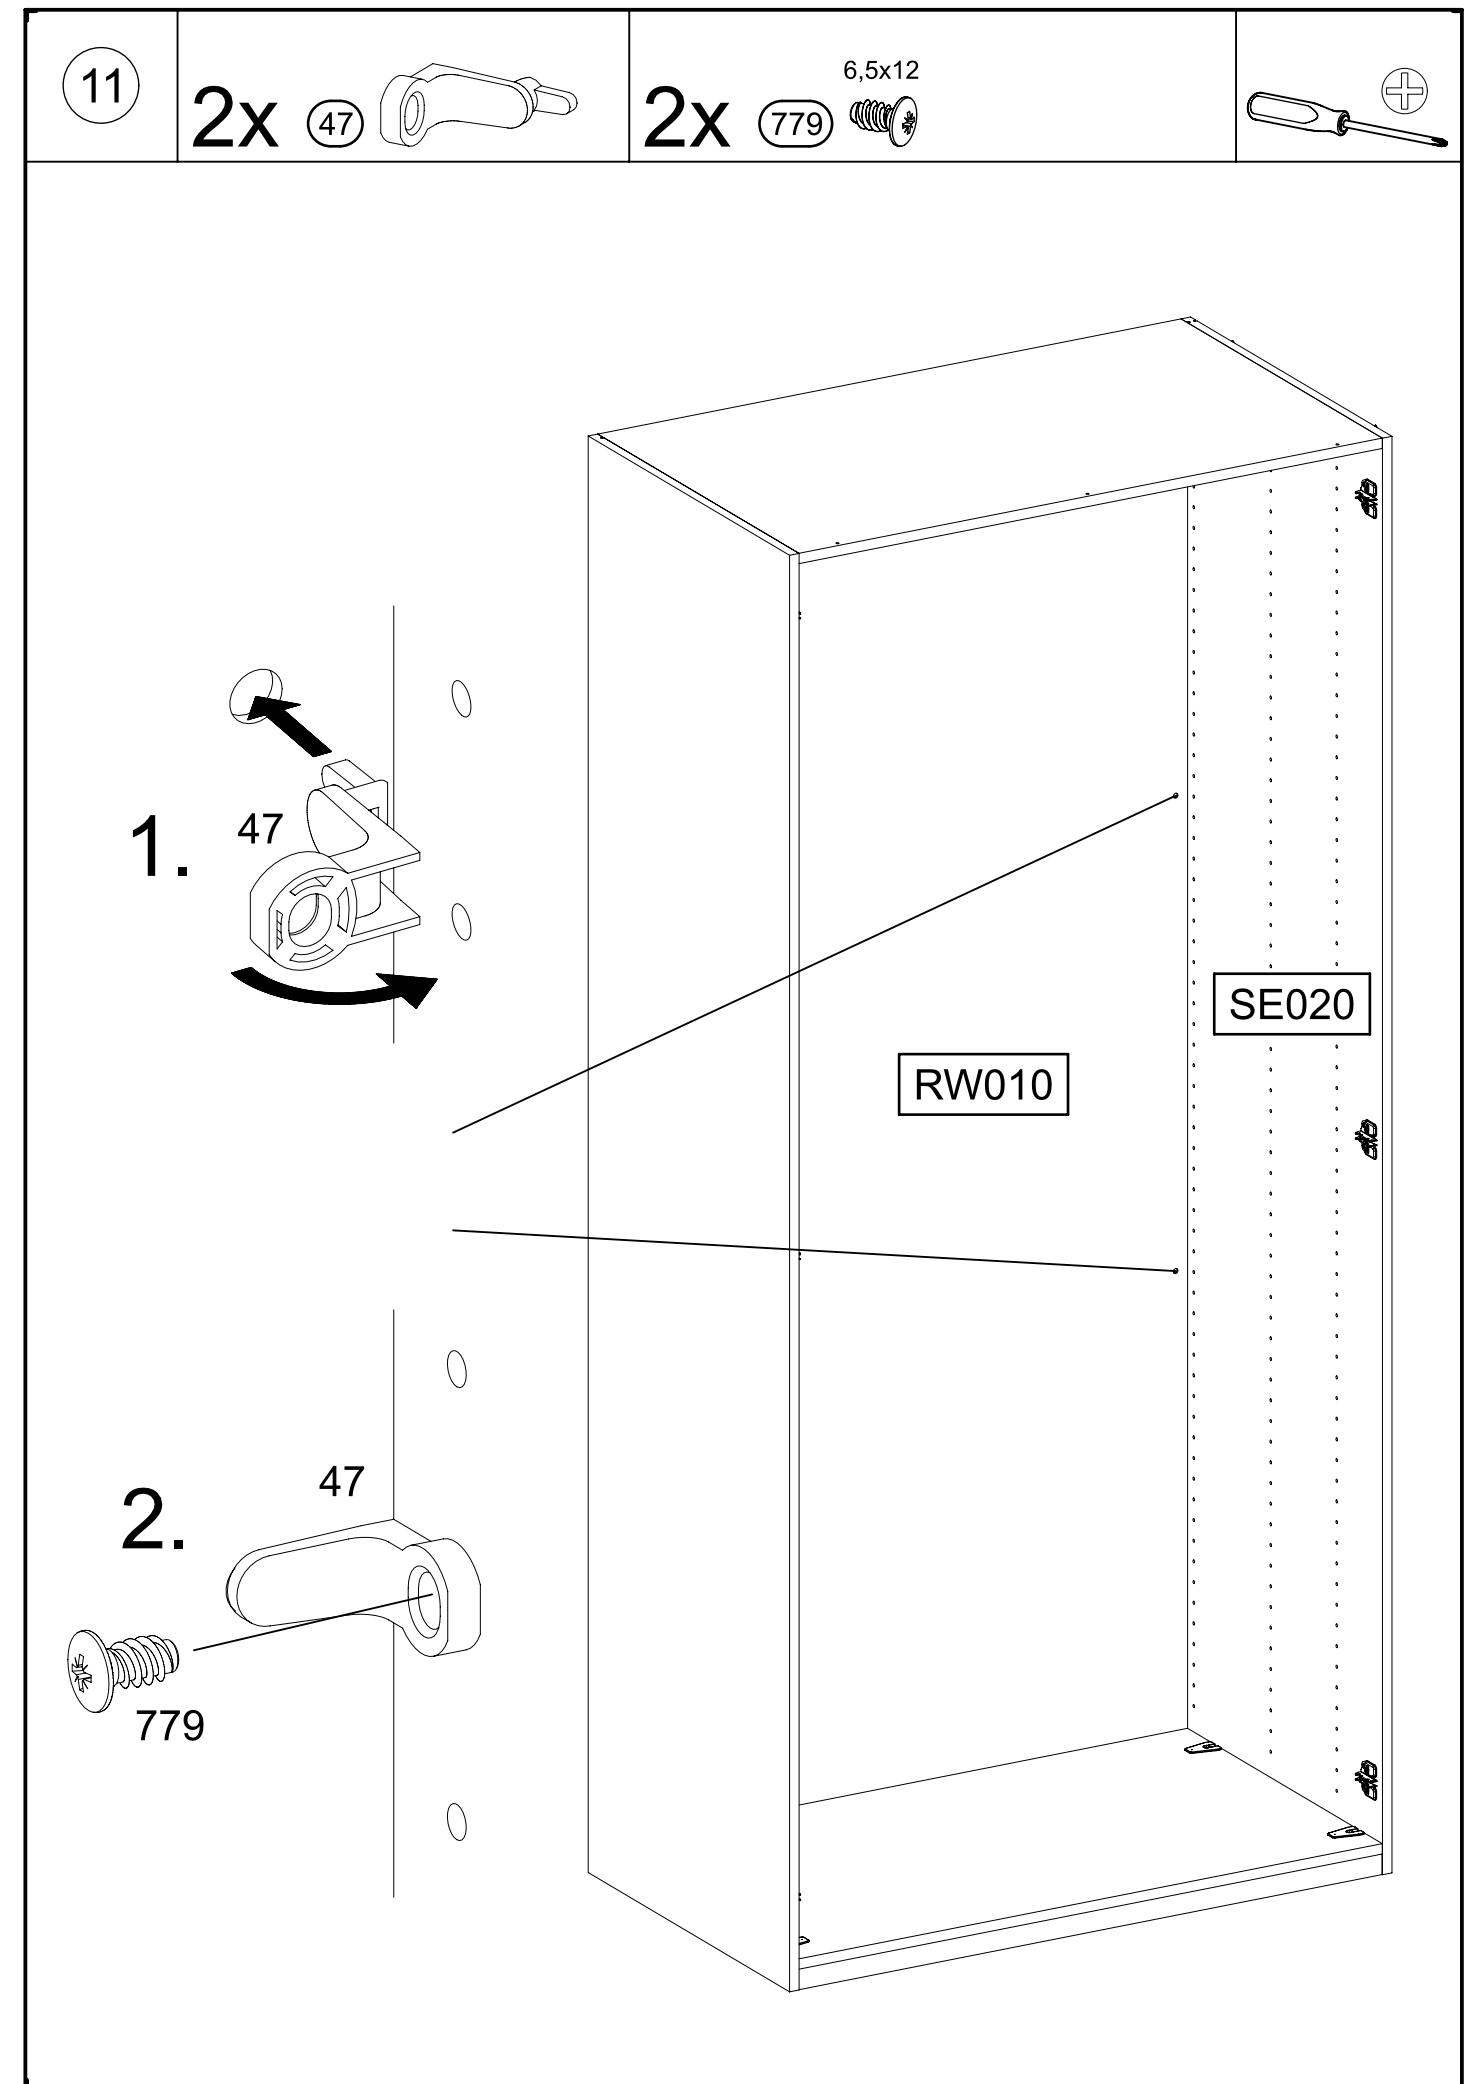


MD105

17.


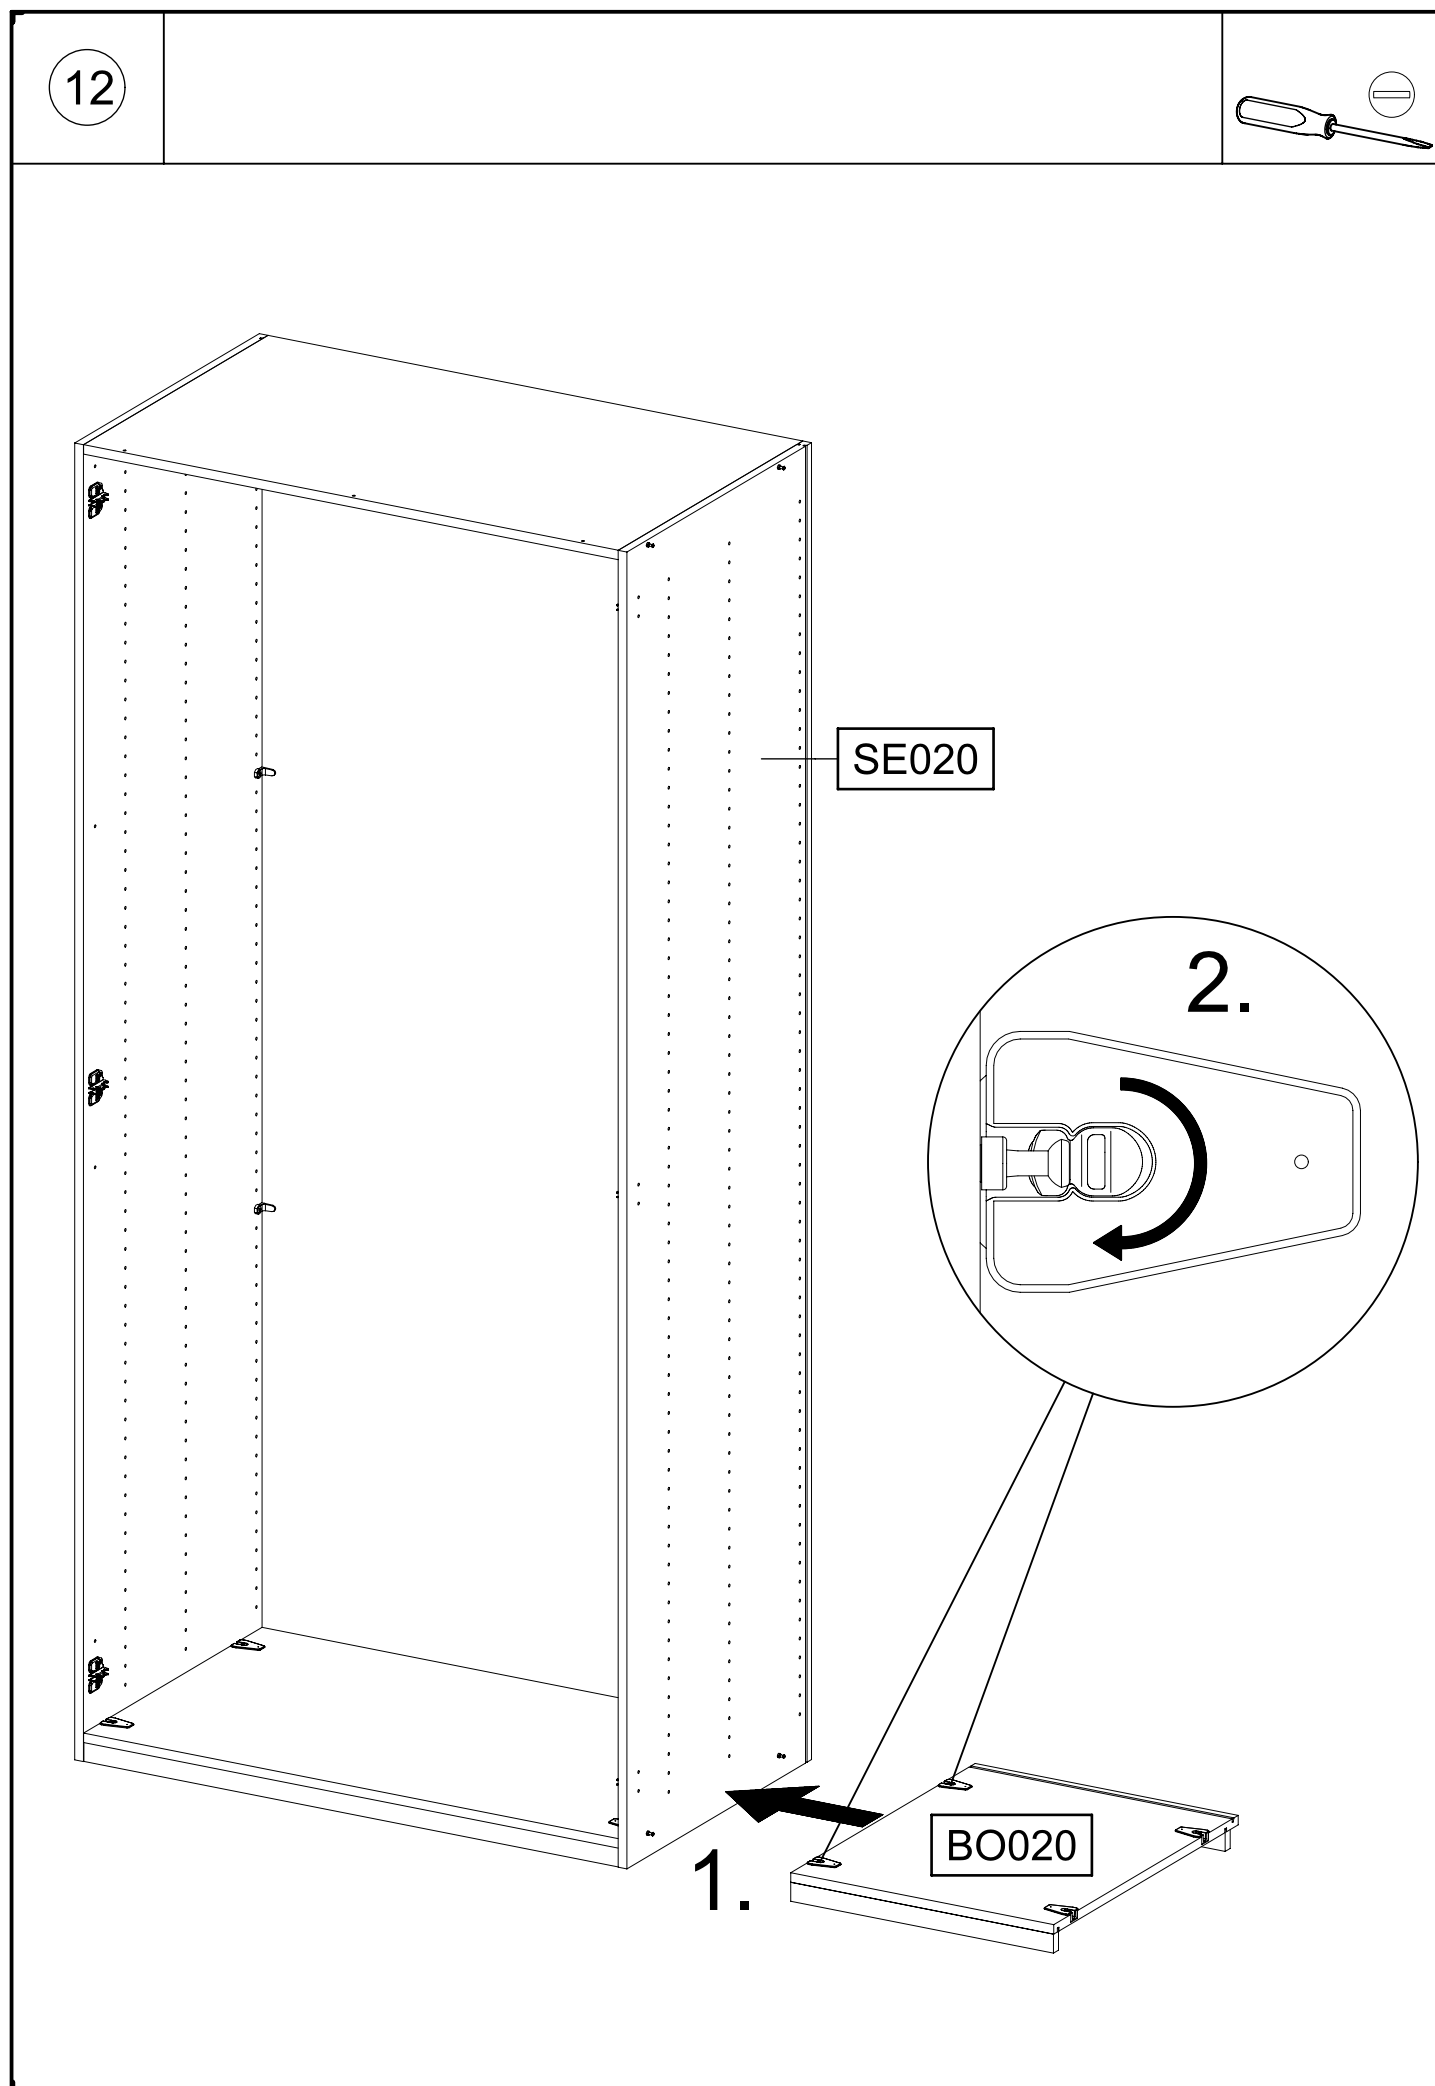




MD105



18.

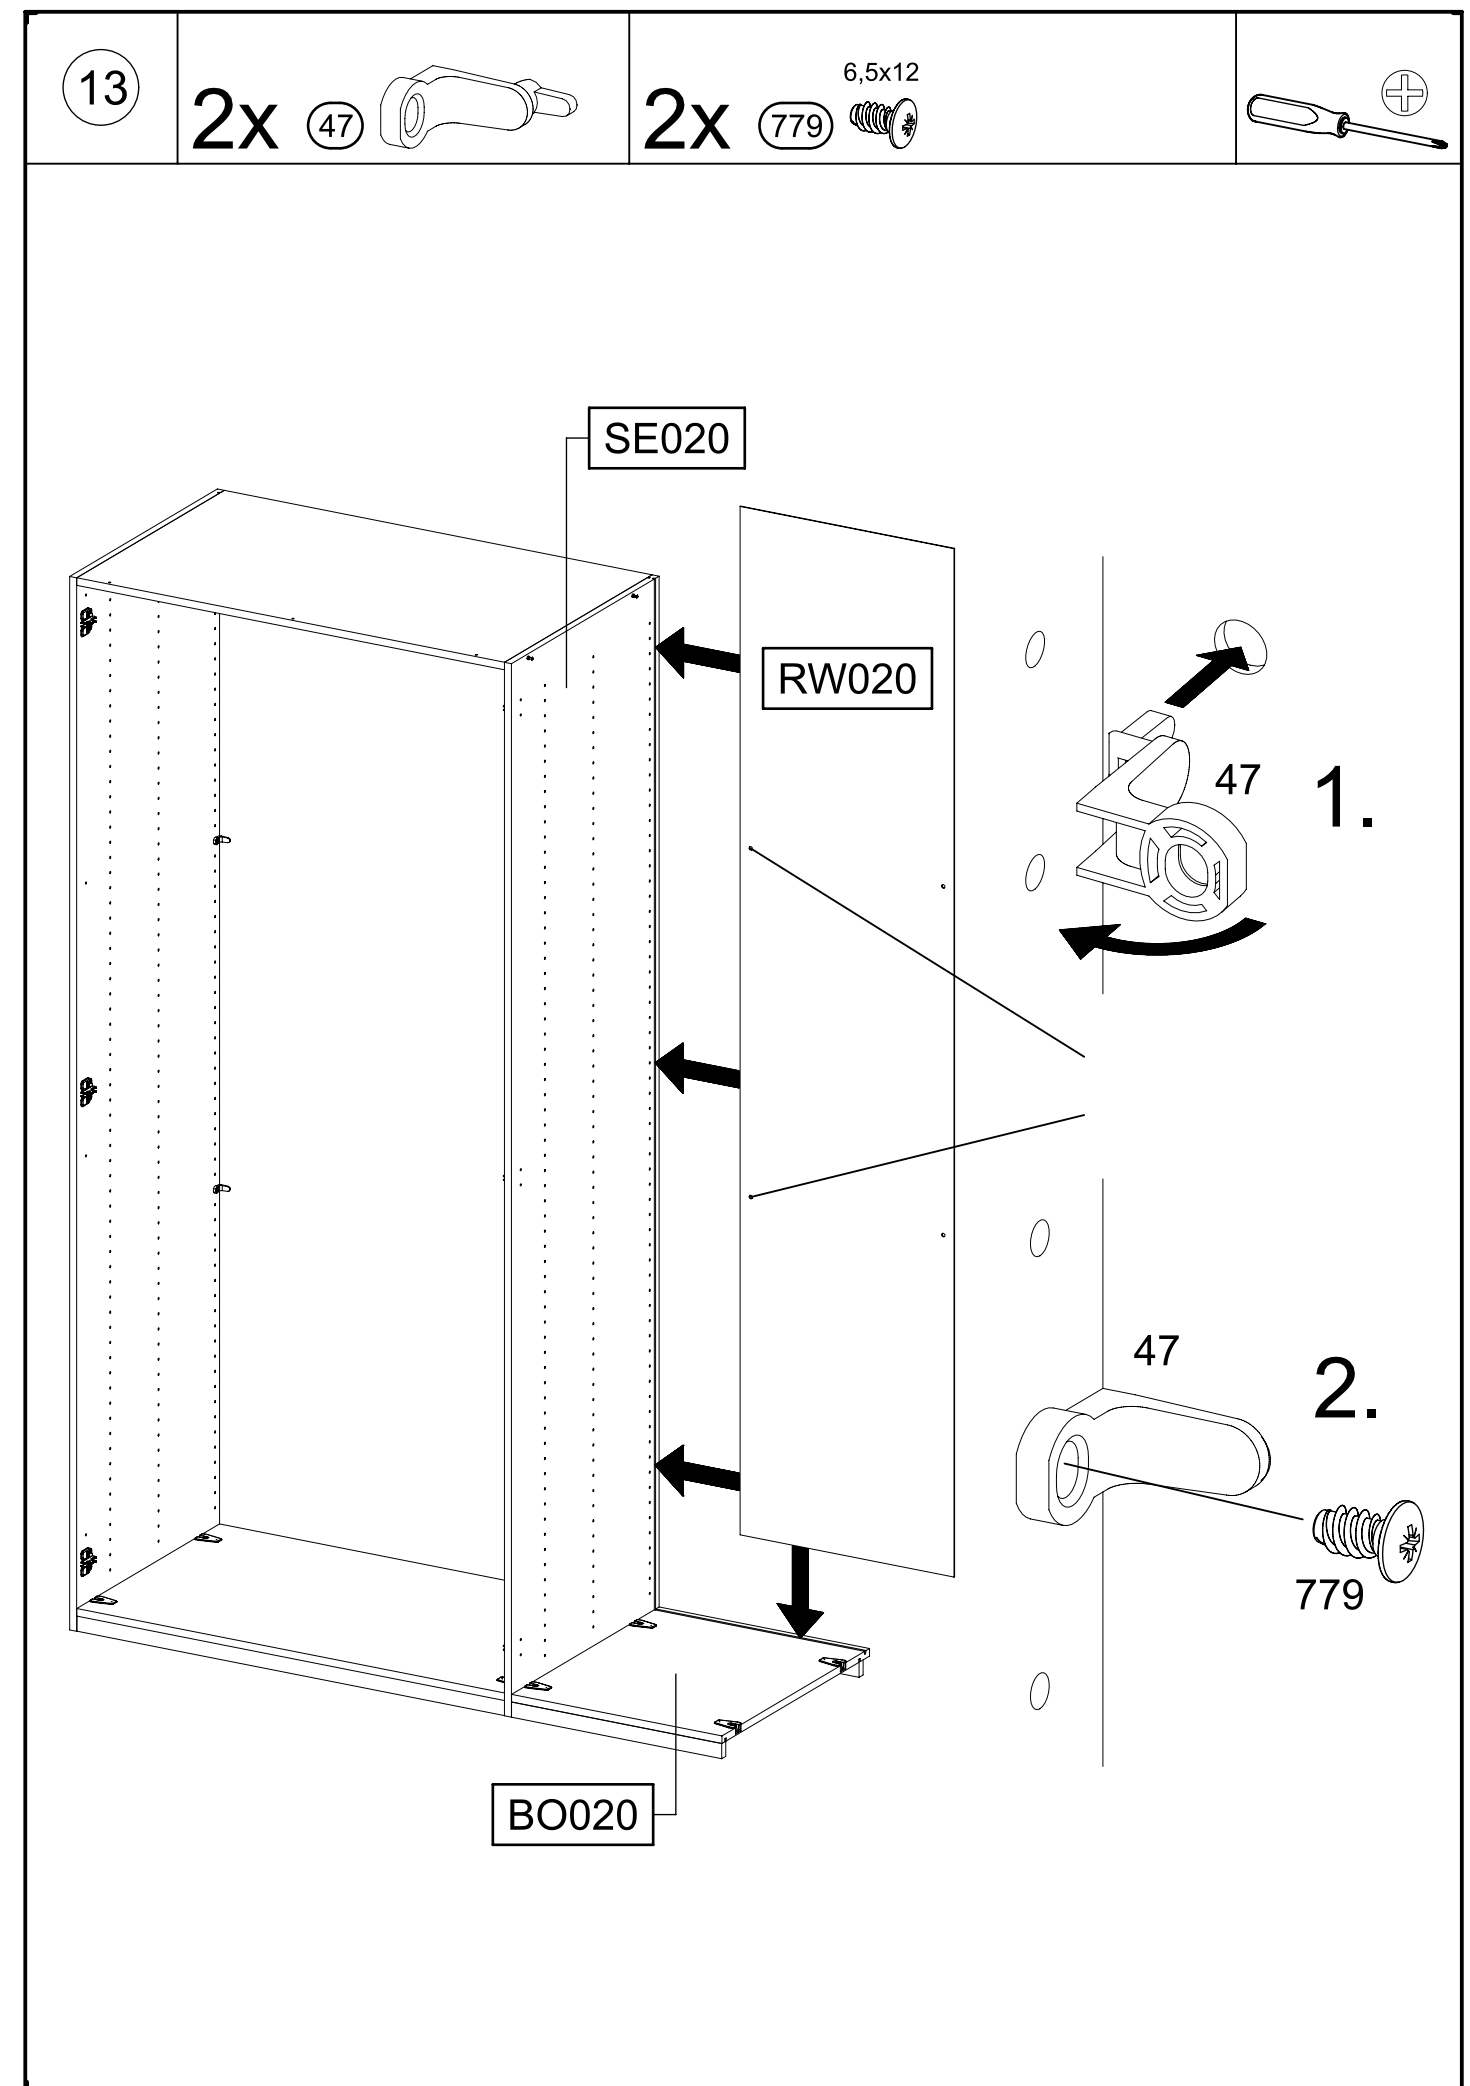


MD105

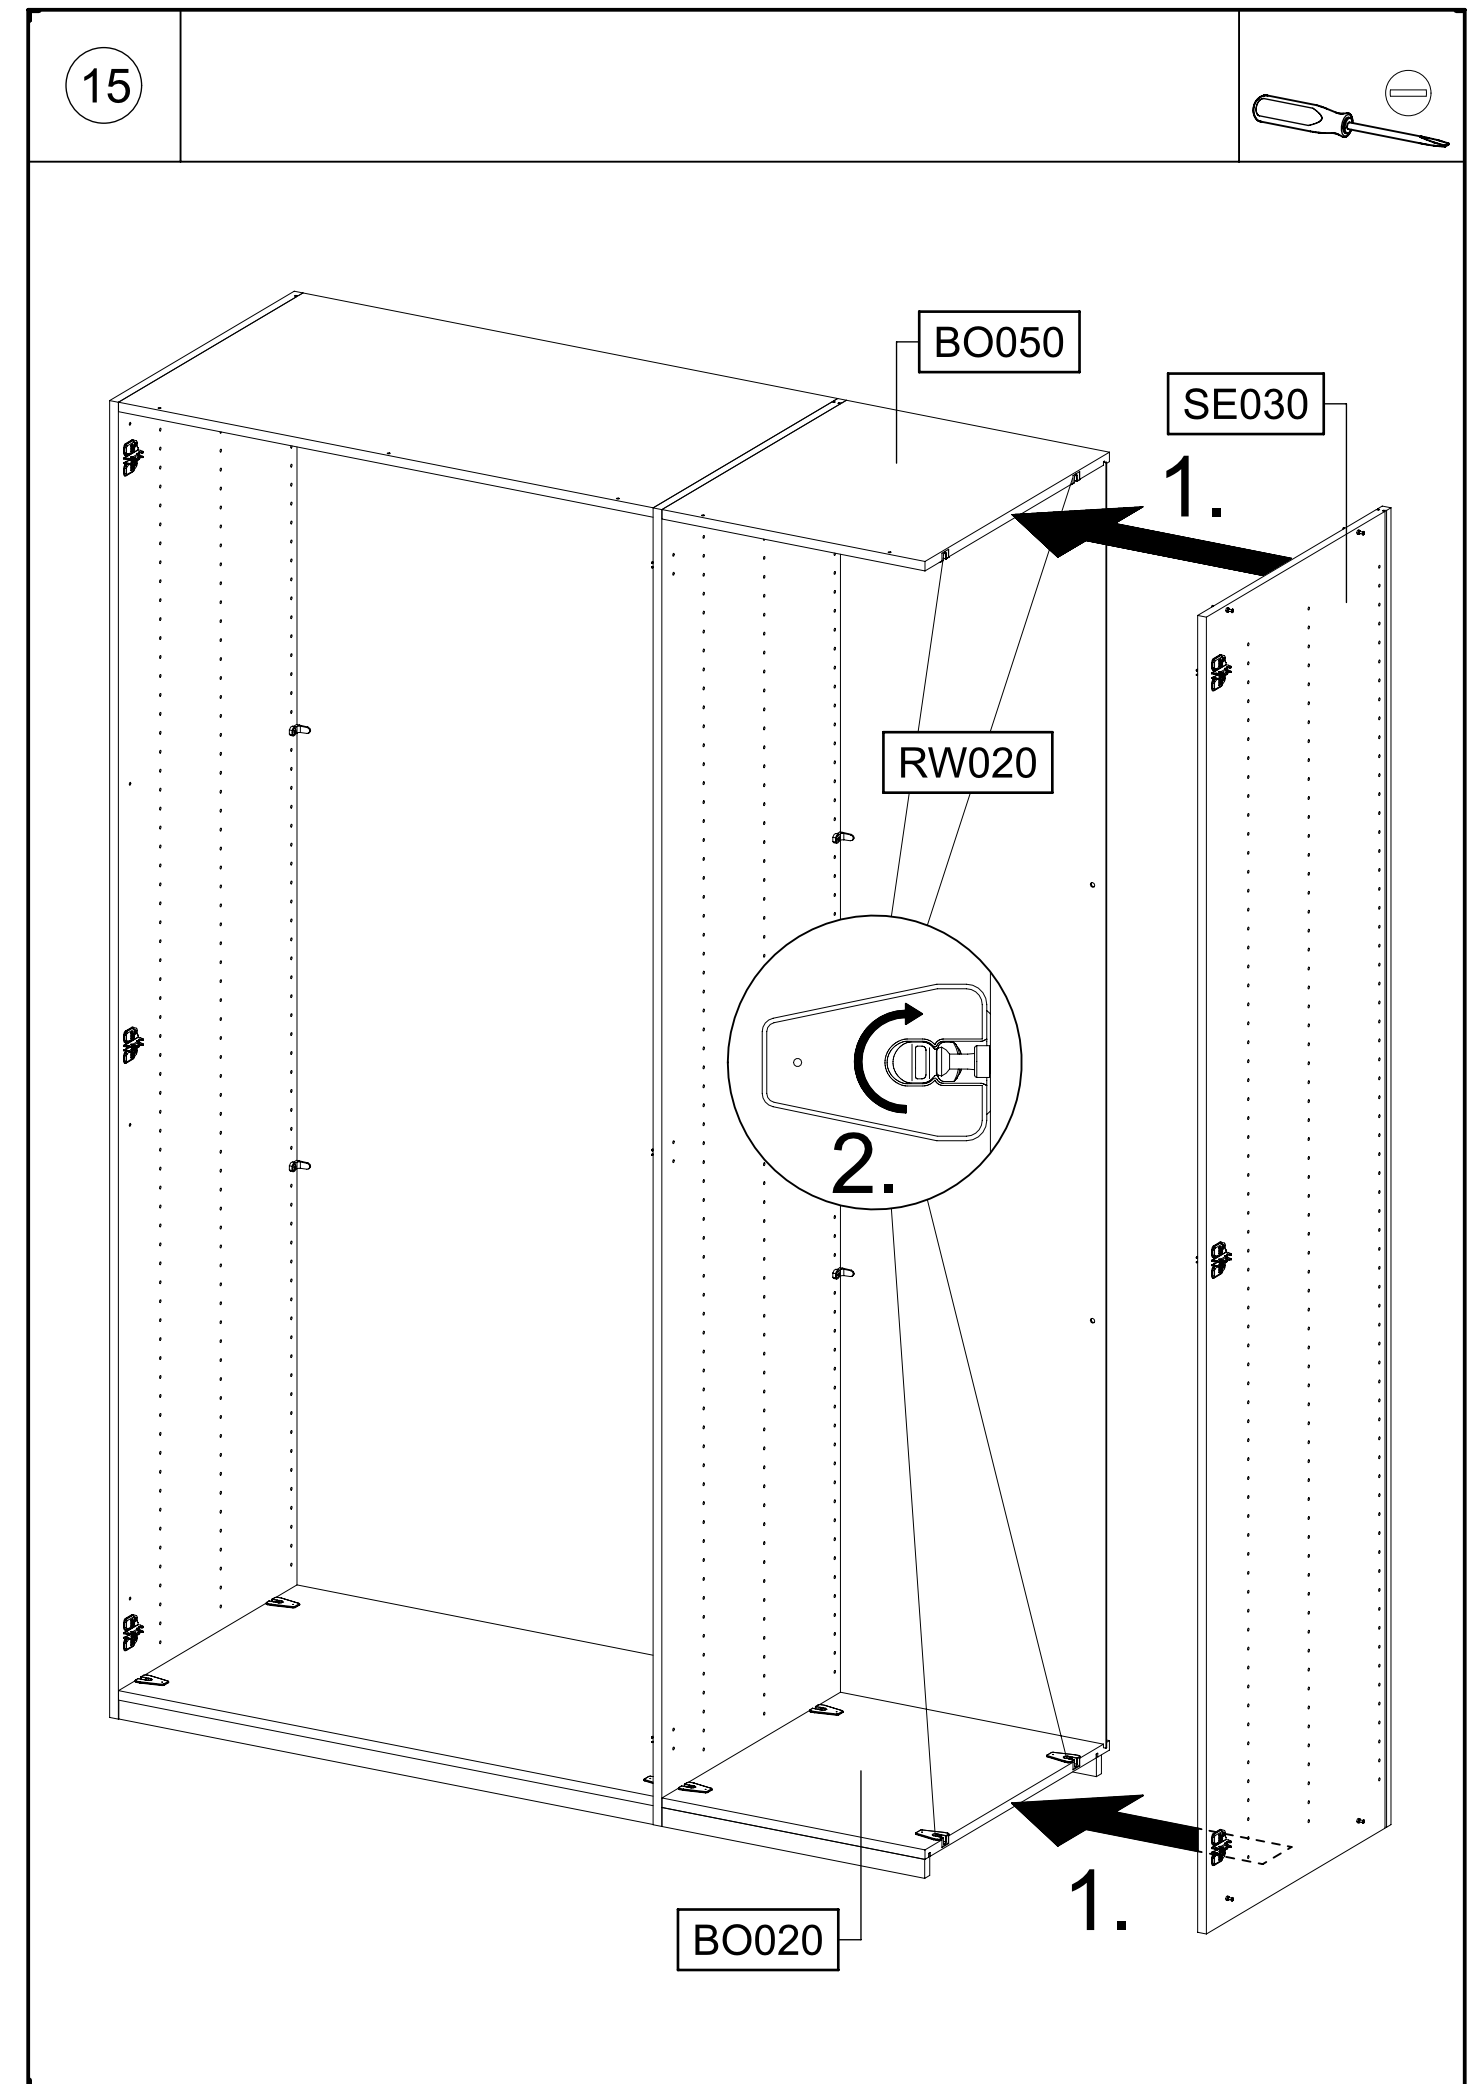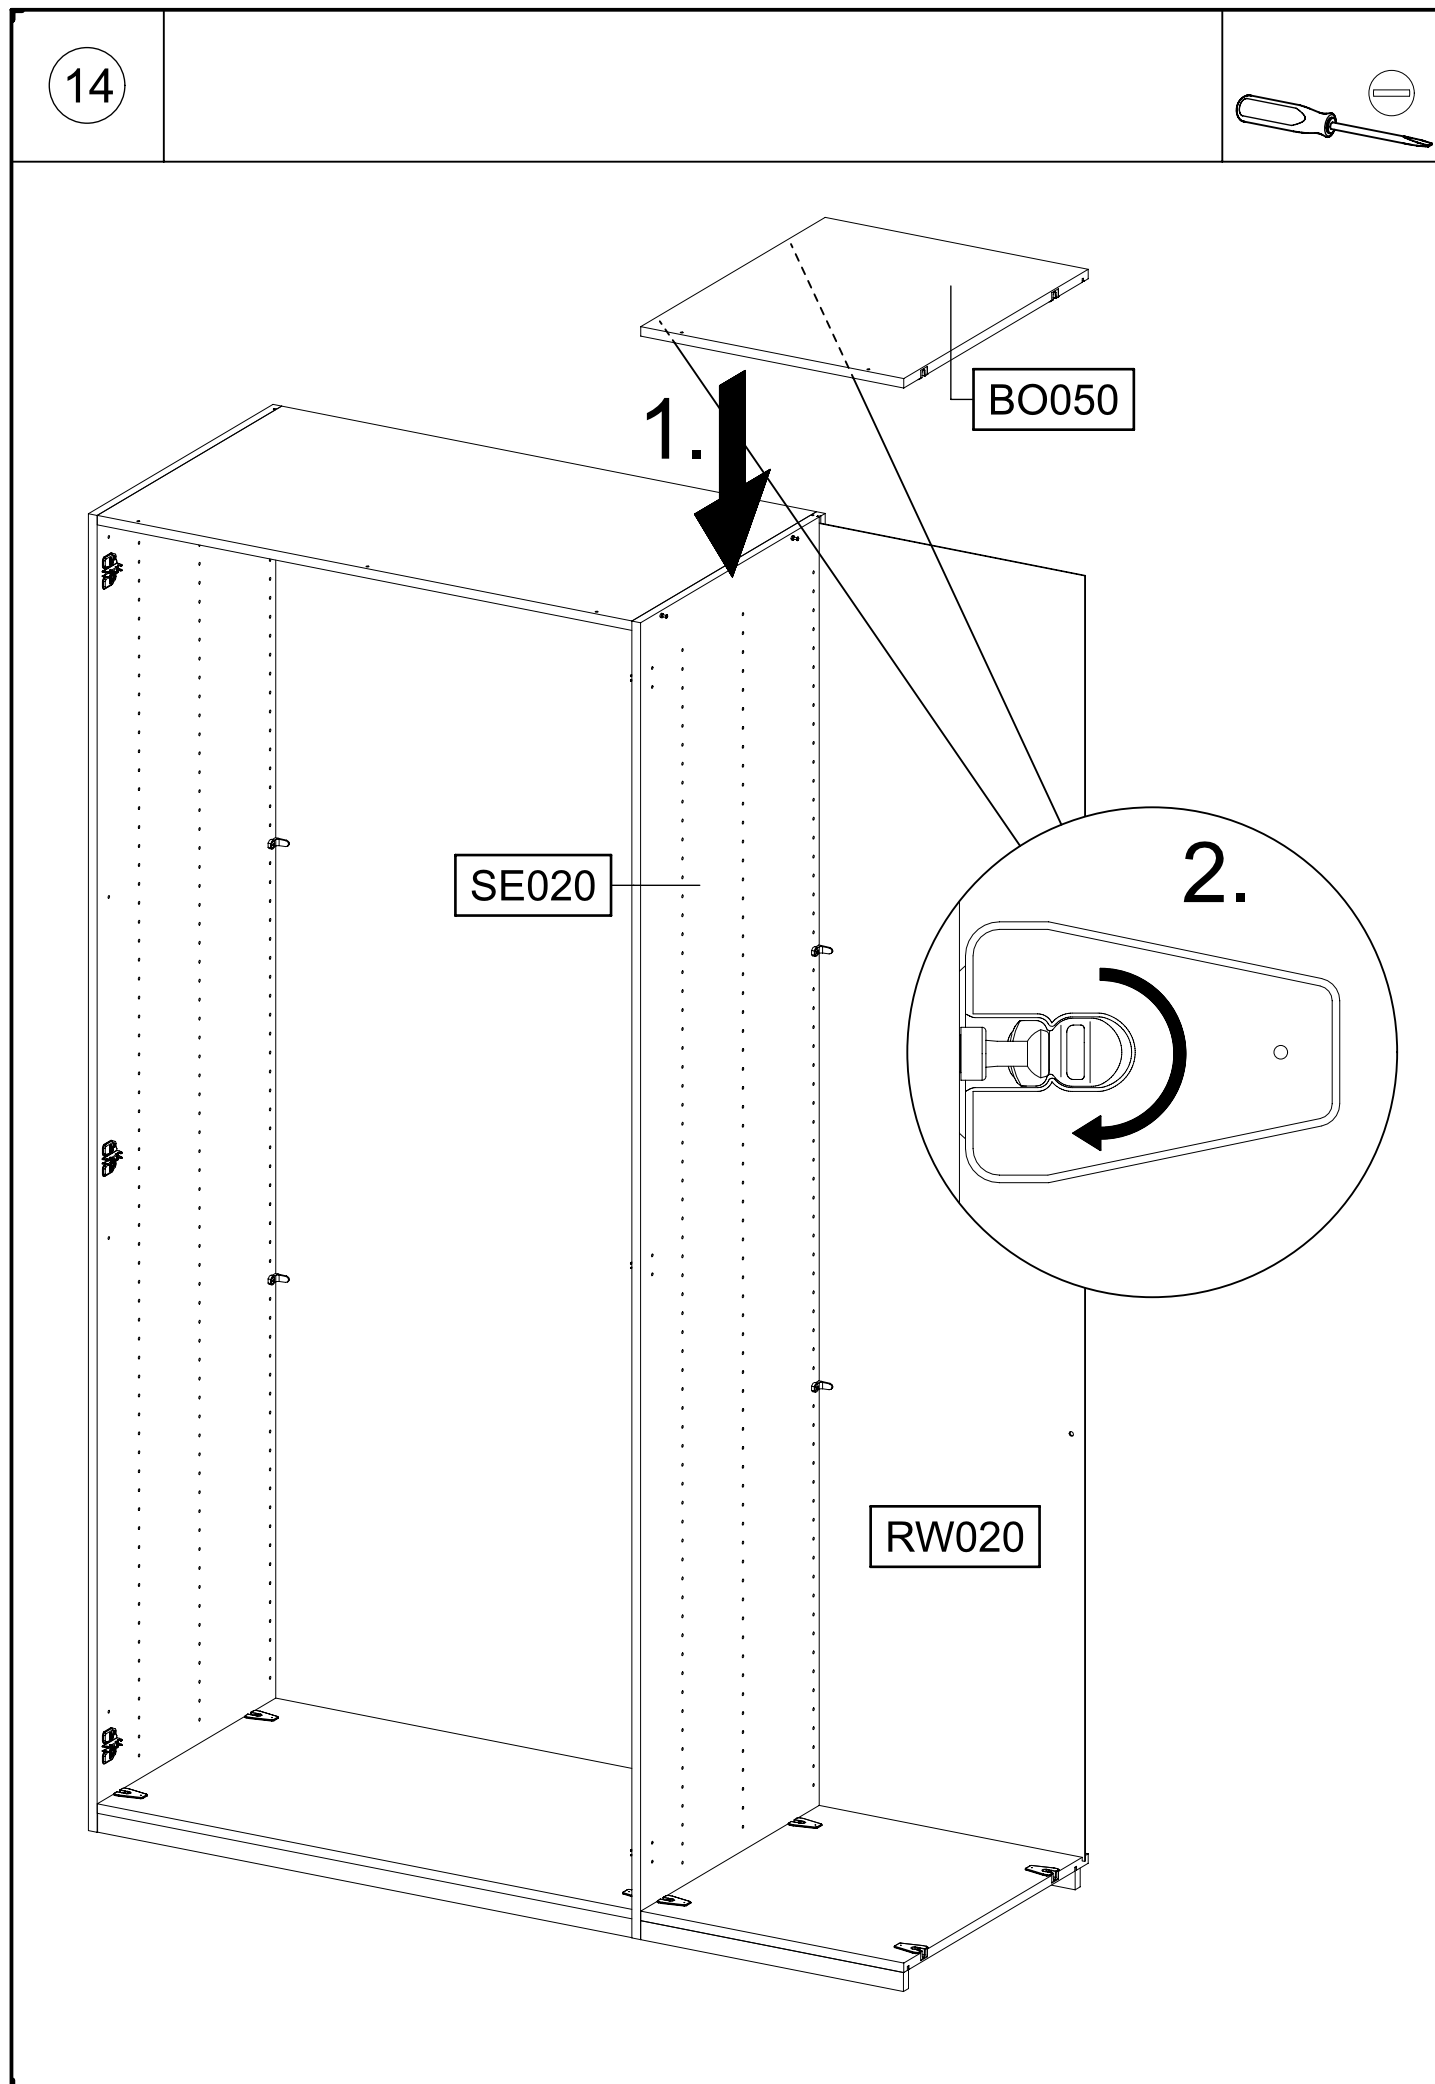

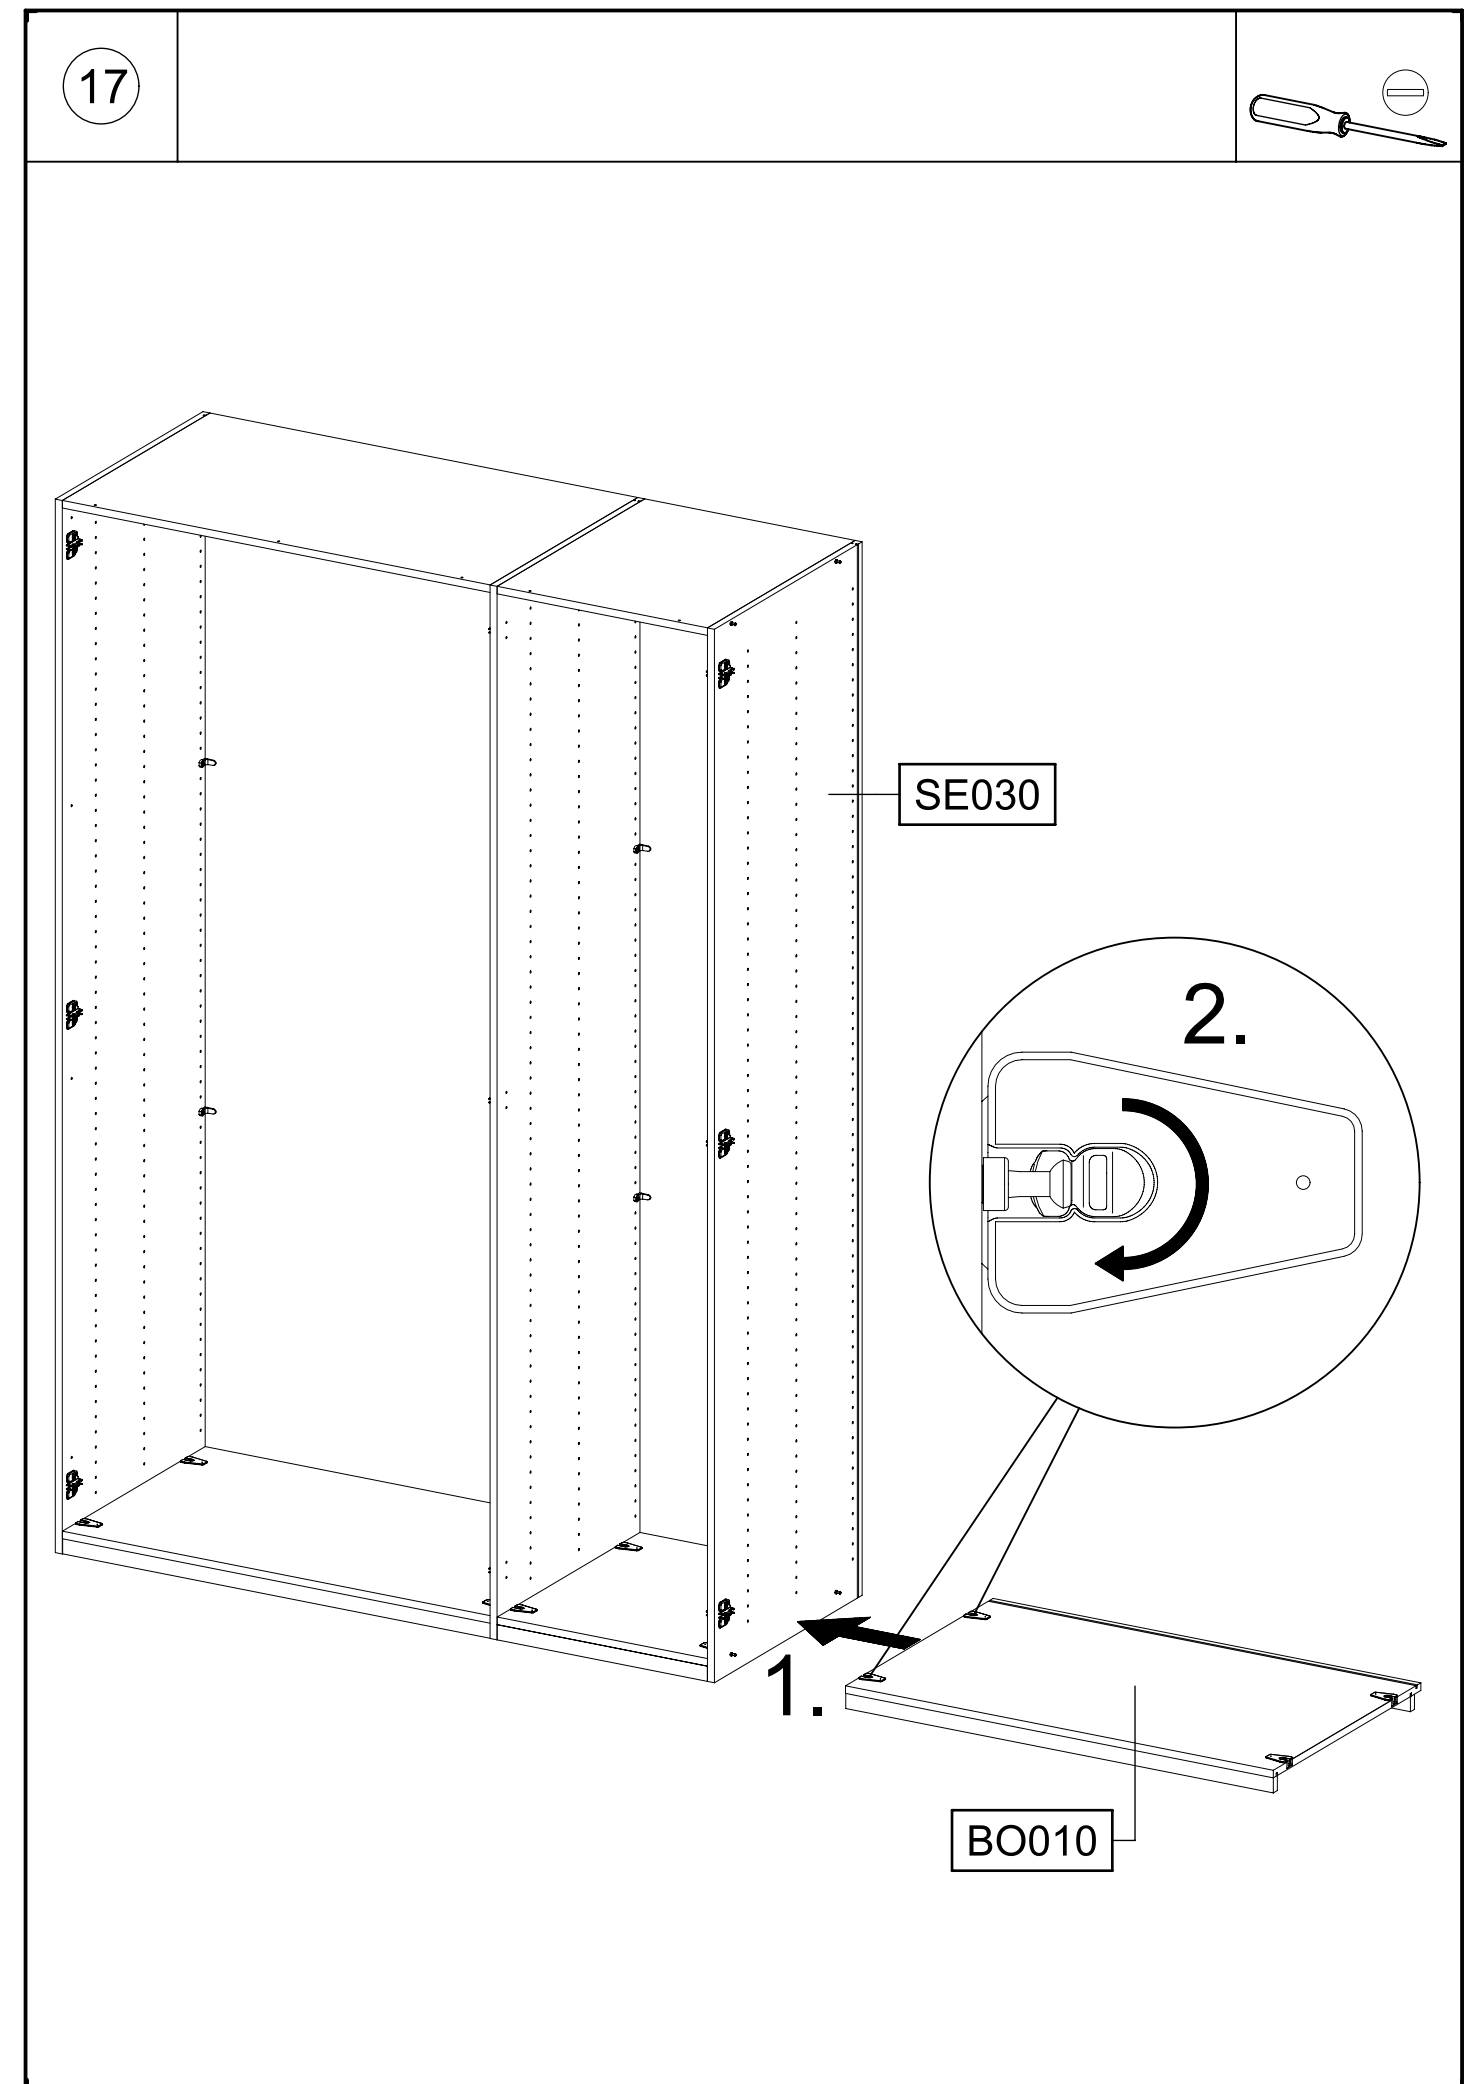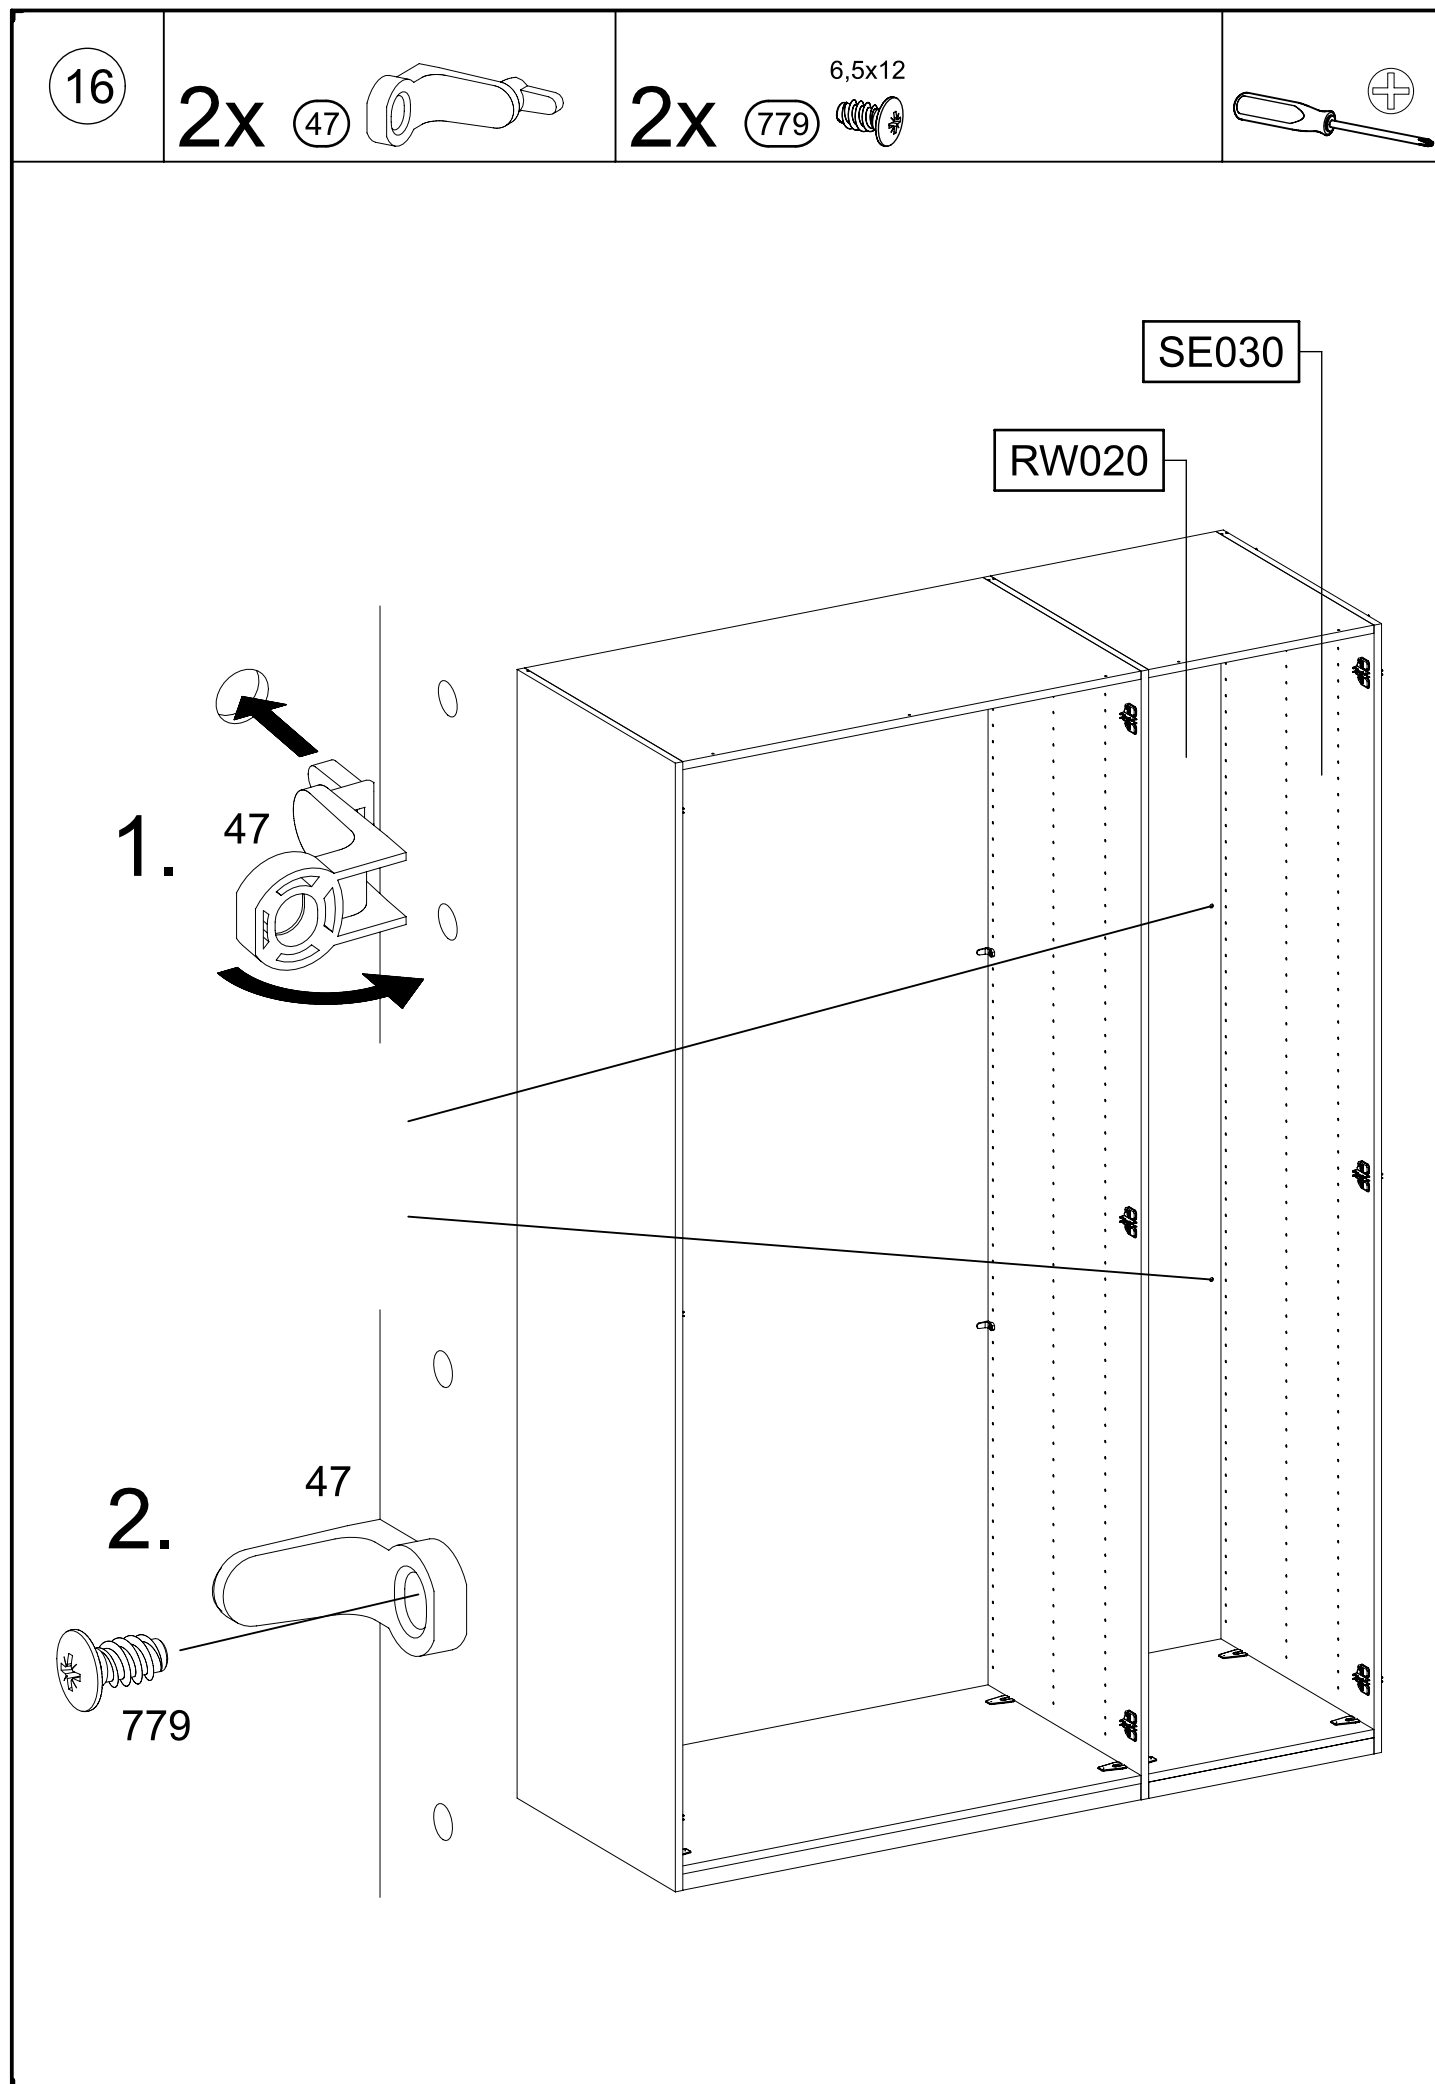

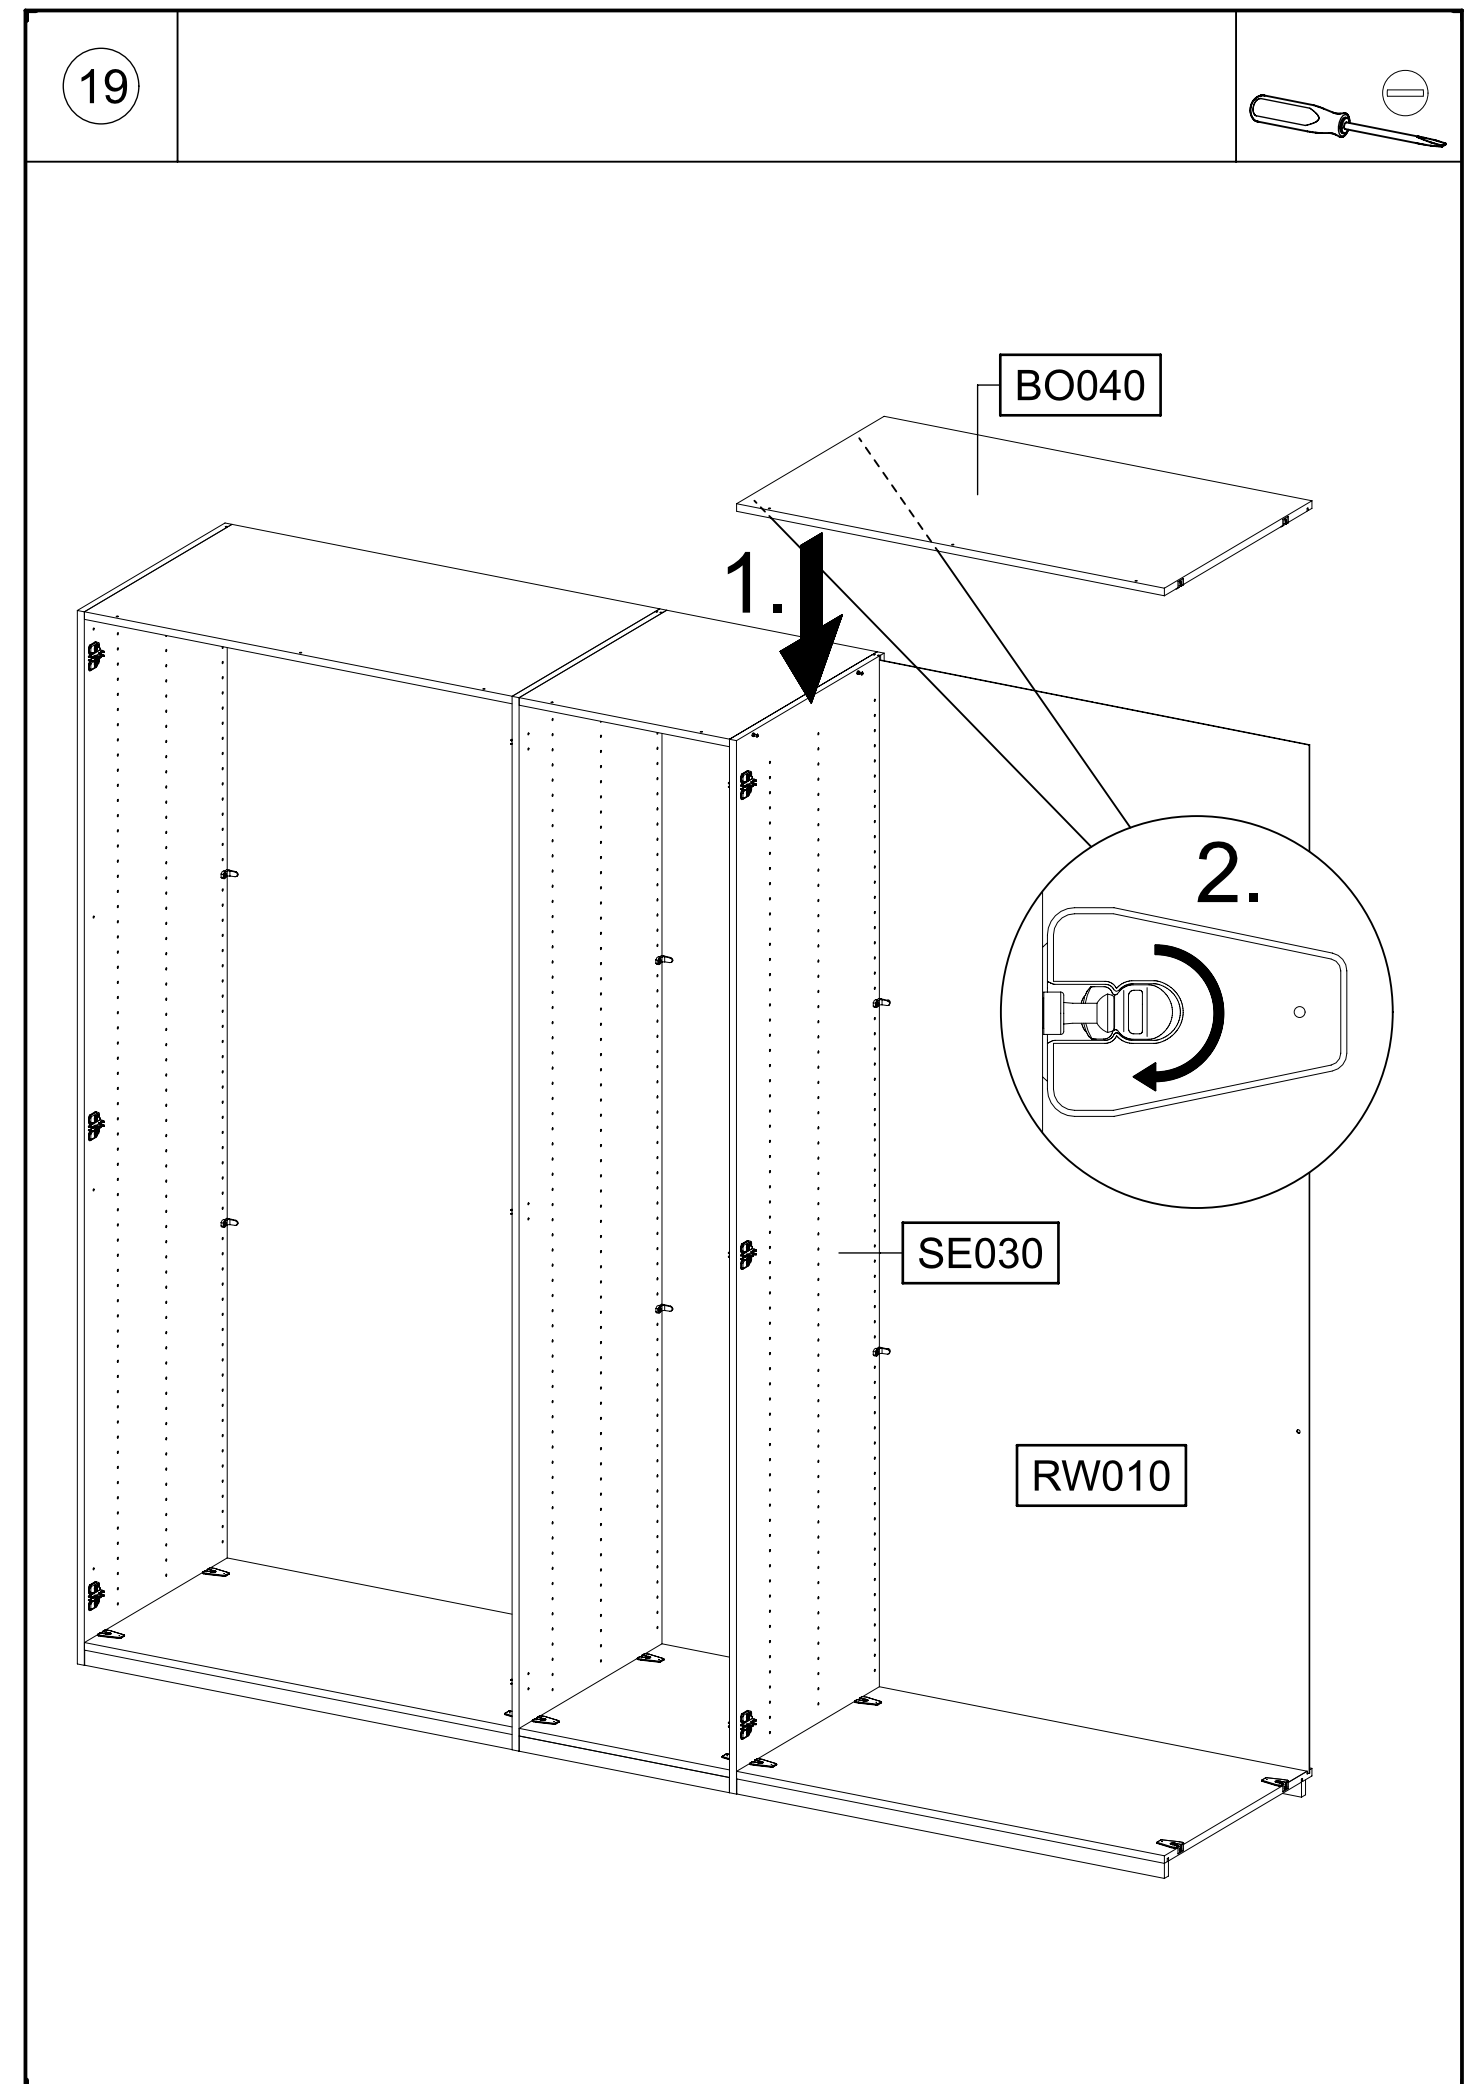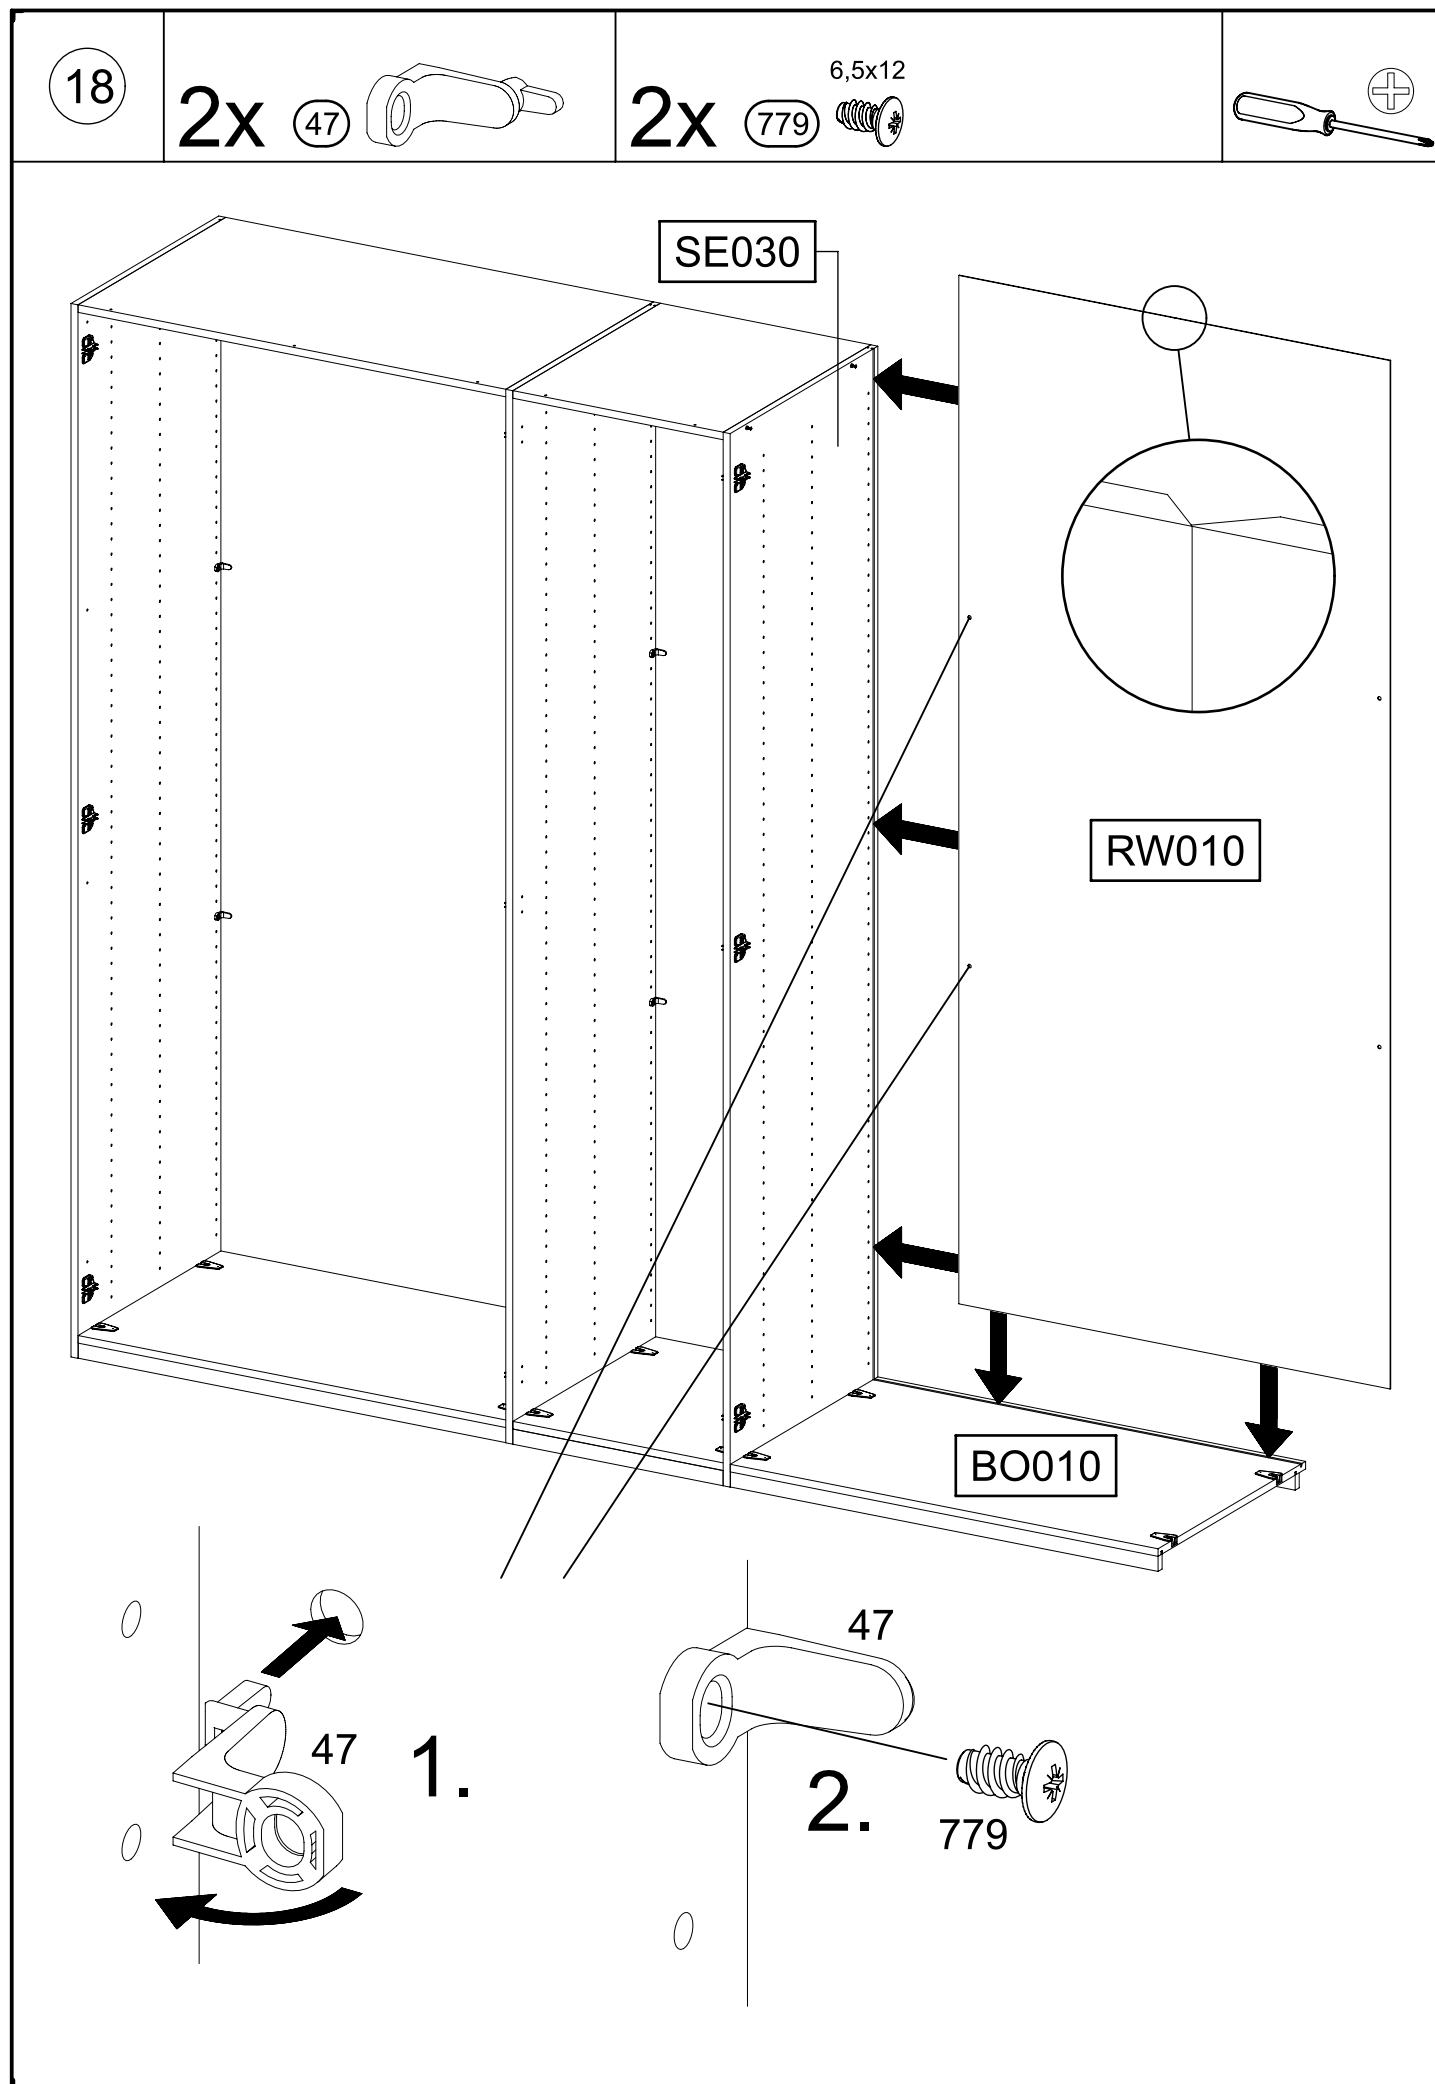


25.

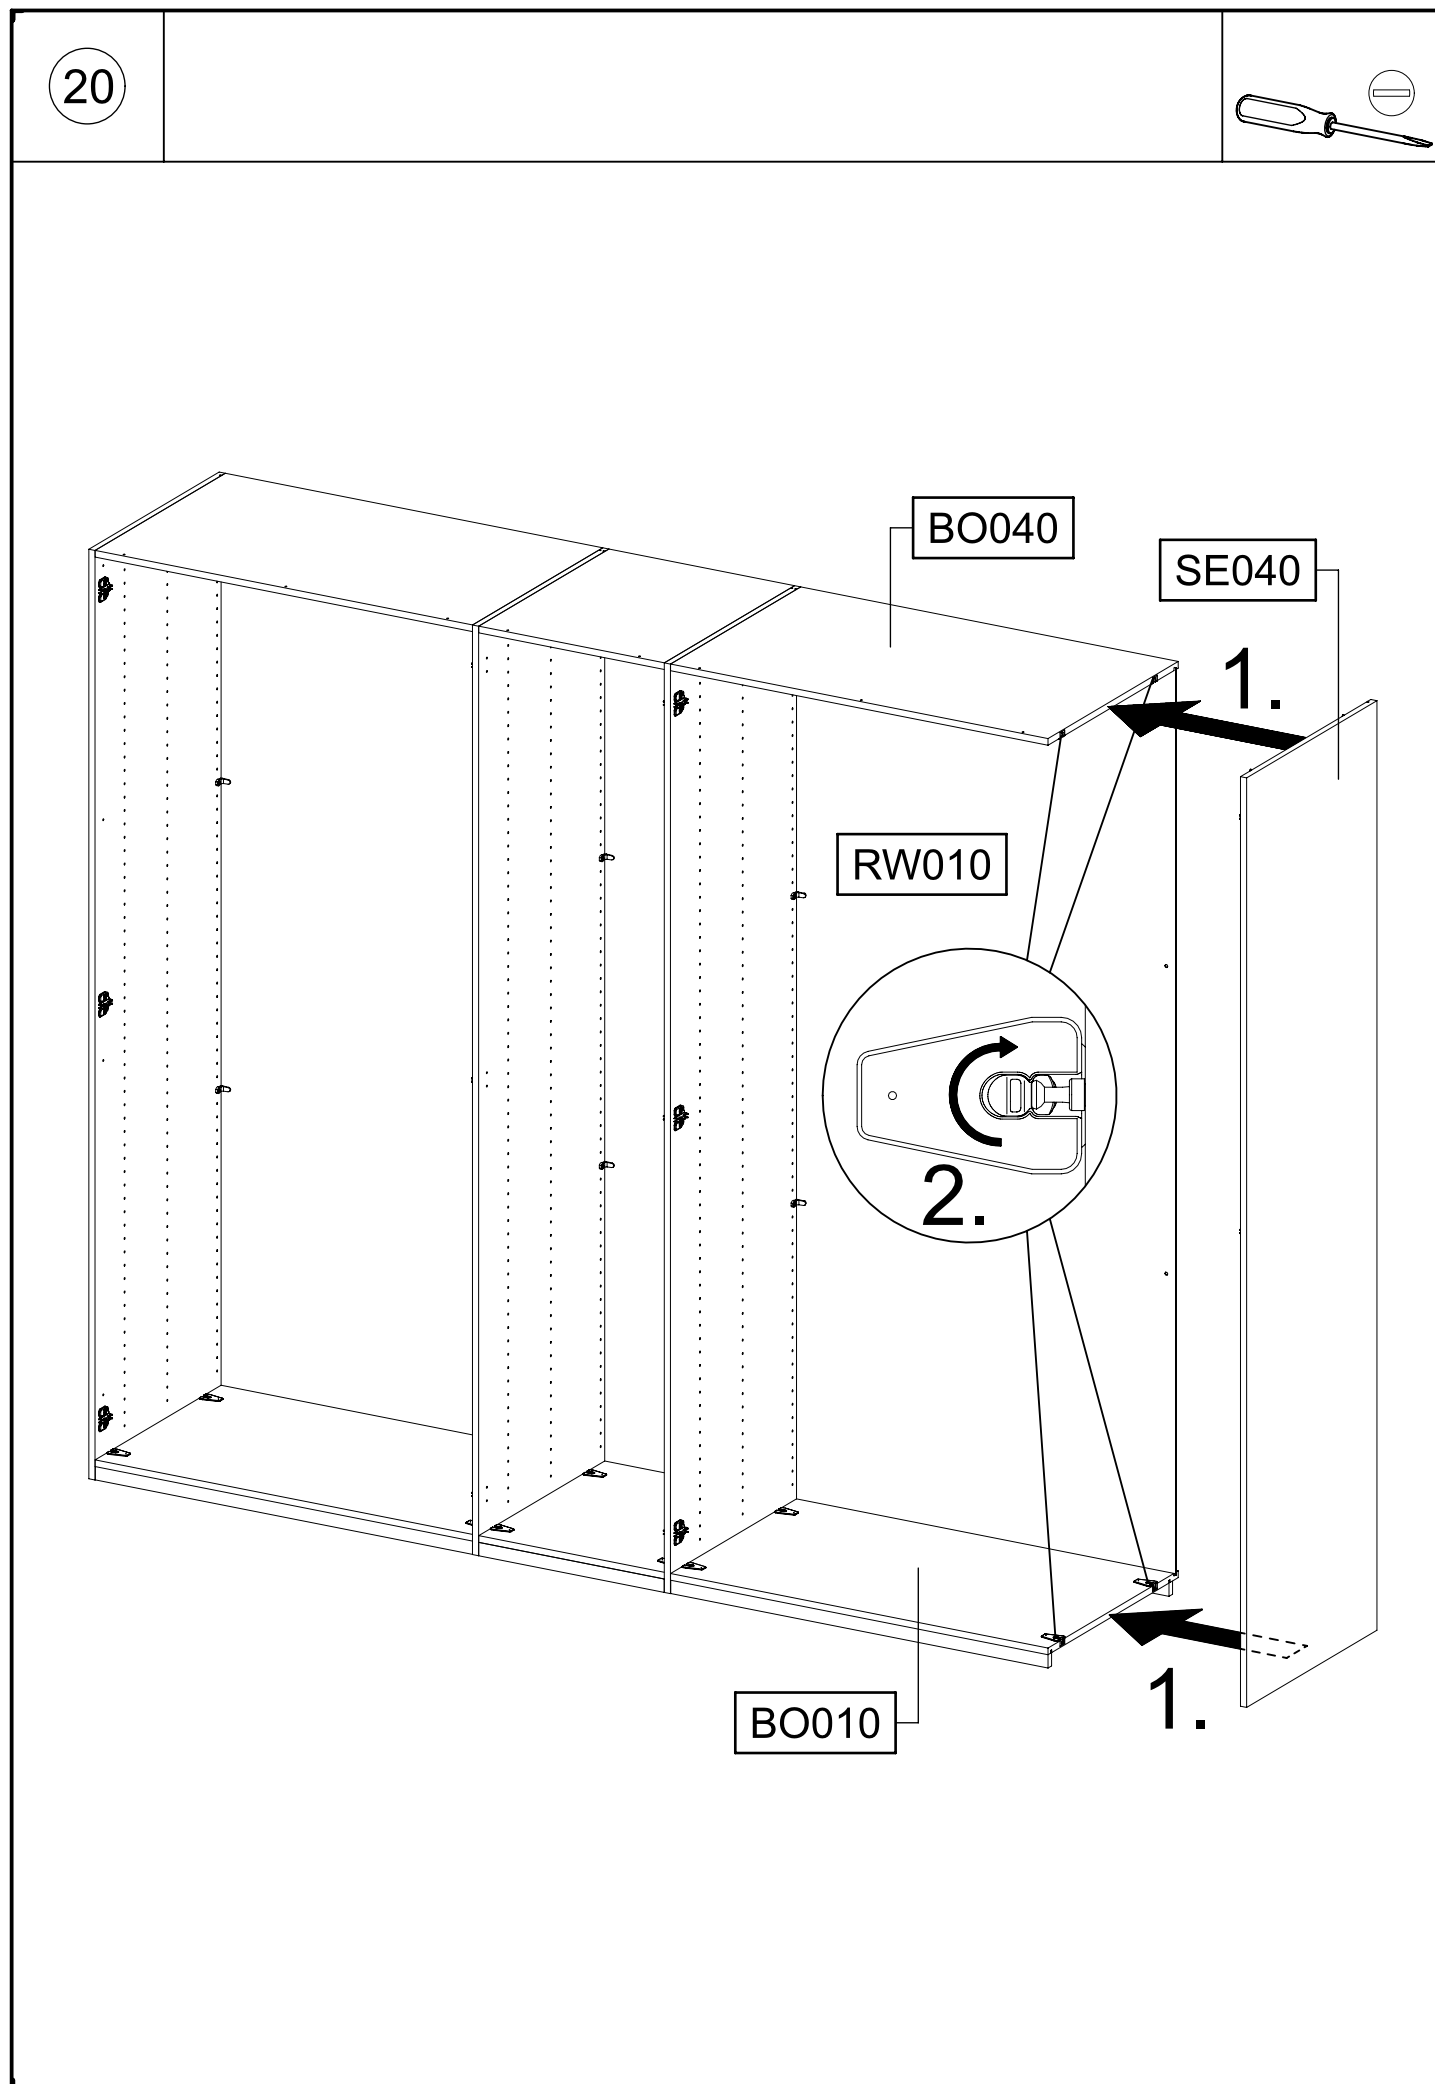

MD105

26.

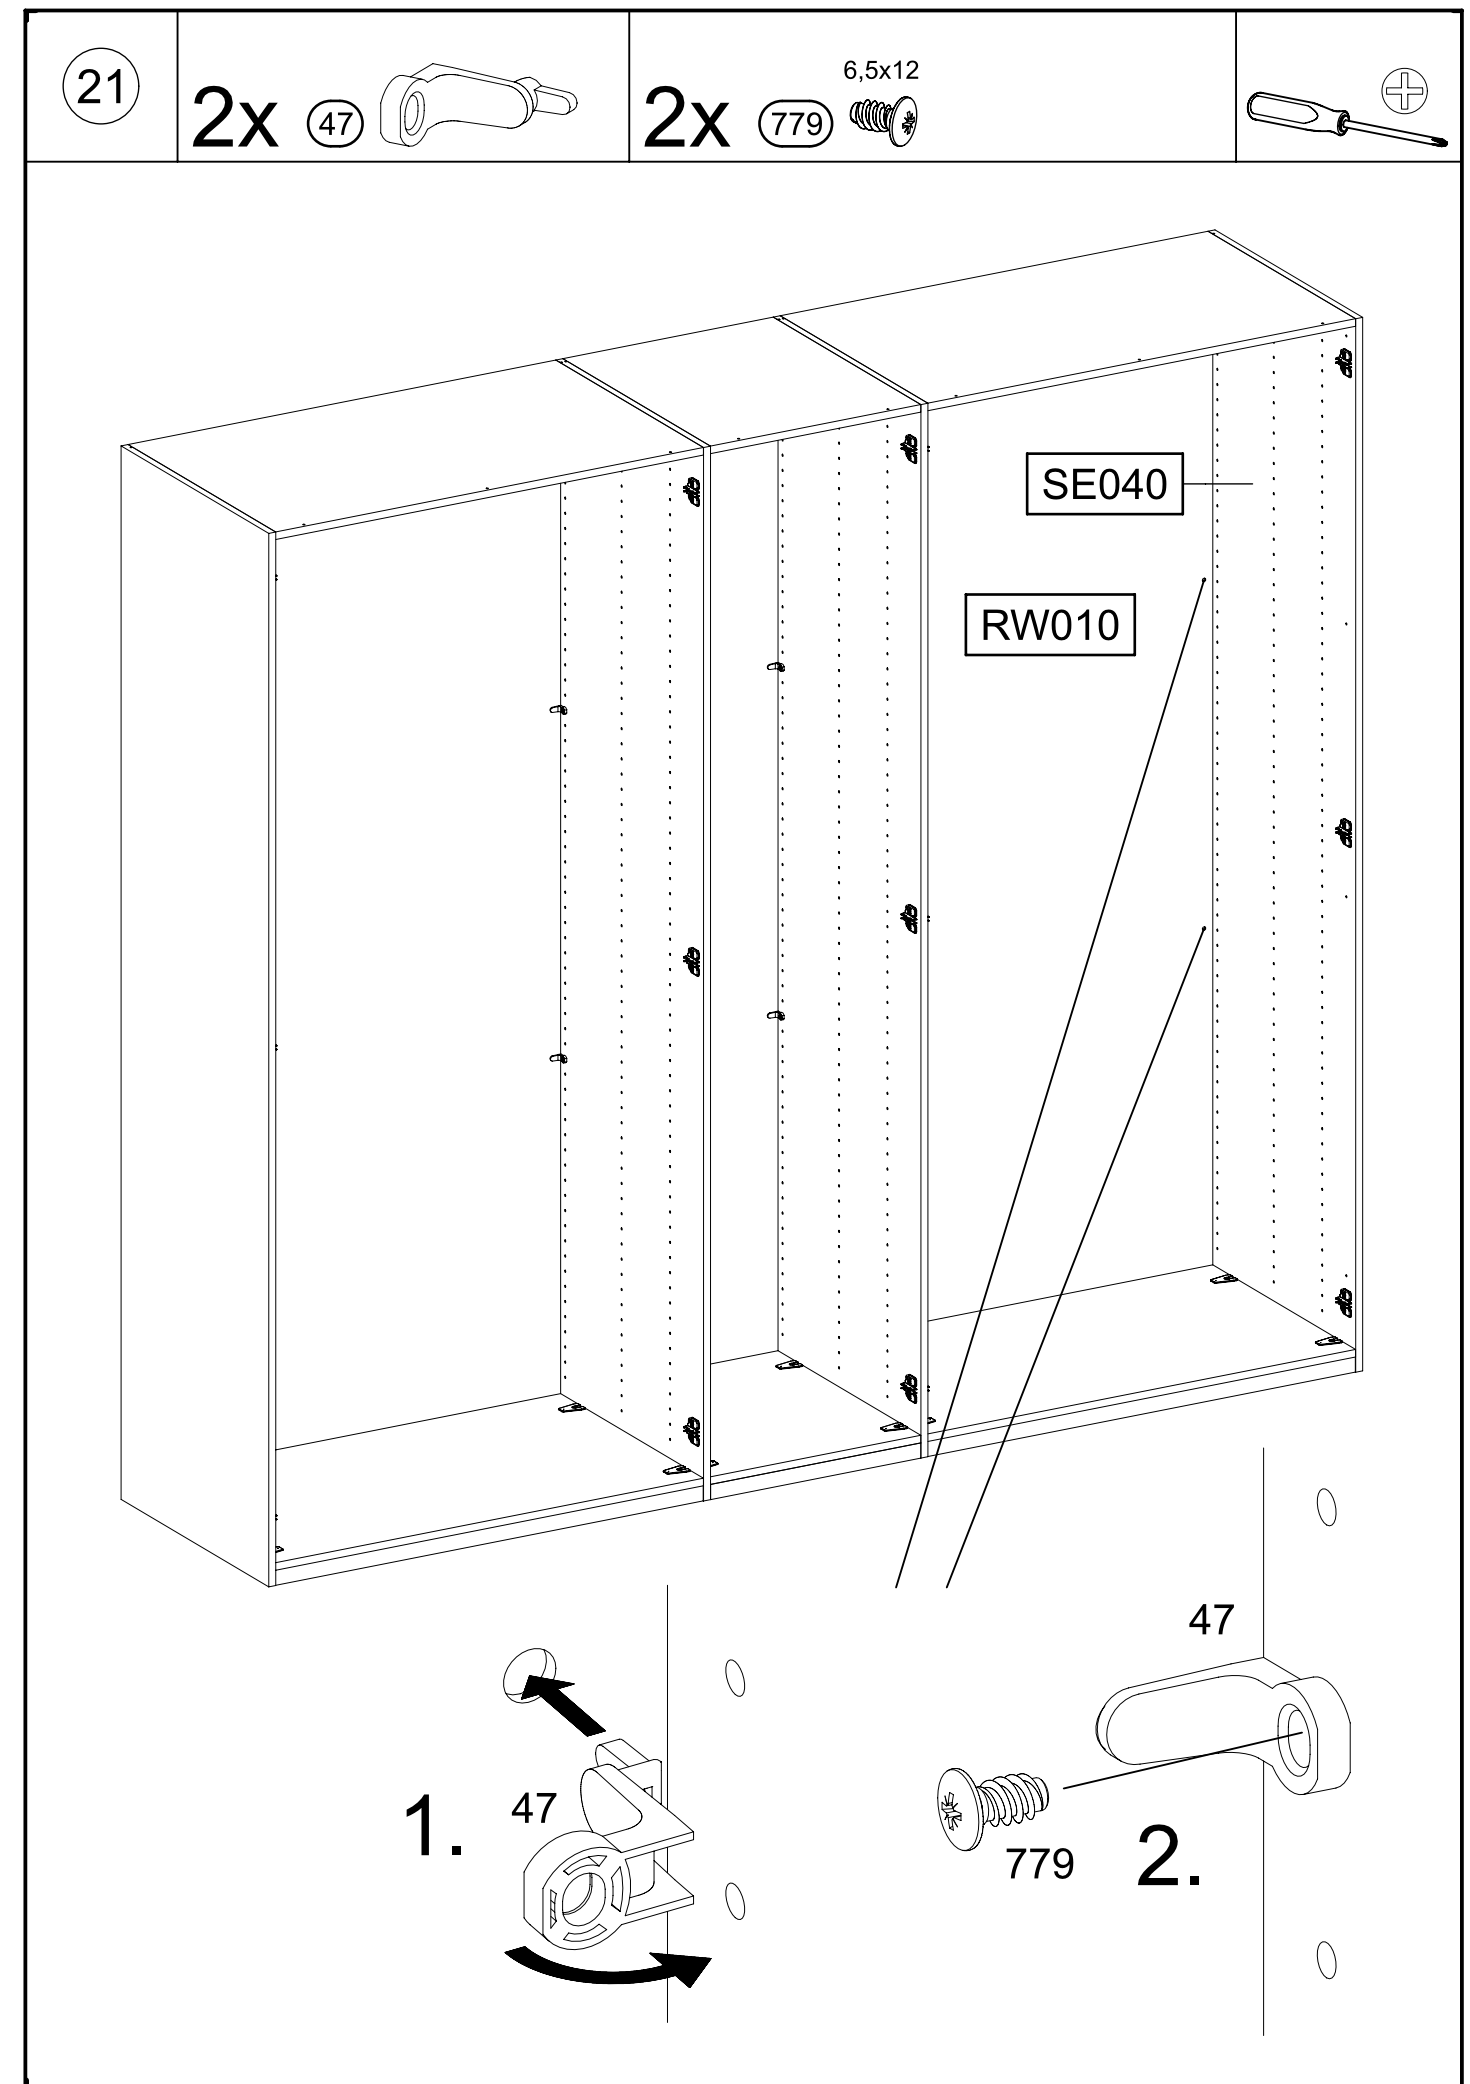

MD105

27.

22

24x

1089



WA010


WA020

WA010

2.

2.

2.

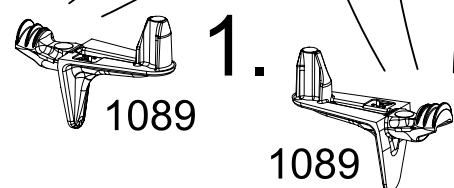

1.

1089

1089

1. ?

WA

1089

2.

WA


MD105

28.

23

6x


29

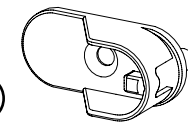

6x

205

3,5x15



KS010

KS020

KS010

2.

2.

2.

29

1.

205

205

29






29

?




MD105

24

15-20x (1292)

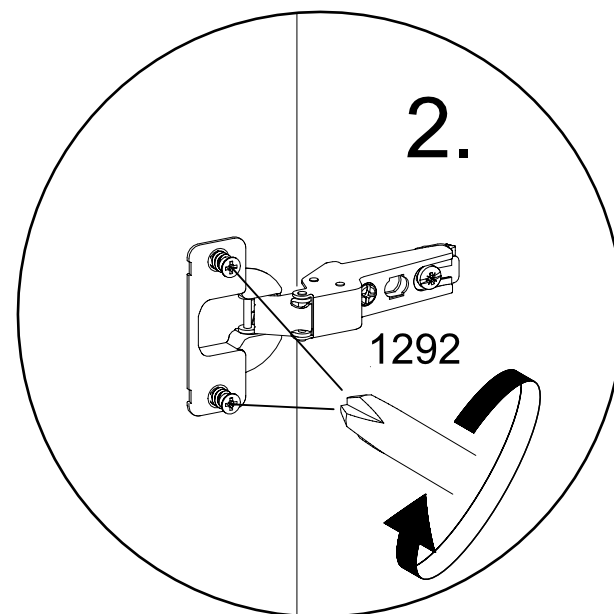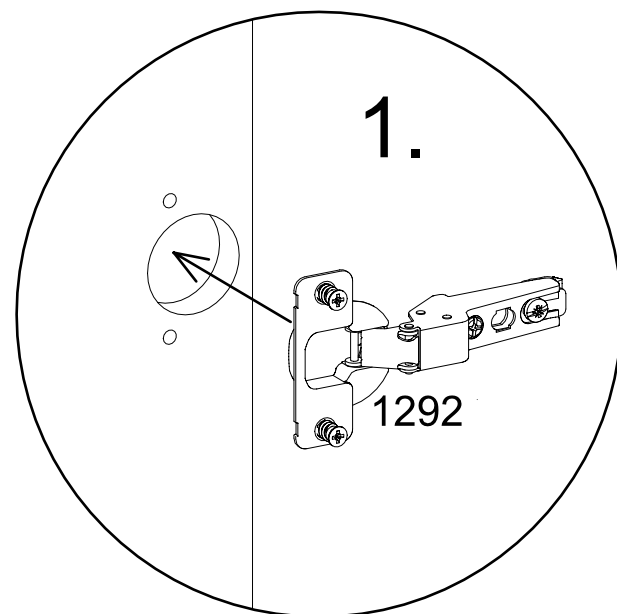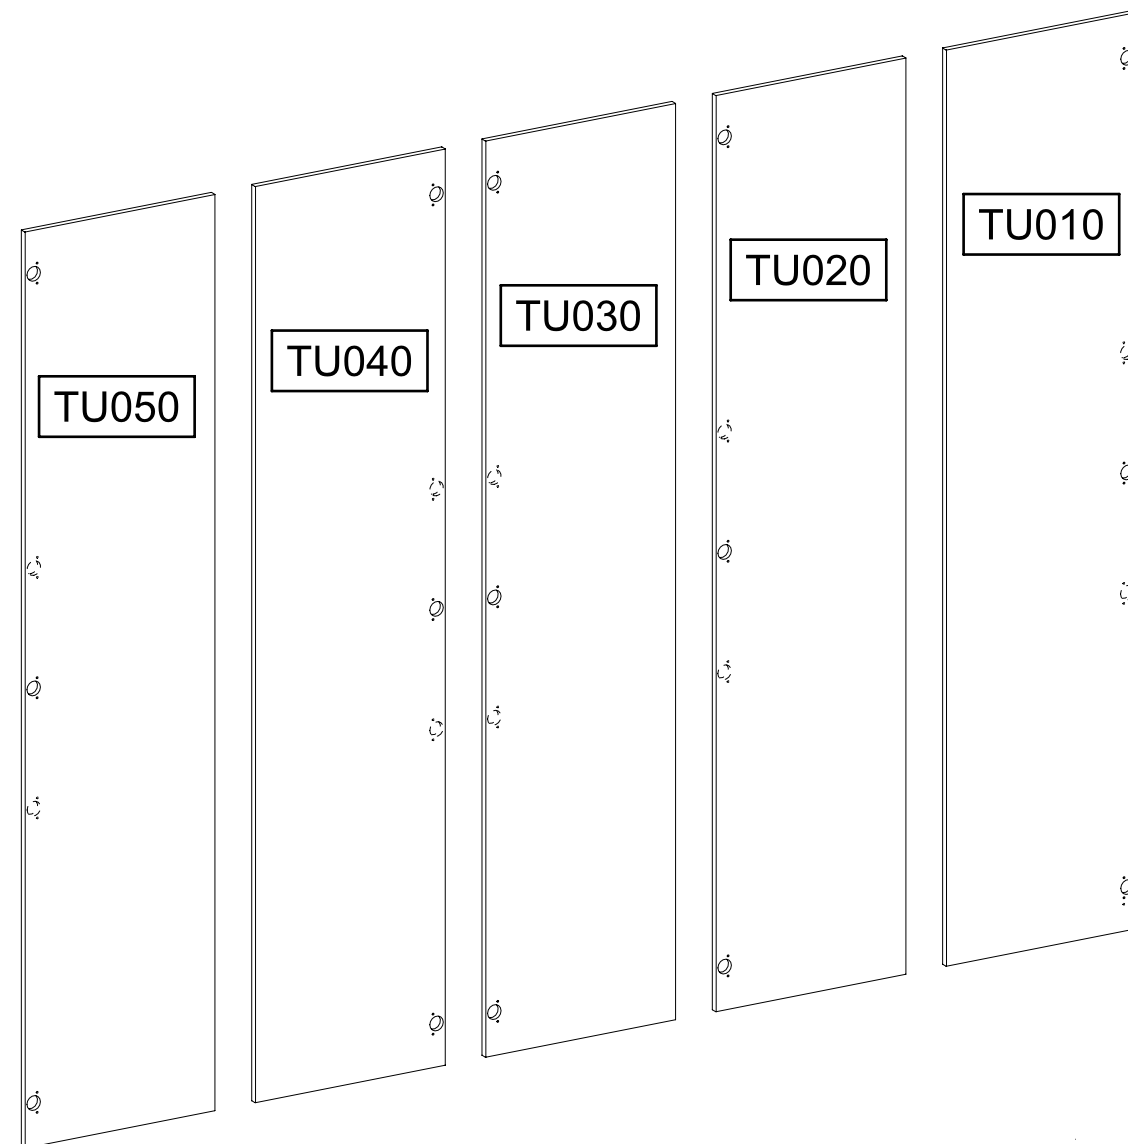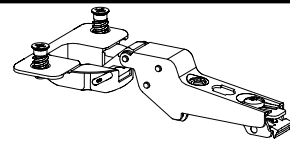

25

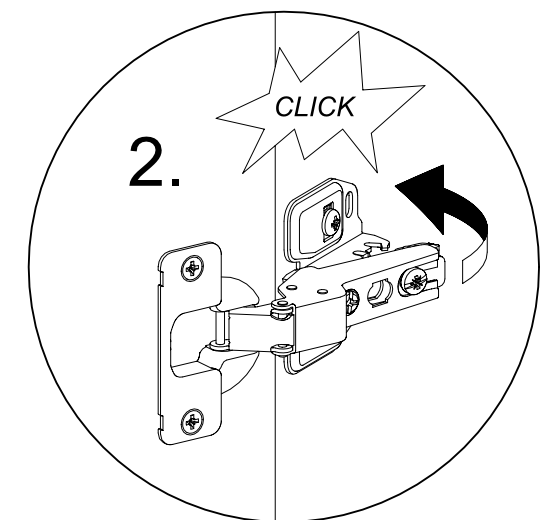
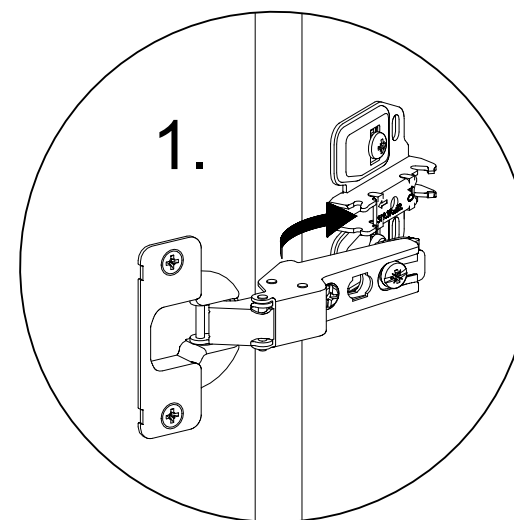
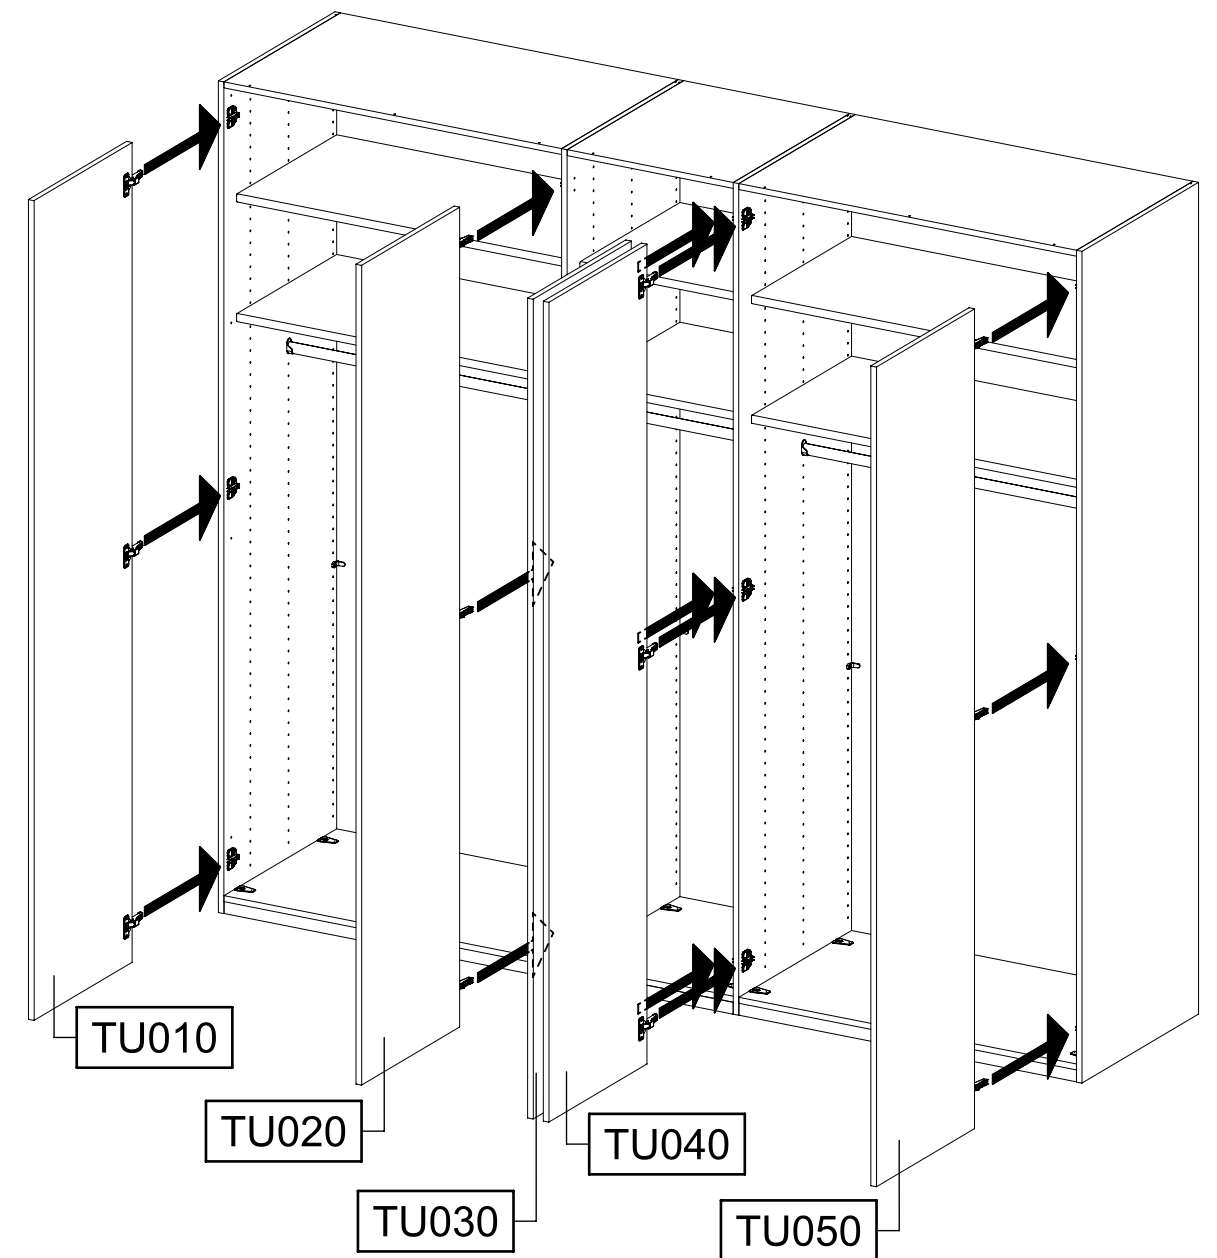


26


0-8x

12








55x16x6,2

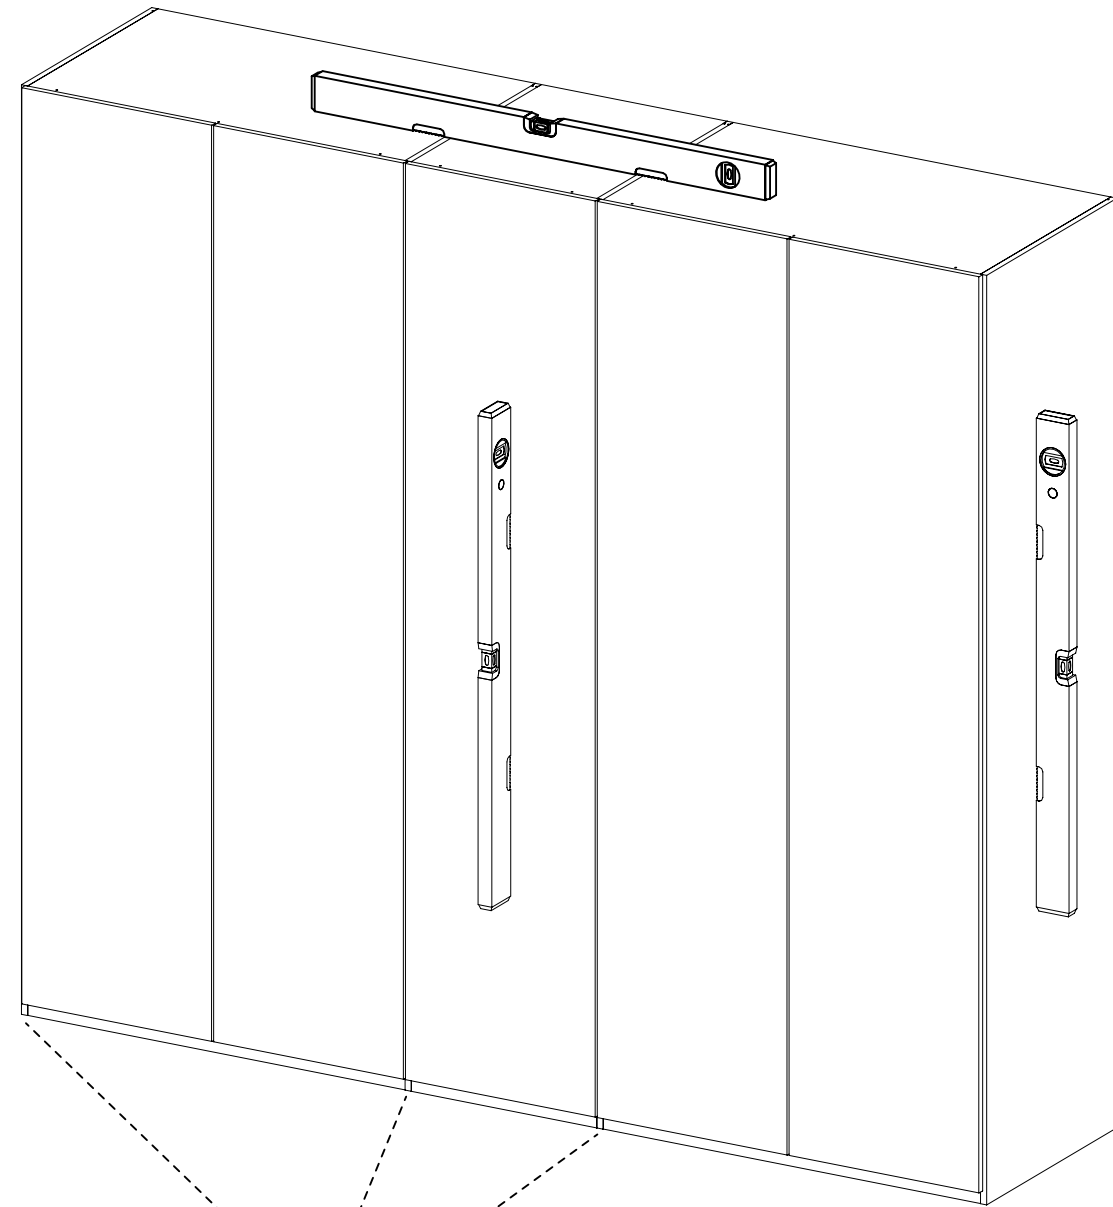


12

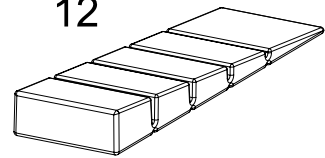


27

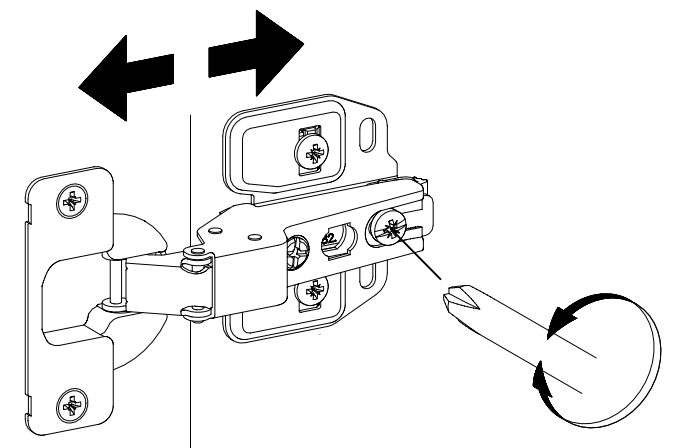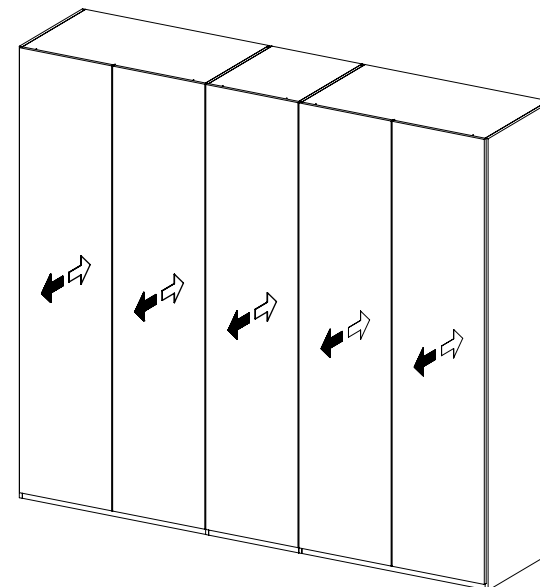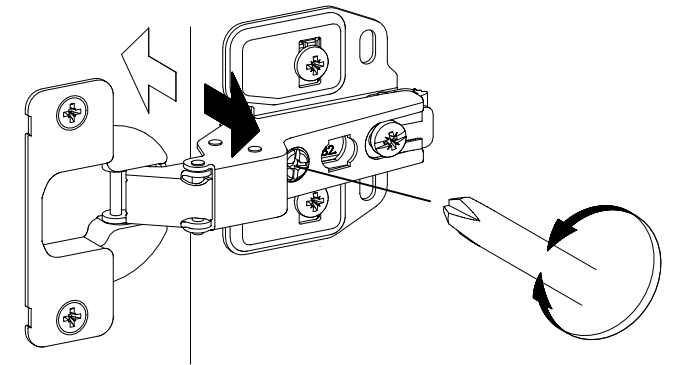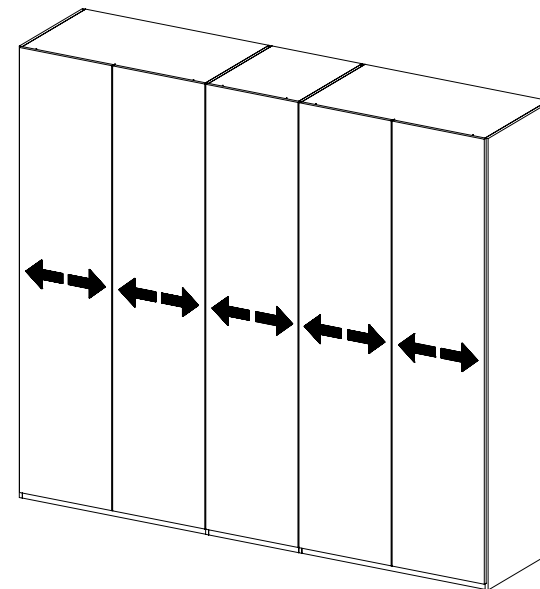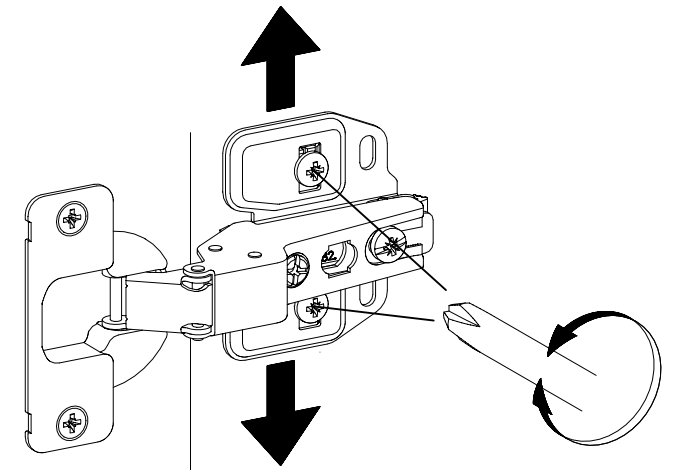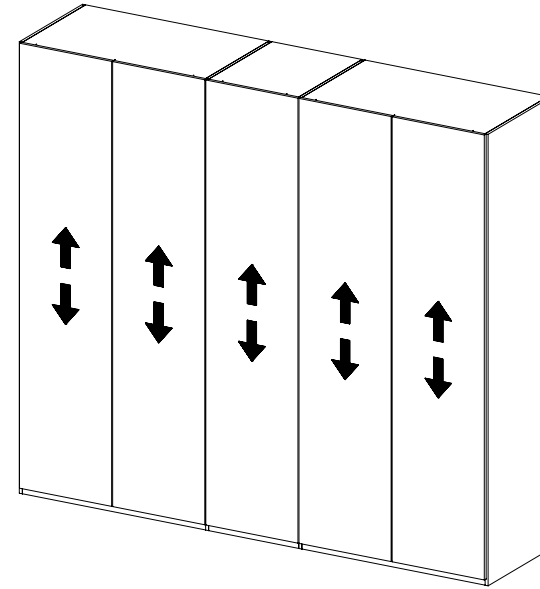


30-40x 621 4x13



1291



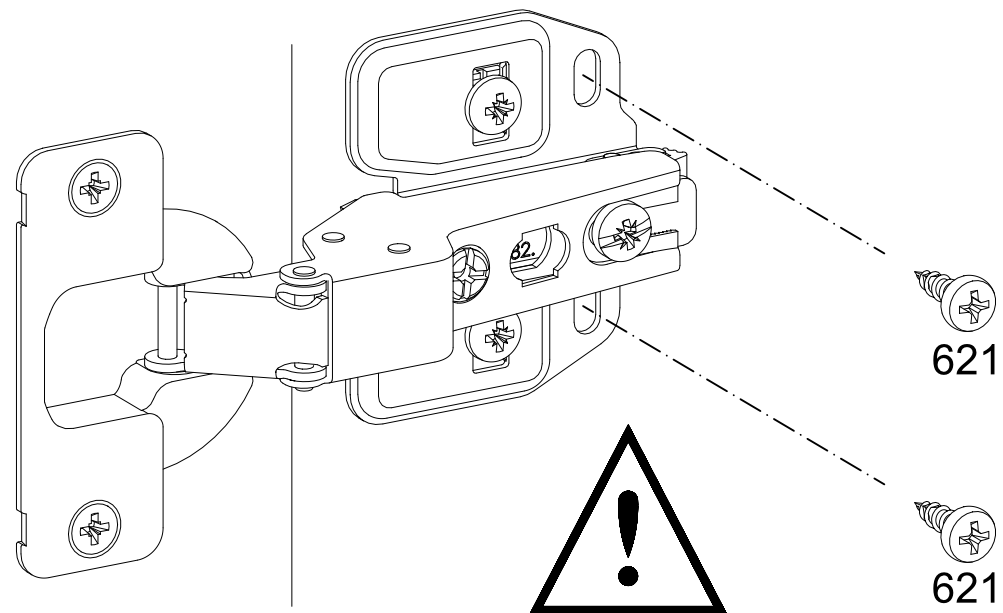




2x 68

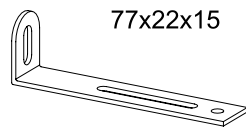

77x22x15

4x 201 4x15

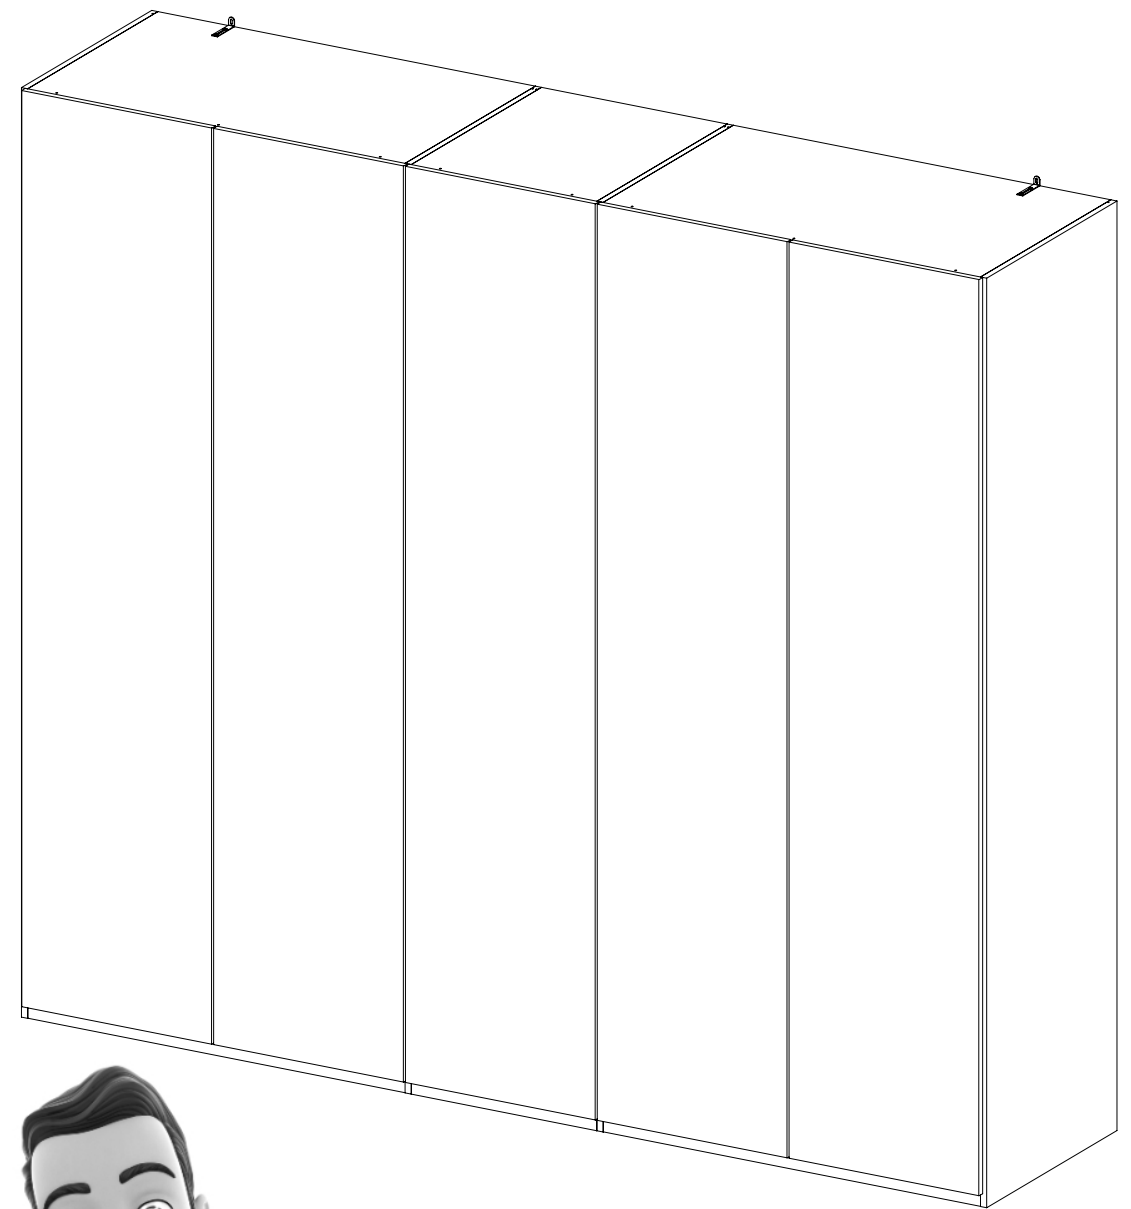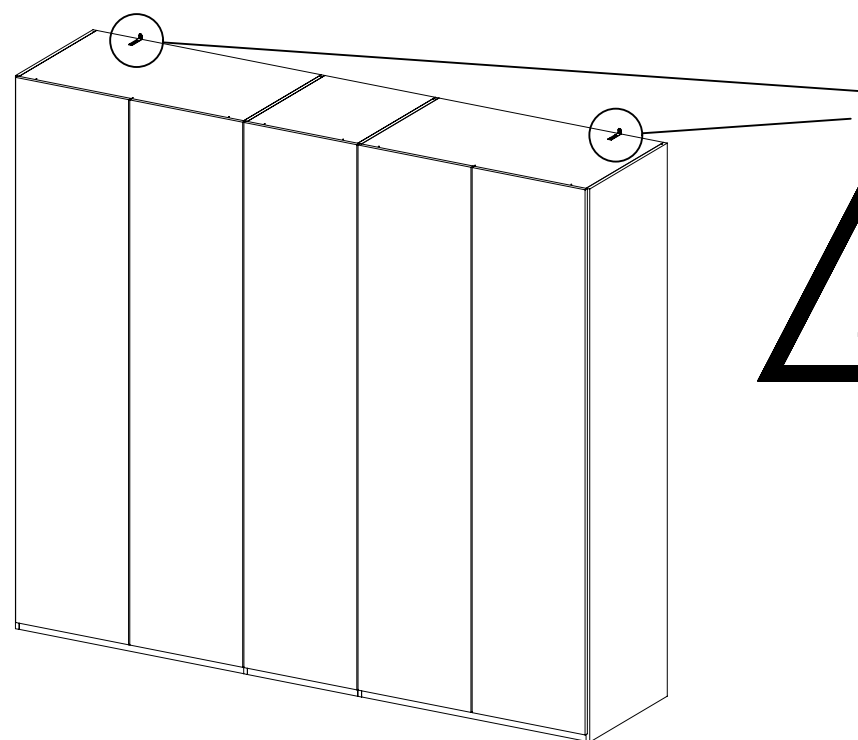



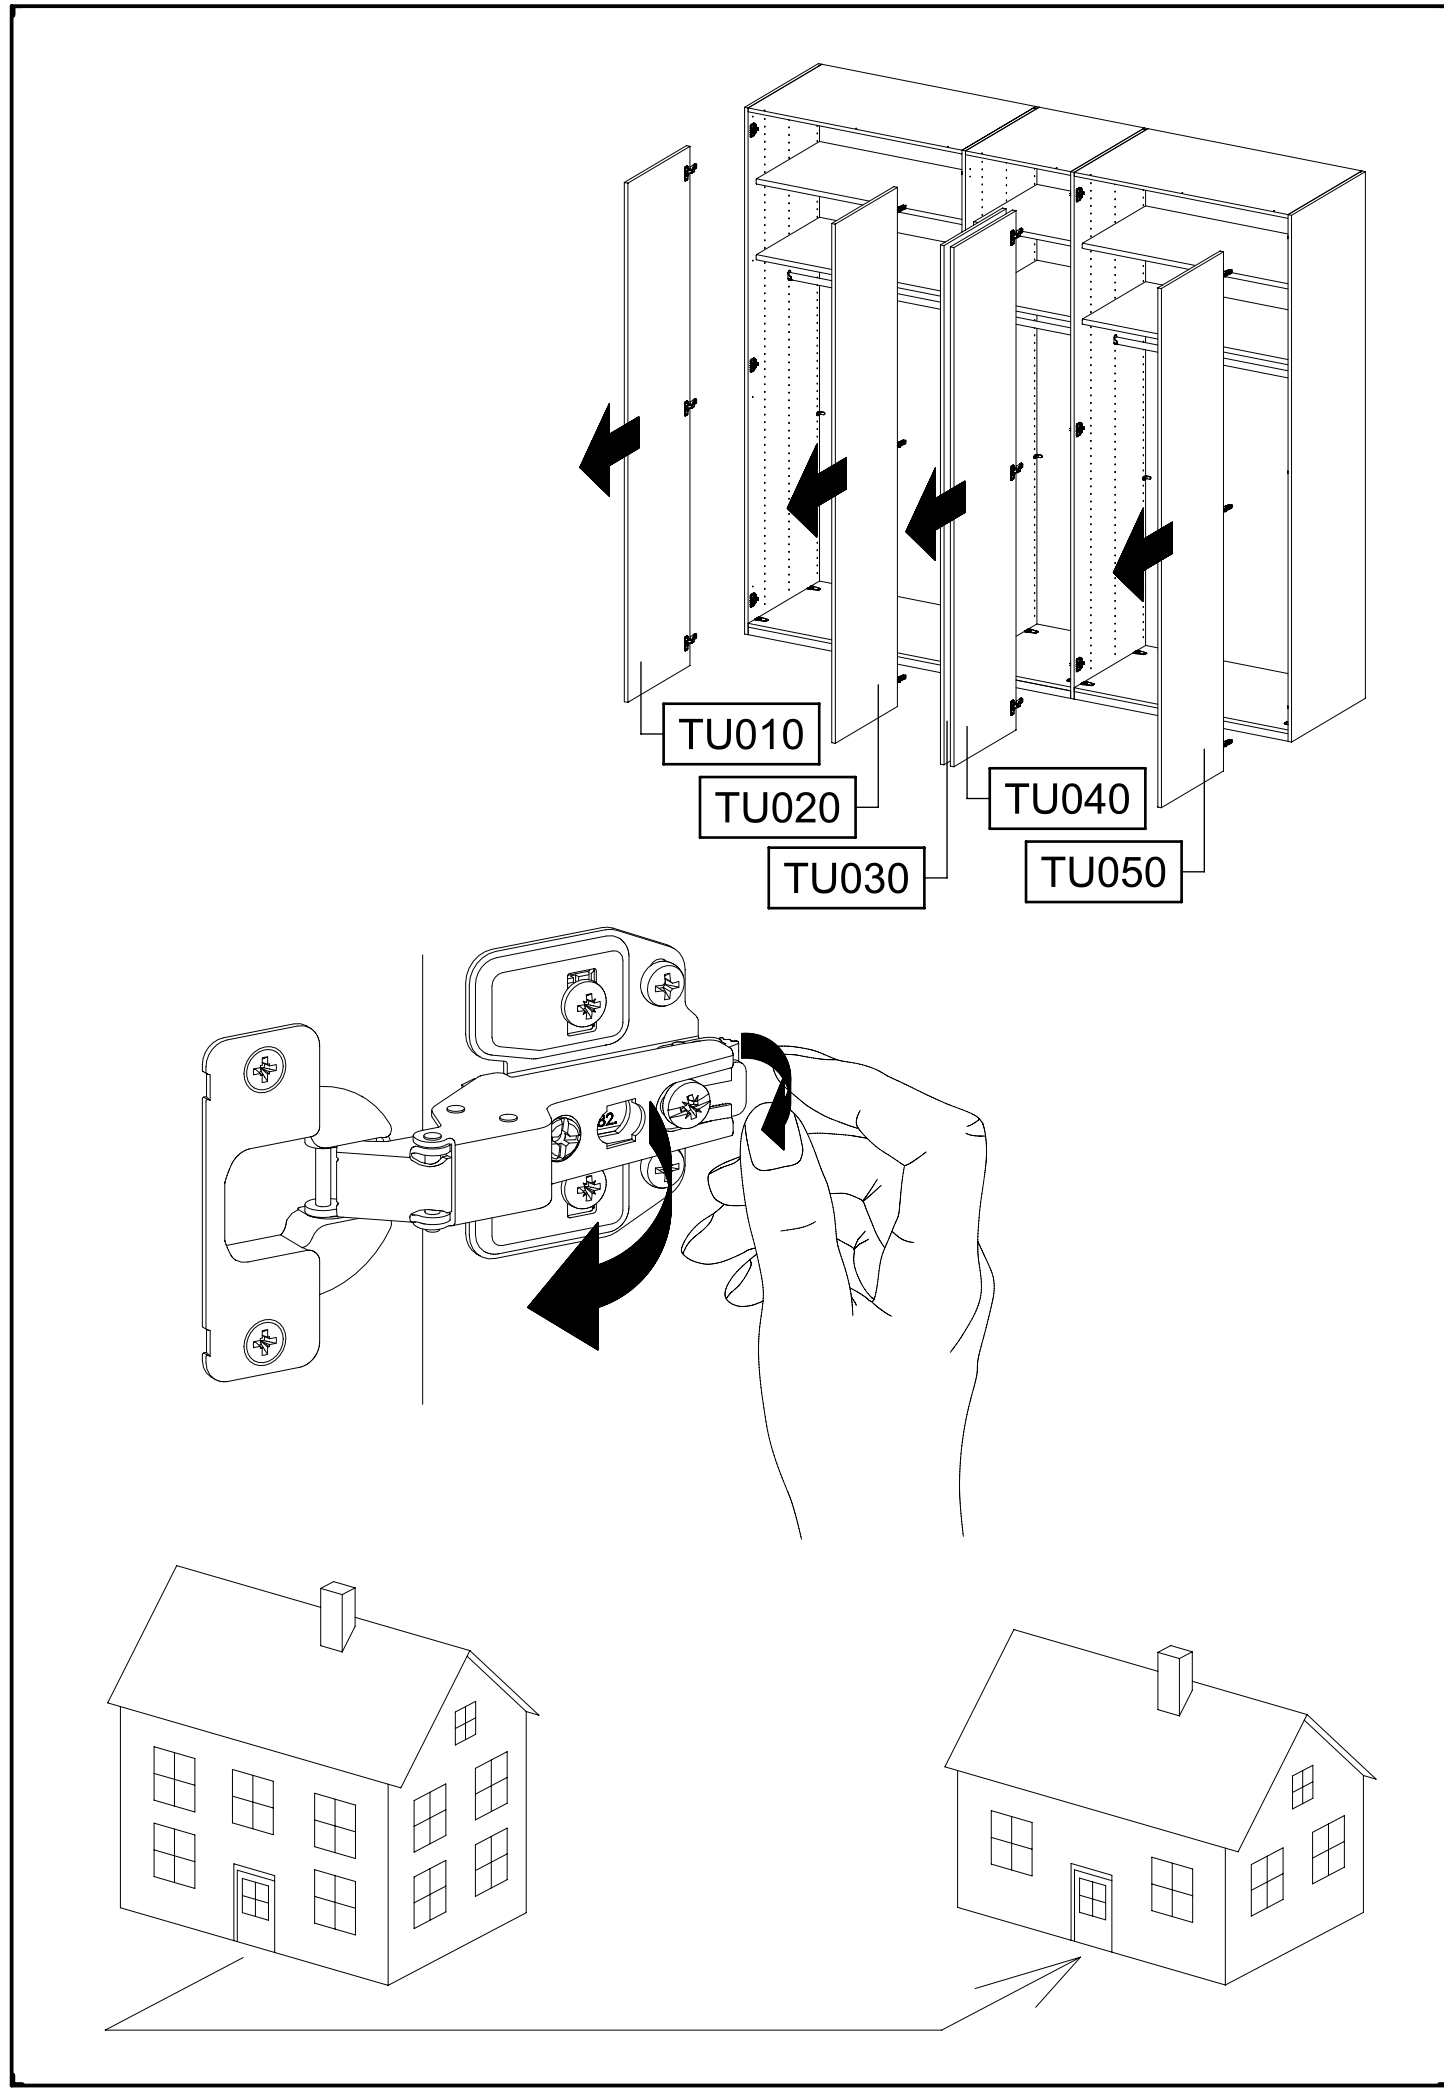

1.

ME190_02


rauch

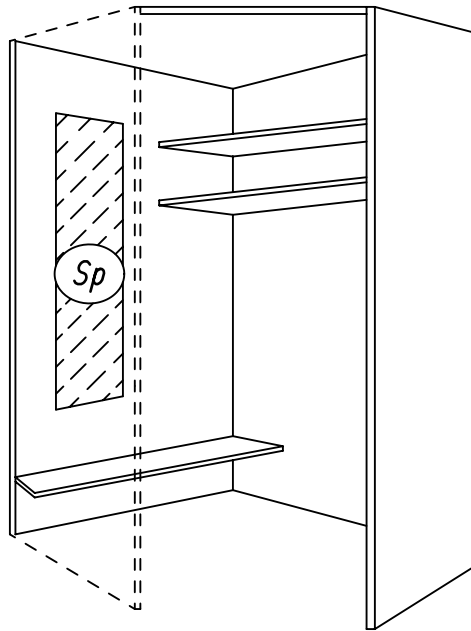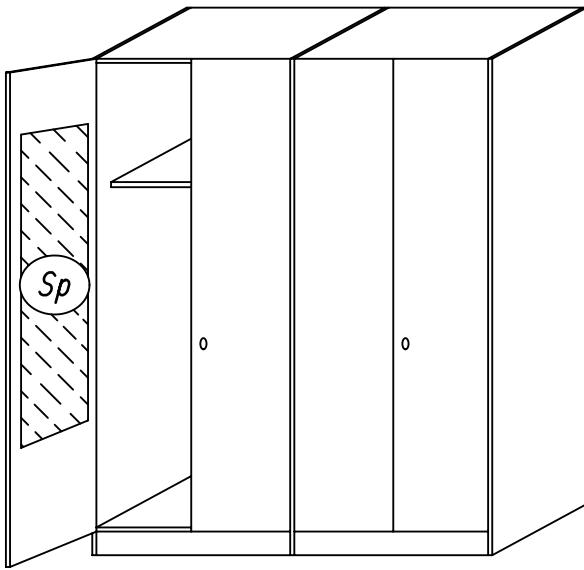

637




492




3x15


1

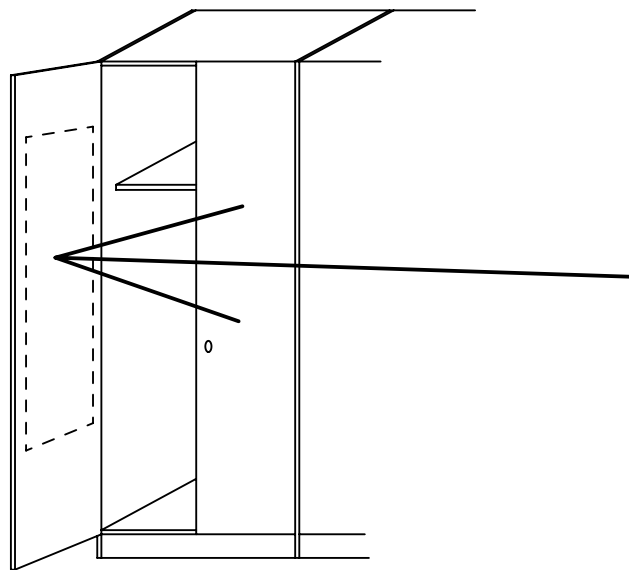


2

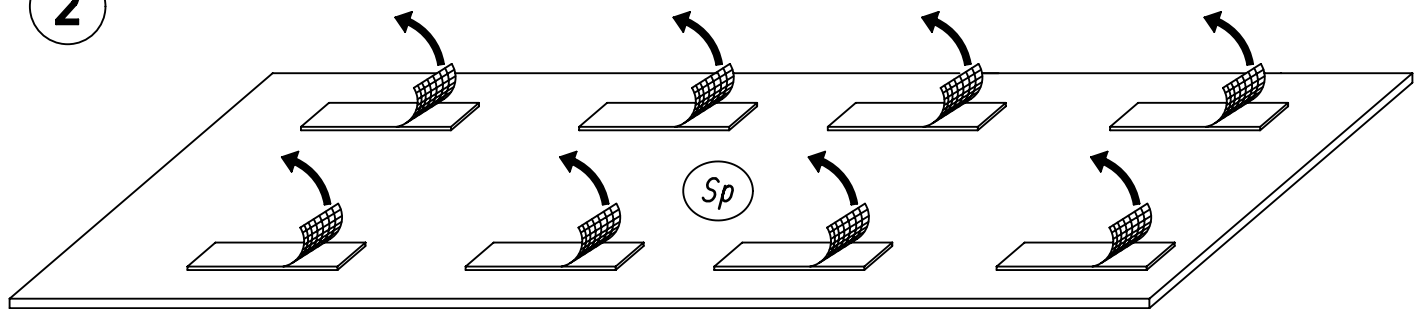

3

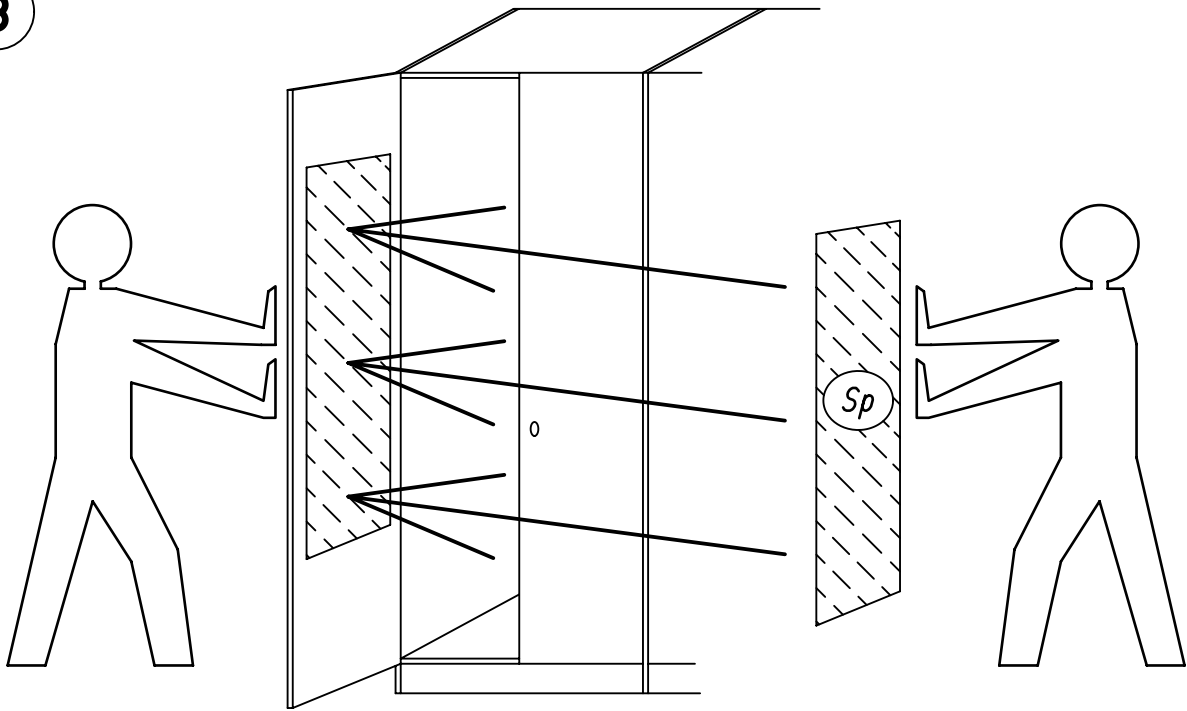


4

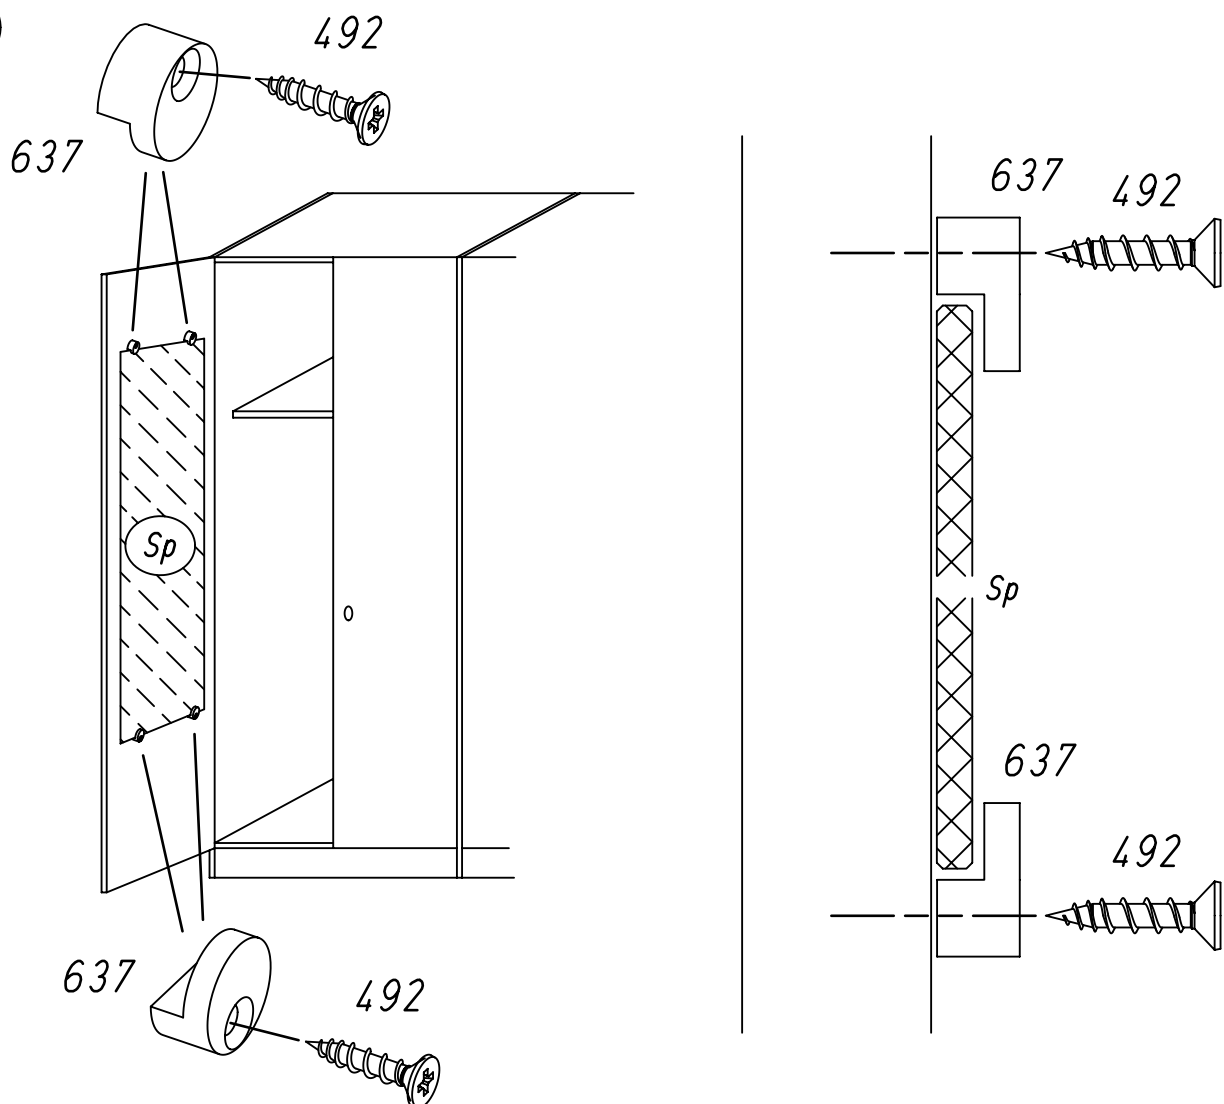



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

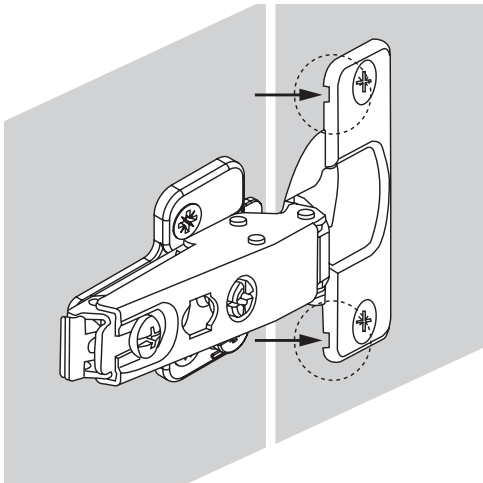



2

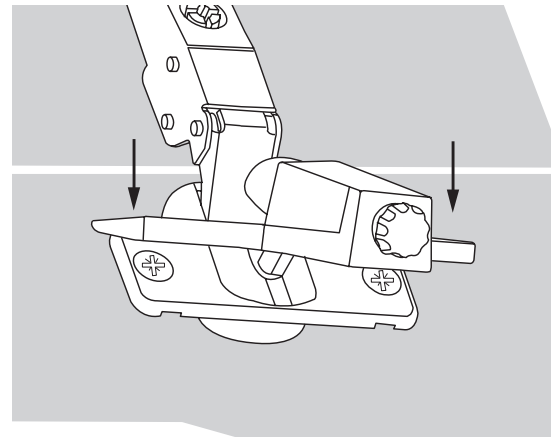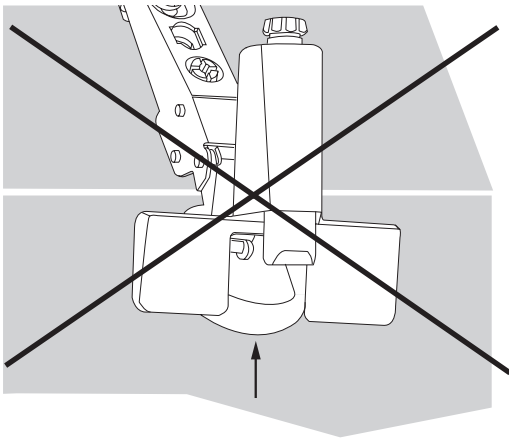

3

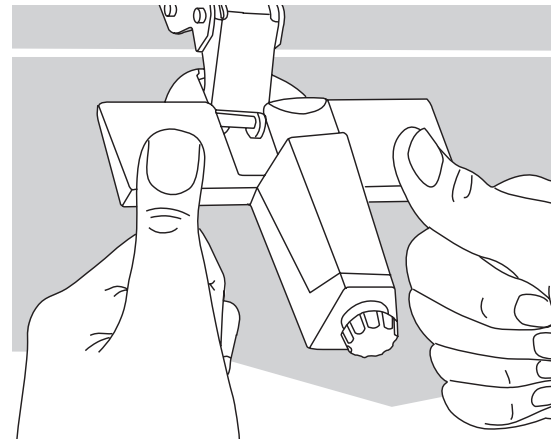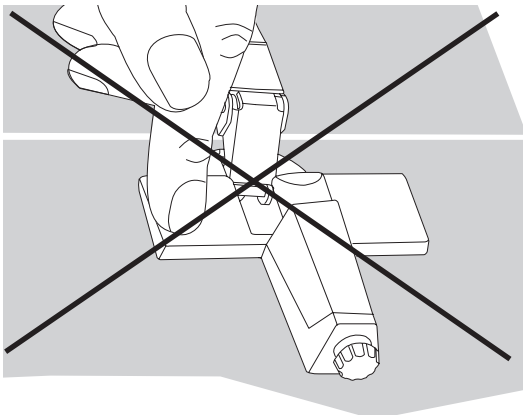

4

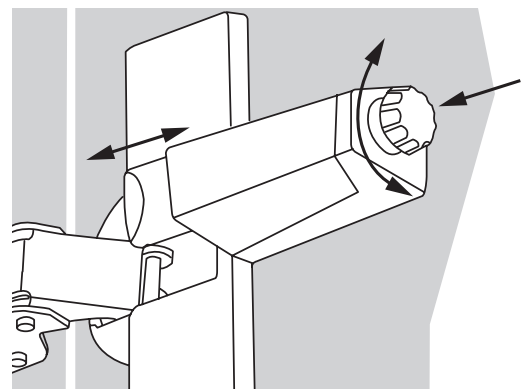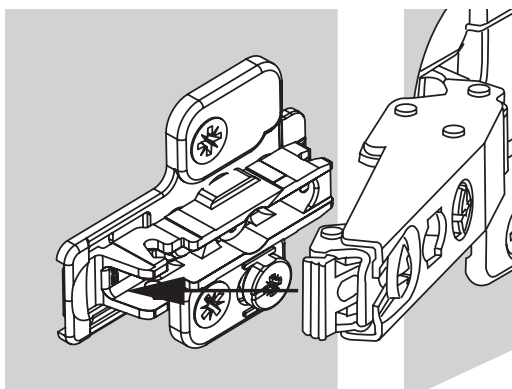

Demontage / Dismounting

