


Montage Speisetisch 1506 / 1507 / 1508 / 1509 / 1510 / 1511




Baumkante	gerade Kante mit Hirnholz	gesoftete Kante
Kerneiche Umato Artikel-Nr.	Kerneiche Natur Artikel-Nr.	Kerneiche Umato Artikel-Nr.
L 190 B 95 H 76 7100E - 1506	8400E - 1506 7100E - 1508 8400E - 1508 7100E - 1510 8400E - 1510	7100E - 1508 8400E - 1509 8400E - 1509 7100E - 1511 8400E - 1511
L 240 B 110 H 76 7100E - 1507	8400E - 1507 7100E - 1509 8400E - 1509	




1. Tischplatte auf Untergestell positionieren

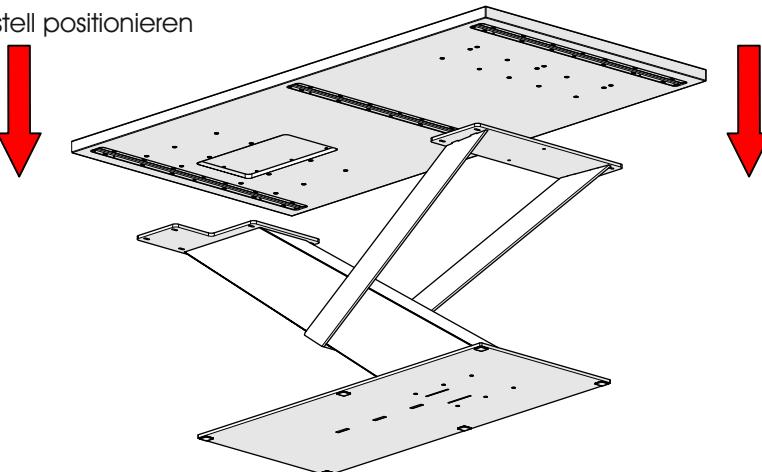


Baumkante

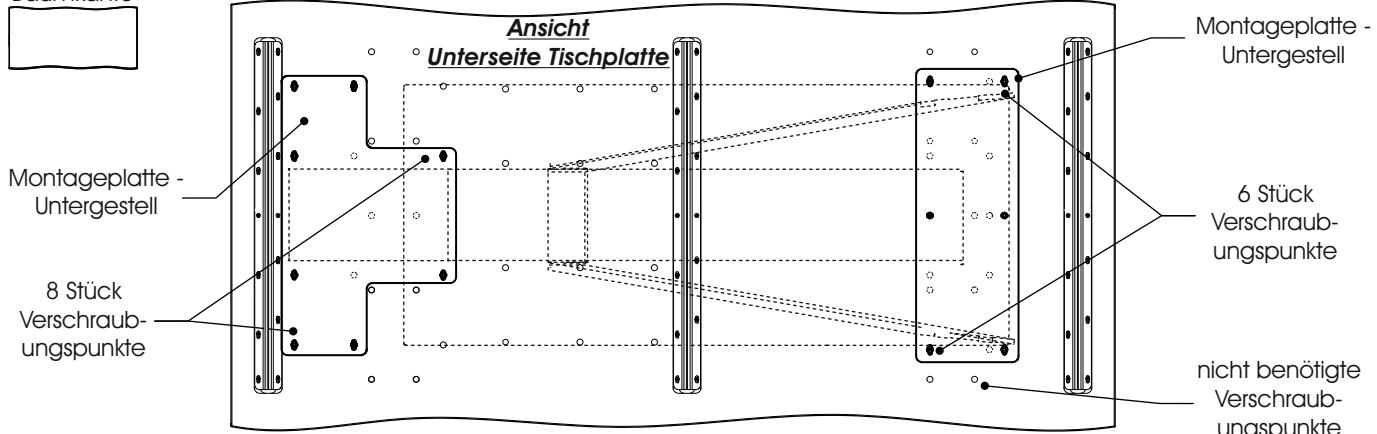


gerade Kante mit Hirnholz

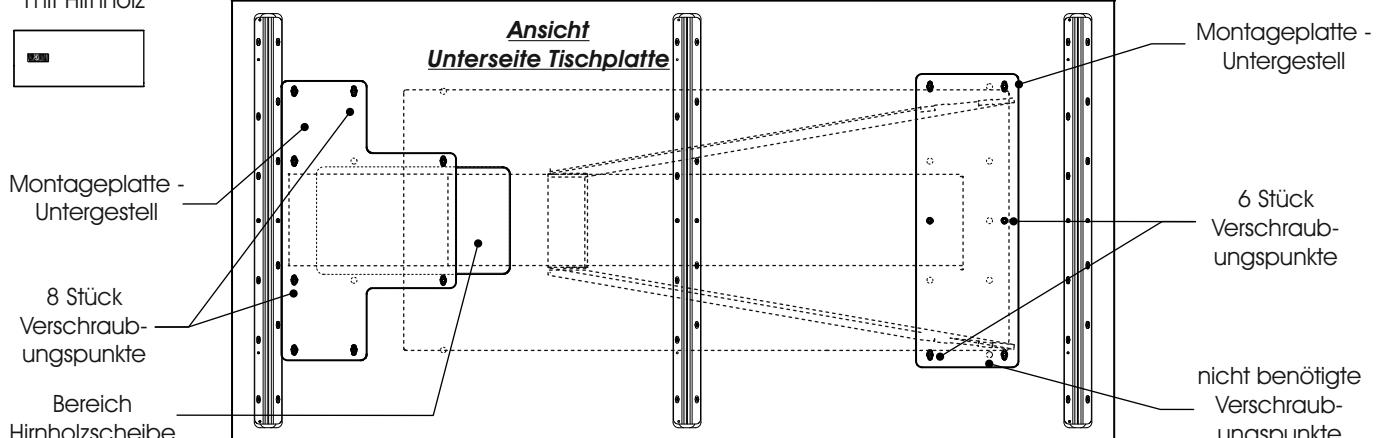

Montage Speisetisch 1506 / 1507 / 1508 / 1509 / 1510 / 1511

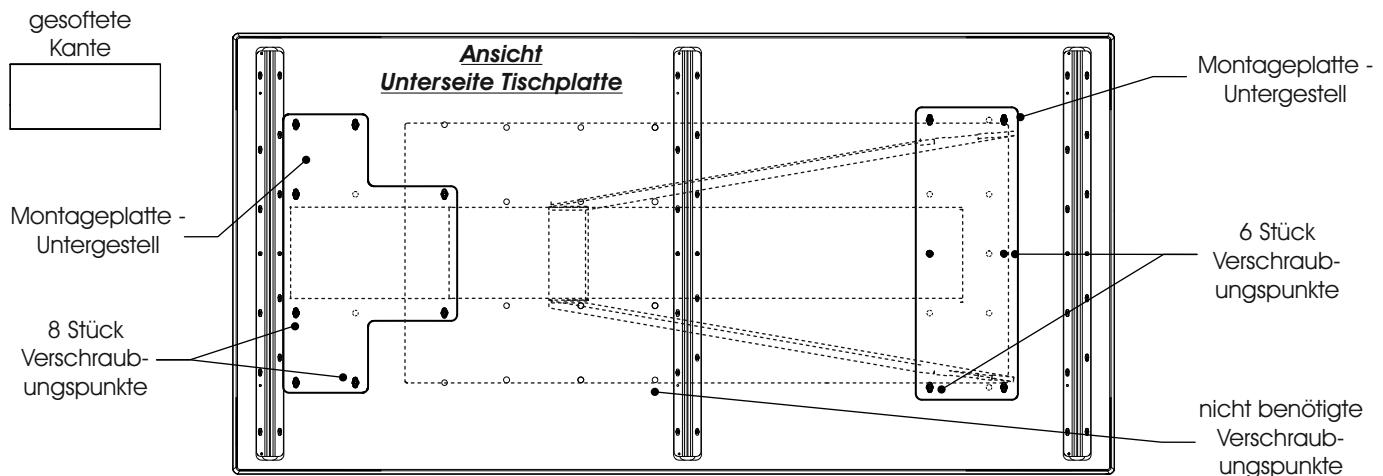

2. Tischplatte auf Untergestell verschrauben

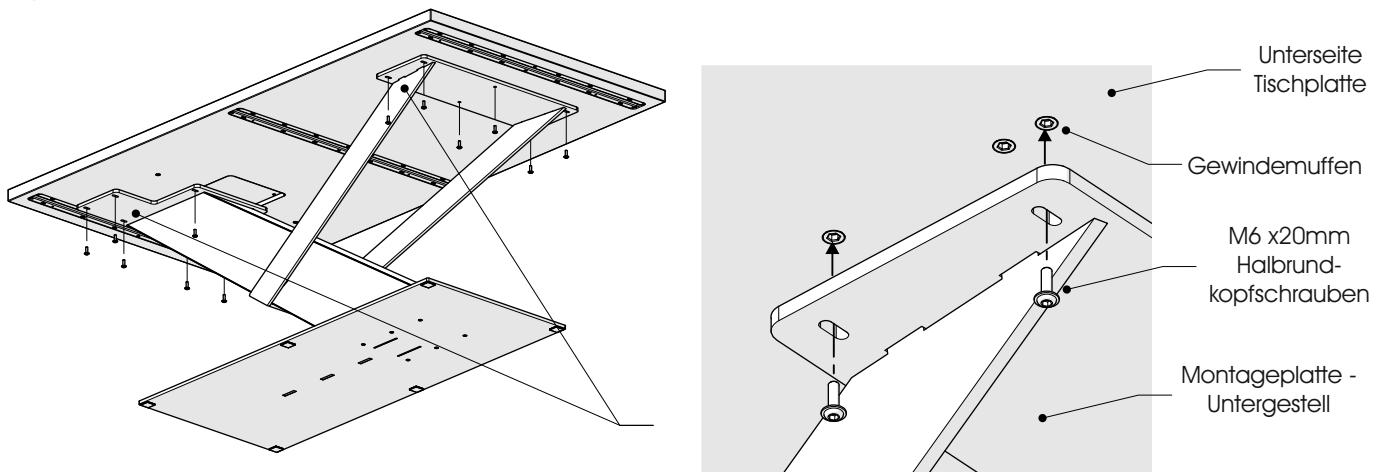

3. Eventualposition: Höhen- / Nivellierausgleich falls notwendig

