

# Assembly Instruction

Monteringsanvisning | Montageanleitungen



Article Number: 9606-667

Description: Little John Sunbed Acacia - Dark brown / Beige



@venturehomese  
@venture.design

**Do not tighten screws until all  
screws have been assembled!**

**Venture  
home**






No.		Qty.
1		1
2		2
3		1
4		2
5		1


	No.		Qty.
1999-4328	A	 M8 x 45	8
1999-4328	B	 M6 x 60	4
No	C	 M6 x 13	4
No	D	 M4 x 60	1

Step 1:

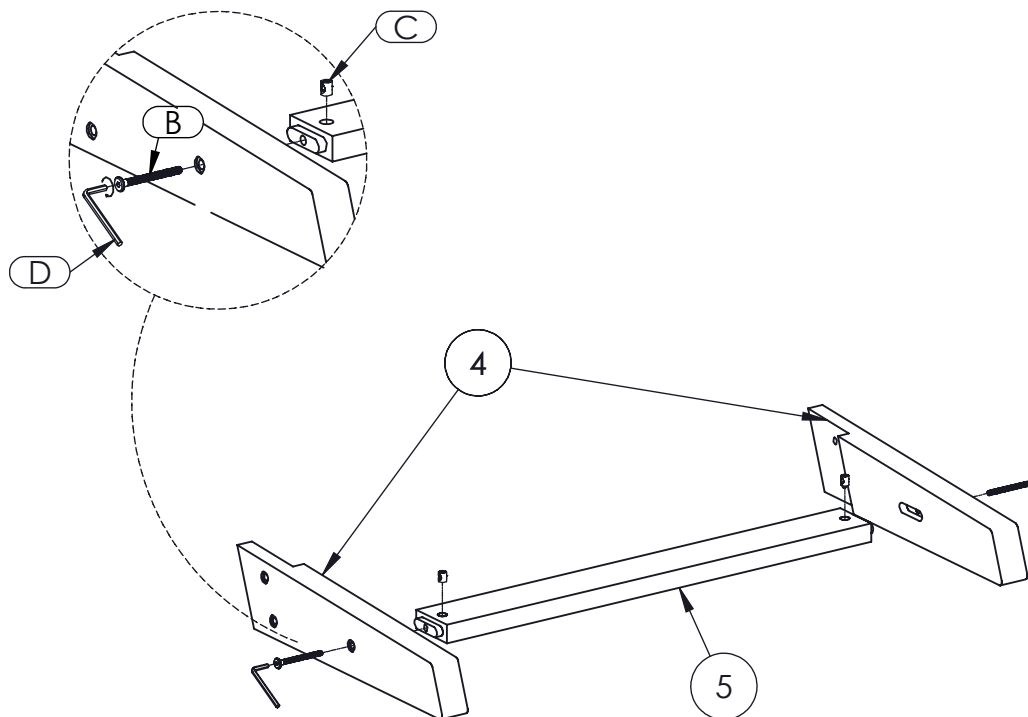






Step 2:

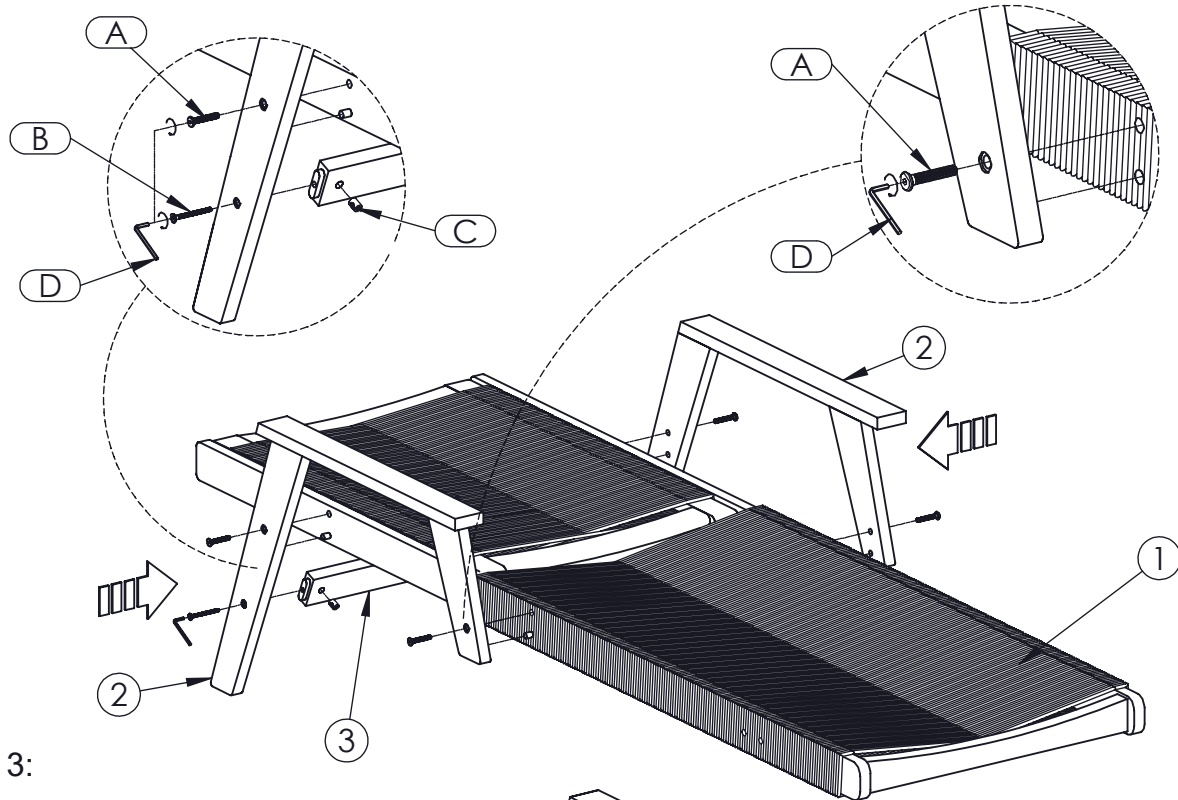


Step 3:

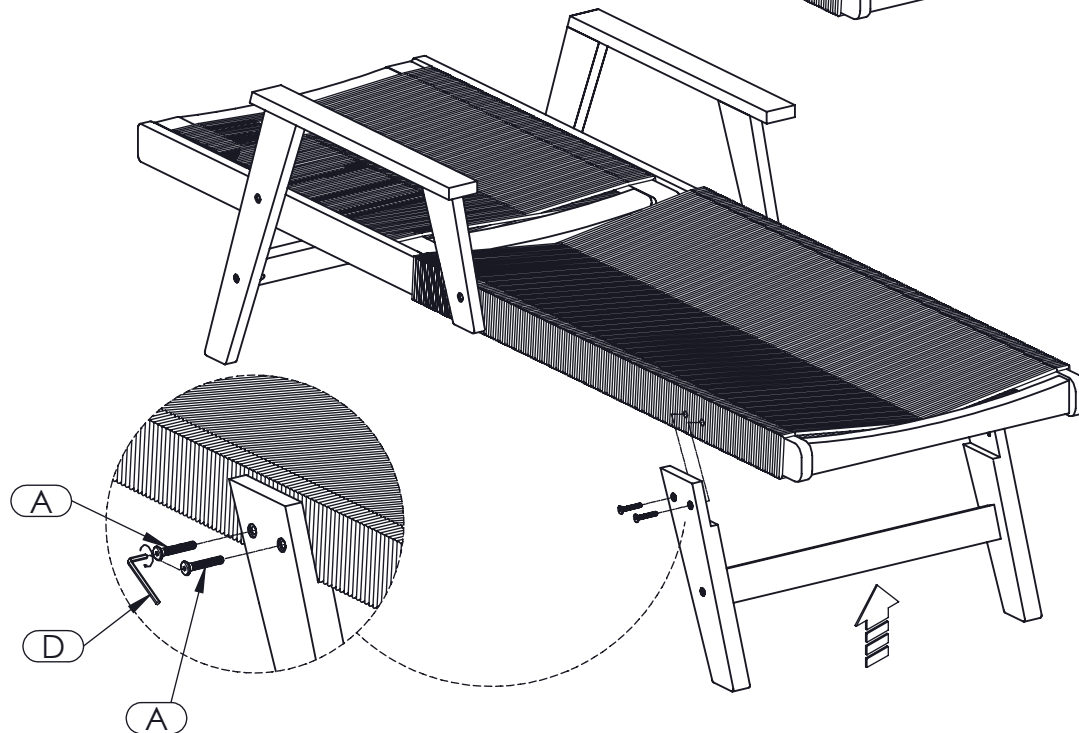


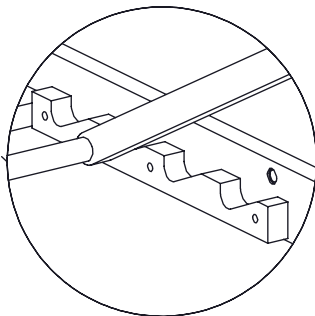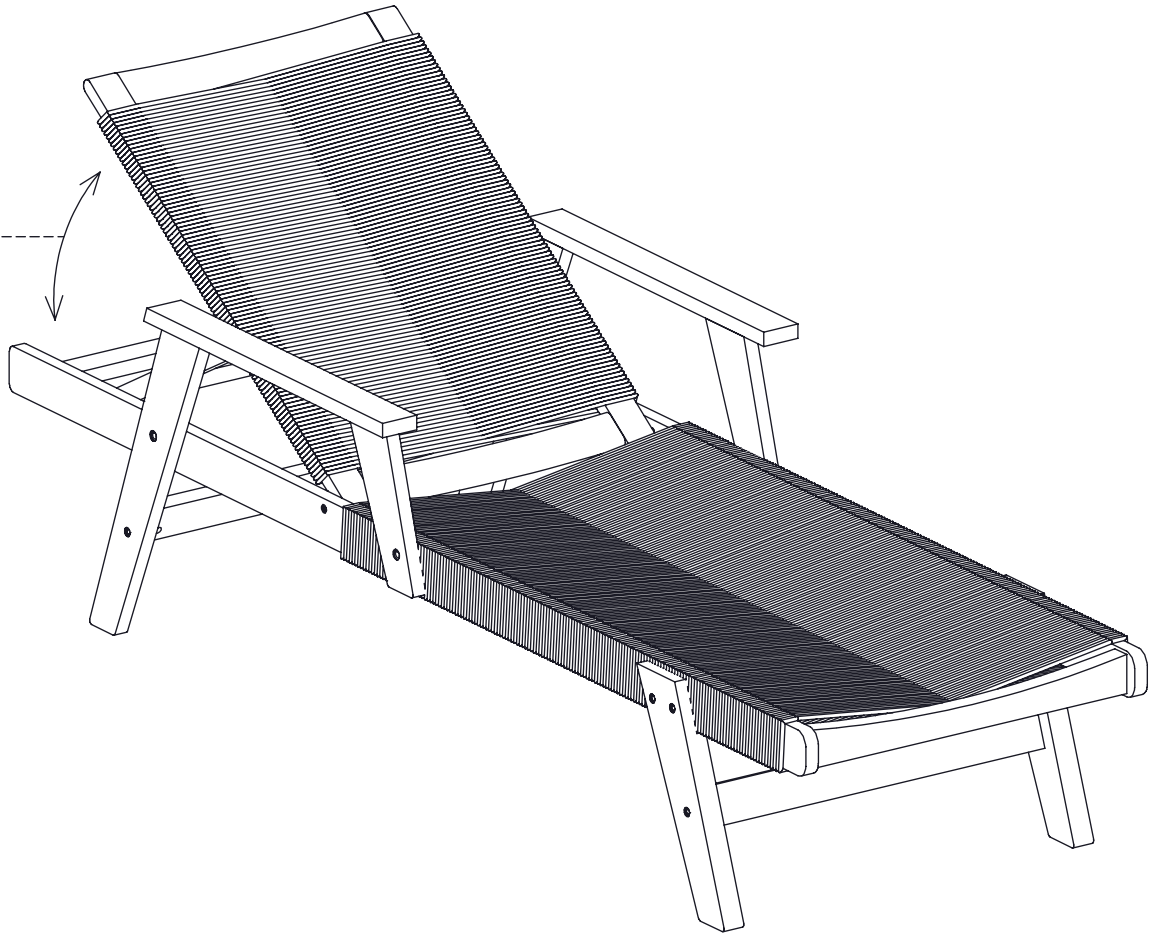

1

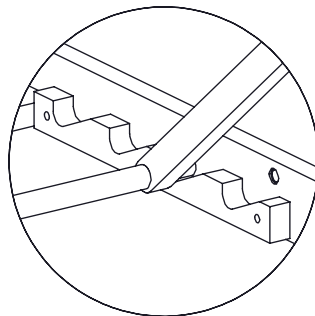

2

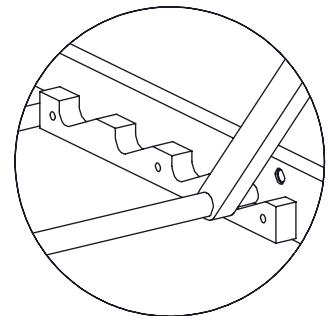

3

