

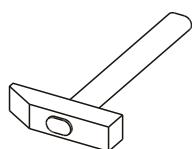
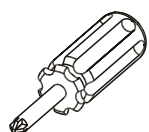
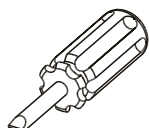
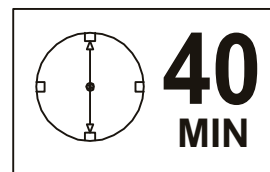
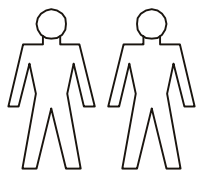
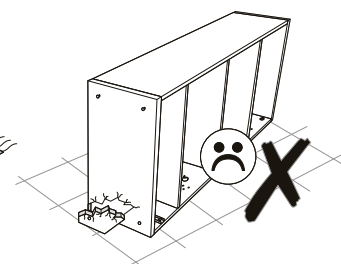
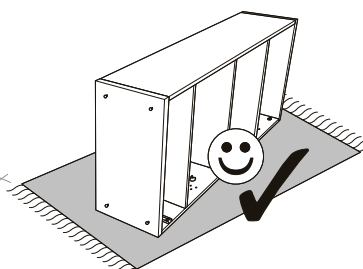
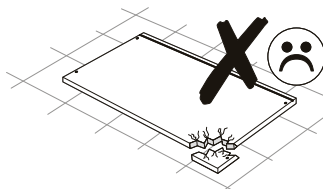
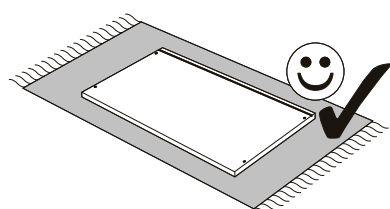






CAMRON Schuhschrank 902 2T

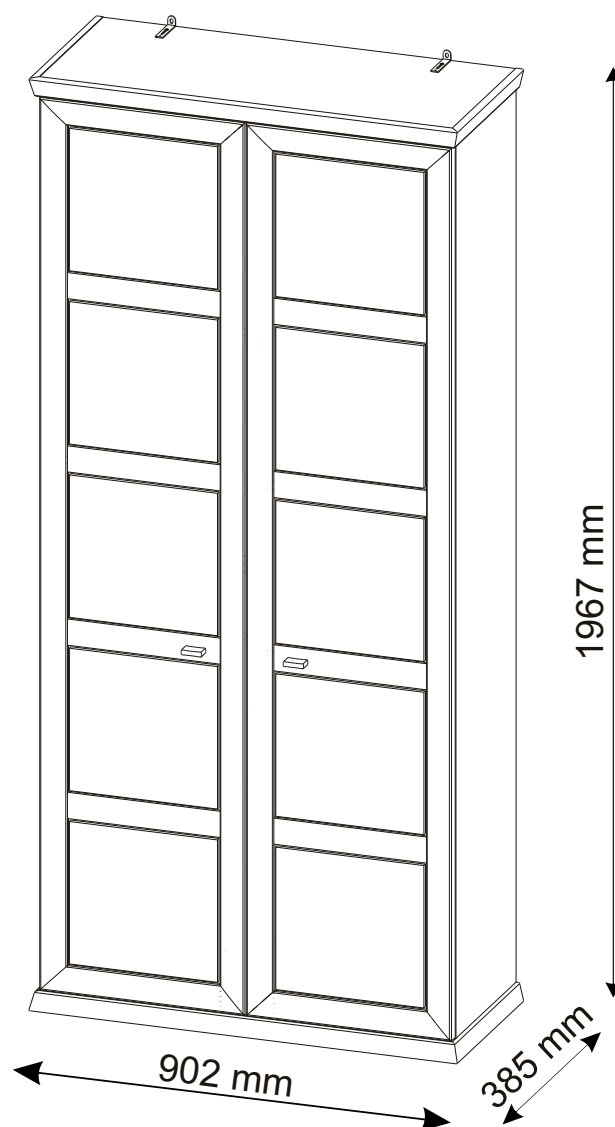


Ø8

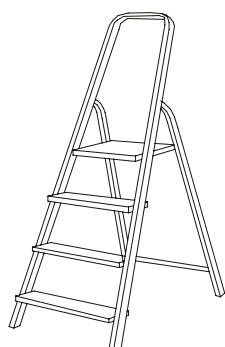



CAMRON Schuhschrank 902 2T

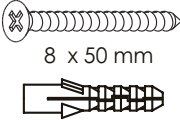
D0 3 x 15 mm 	U3 	D10 4 x 16 mm 
P0 	E0 5 x 50 mm 8 x 50 mm 	D21 5 x 13 mm 
Q3 	C0 	U2 
M1 	C2 	J10 
J3 	L6 	H2 4 x 22 mm 

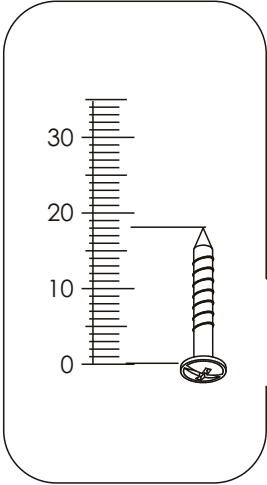



CAMRON Schuhschrank 902 2T

1	1909	348	16	x1	1/4
2	1909	348	16	x1	1/4
3	838	328	16	x1	2/4
4	838	328	16	x4	1/4
4	838	328	16	x6	2/4
5	848	1919	3	x1	4/4
6	1880	432	25	x1	4/4
7	1880	432	25	x1	4/4
8	902	385	40	x1	3/4
9	902	385	40	x1	3/4
					2/4

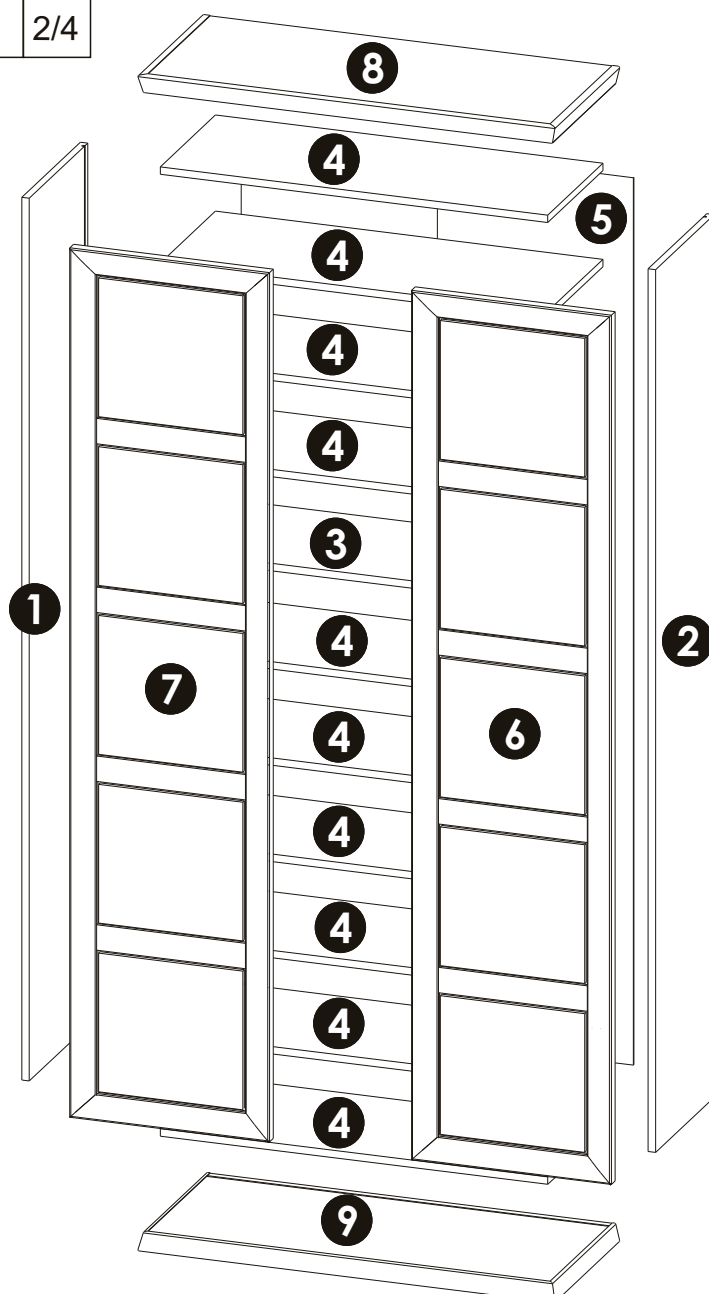
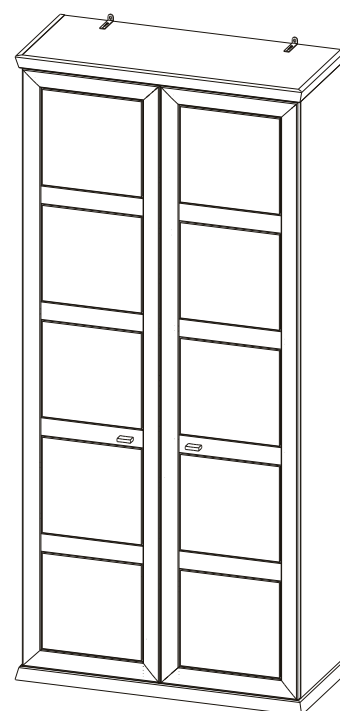





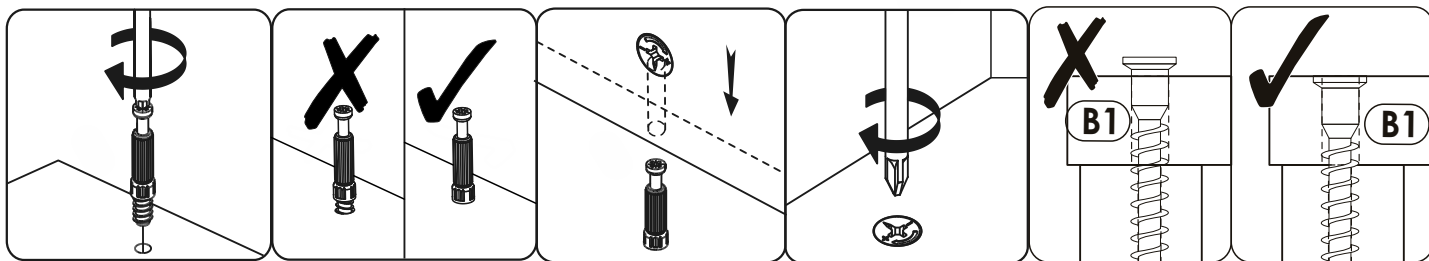


1 ►

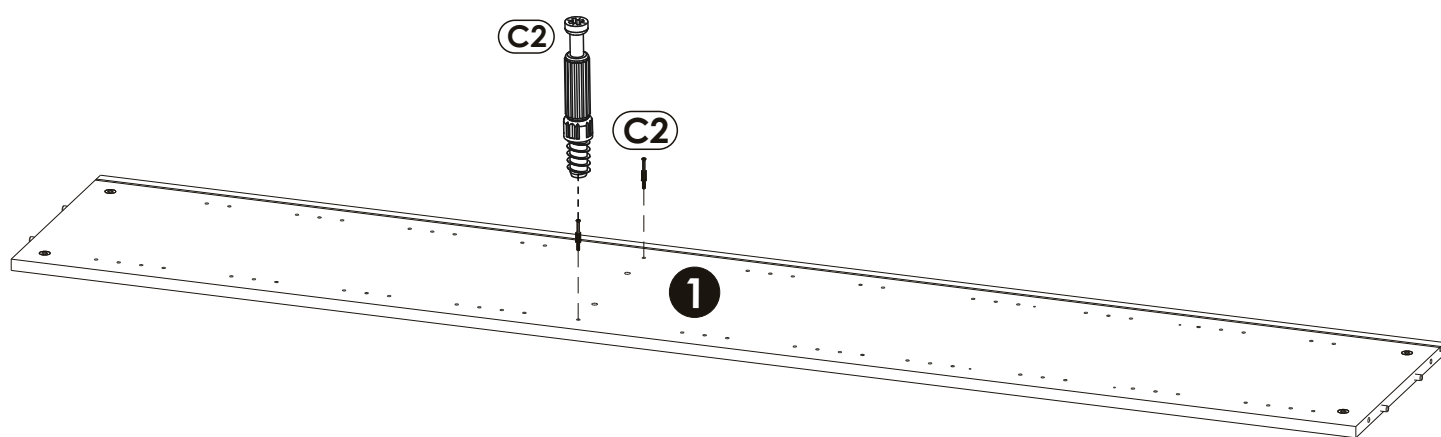
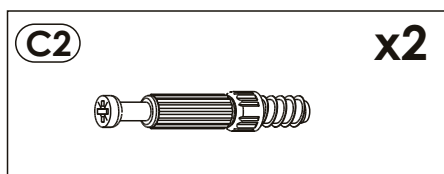



2 ►

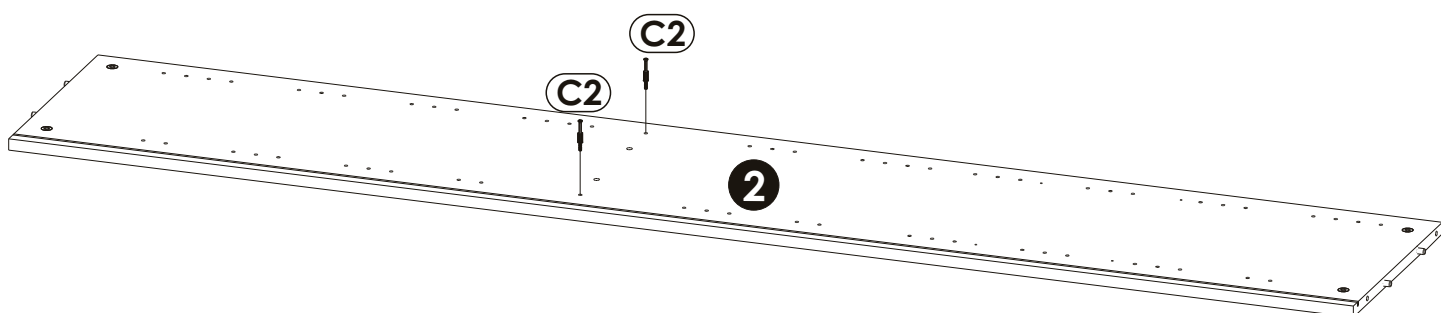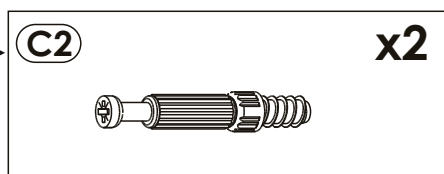

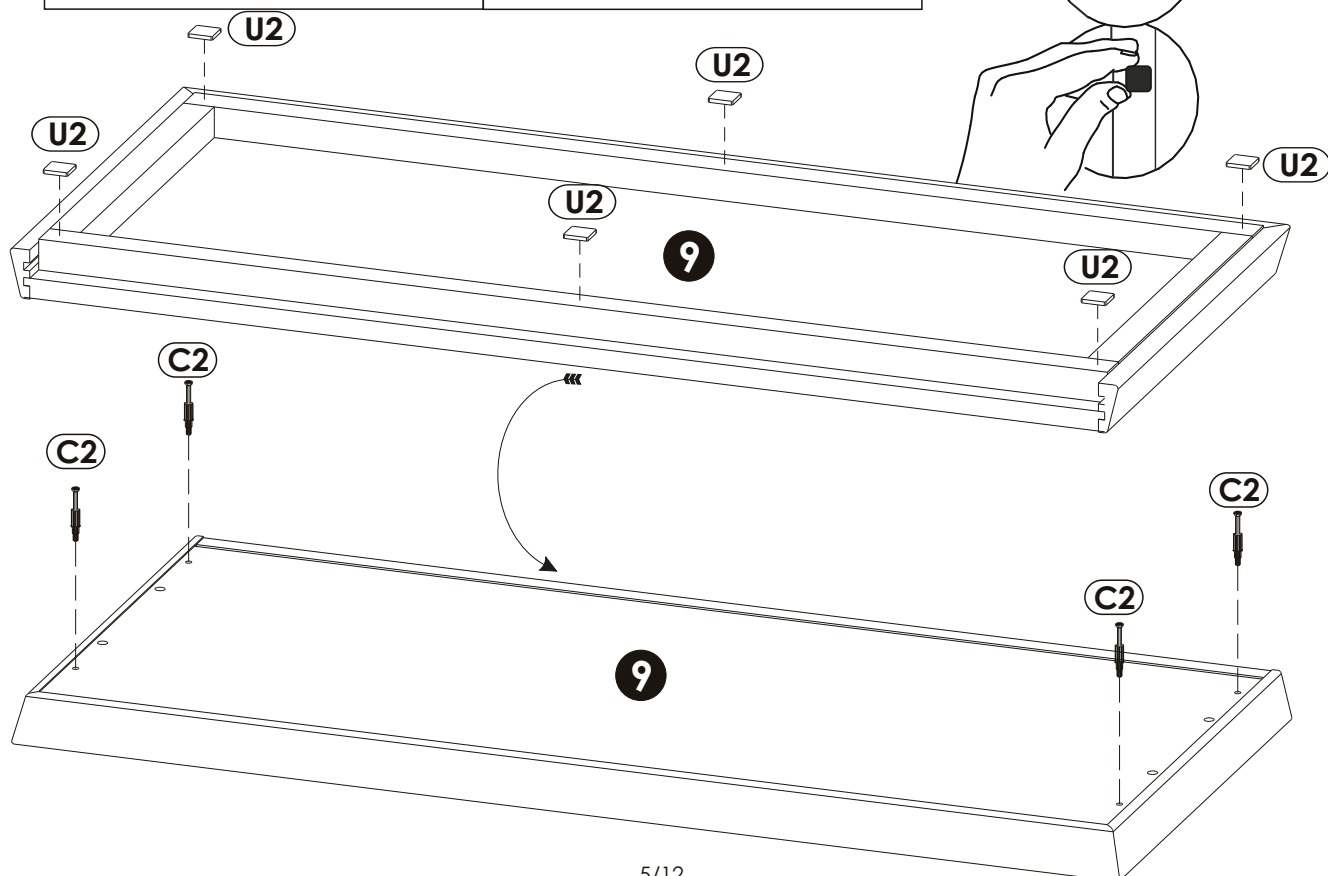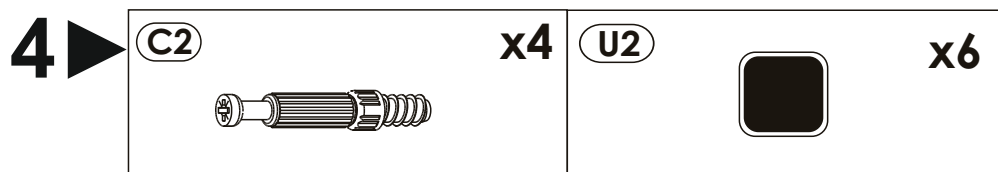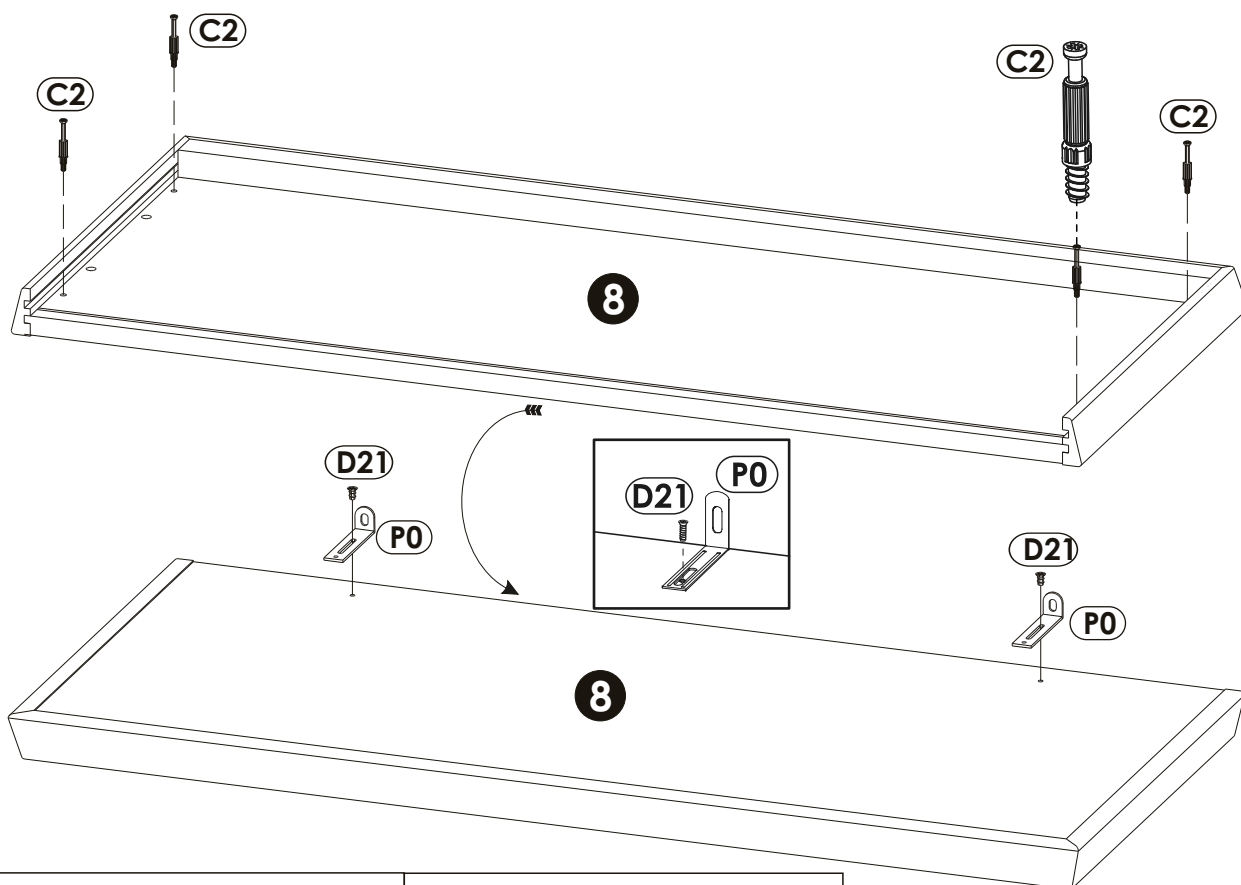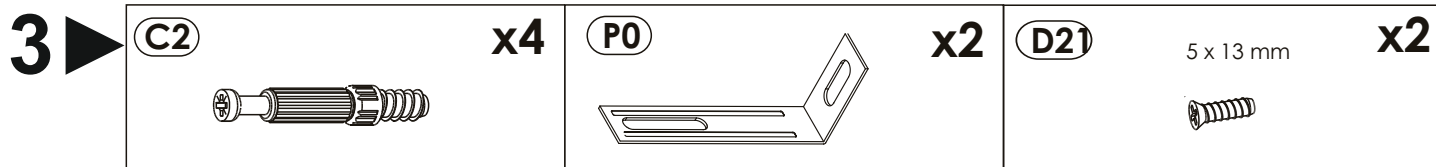



5 ▶

J10  x4	L6  x1	U3  x2
H2  4 x 22 mm x2	D10  4 x 16 mm x8	


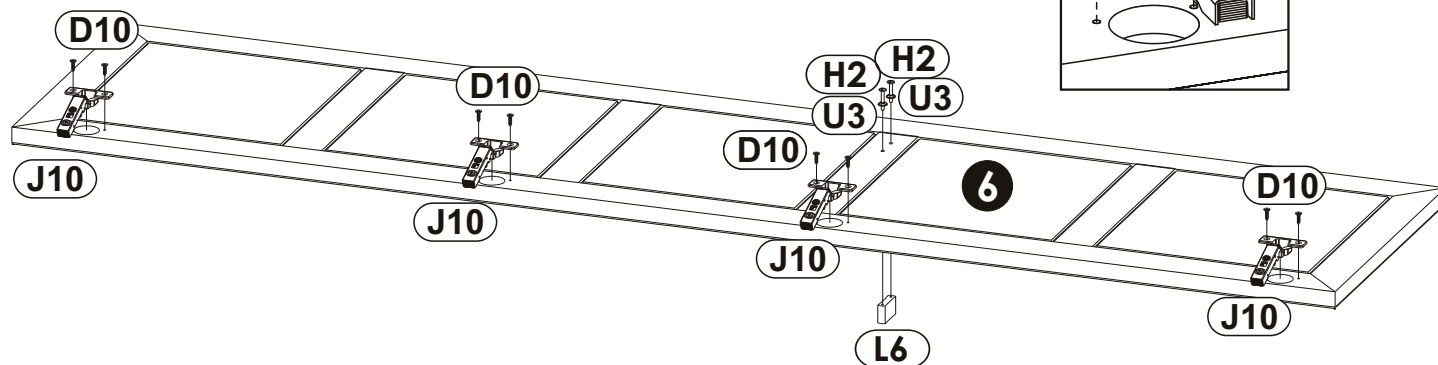


6 ▶



J10  x4	L6  x1	U3  x2
H2  4 x 22 mm x2	D10  4 x 16 mm x8	

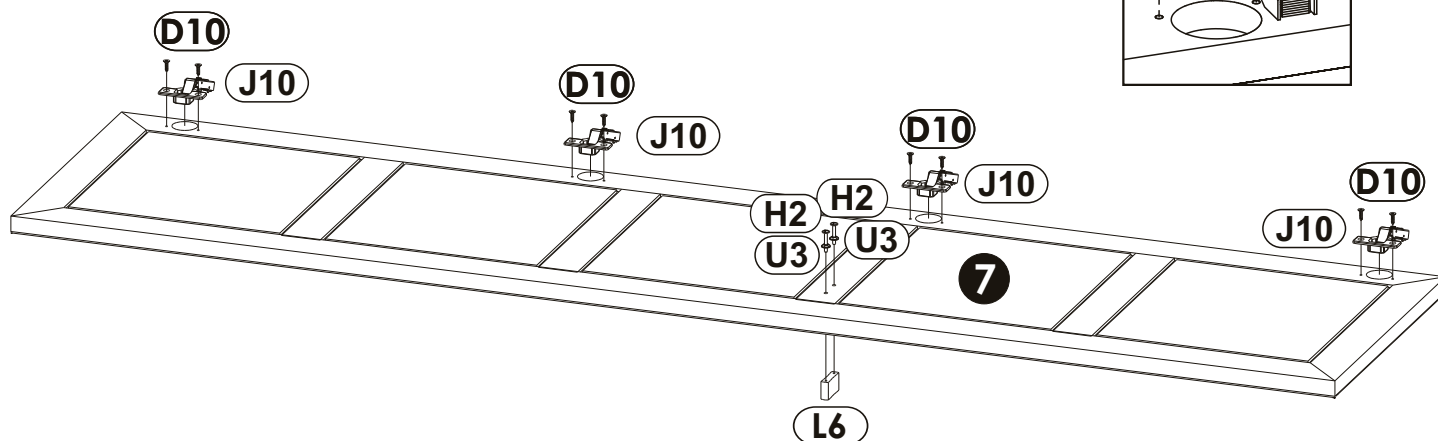



7 ►

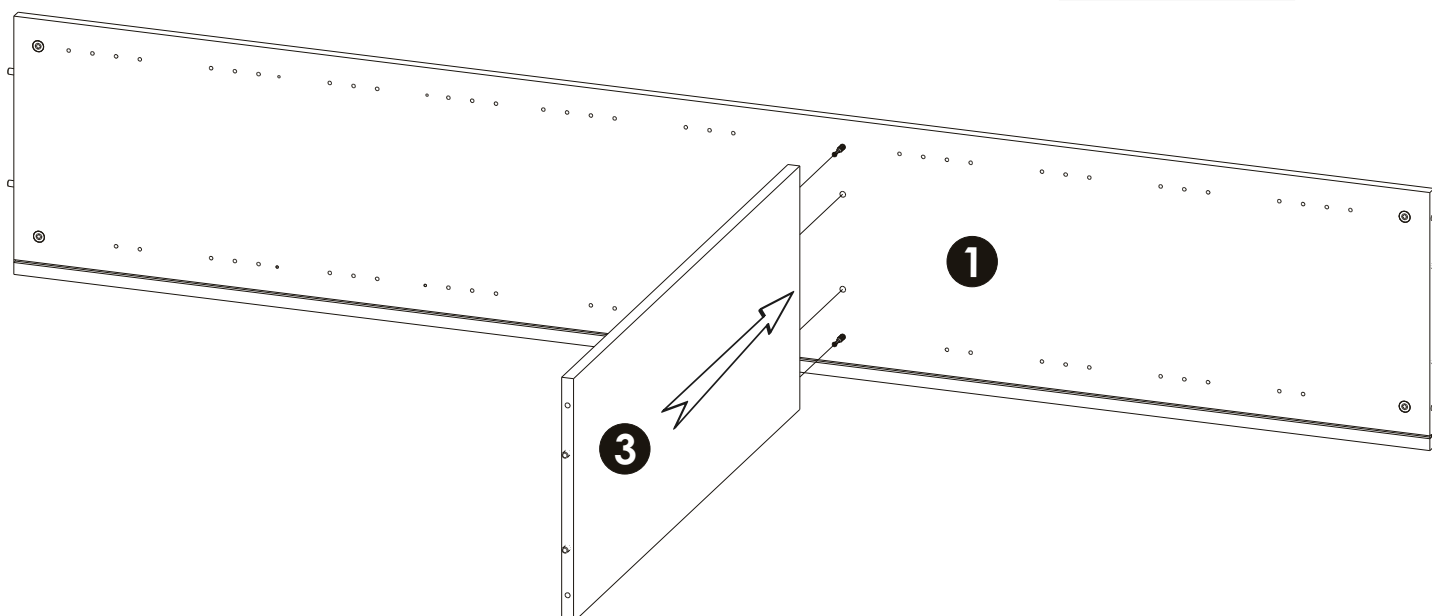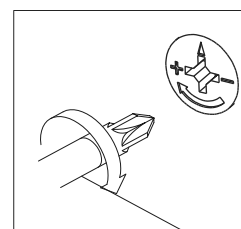


8 ►

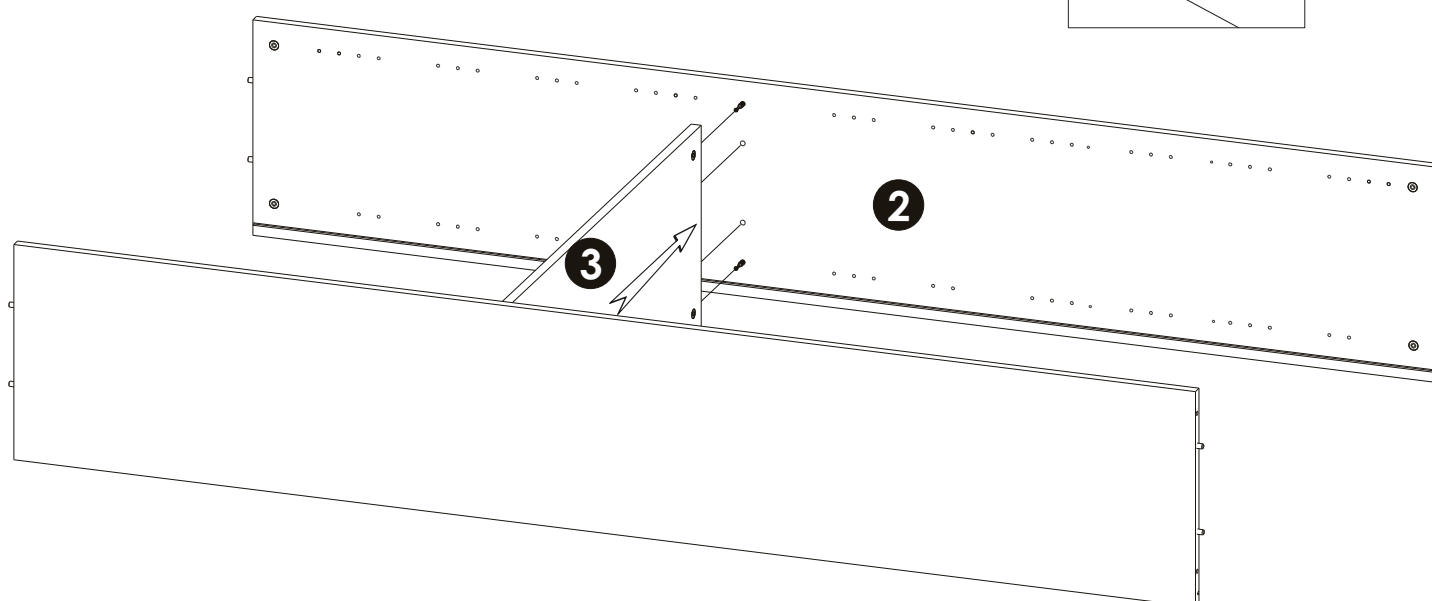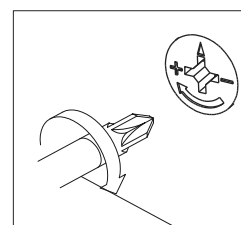



9 ►

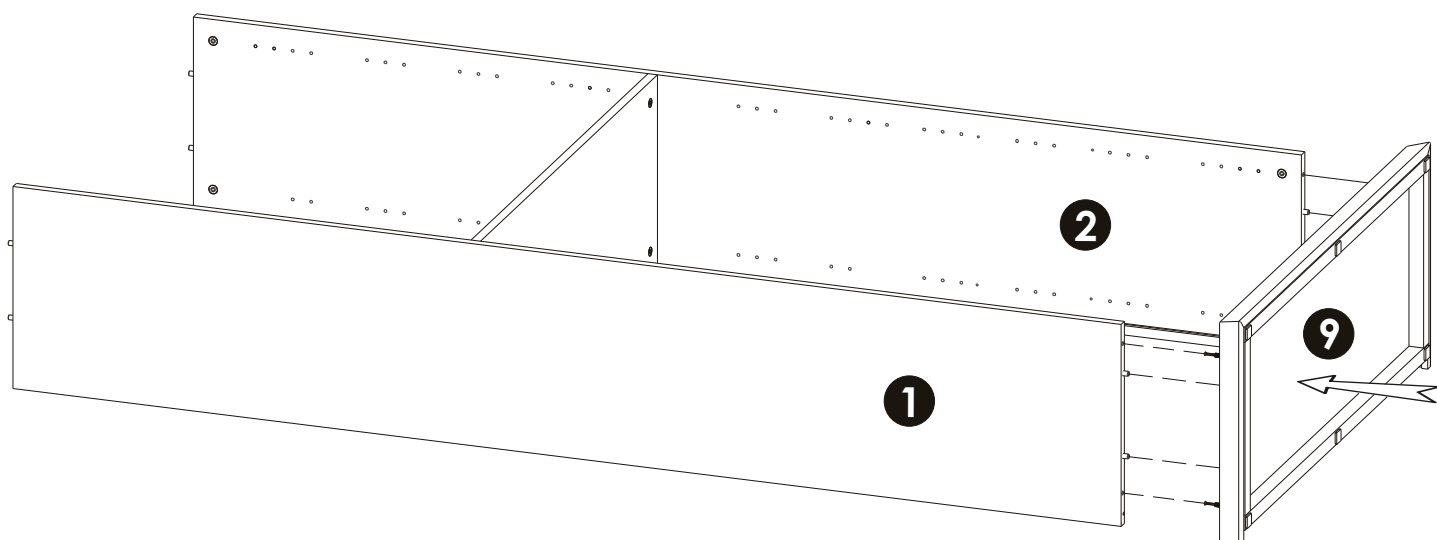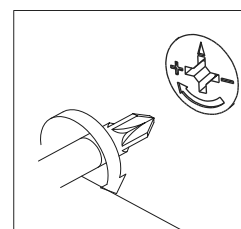









10 ►


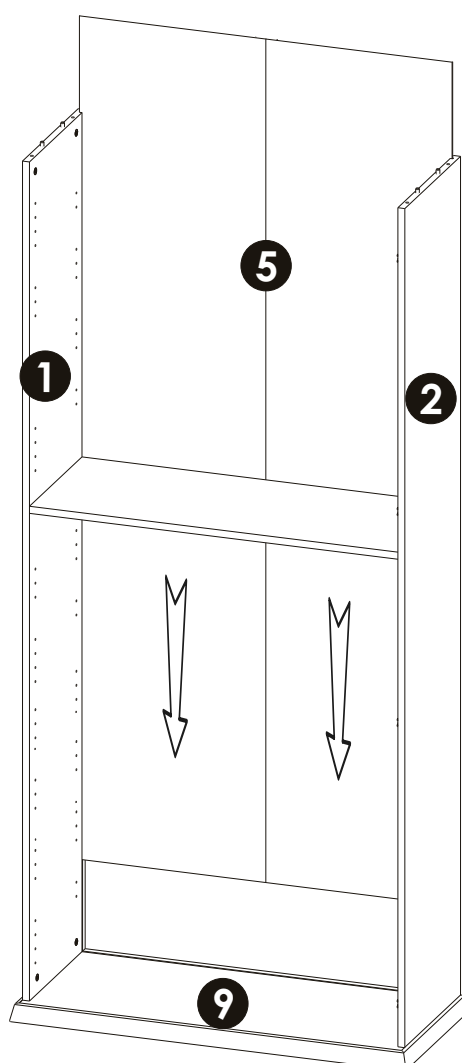


11 ►

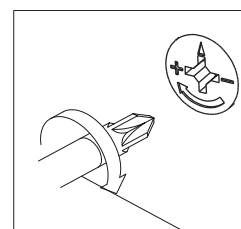
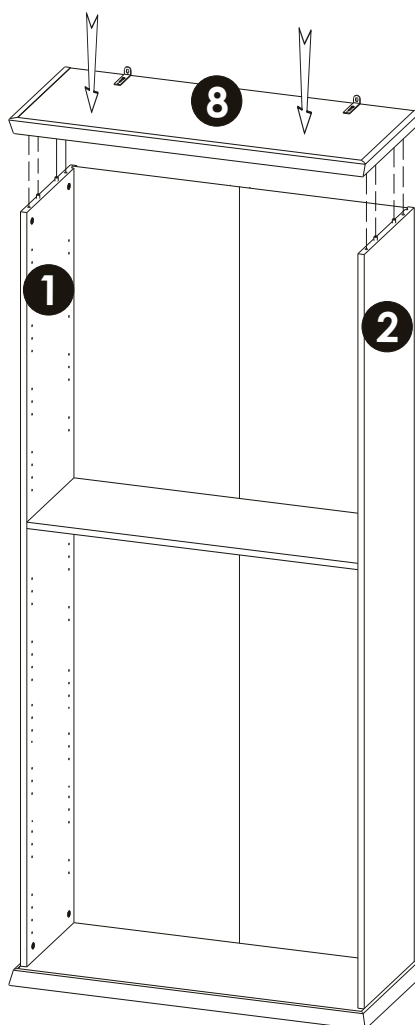


12 ►

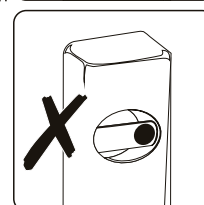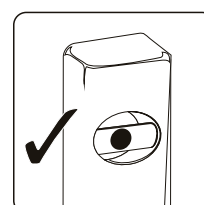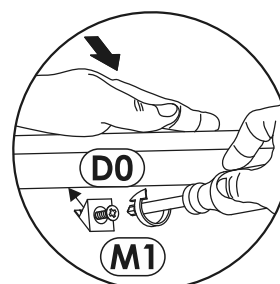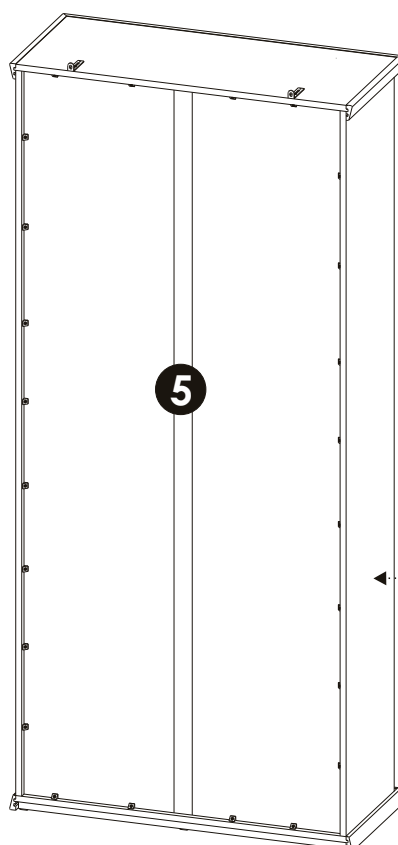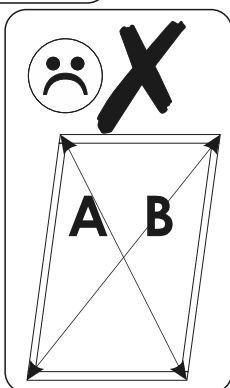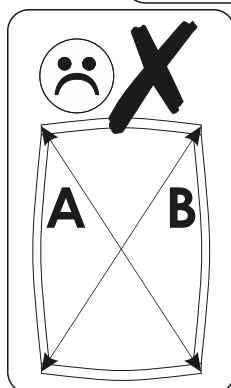
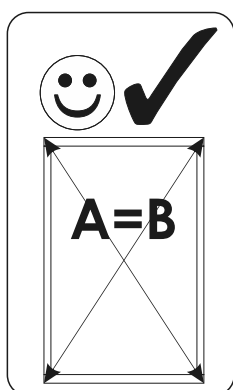
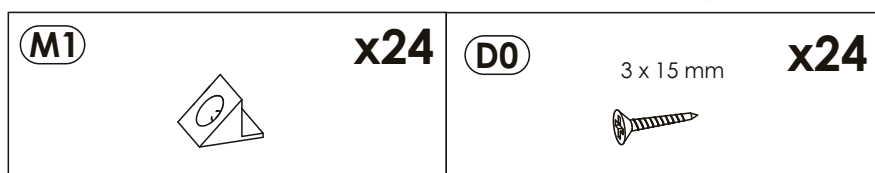


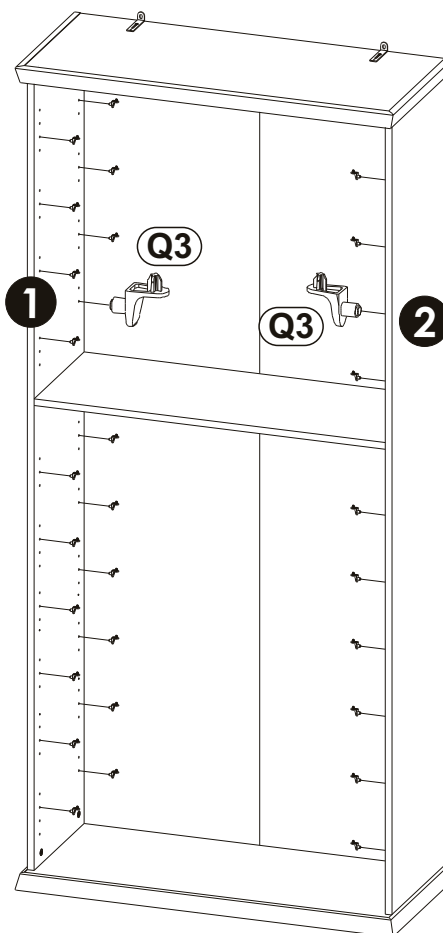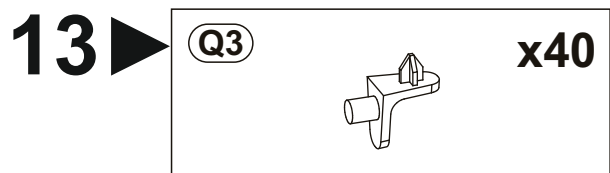





14 ►

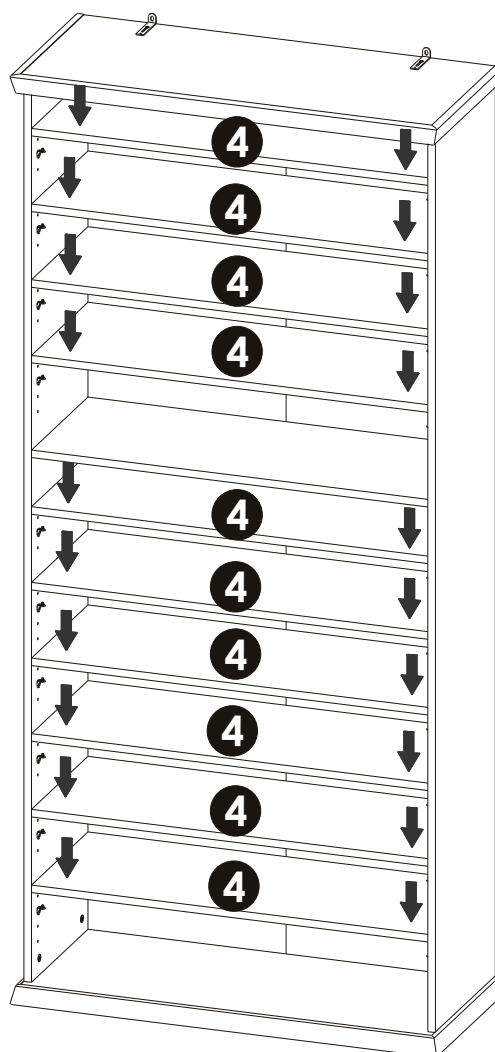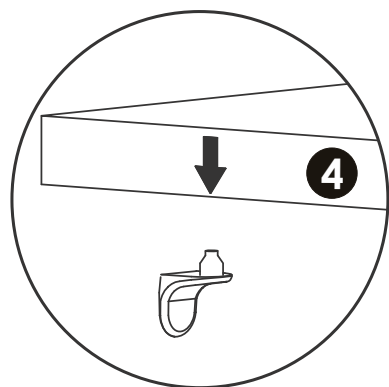




15▶

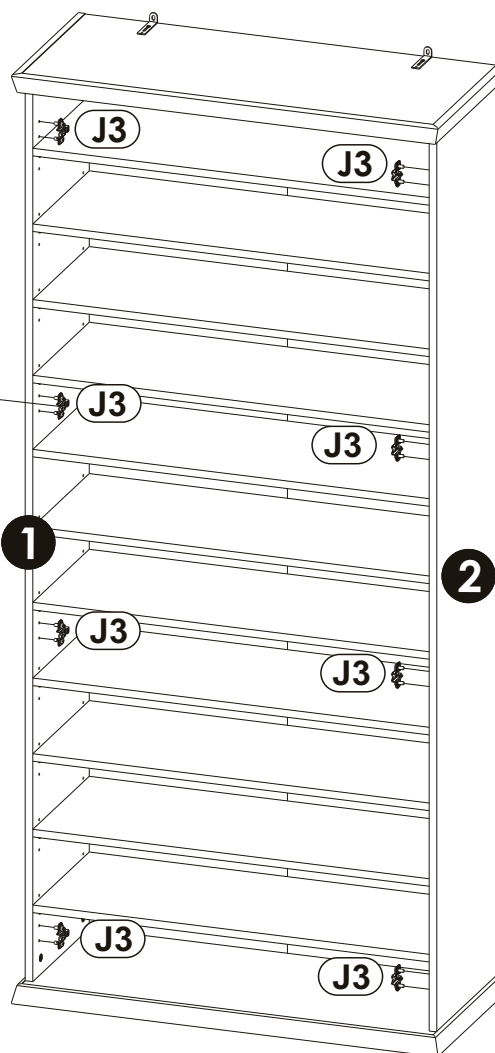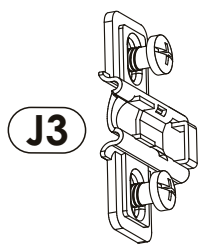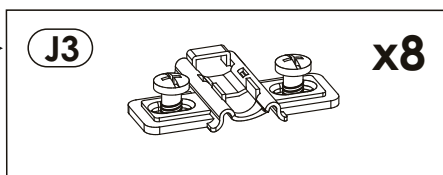

16▶

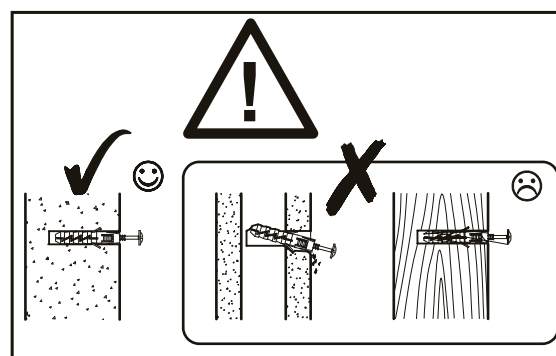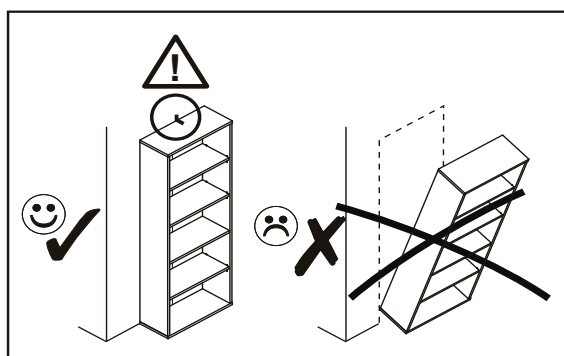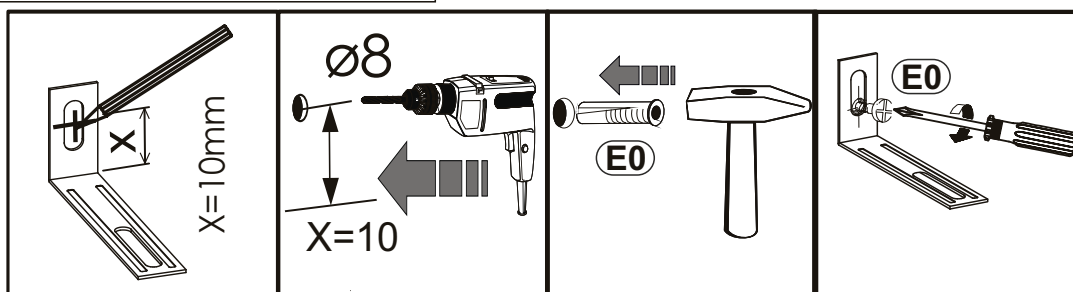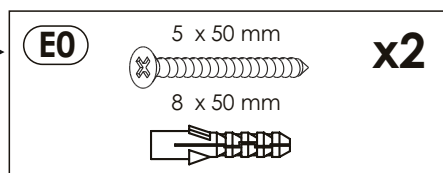

17▶

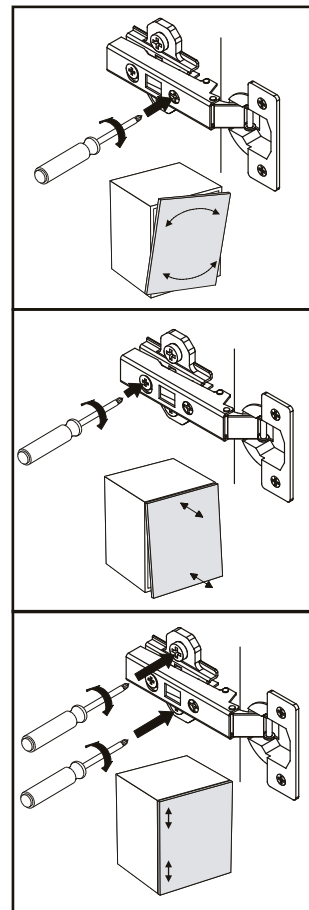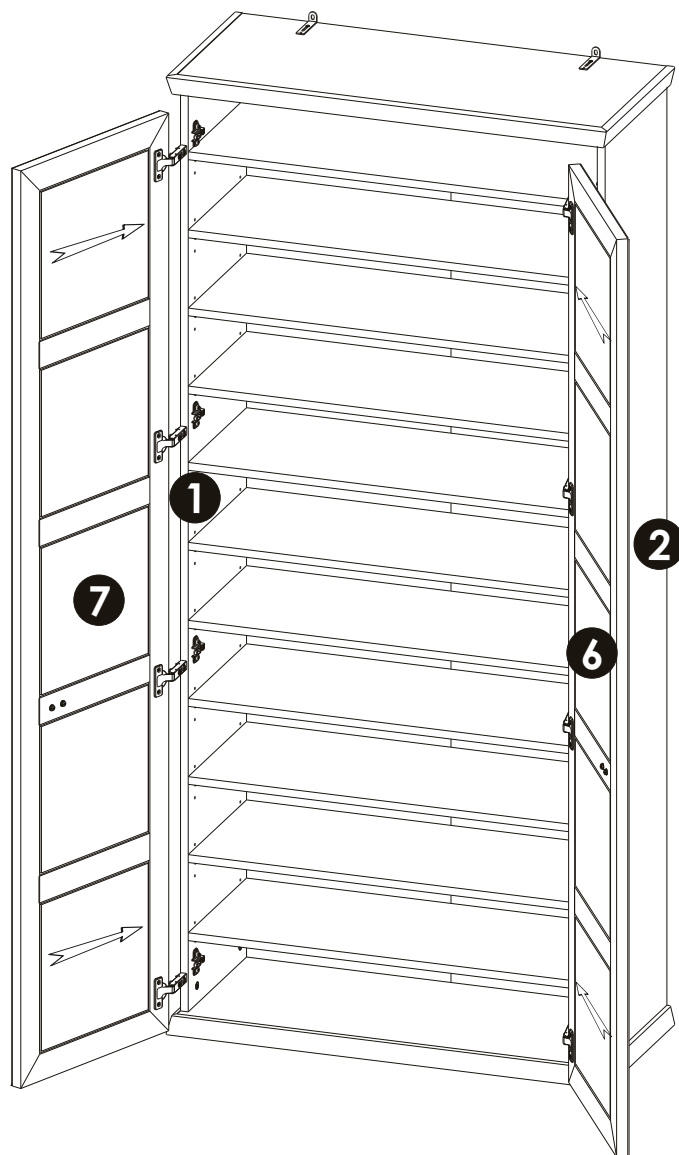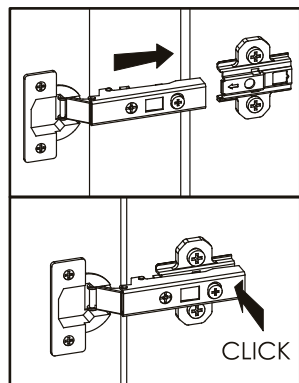

18▶

