








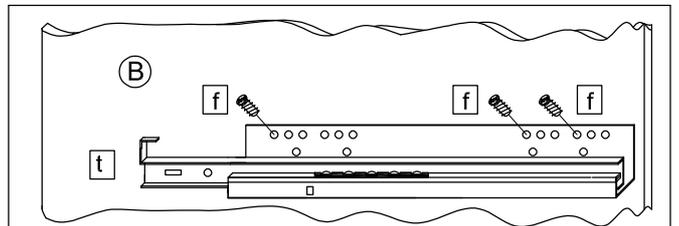
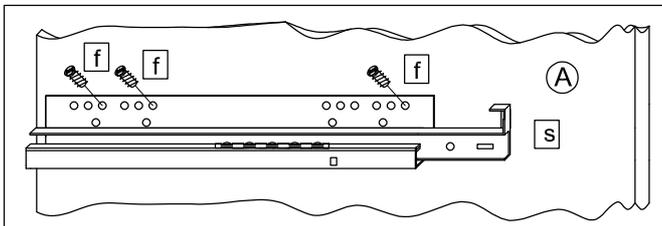
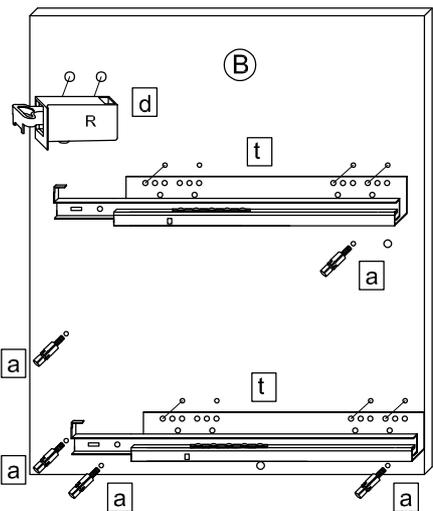
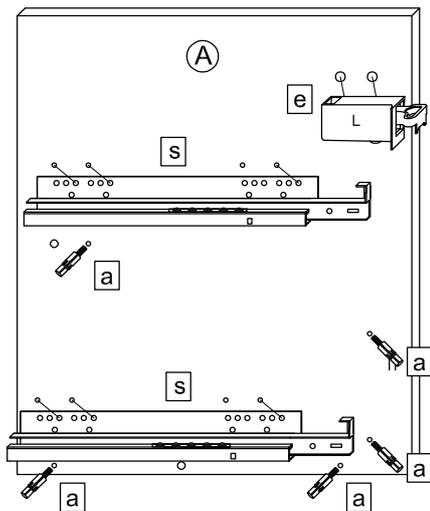
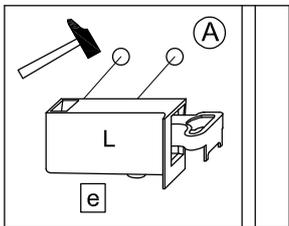
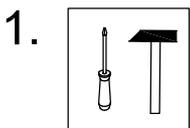
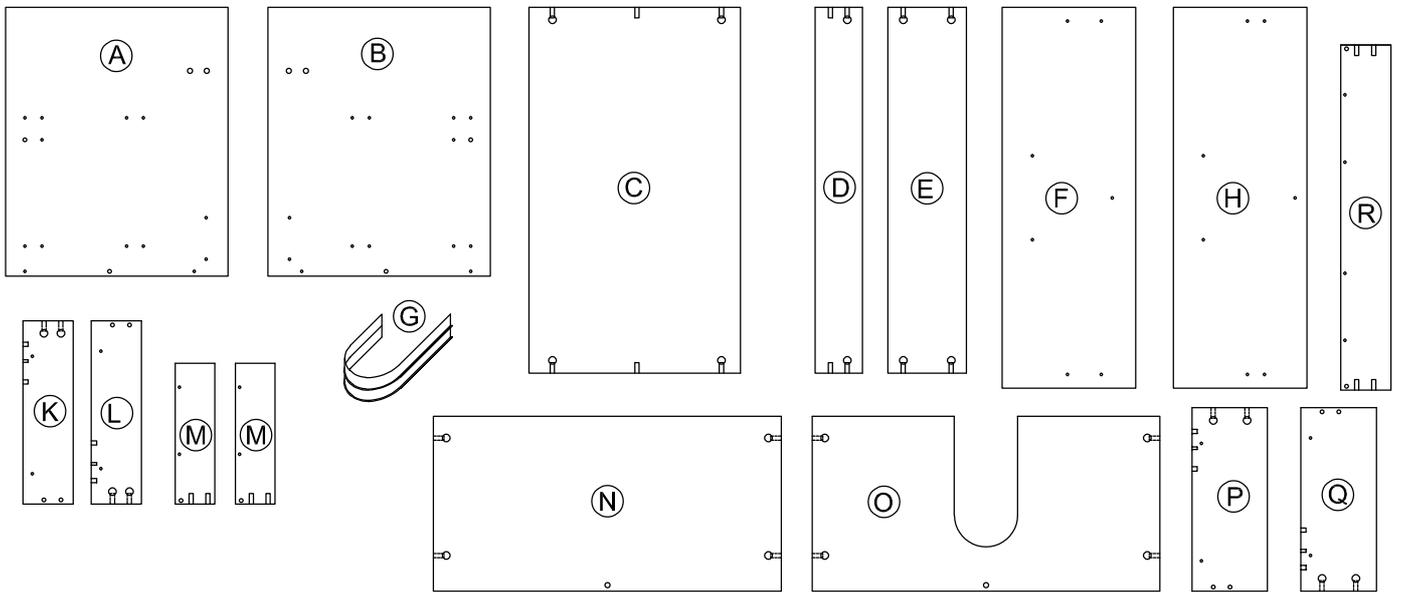
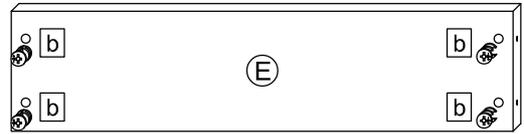
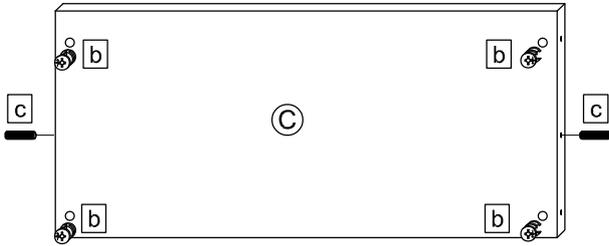








26 x a  DUEB-SMD-000005	Stück	26 x b  EXZENTER-000015	Stück	12 x c  DUEB-HLZ-008X030	Stück	1 x d  AUF-001-000080	Stück	<table border="1"> <tr> <td>MOT-NZ0996S2</td> <td>A4</td> </tr> <tr> <td>Datum</td> <td>30/11/20</td> </tr> </table>		MOT-NZ0996S2	A4	Datum	30/11/20
MOT-NZ0996S2	A4												
Datum	30/11/20												
1 x e  AUF-001-000090	Stück	12 x f 6.3 x 11  SCH-KA-063X011	Stück	2 x g  Griff	Stück	4 x h  SCH-RDK-040X015	Stück	4 x j  KA-ZUB-000010	Stück				
2 x k  AUF-001-000020	Stück	8 x l 3.5 x 35  SCH-SPA-035X035	Stück	2 x m  VBD-000120	Stück	10 x n 4.0 x 15  SCH-RDK-040X015	Stück	2 x o  SCH-SON-055X060	Stück				
2 x p  AUF-001-000180	Stück	2 x s  KA-350-0020			2 x t 			Stück					

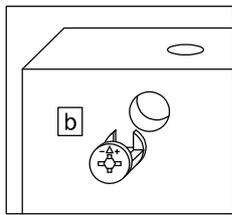



2.



3.

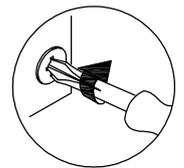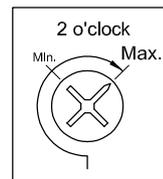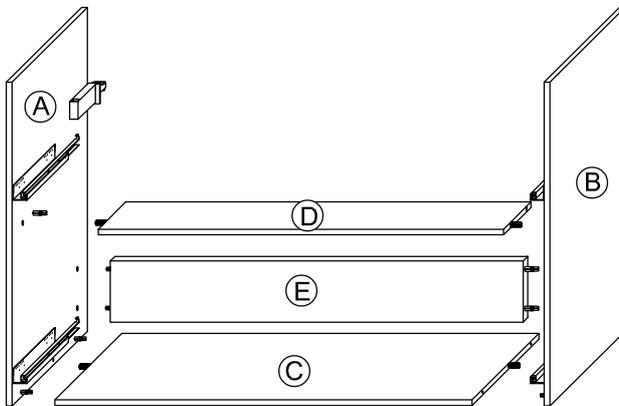


4.

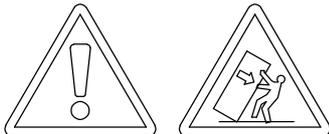


T9 Lassen Sie den Schrank nur durch fachkundige Personen mit für die Wand geeignetem Montagematerialien montieren.


T8 Wand

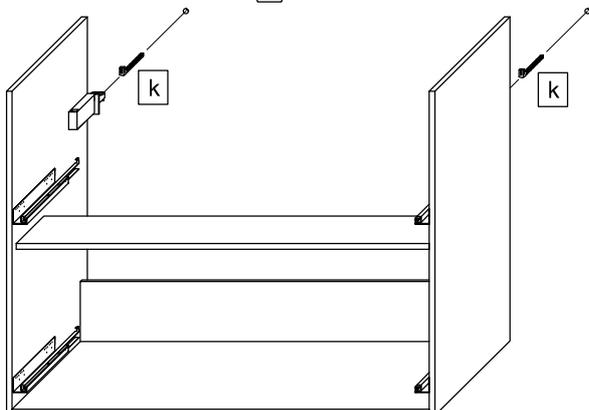




T8 Wand

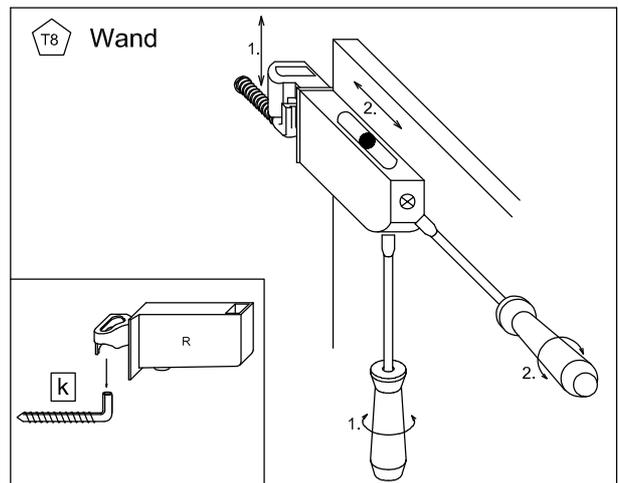




5.

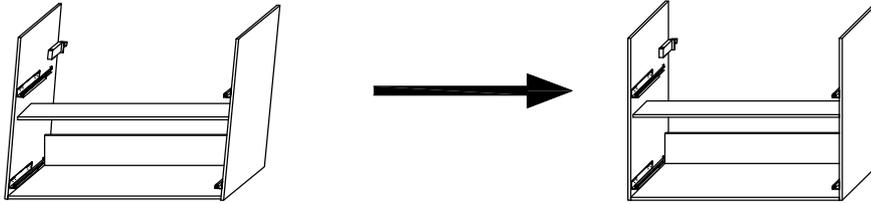








6.

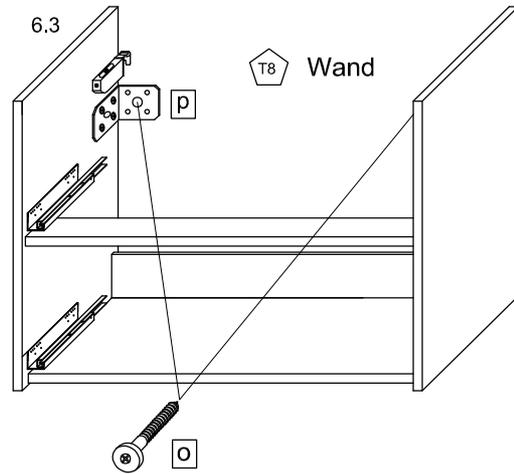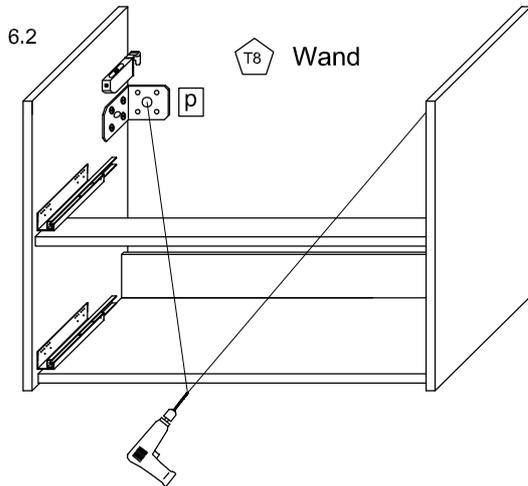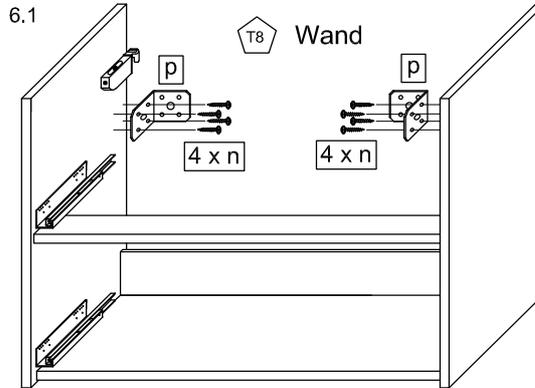





7.

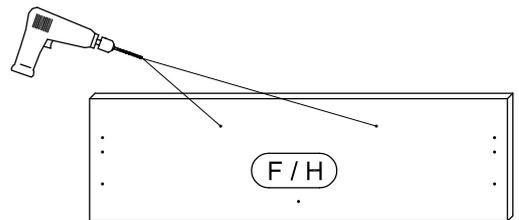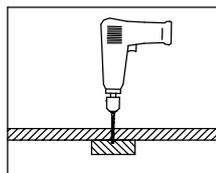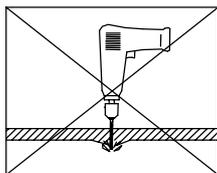




8.

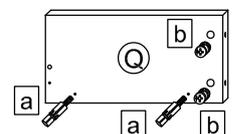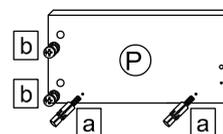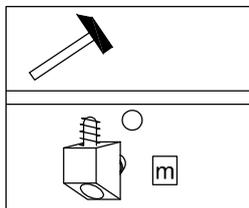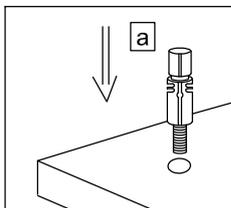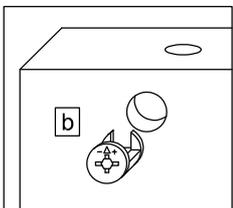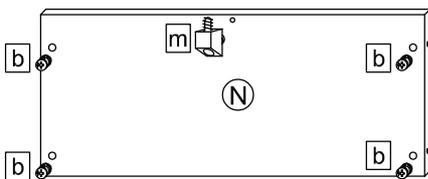











9.

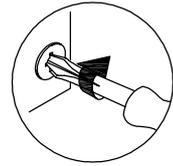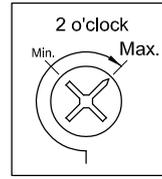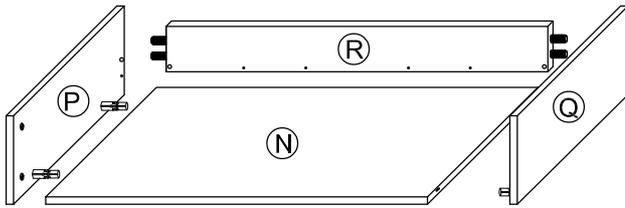





10.

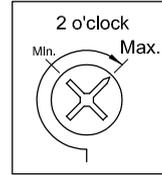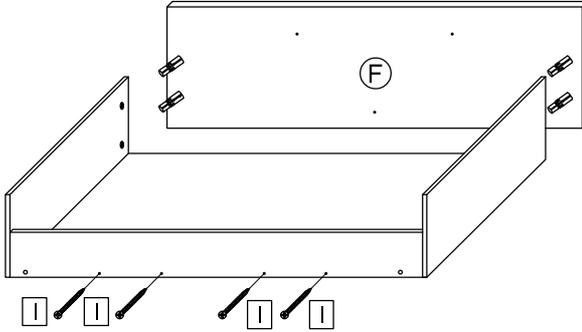





11.

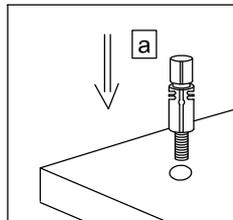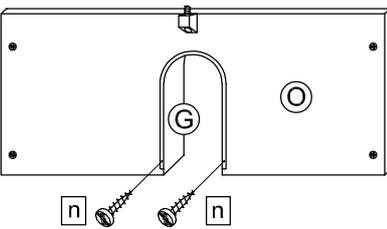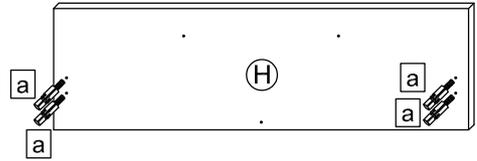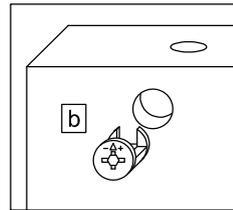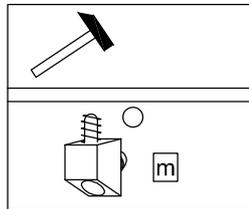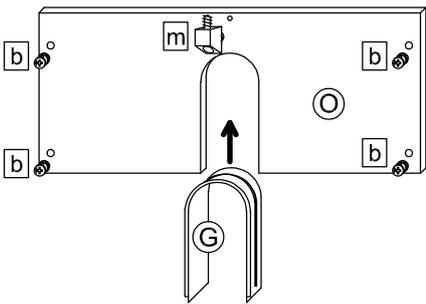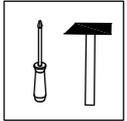



12.

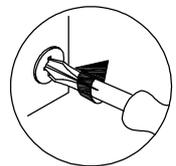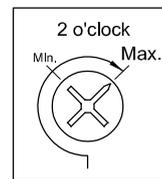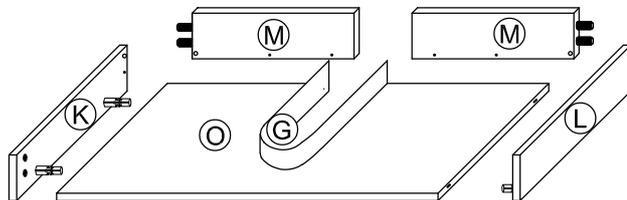

13.

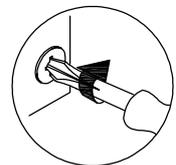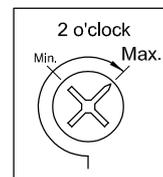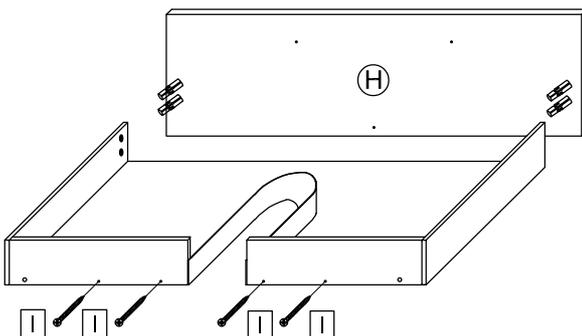


14.

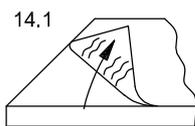




T10

Bei Hochglanz-Fronten bitte erst die Schutzfolie entfernen und dann den Griff montieren!





14.2

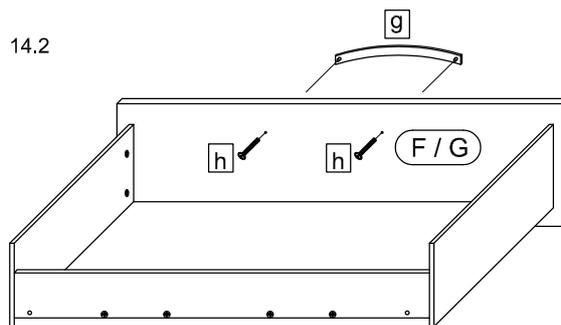


15.

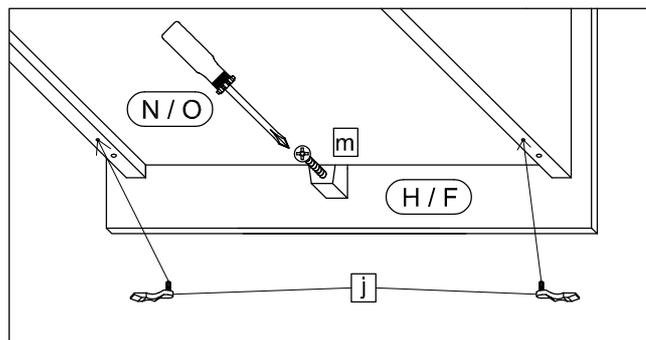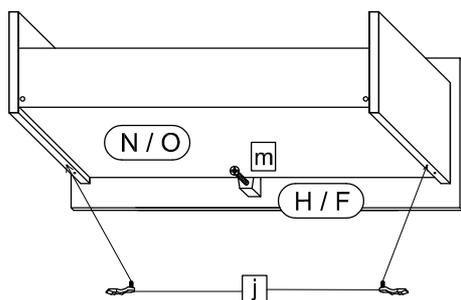


16.

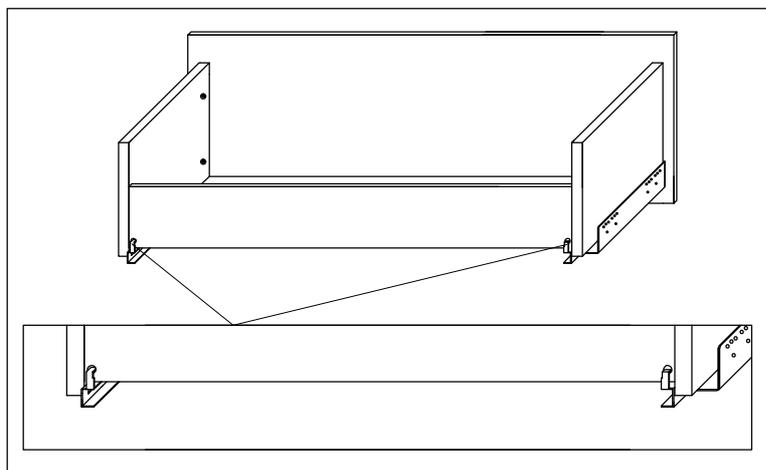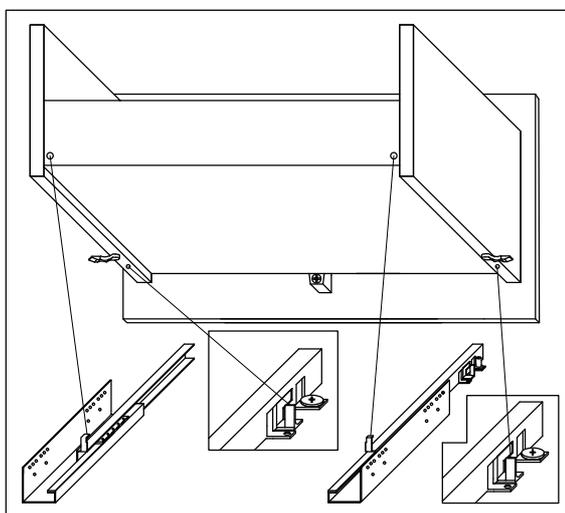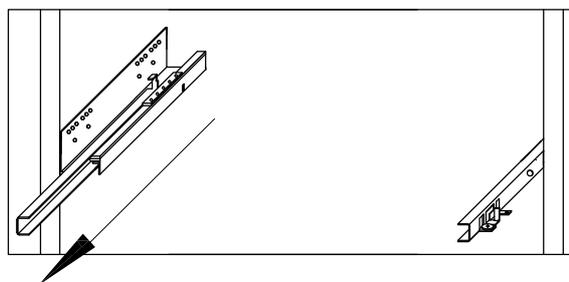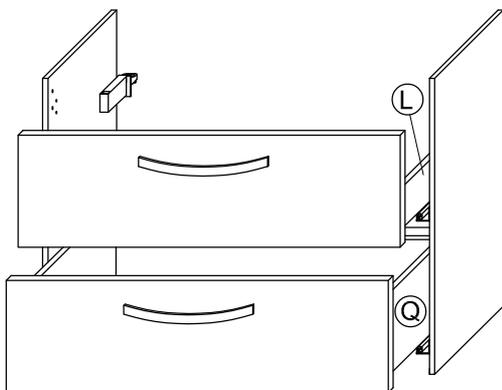



17.

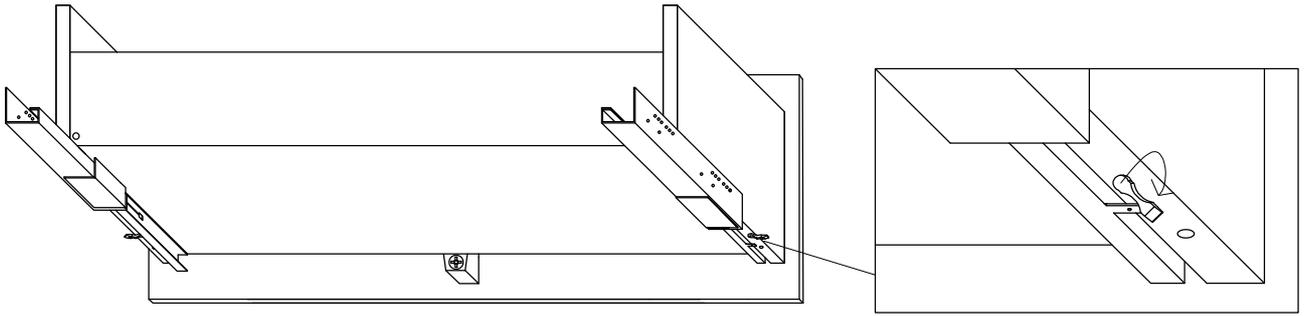

18.

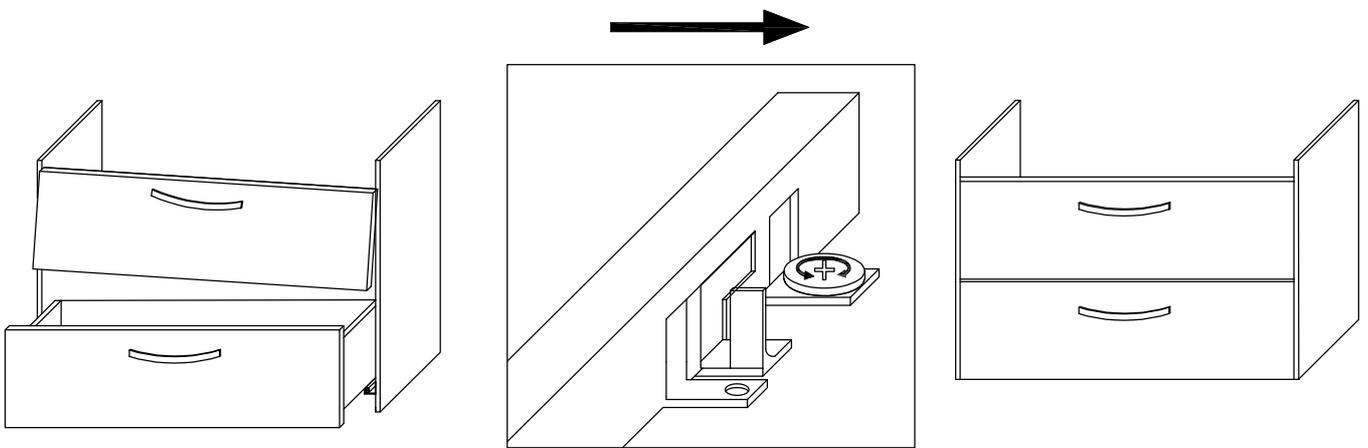

19.

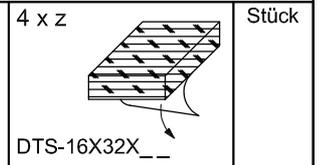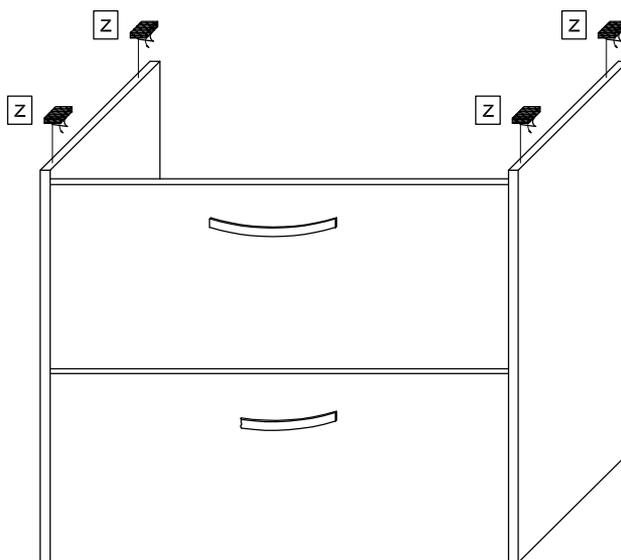

Das Möbel bitte nur mit einem feuchten Tuch reinigen.