
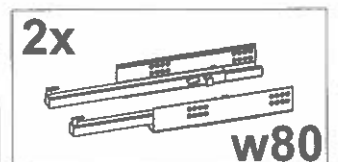
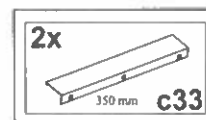
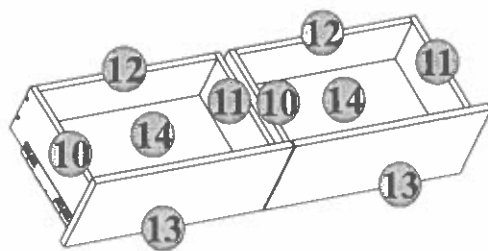
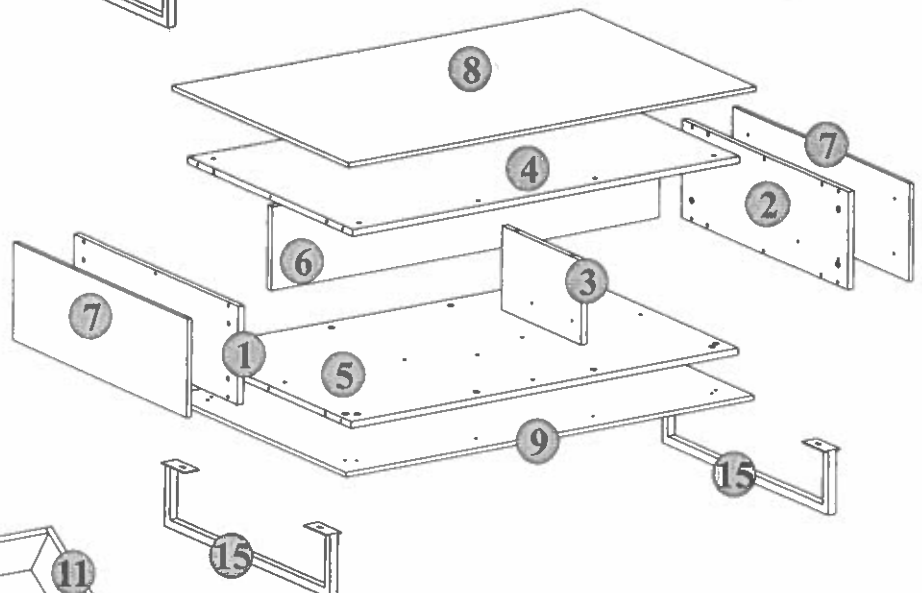
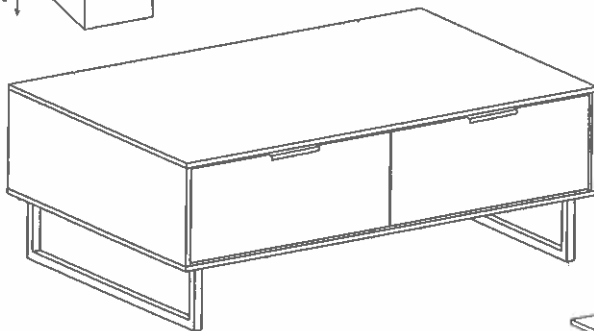
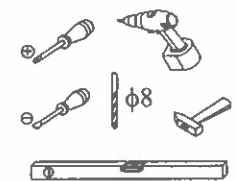




6585

versionsnummer: 23.03.2025


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

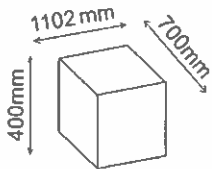


B1

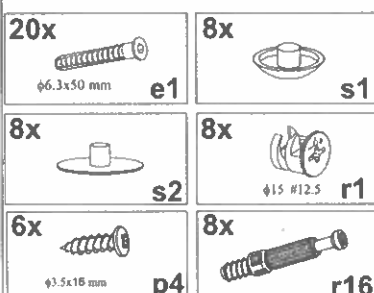

B2

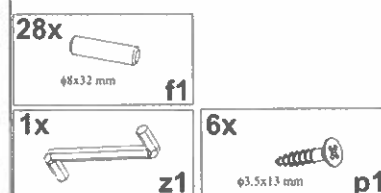


B3

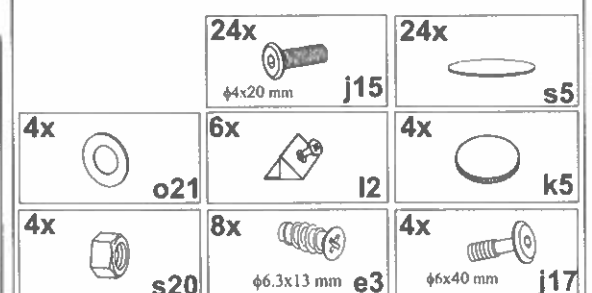



1

20x
f1
φ8x32 mm



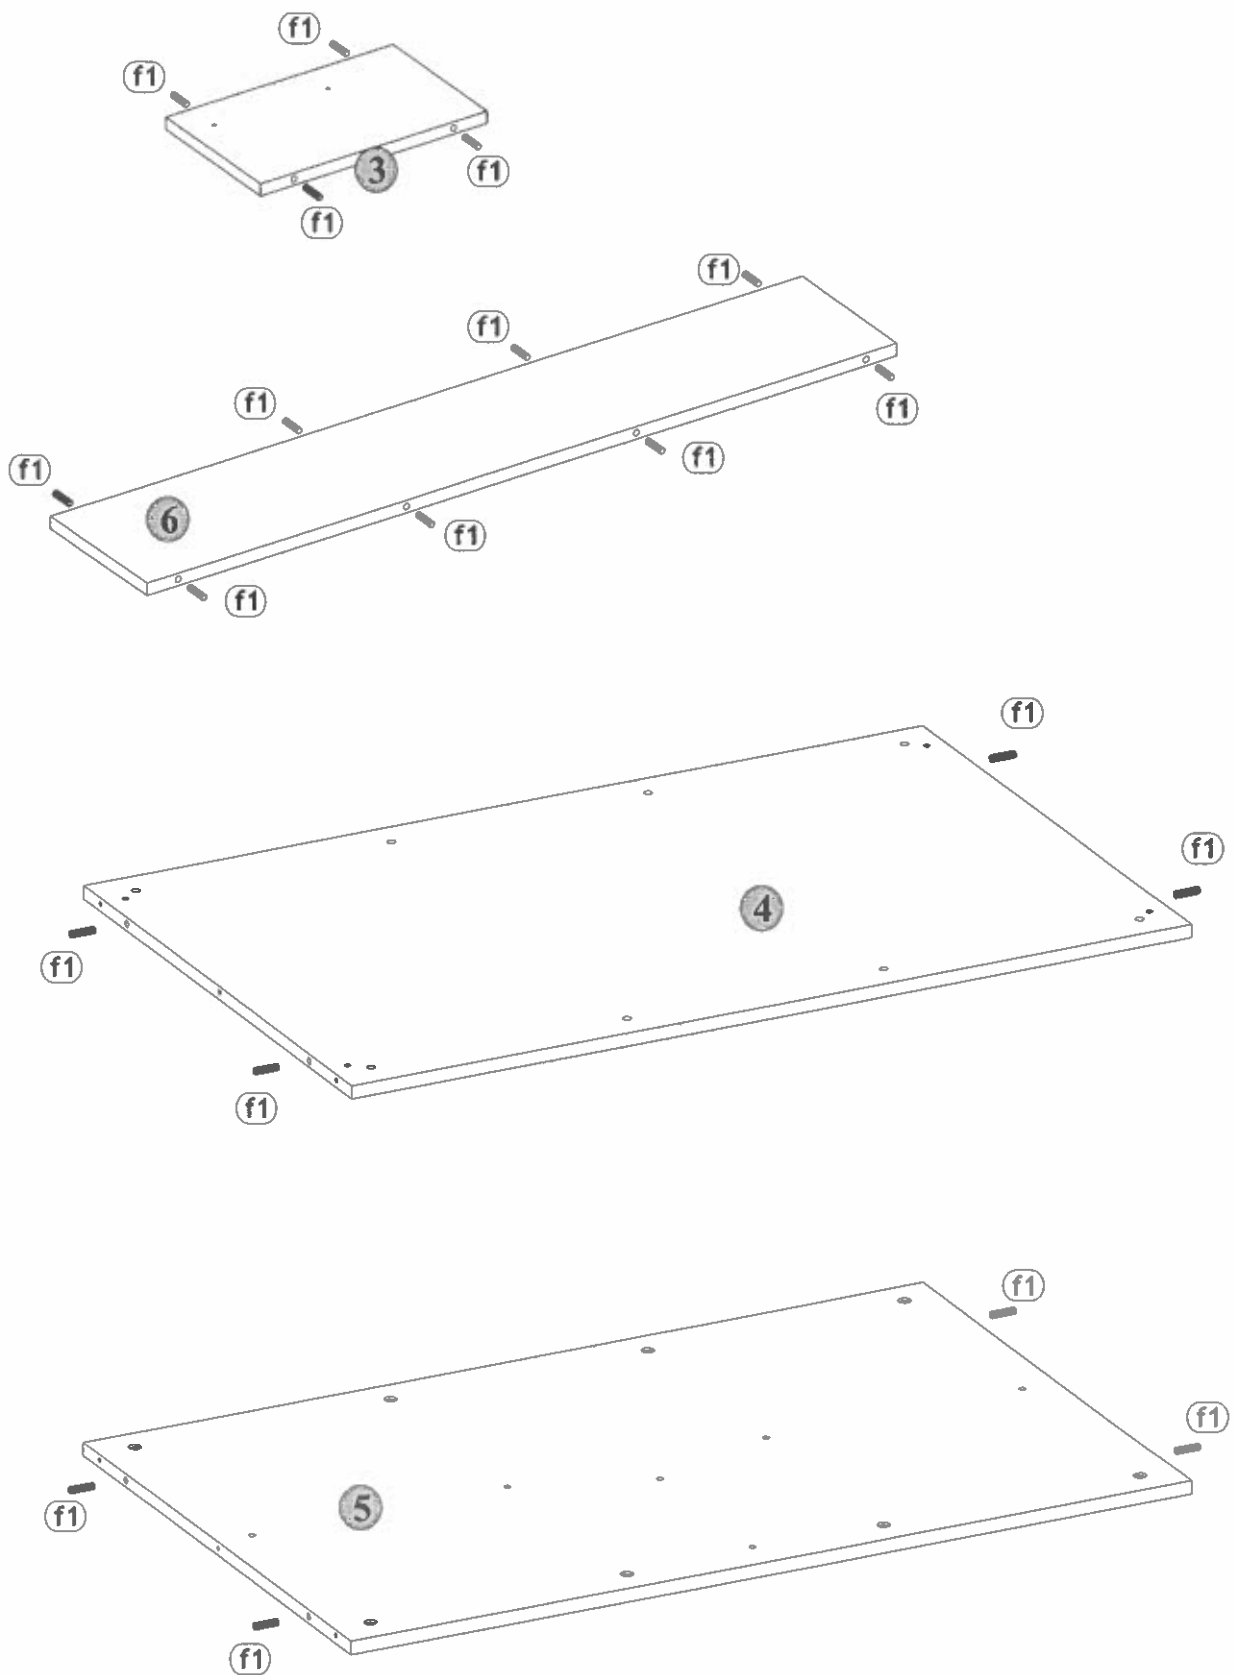


2

2

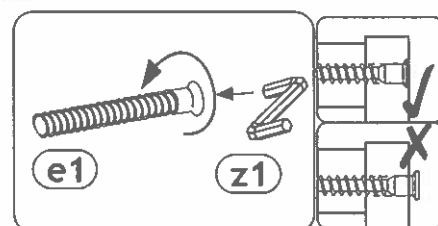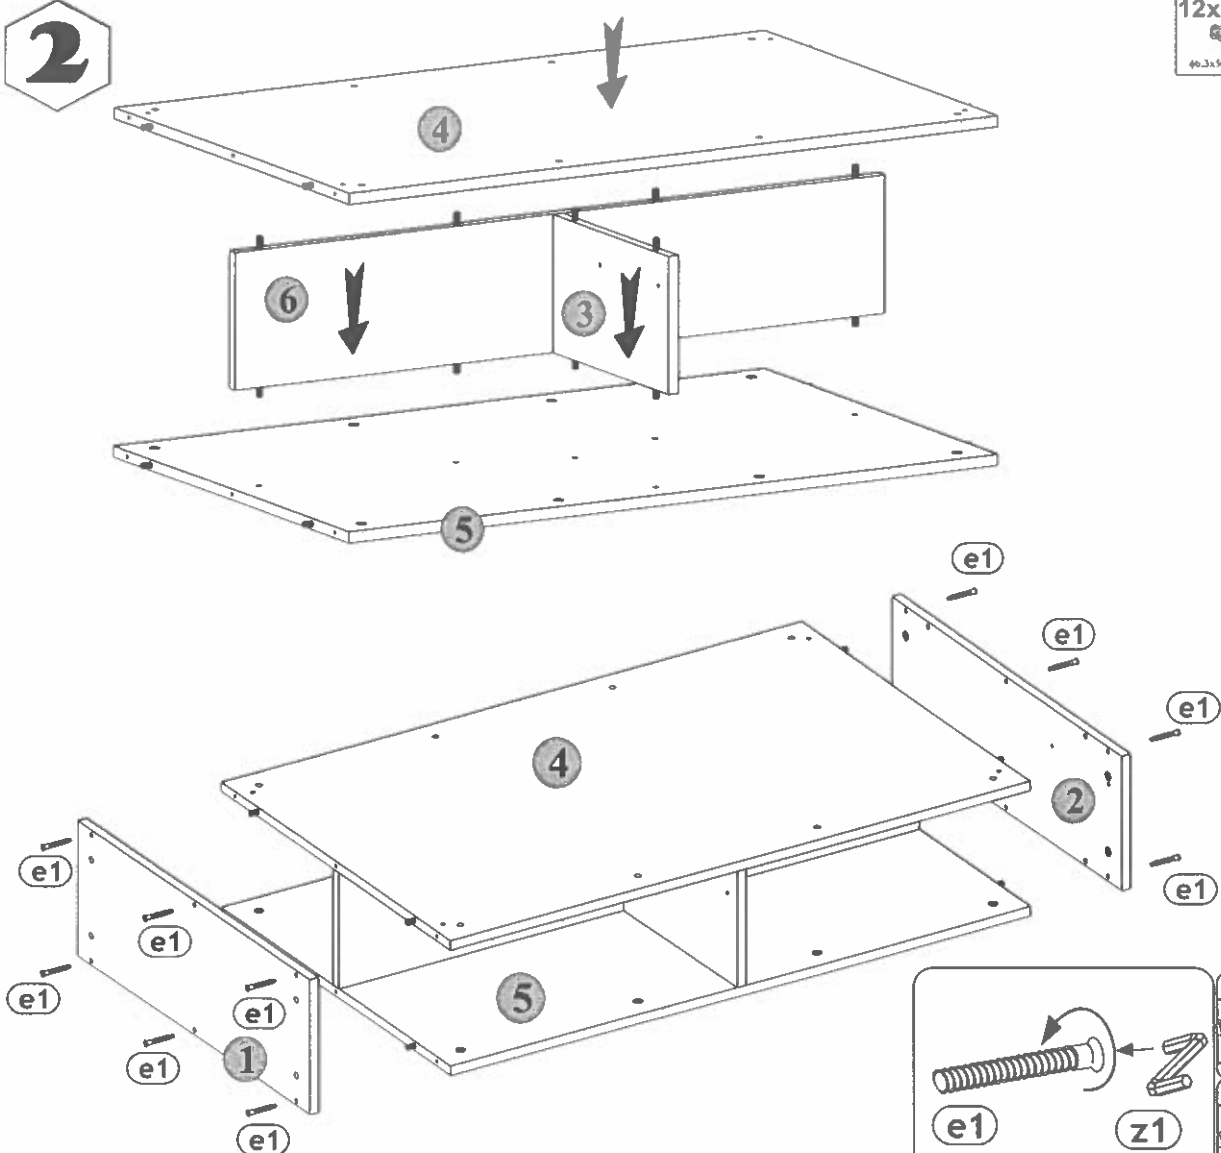

3

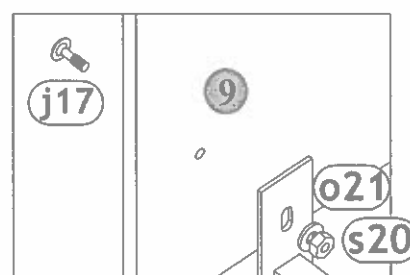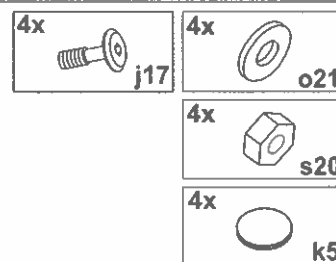
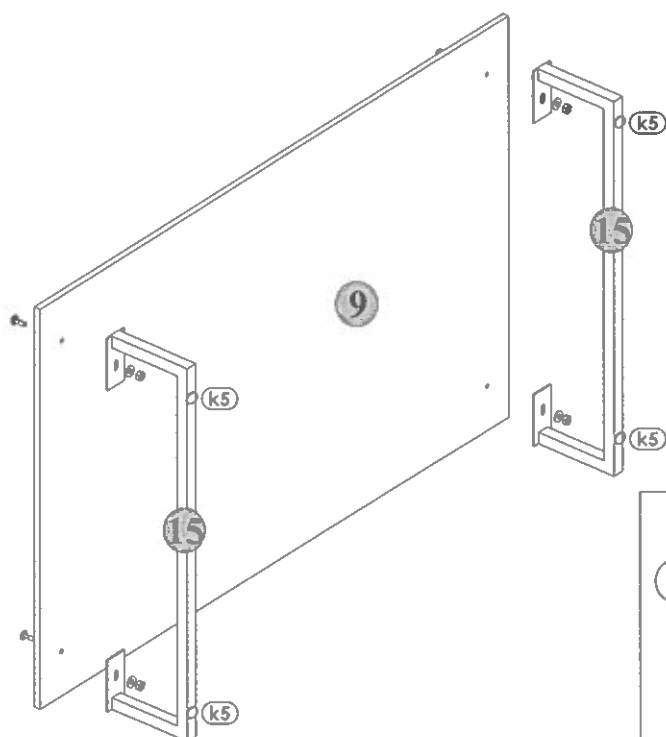


3

4

8x
j15



8x
s5

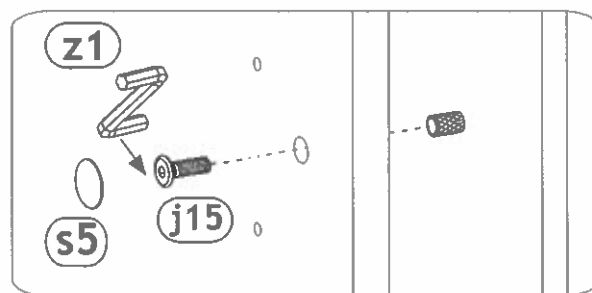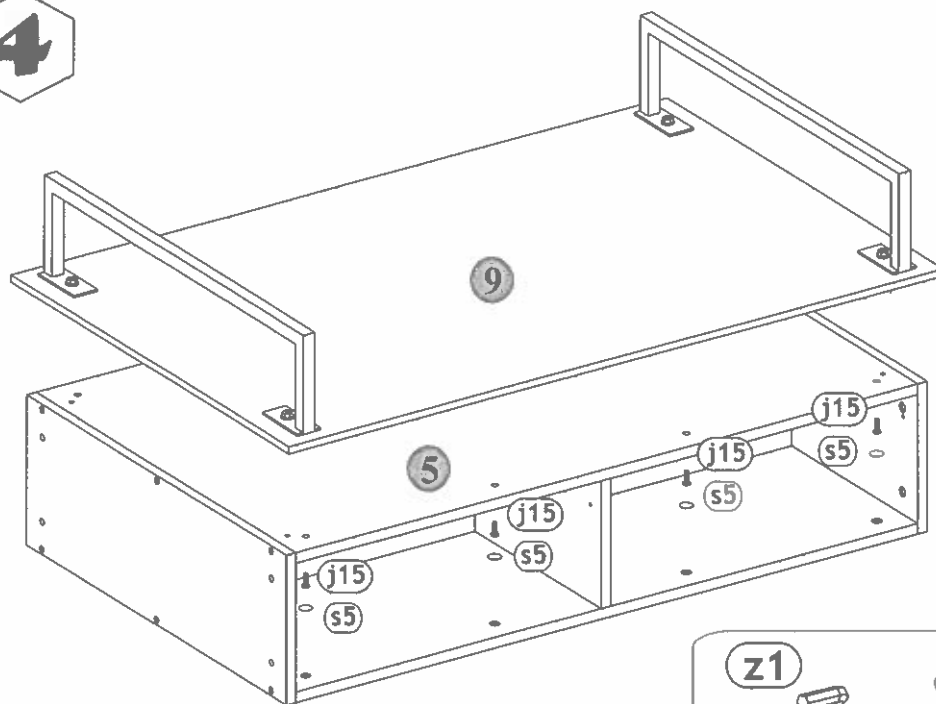

5



8x
j15

8x
s5






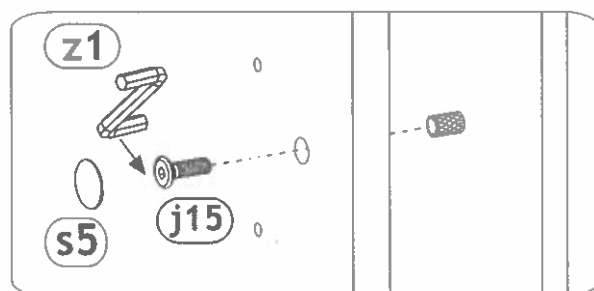
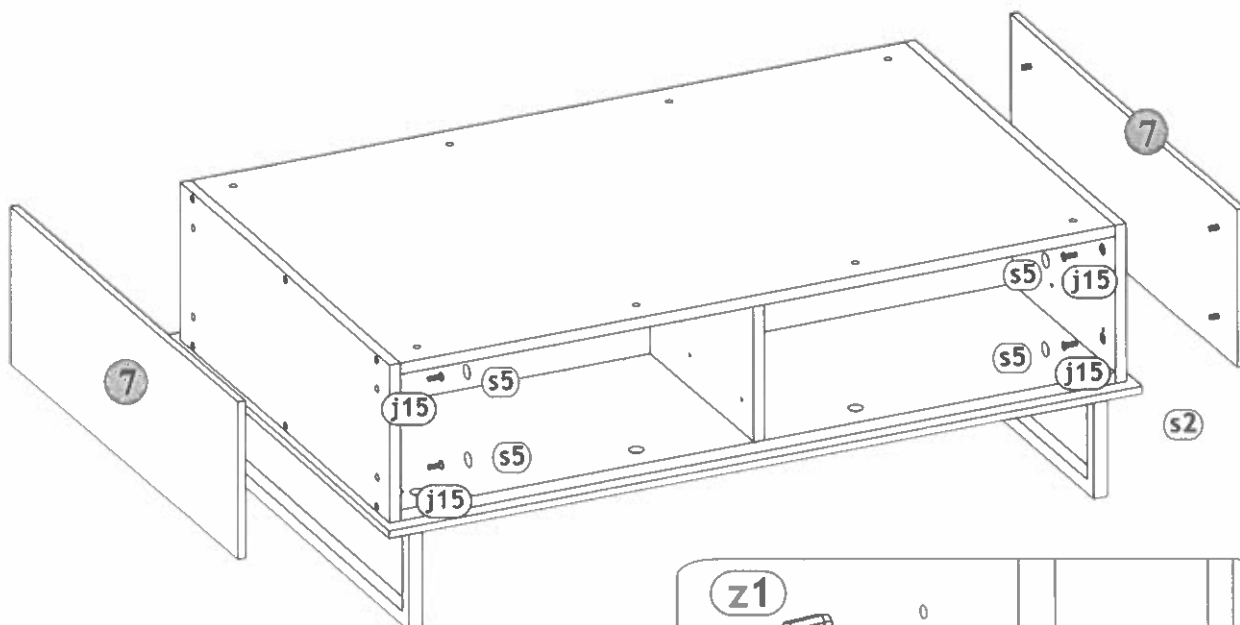


4

7

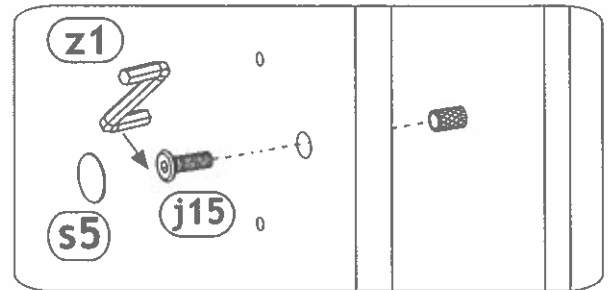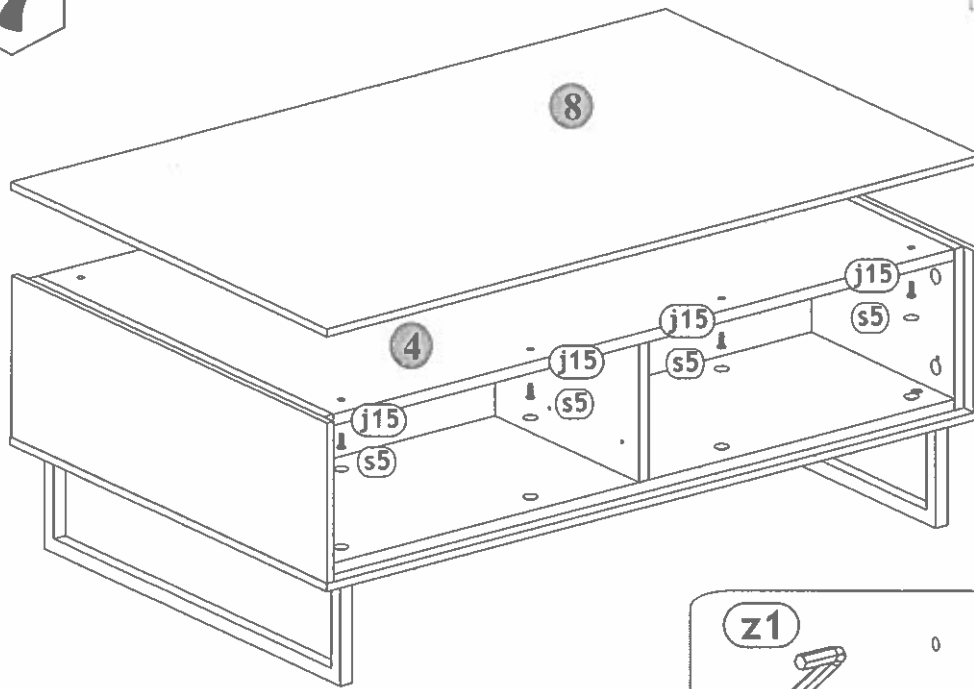







8

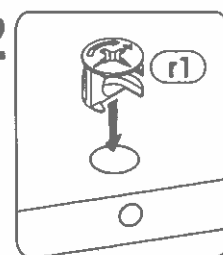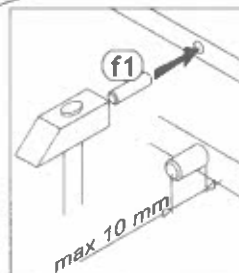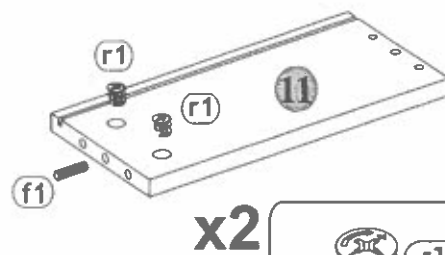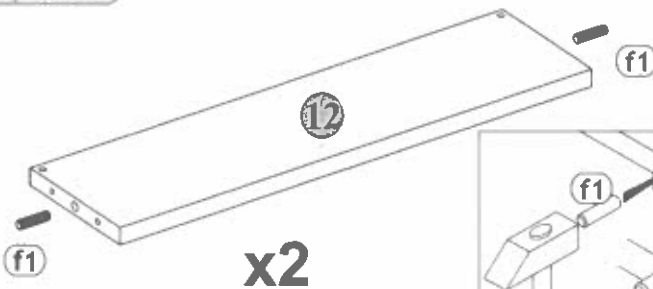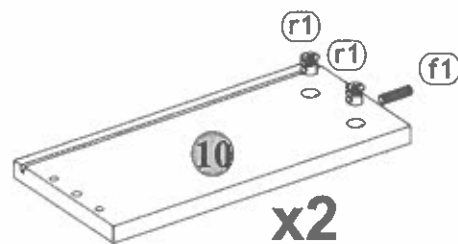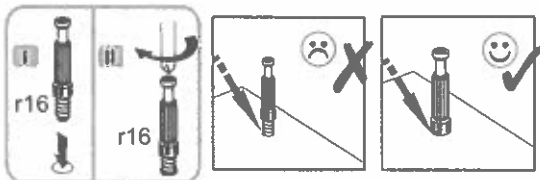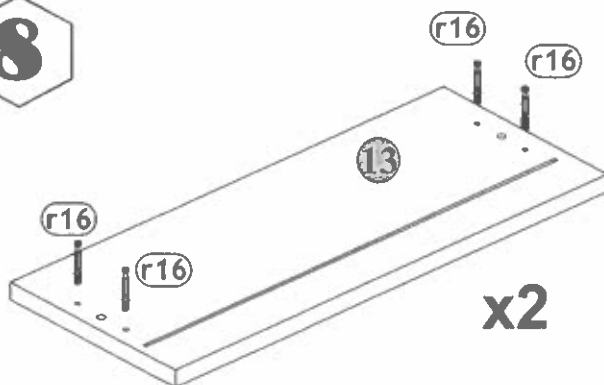

5

9

8x ø6.3x50 mm e1	6x ø3.5x16 mm p4
8x s1	6x l2

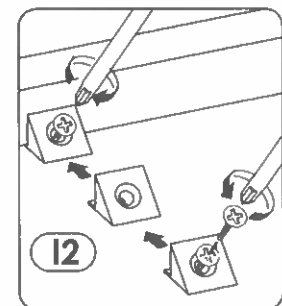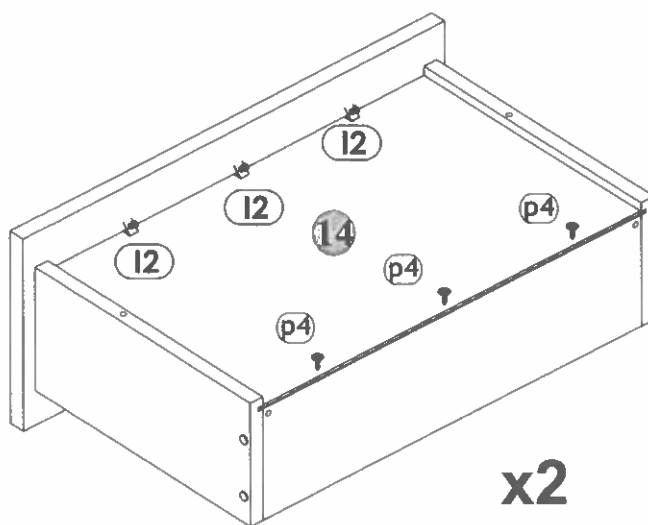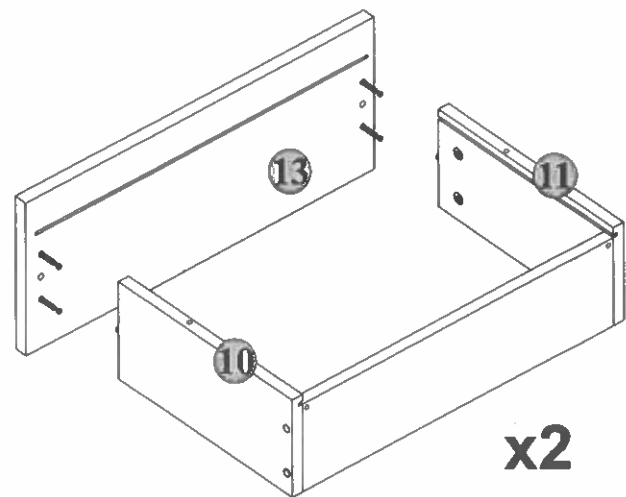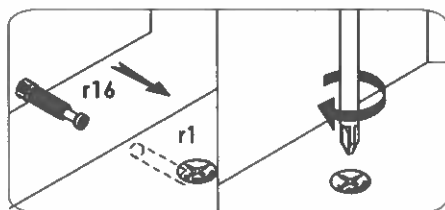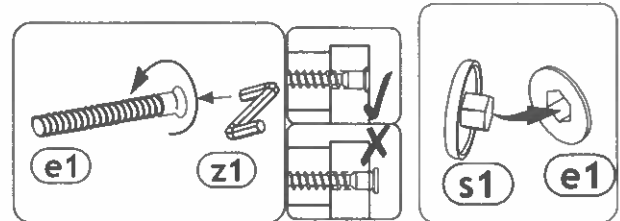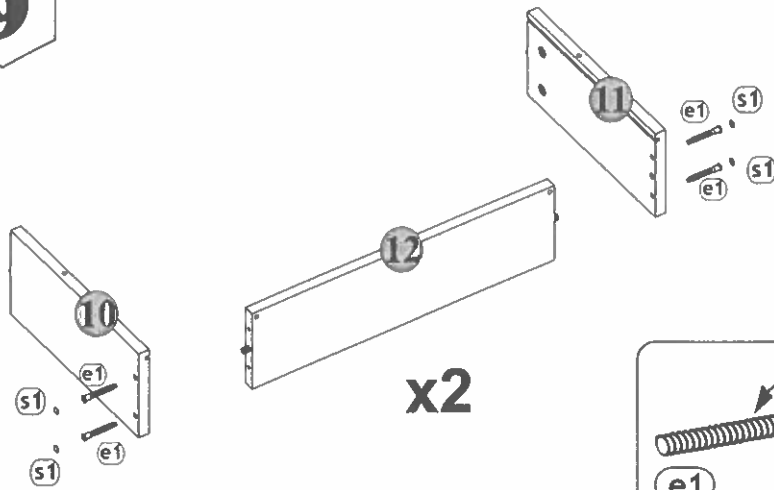

6

10

2x
w80

8x
φ6.3x13 mm
e3

