

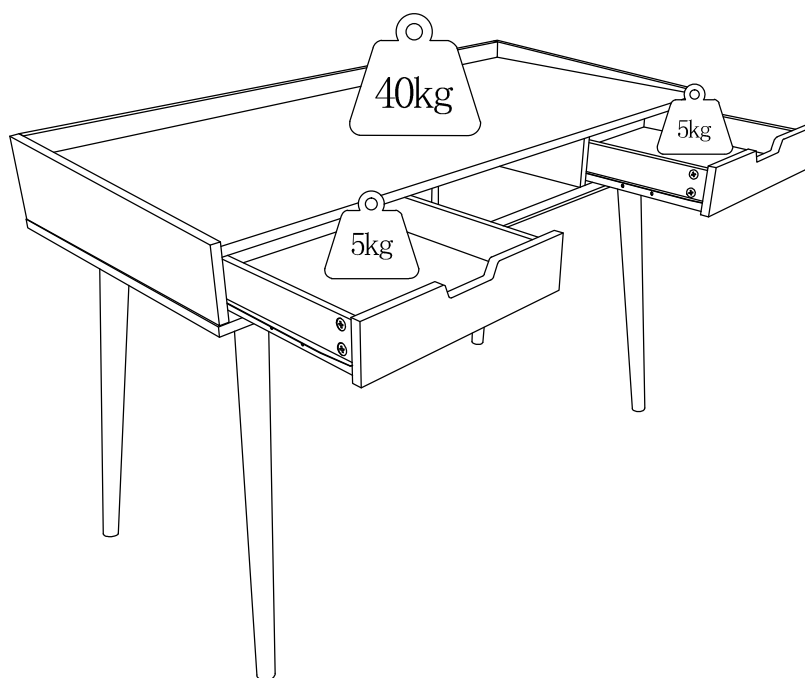


ASSEMBLE INSTRUCTION

27980128/01


SCHWEDEN



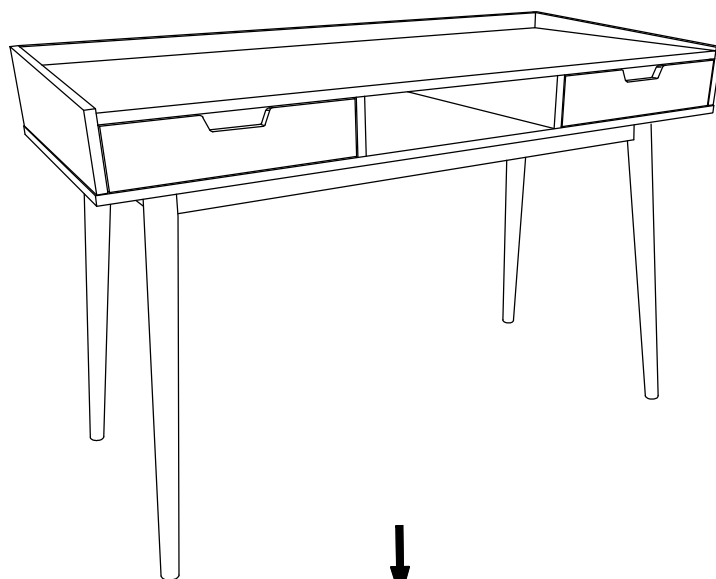


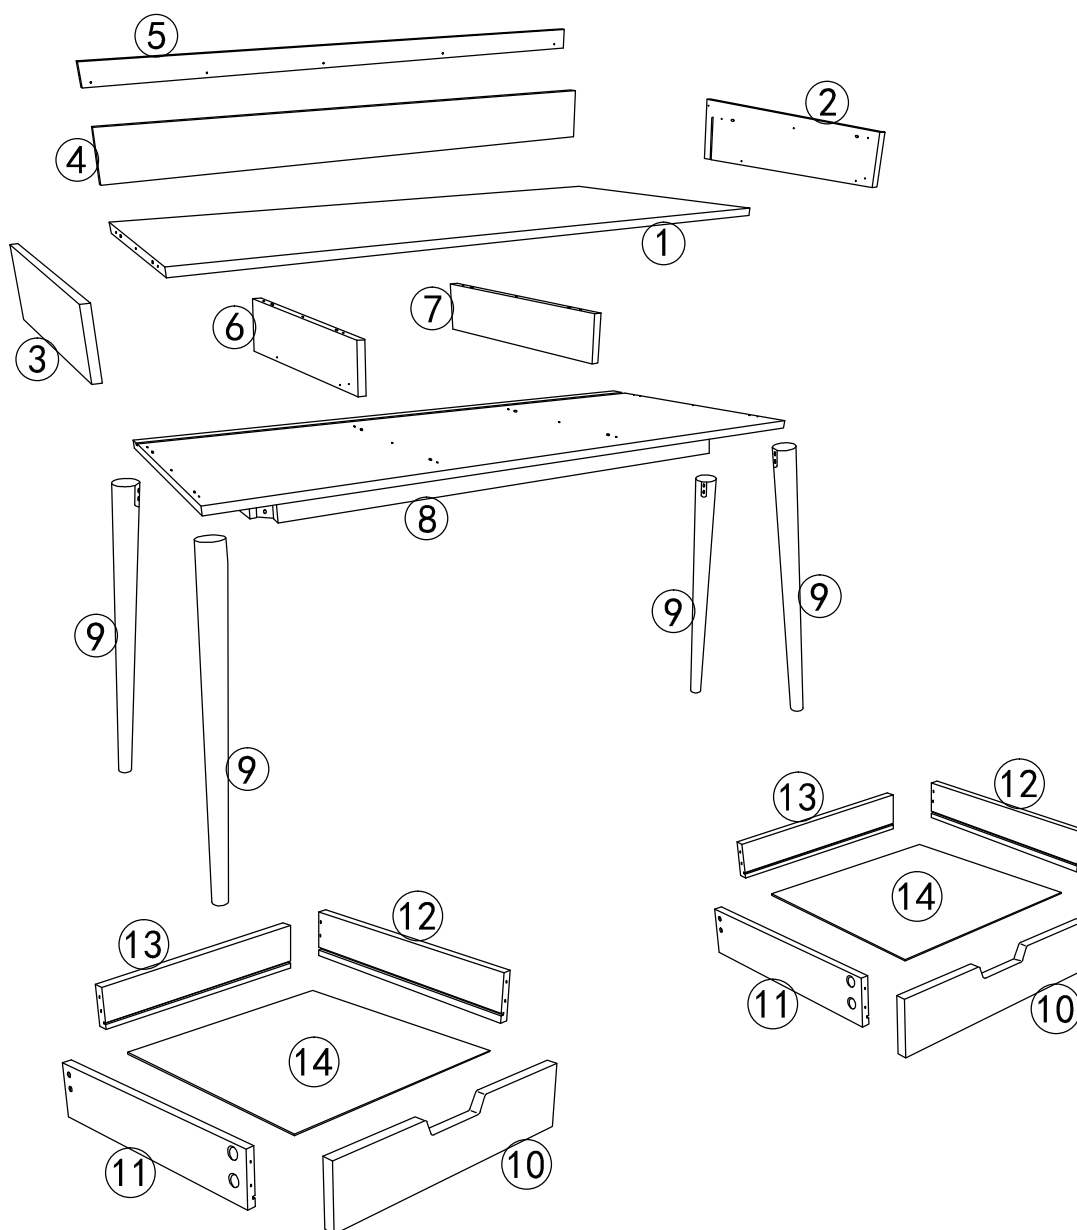


A	x1	B	x8	C	x8	D	x8	E	x14	F	x8	G	x22
4mm		M6*60mm		M6mm		M6*φ18mm		φ15*12mm		φ11*9mm		φ6*35mm	
H	x16	I	x12	J	x20	K	x13	L	x4	M	x15	N	x2
φ8*φ30mm		φ7*40mm		φ7*12mm		φ8*30mm		φ25*3mm		φ20mm		30mm	
O	x2	P	x2	Q	x2	R	x2	S	x2	T	x2	U	x2
73*24mm		35mmL		15mmL		350mmL		350mmL		350mmL		350mmL	

1

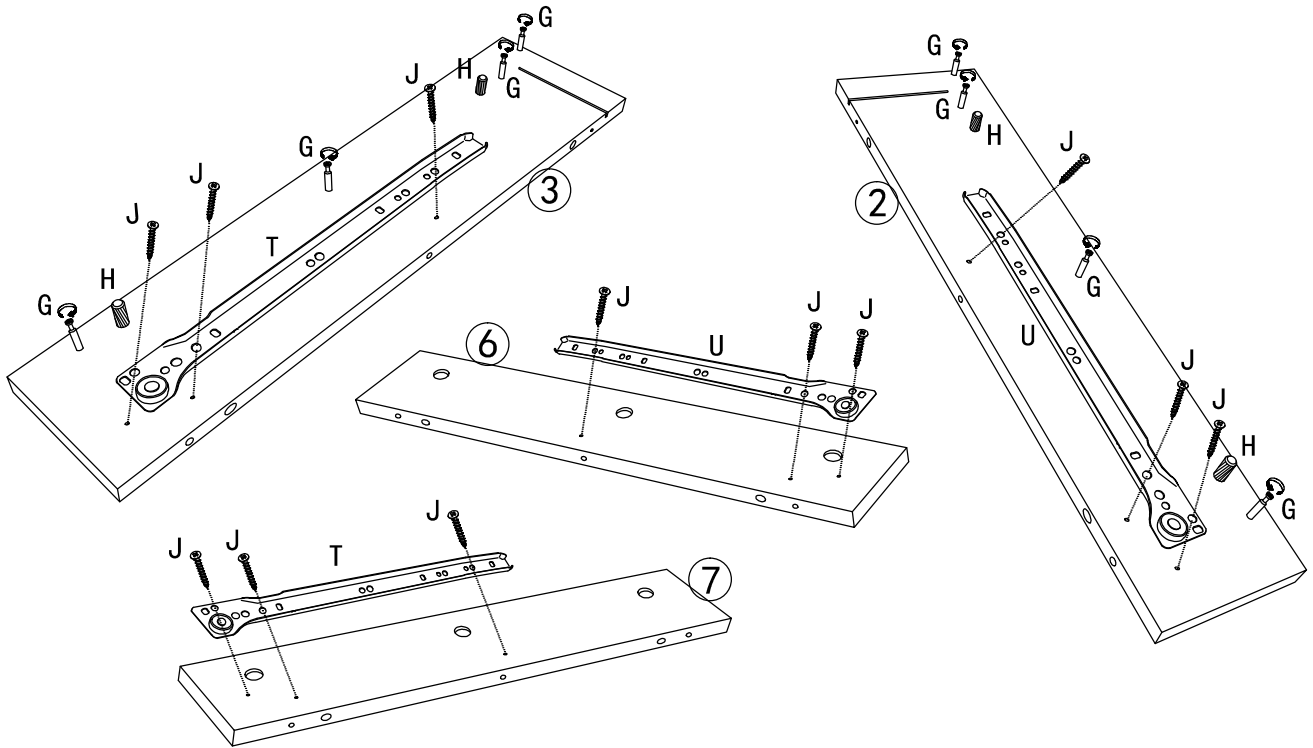



G	x8	H	x4	J	x12	T	x2	U	x2
									
ø6*35mm		ø8*ø30mm		ø7*12mm		350mmL		350mmL	


2

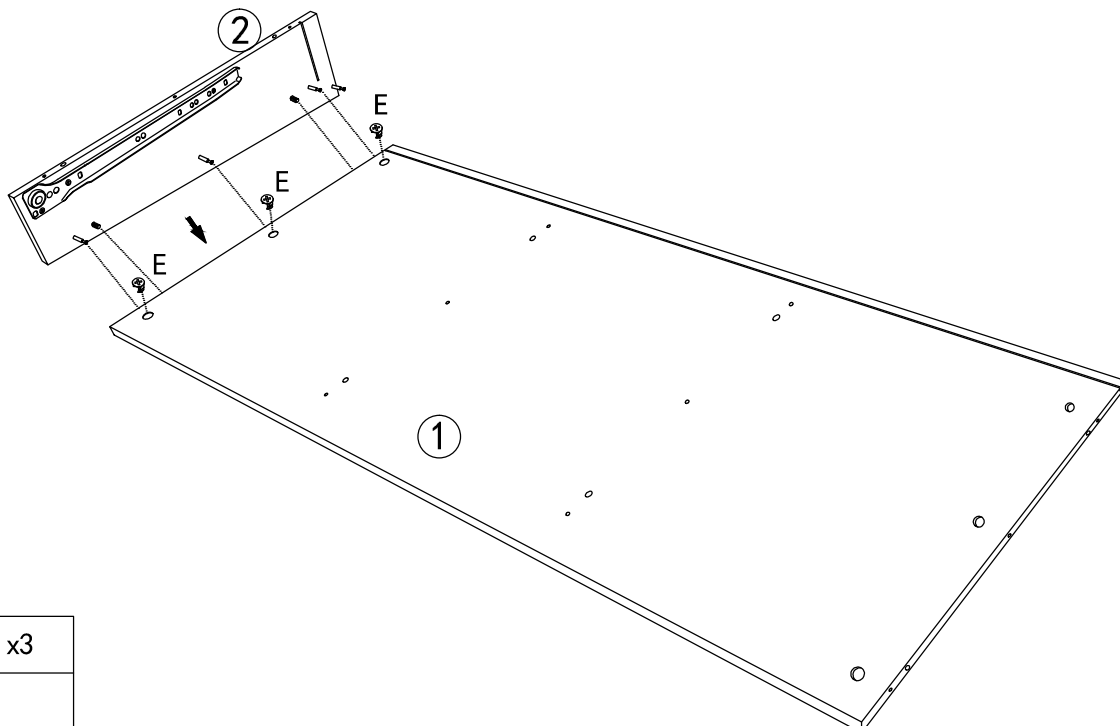


E	x3
	
ø15*12mm	


3

E	x1	K	x5	M	x6
					
Ø15*12mm		Ø8*30mm		Ø20mm	

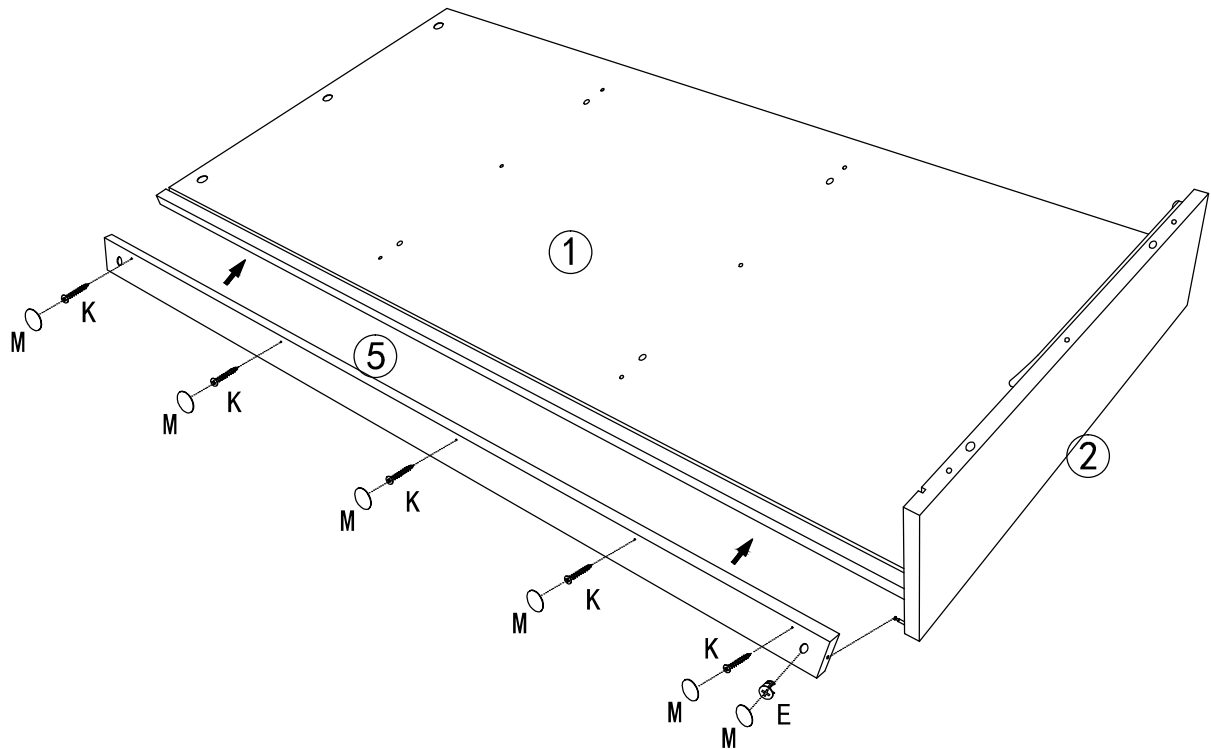



4

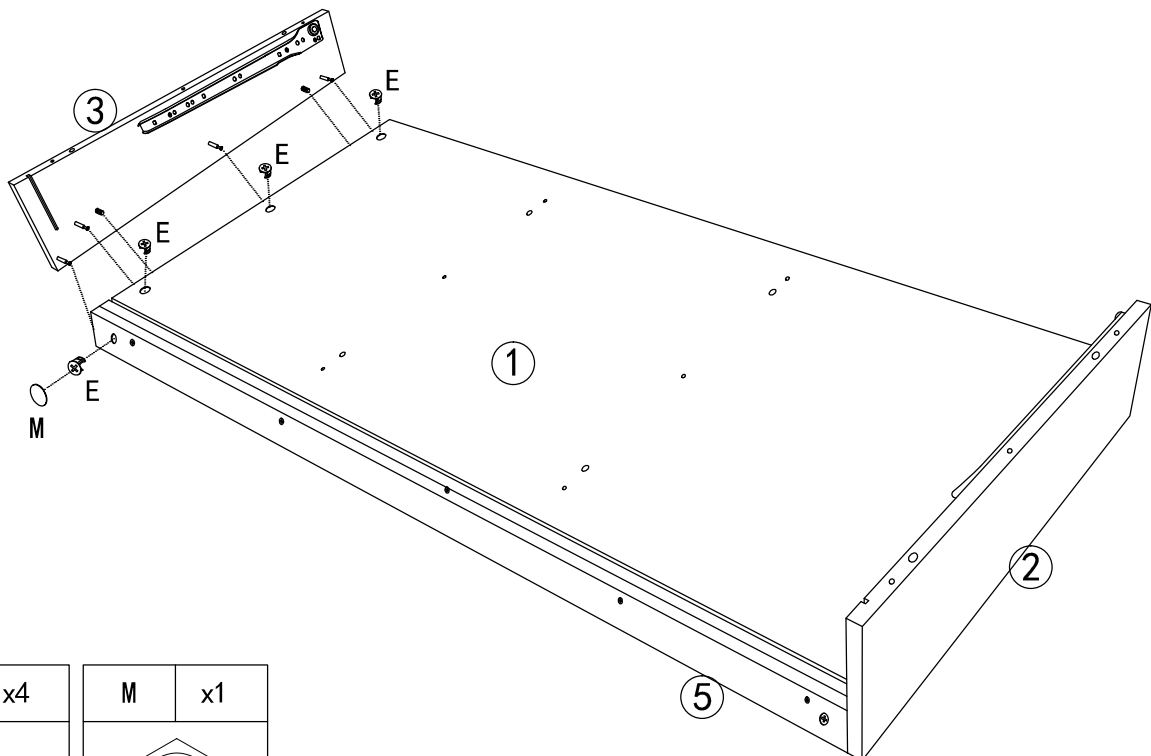


E	x4	M	x1
			
Ø15*12mm		Ø20mm	

5

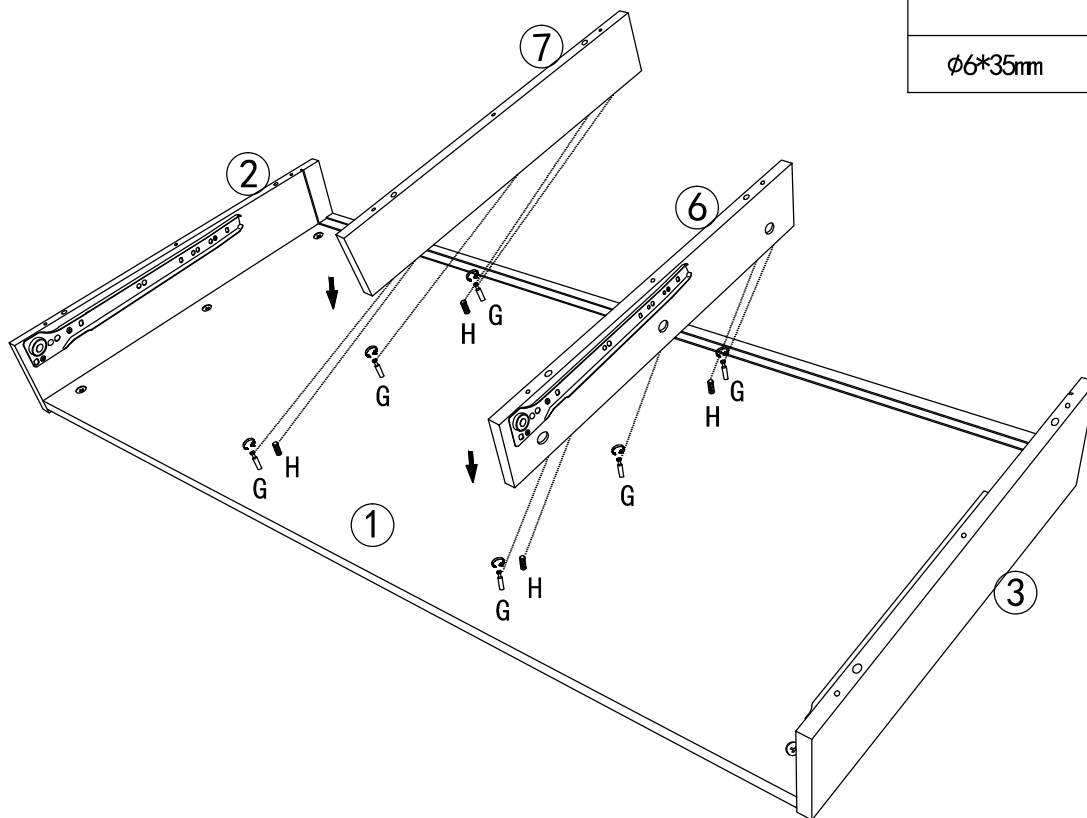


G	x6	H	x4
			
ø6*35mm		ø8*ø30mm	

6

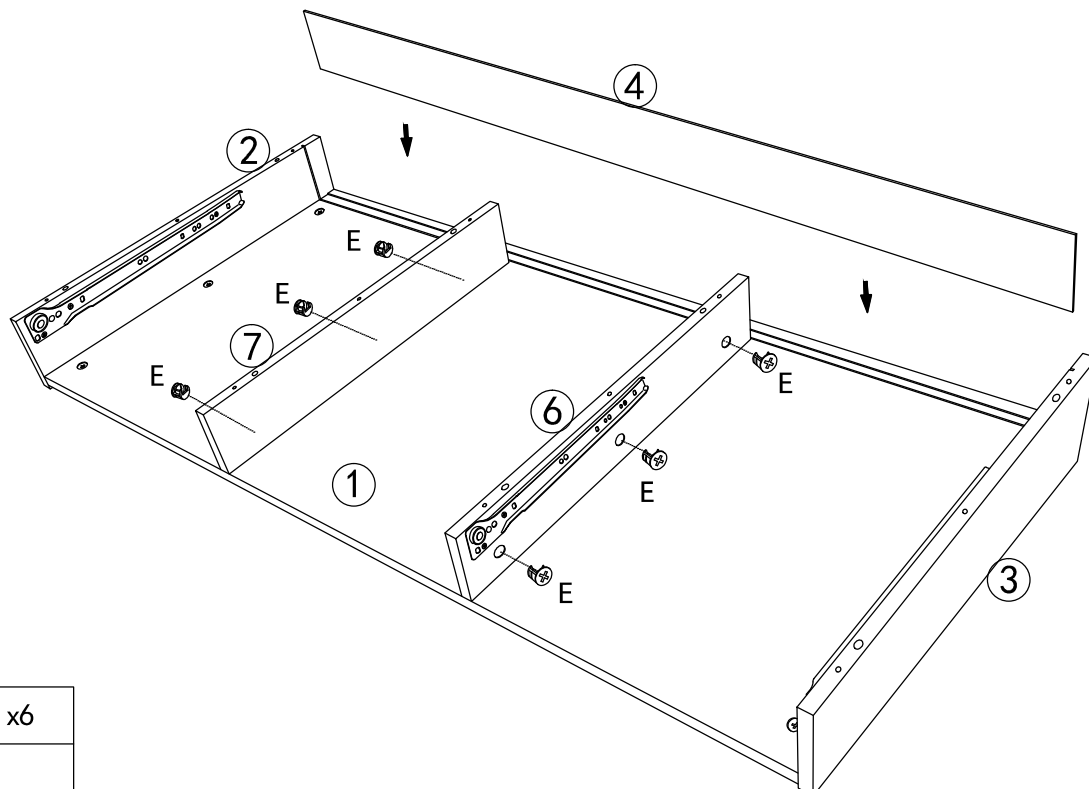

E	x6
	
ø15*12mm	

7

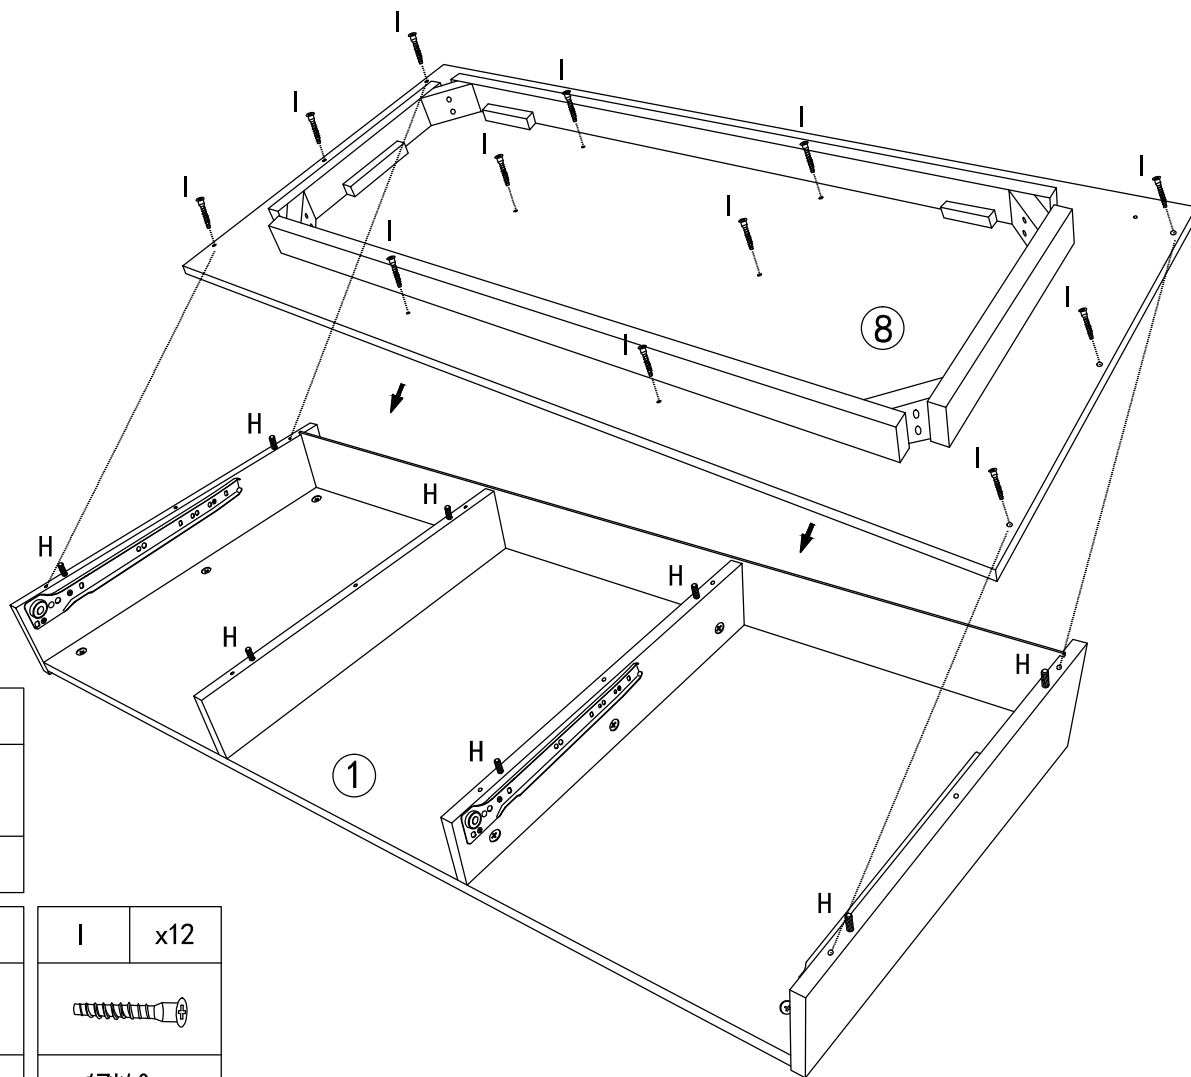


A	x1
	
4mm	


H	x8
	
ø8*ø30mm	

I	x12
	
ø7*40mm	

8

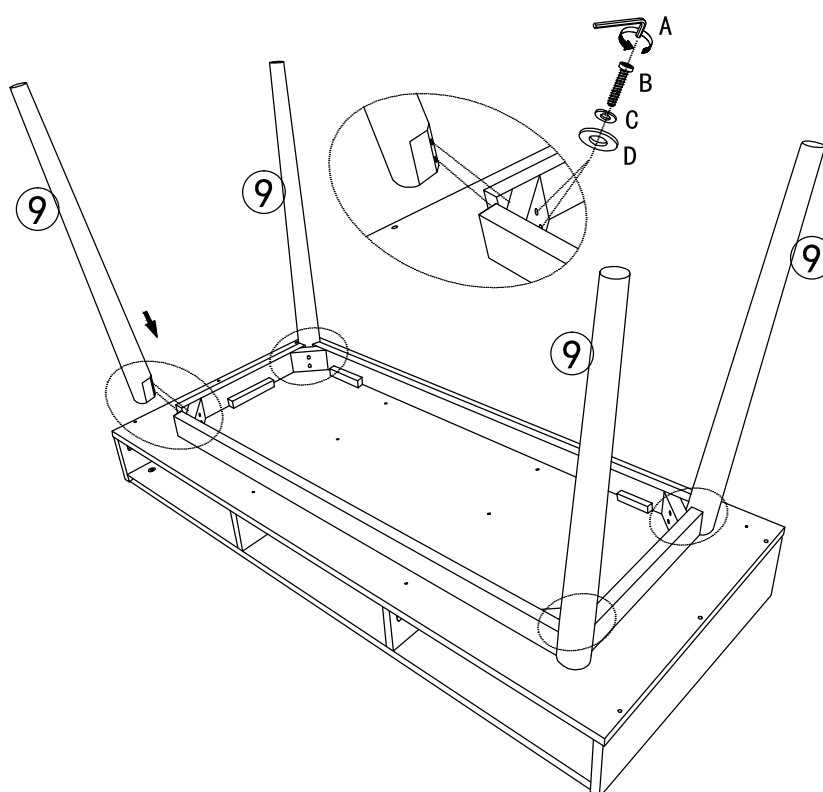


A	x1
	
4mm	

B	x8
	
M6*60mm	

C	x8
	
M6mm	

D	x8
	
M6*ø18mm	

9

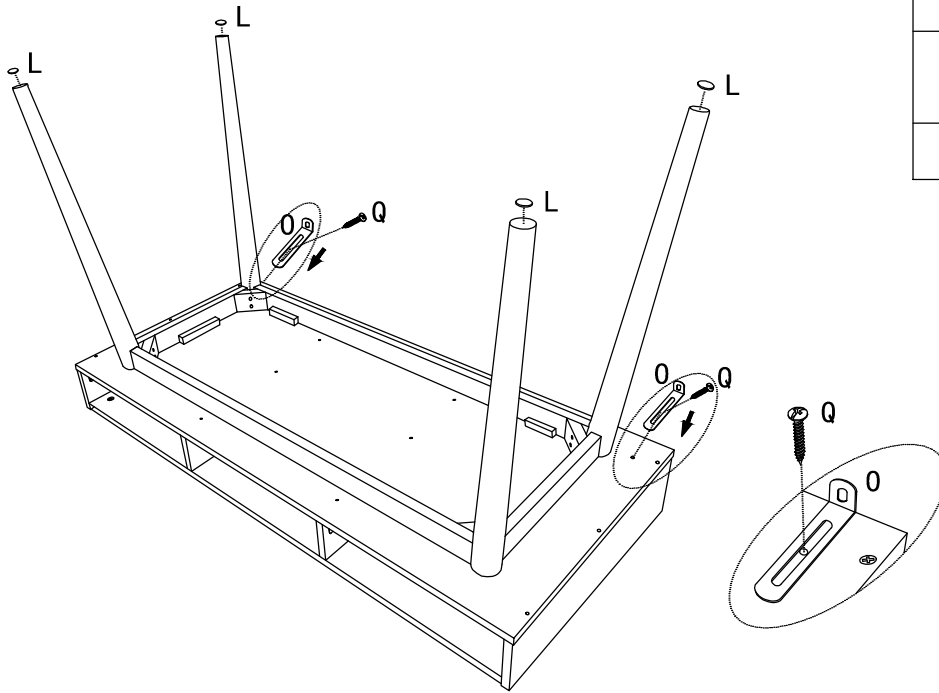


L	x4
	
$\phi 25 \times 3 \text{mm}$	

O	x2
	
73*24mm	

Q	x2
	
15mmL	

10

2x

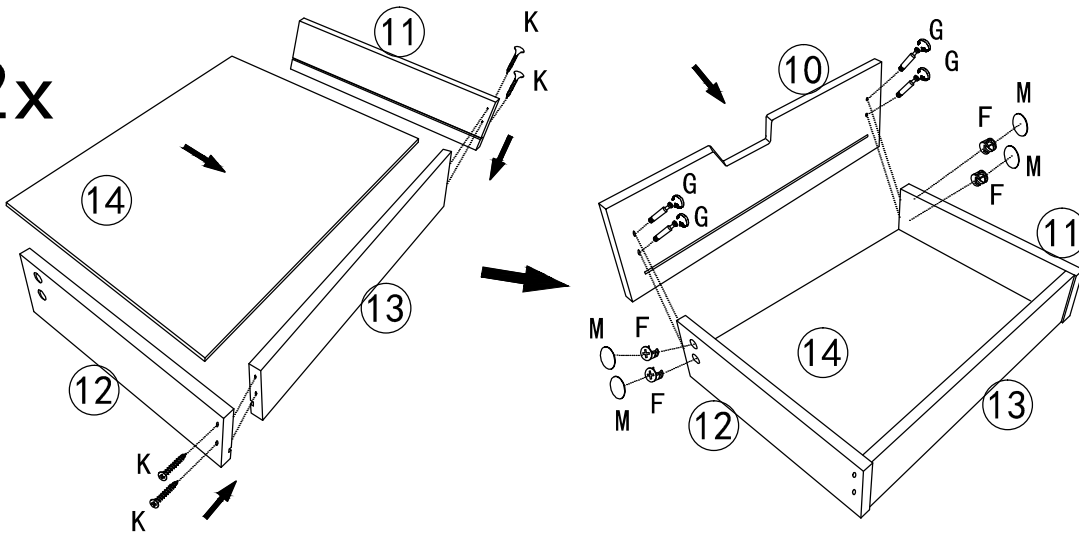

F	x8
	
$\phi 11 \times 9 \text{mm}$	


G	x8
	
$\phi 6 \times 40 \text{mm}$	

K	x8
	
$\phi 8 \times 30 \text{mm}$	

M	x8
	
$\phi 20 \text{mm}$	

11

2x

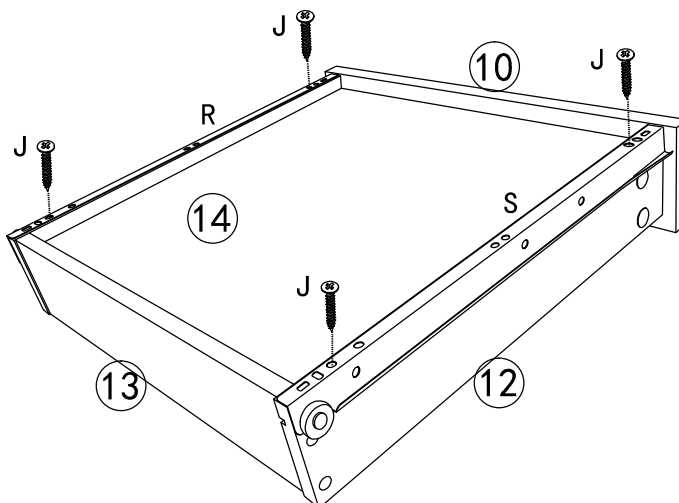


J	x8
	
$\phi 7 \times 12 \text{mm}$	




R	x2
	
350mmL	

S	x2
	
350mmL	

12

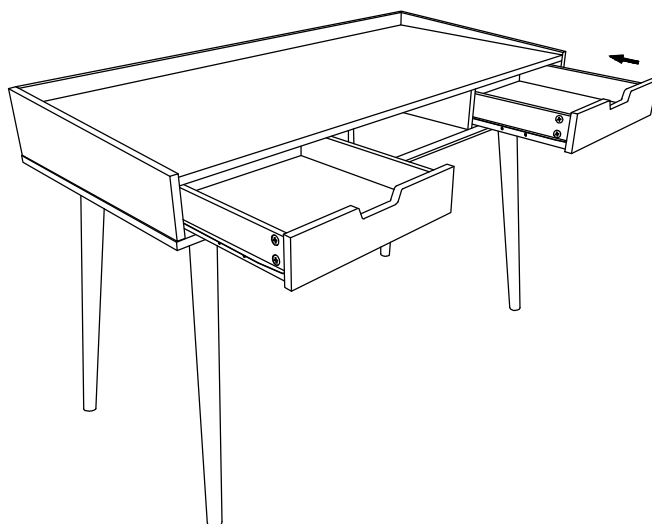

13

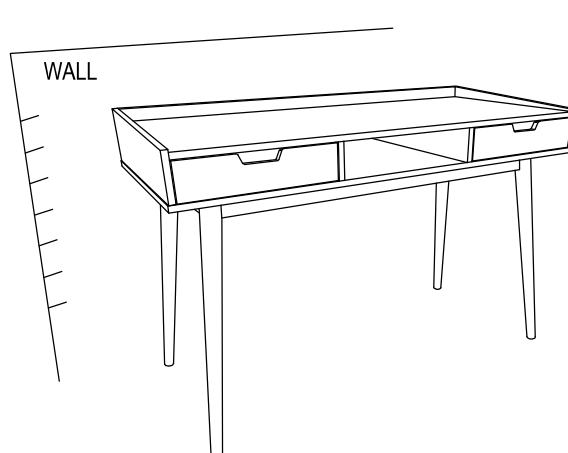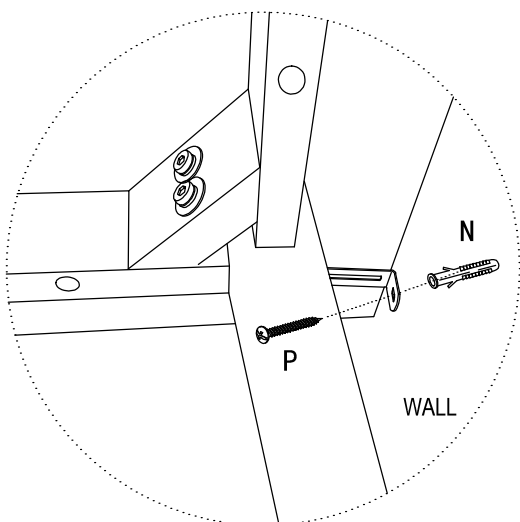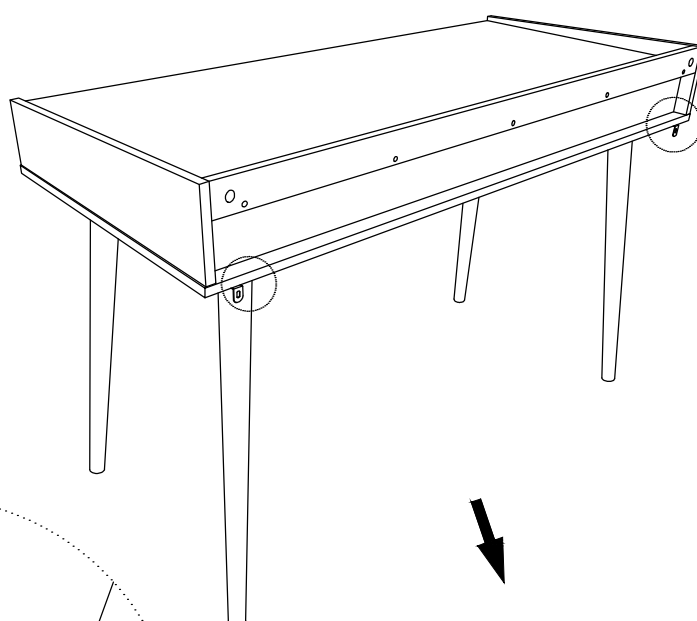

N	x2	P	x2
			
30mm		35mmL	