

Monteringsanvisning Assembly instruction



Cato

113006

113008

113011




113012

ROWICO.



Item Name:Cato chair
ART NO:113008/113006
113011/113012

Rowico®
ESTABLISHED 1971

1/4

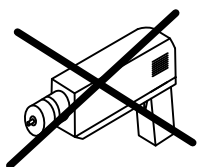
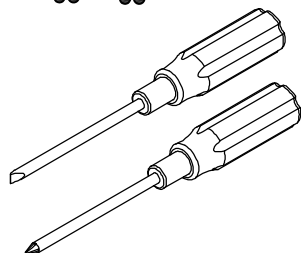
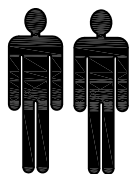


Don't use power tool

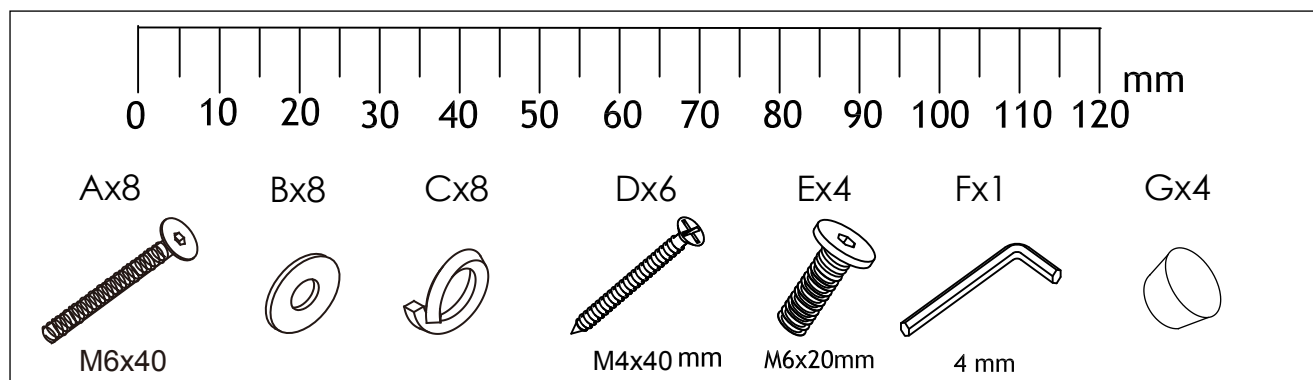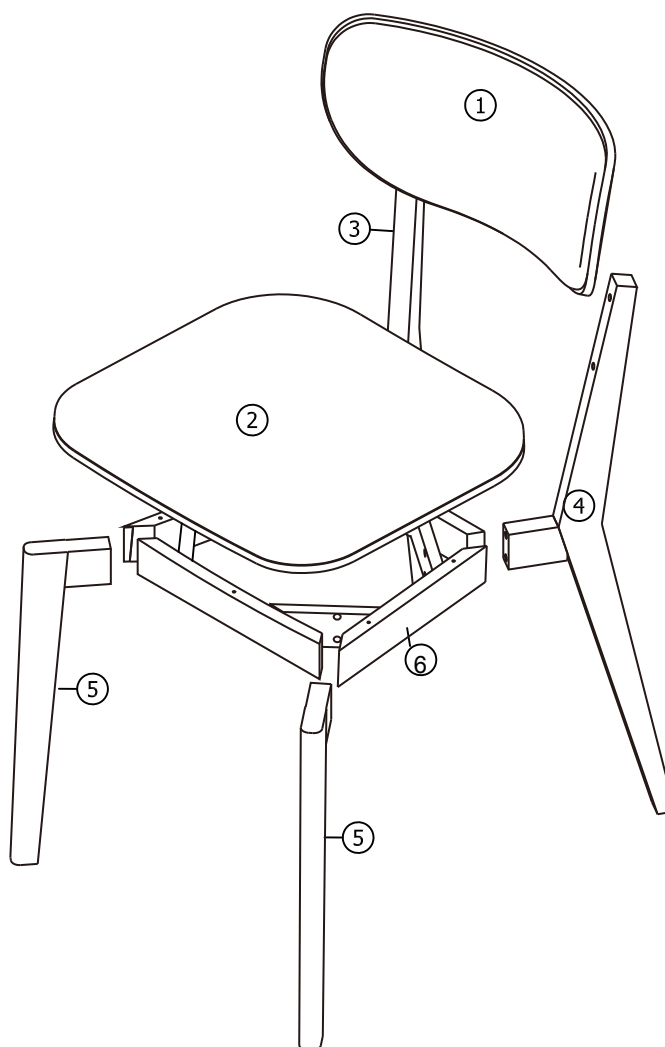


2016-3-8

1

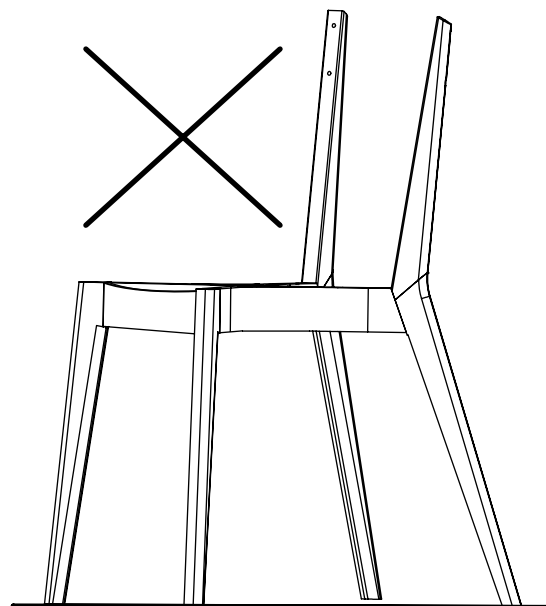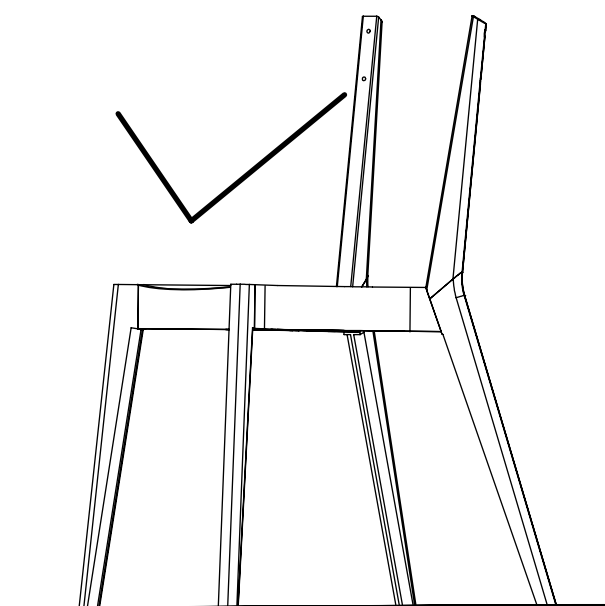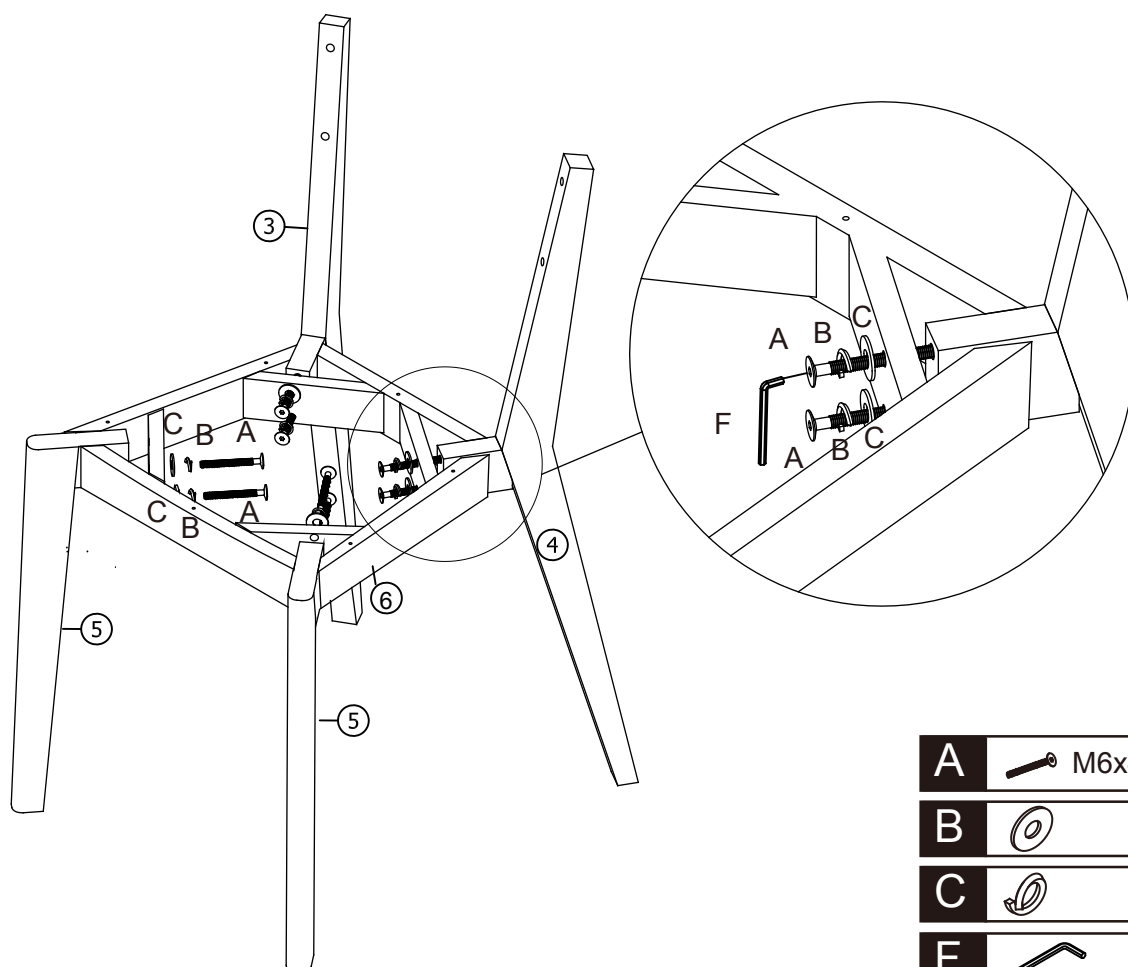


2

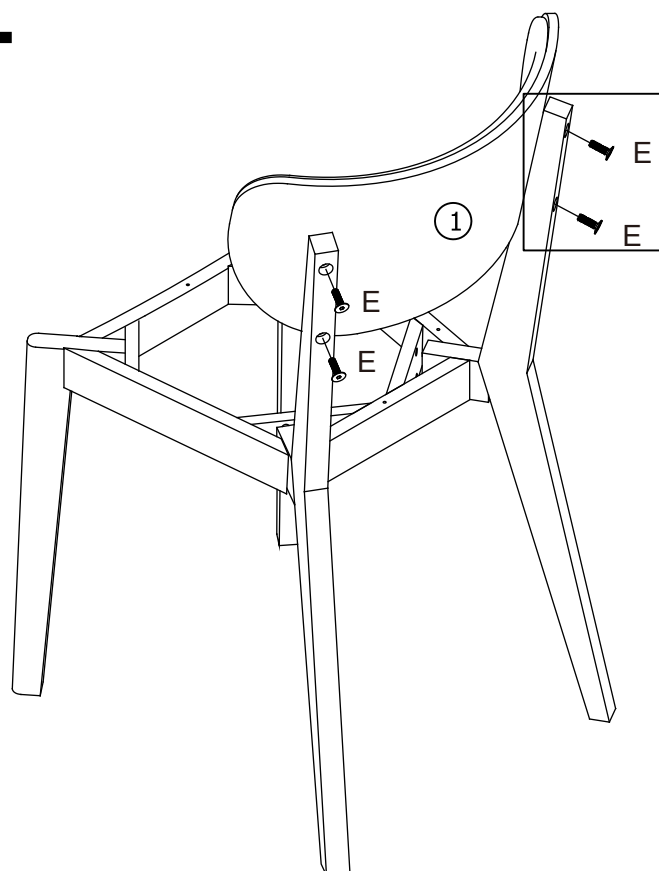


E  M6x20 4


F  1

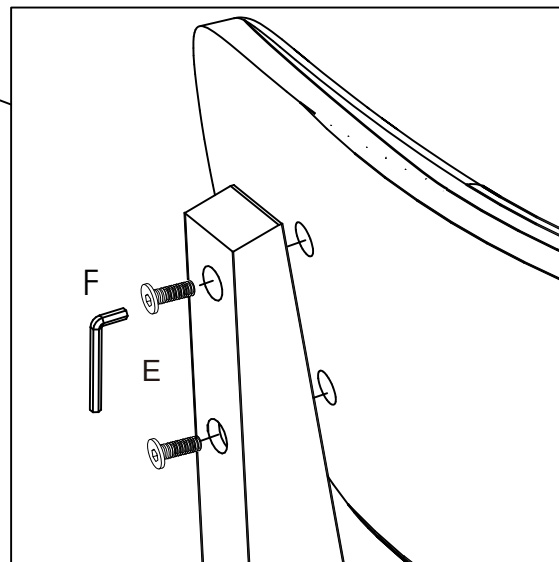

3

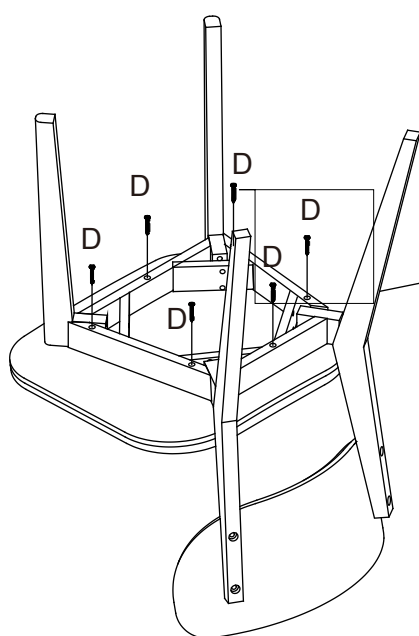

D  6

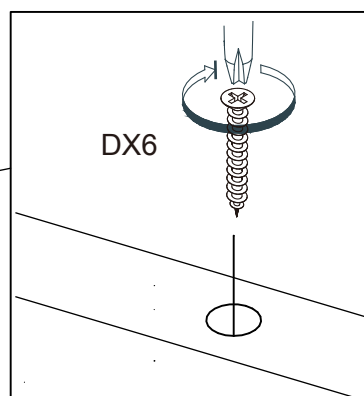

OBS!


Fäst ej täckpluggarna direkt, avvakta en tid tills att efterspänningen av skruvarna är gjord.

Notice!

Do not fasten the wooden plugs at backside of chair, until after some time, when screws are re-tightened!





Mo	Tu	We	Th	Fr	Sa	Su
1	2	3	4	5	6	7
⊗ 8	9	10	11	12	13	14
15	16	17	18	19	20	21
⊗ 22	23	24	25	26	27	28
29	30	31				

2-4 weeks/veckor

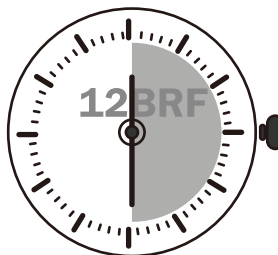


4

4/4

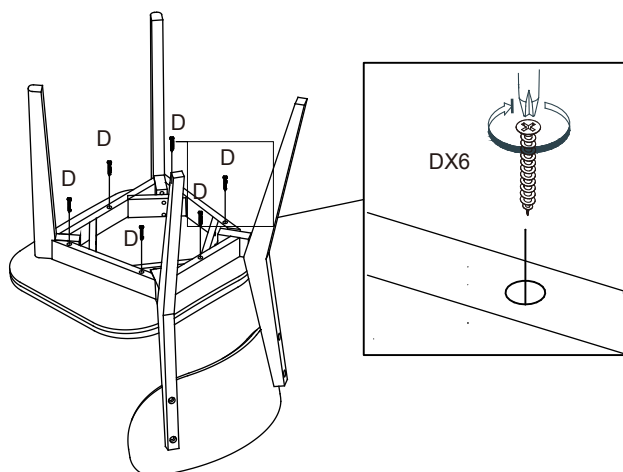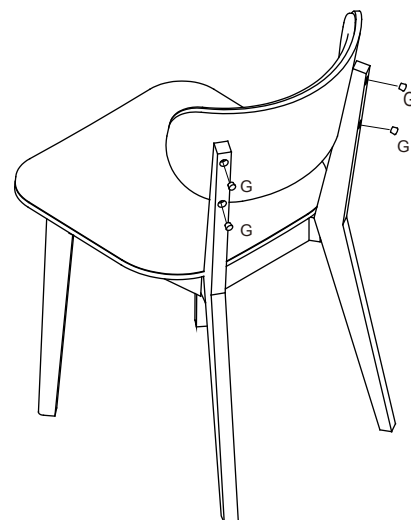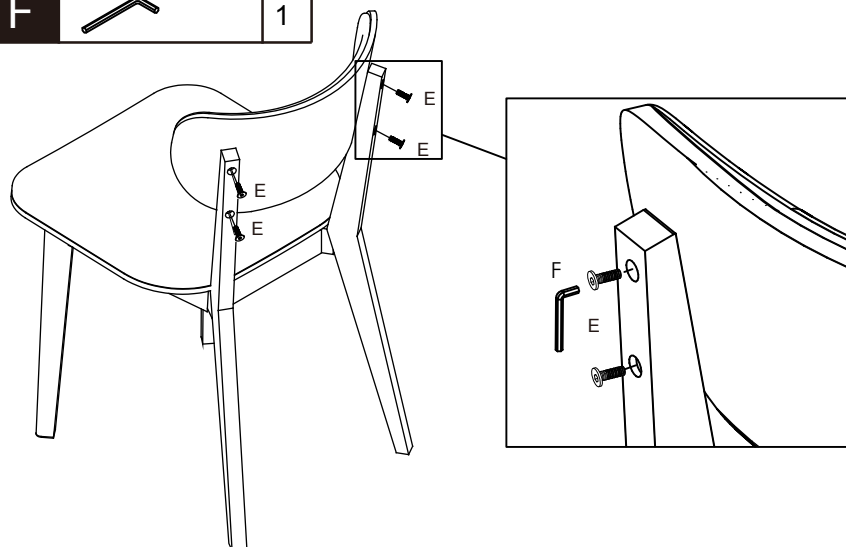

5

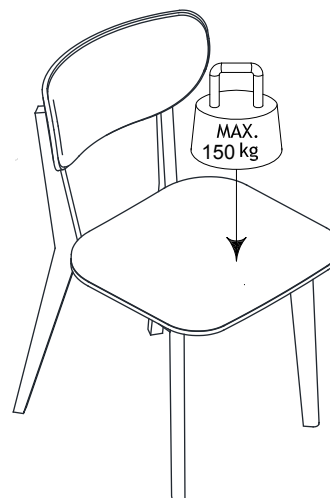

2016-3-8