





ASSEMBLY INSTRUCTIONS - 20080003-09



No	Hardware	Fig	Q.ty
③	∅6.5 x ∅19 x 2		4 PCS
④	M4		1 PCS
⑥	M6 x 60mm		4 PCS
⑦	M6 x 35mm		4 PCS

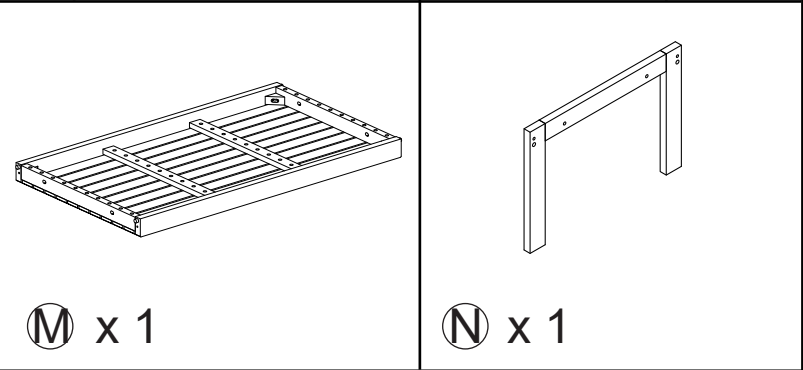


Step 1

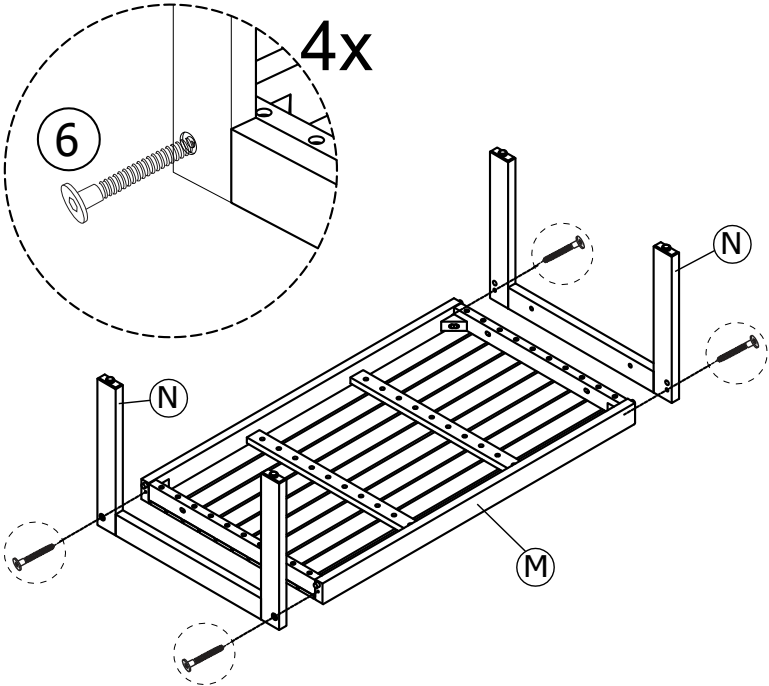


Step 2





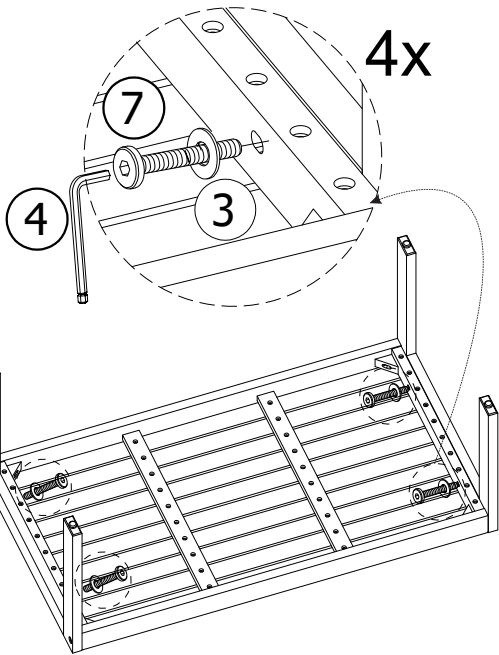
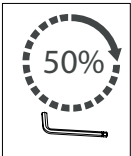


Finished


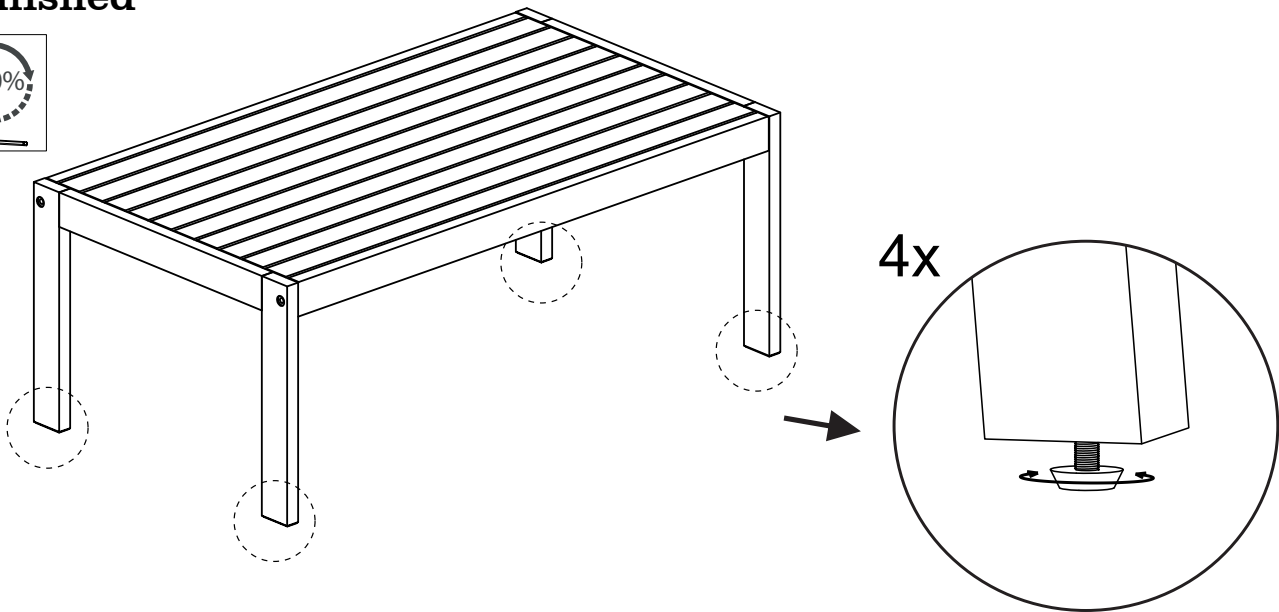


ASSEMBLY INSTRUCTIONS - 20080003-09



No	Hardware	Fig	Q.ty
①	M6 x 90mm		5 PCS
②	M6 x 40mm		4 PCS
③	Ø6.5 x Ø19 x 2		4 PCS
④	M4		1 PCS
⑤	M6 x 50mm		4 PCS

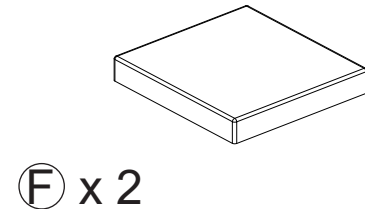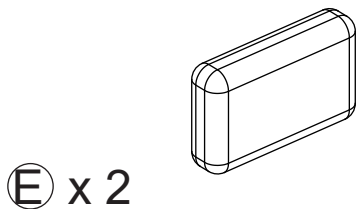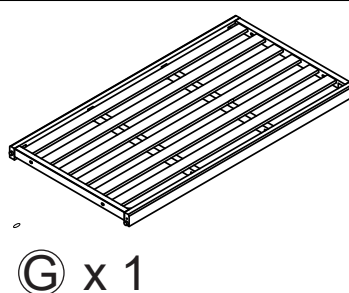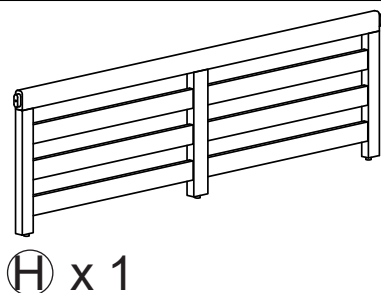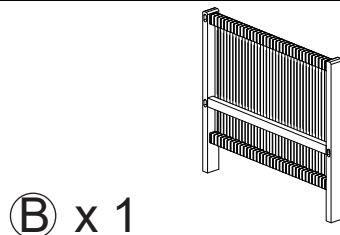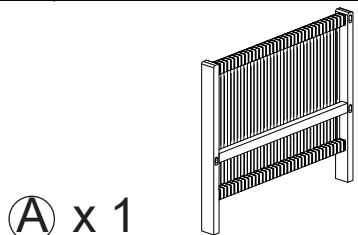

Step 1

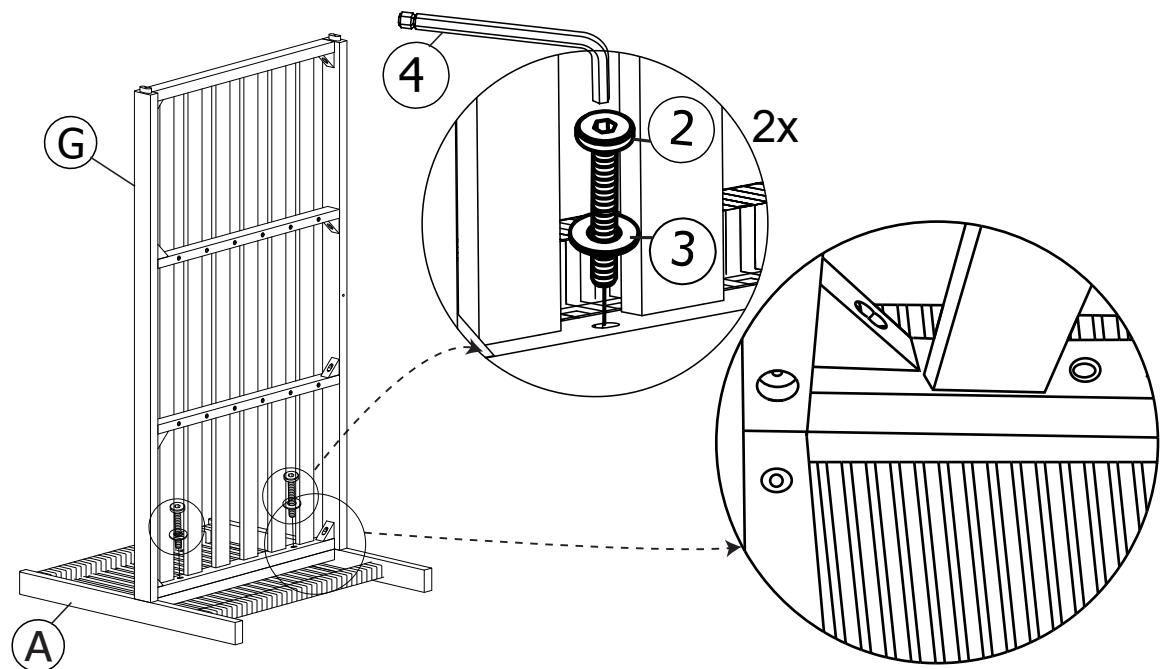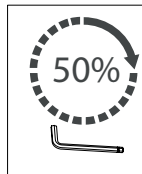


Step 2

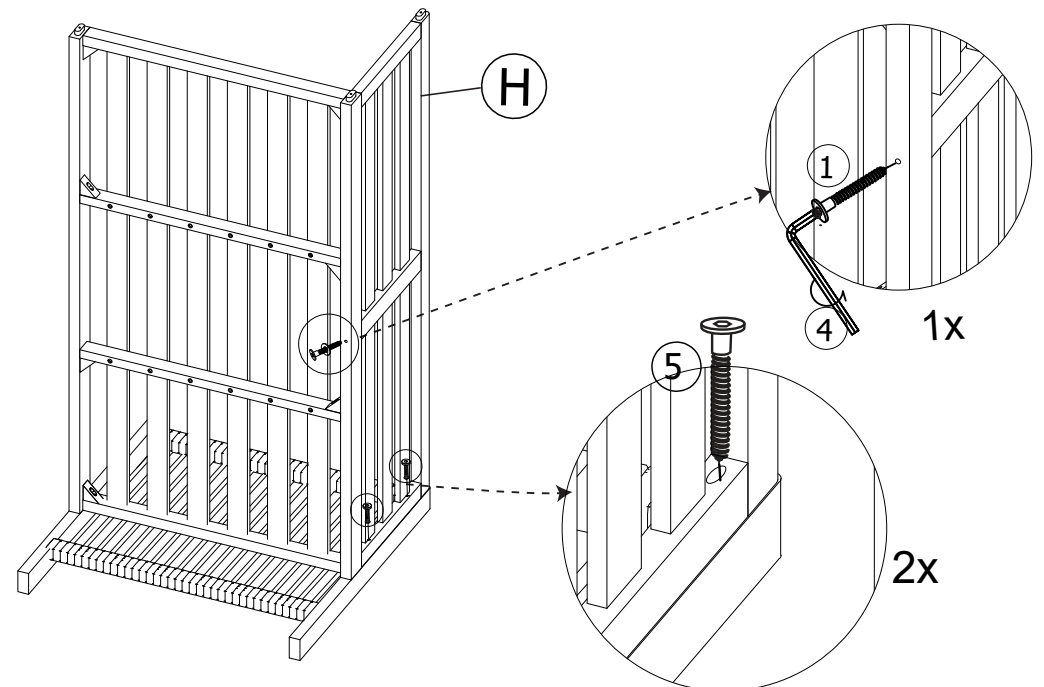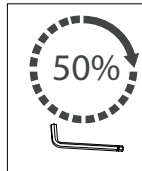


ASSEMBLY INSTRUCTIONS - 20080003-09


Step 3

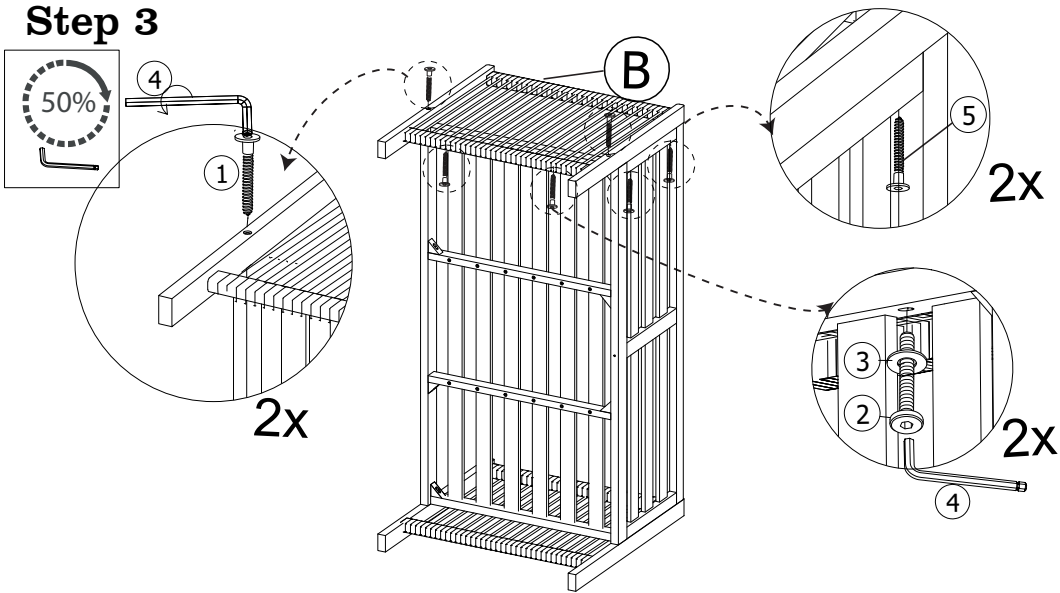


Step 4

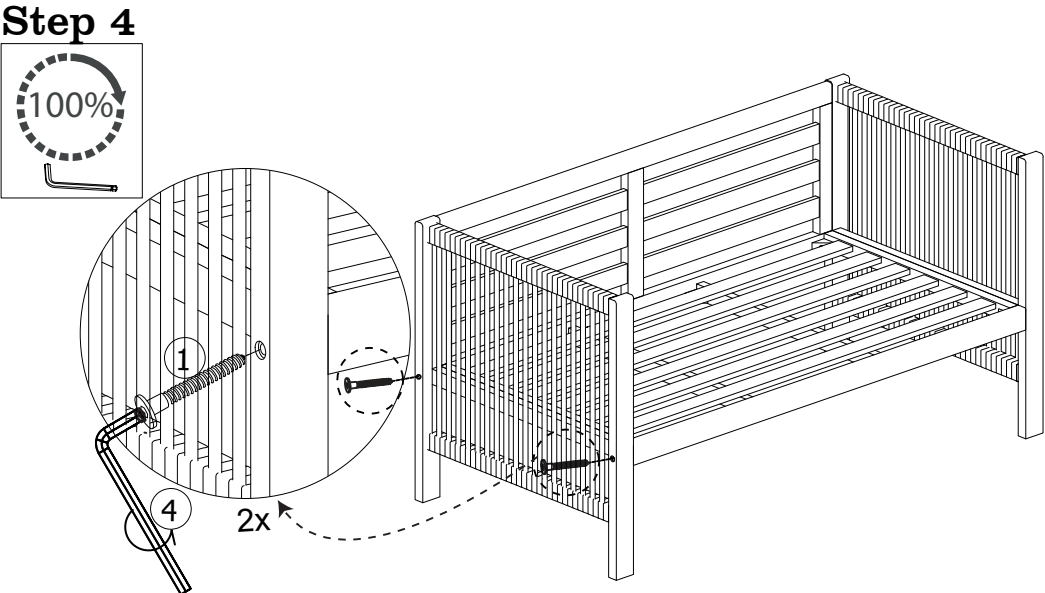

Step 5




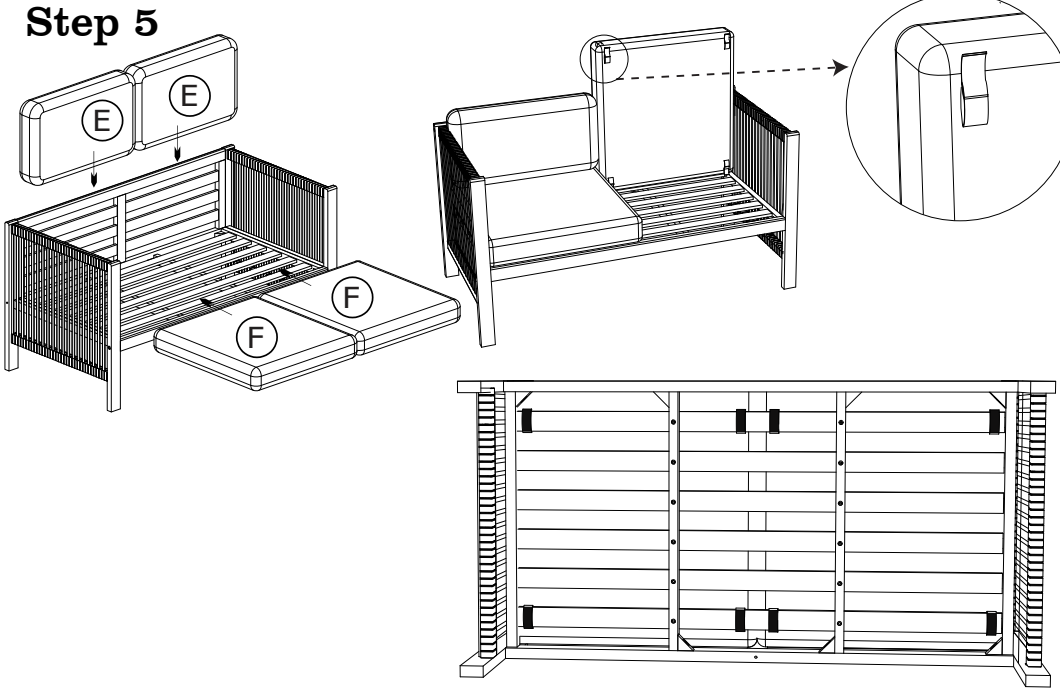


Finished


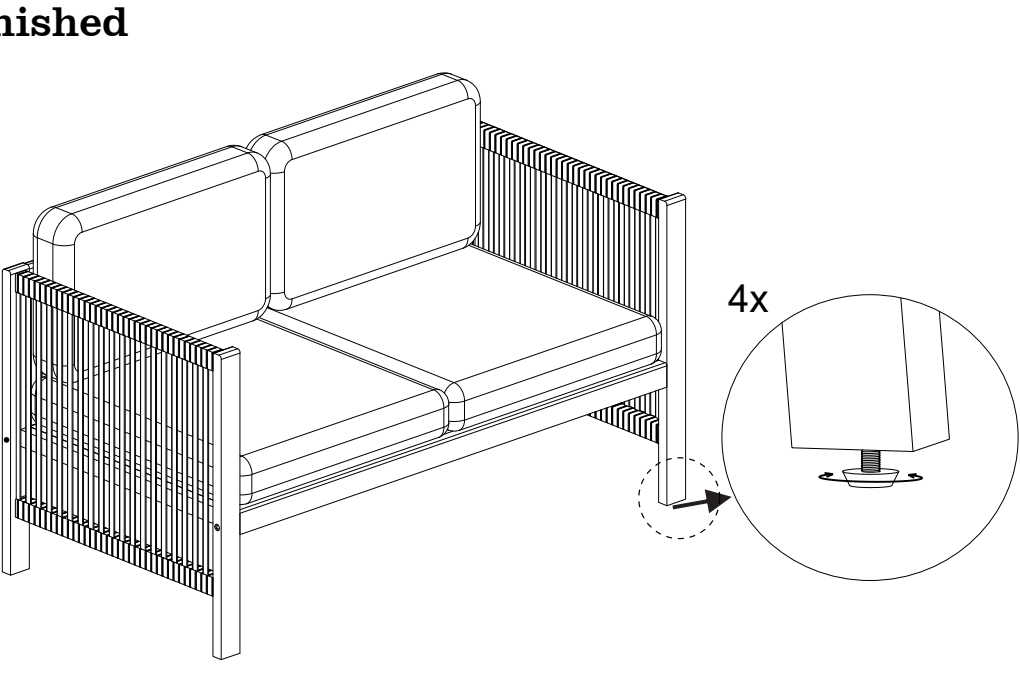


ASSEMBLY INSTRUCTIONS - 20080003-09



No	Hardware	Fig	Q.ty
①	M6 x 90mm		4 PCS
②	M6x40		4 PCS
③	Ø6.5 x Ø19 x 2		4 PCS
④	M4		1 PCS
⑤	M6 x 50mm		4 PCS

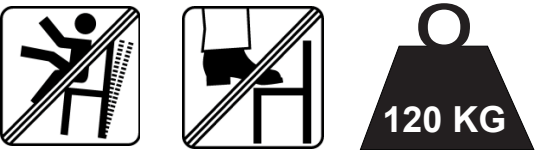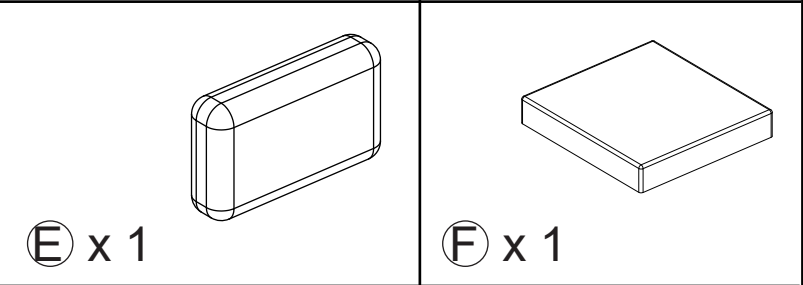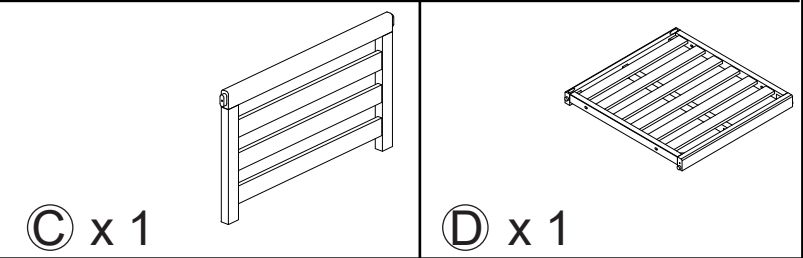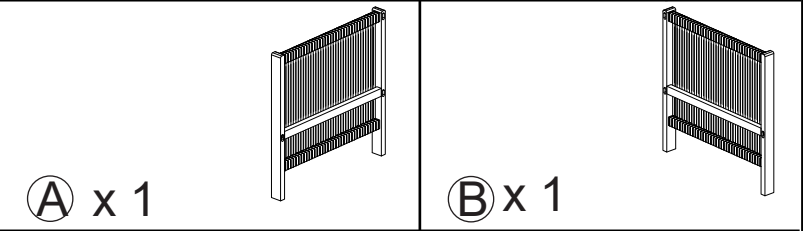

Step 1

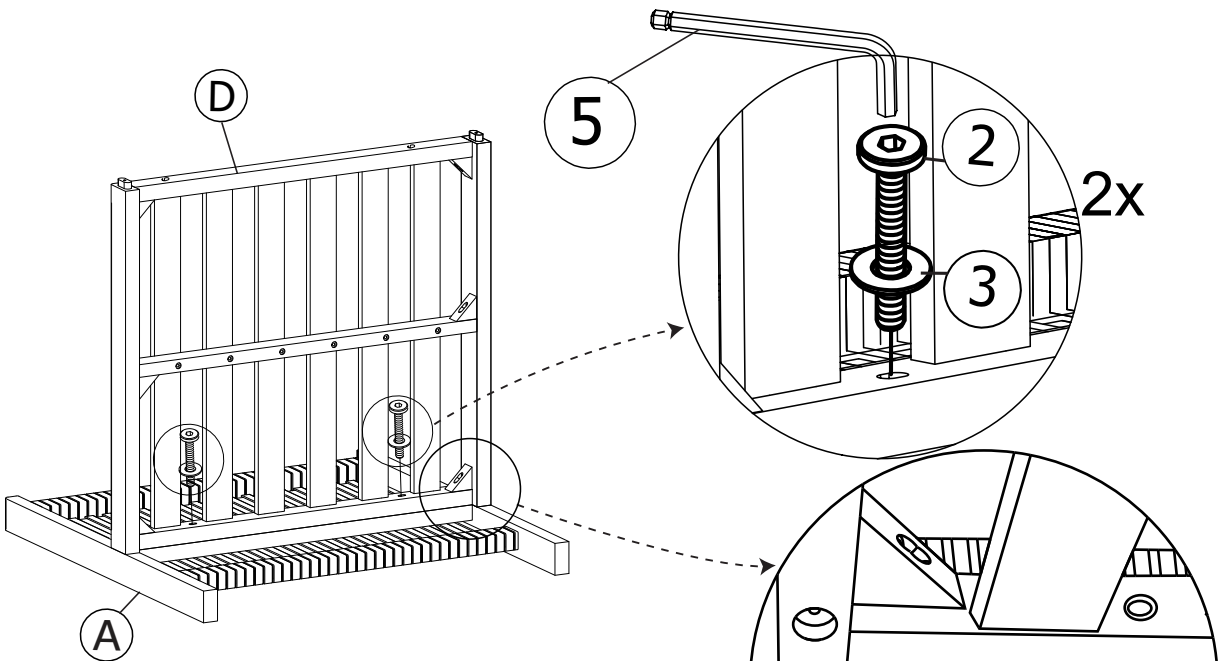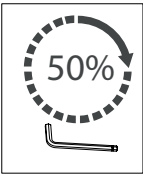


Step 2

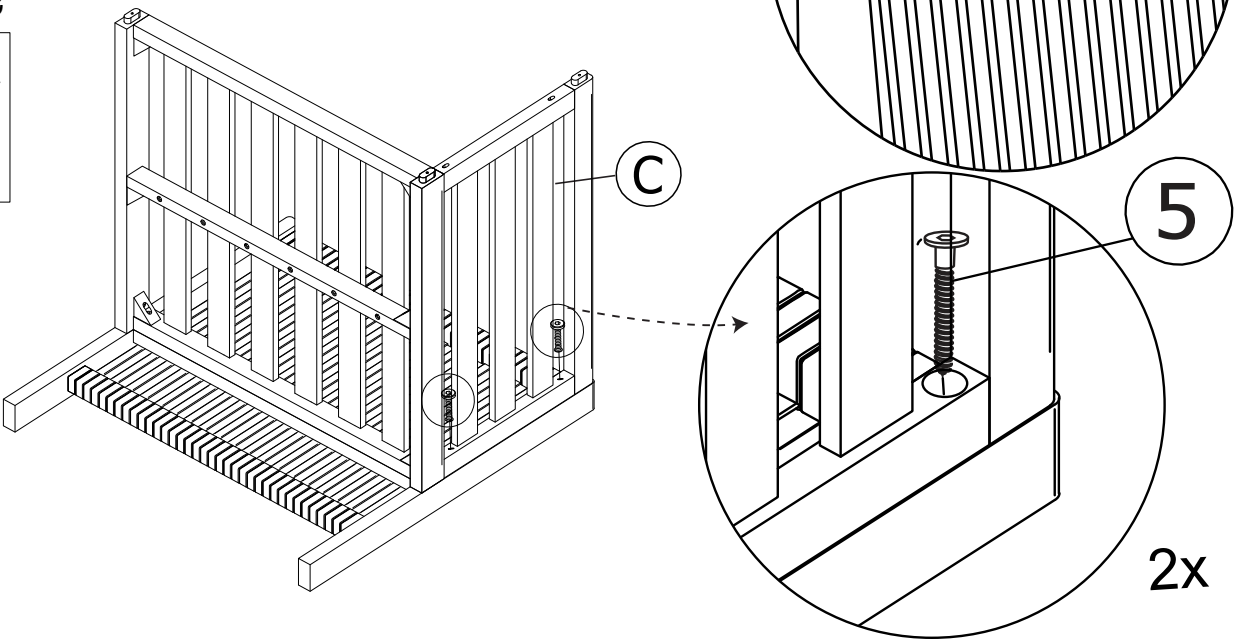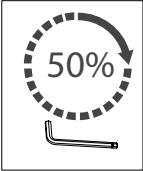


ASSEMBLY INSTRUCTIONS - 20080003-09


Step 3

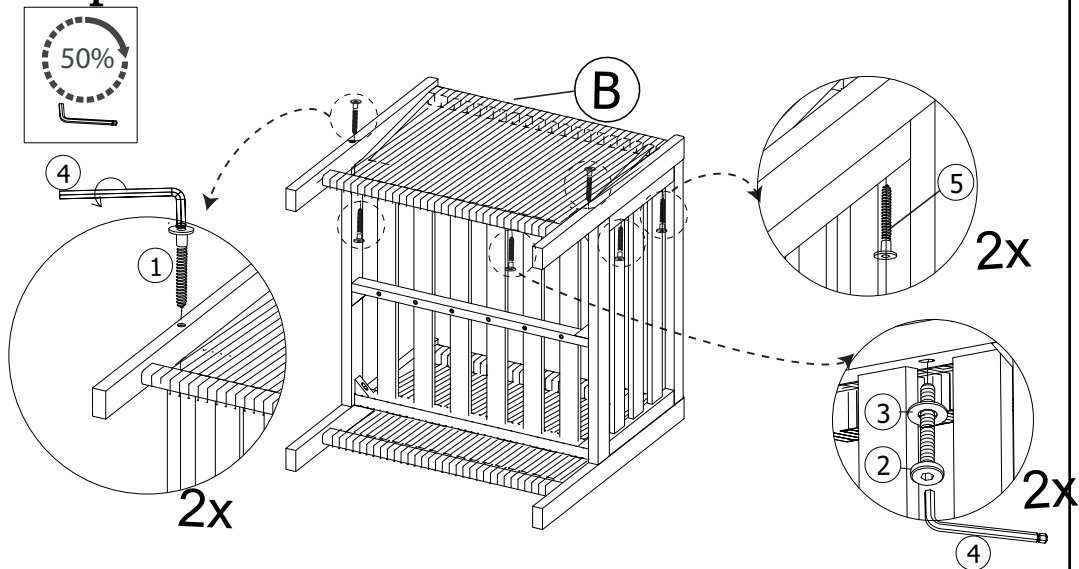

Step 4

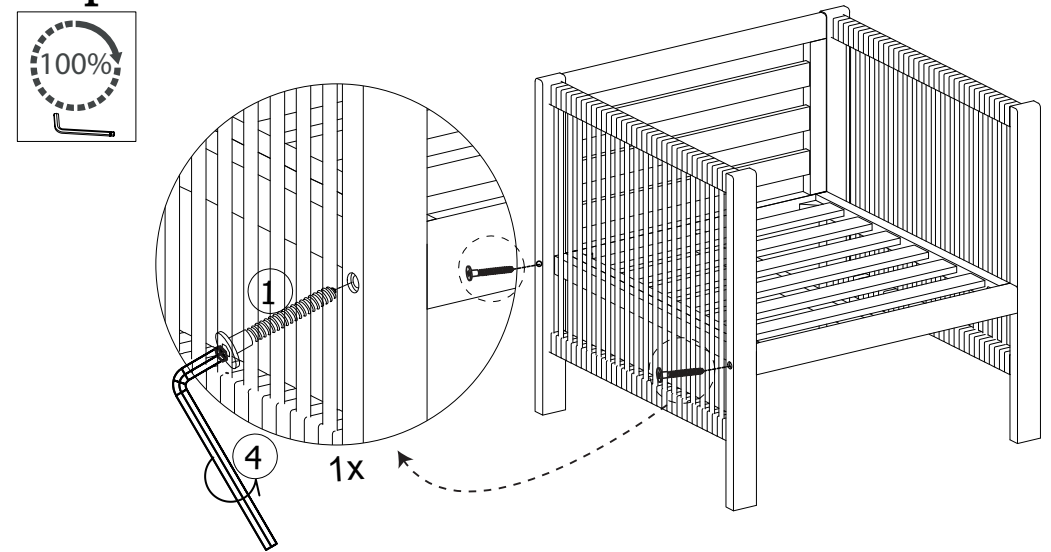

Step 5

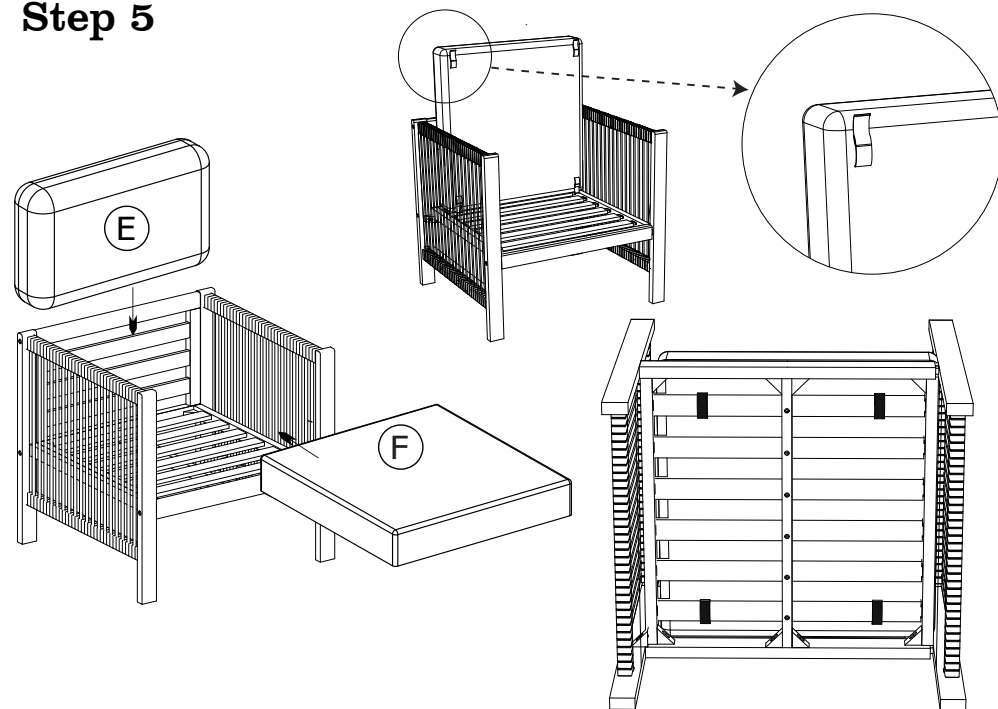

Finished

