



NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
ISTRUZIONI DI MONTAGGIO
MONTAGEANLEITUNG
INSTRUCOES DE MONTAGEM
MANUAL DE MONTAJE
UPUTE ZA MONTAZU
KURULUM TALIMATLARI

ERNO LZ


Ecksofa

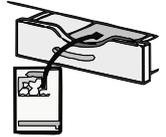

30 min

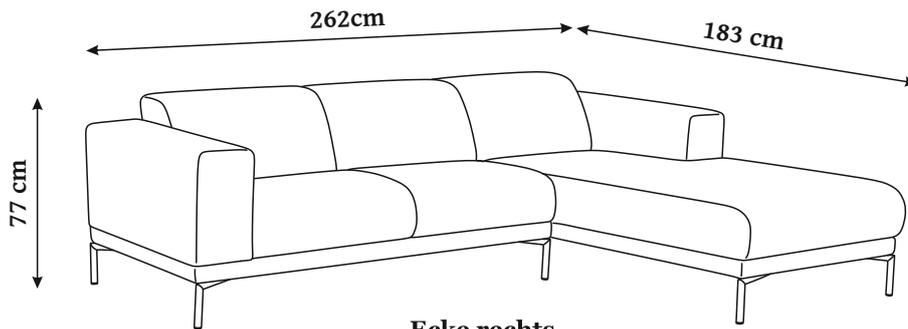


Ecke rechts

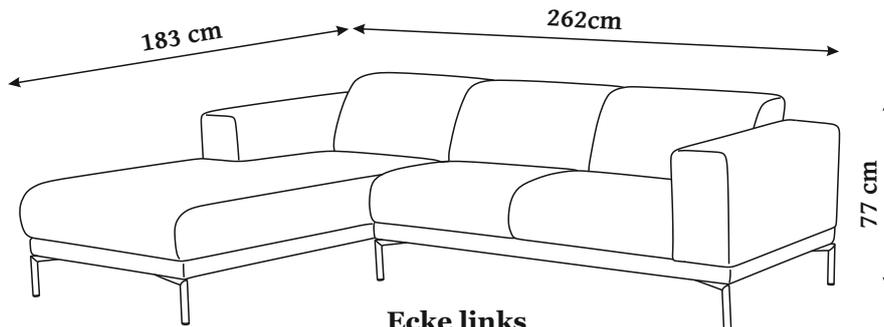

Ecke links

!
+/- 2cm


<u>Ecksofa links</u>	Ontario 02	0009220011/02
<u>Ecksofa rechts</u>	Ontario 02	0009220011/01

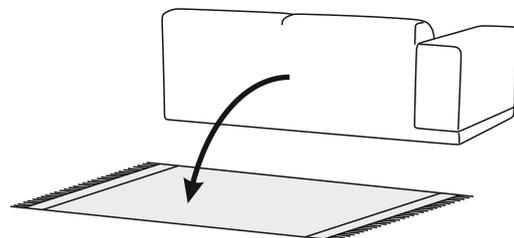

Ecke links




3-4

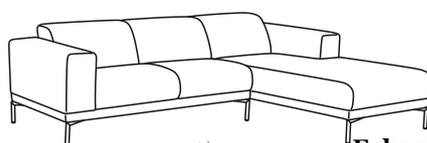



Ecke rechts










5-6

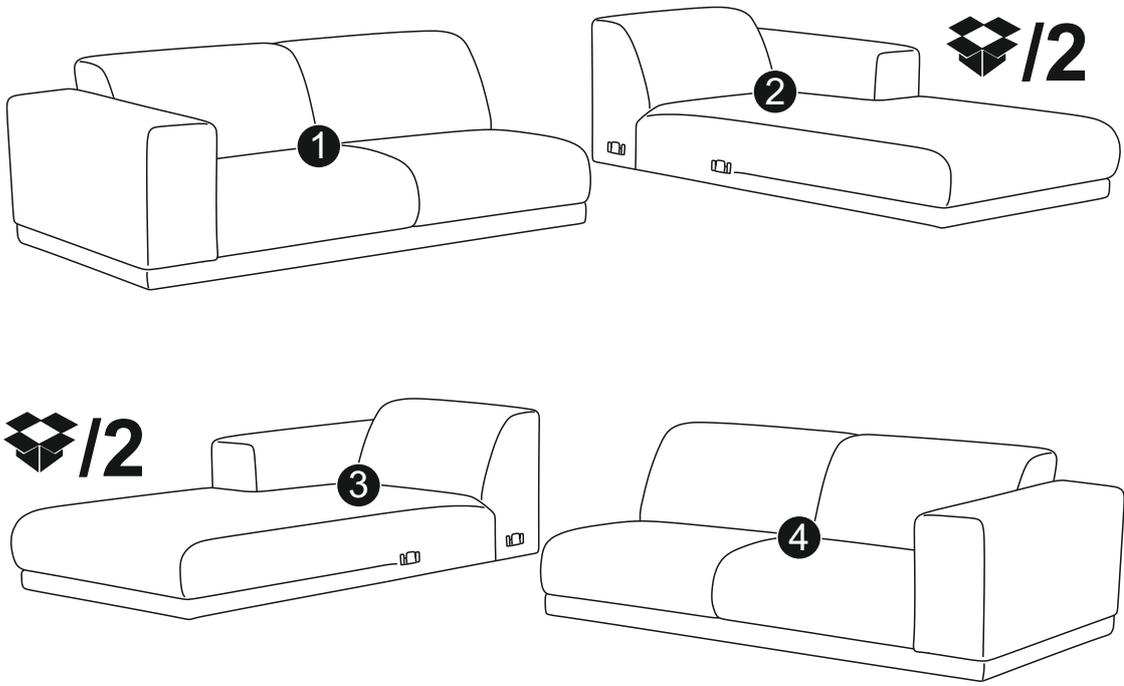









				PCS	
①	166 cm	50 cm	93 cm	x1	1/2
②	96 cm	50 cm	183 cm	x1	2/2
③	96 cm	50 cm	183 cm	x1	2/2
④	166 cm	50 cm	93 cm	x1	1/2

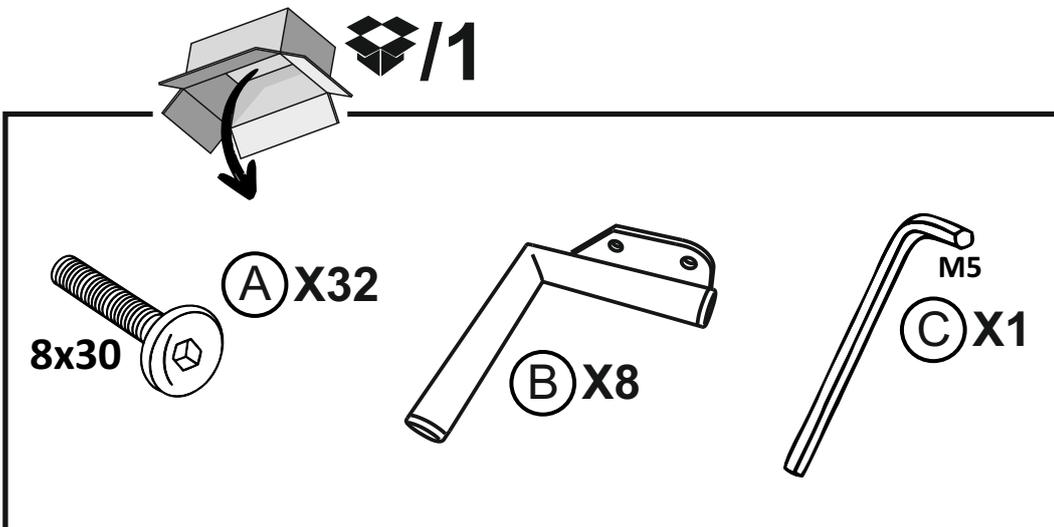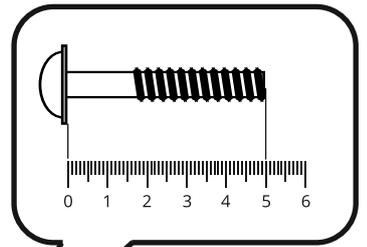



1.

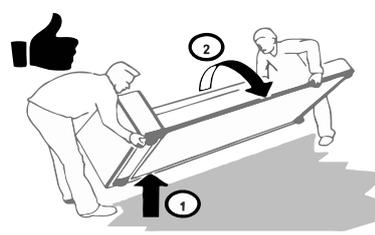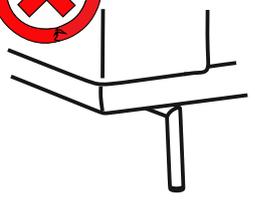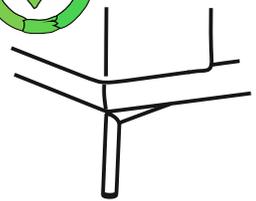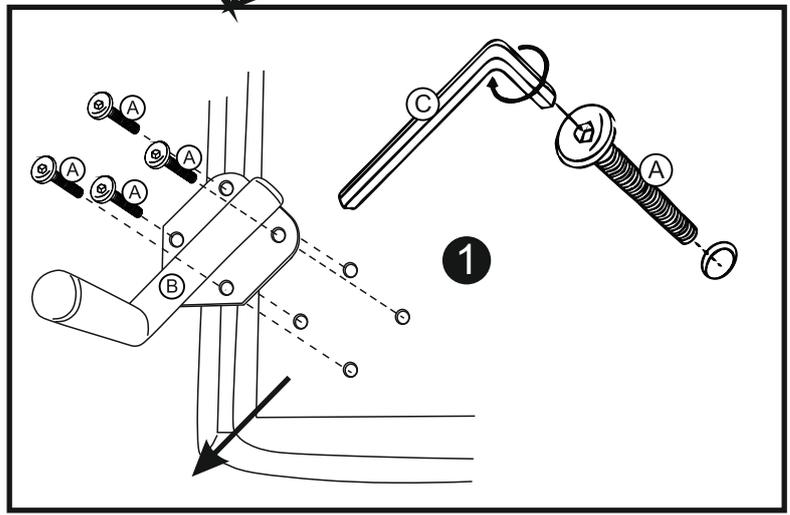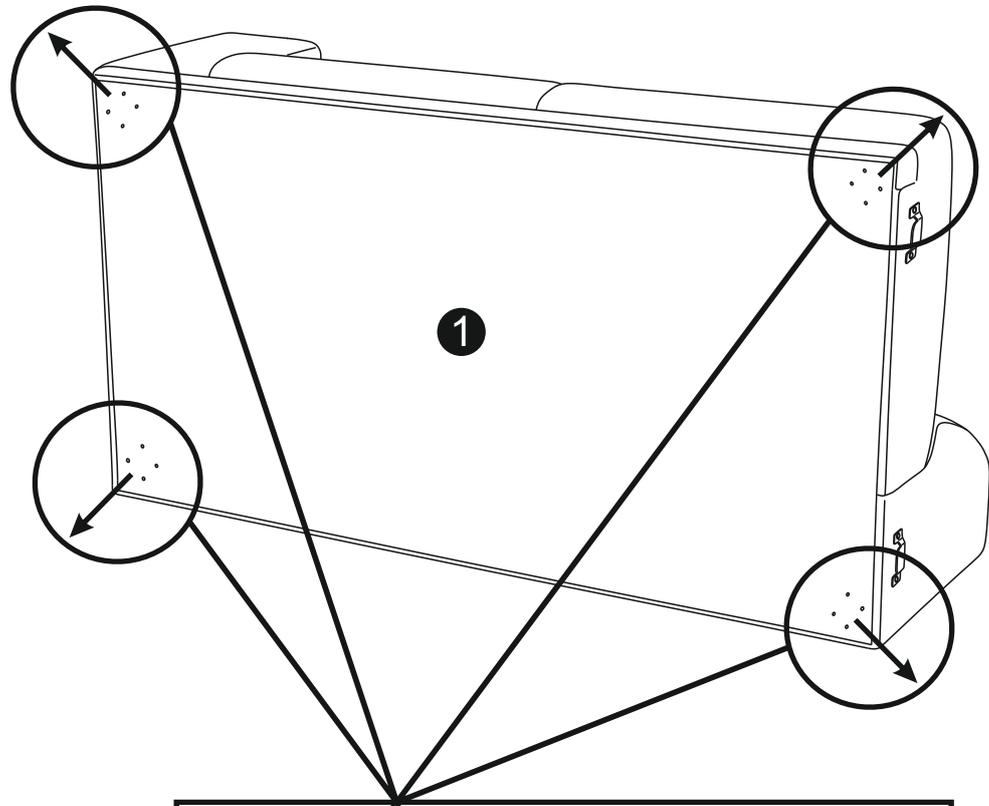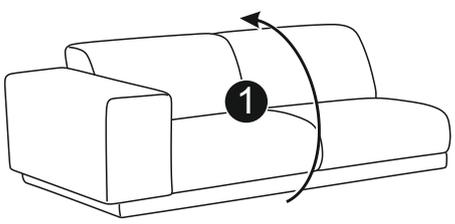









1.

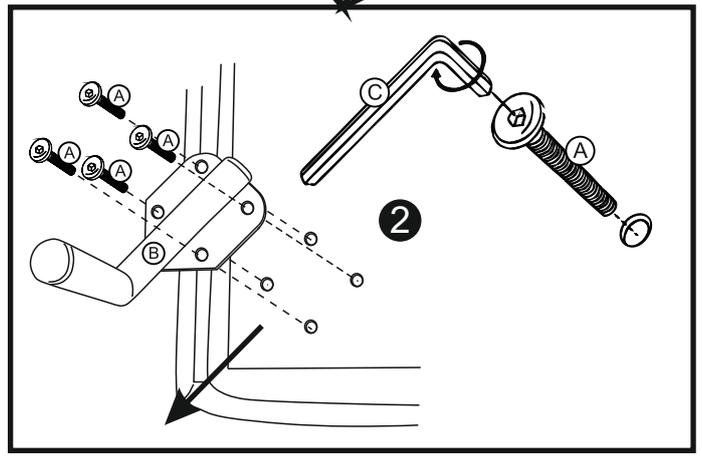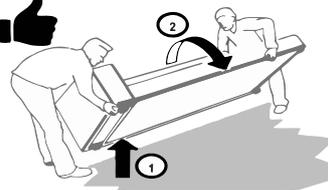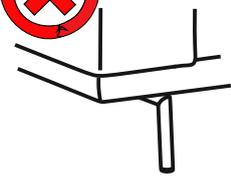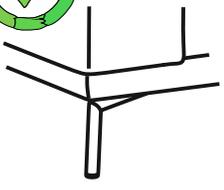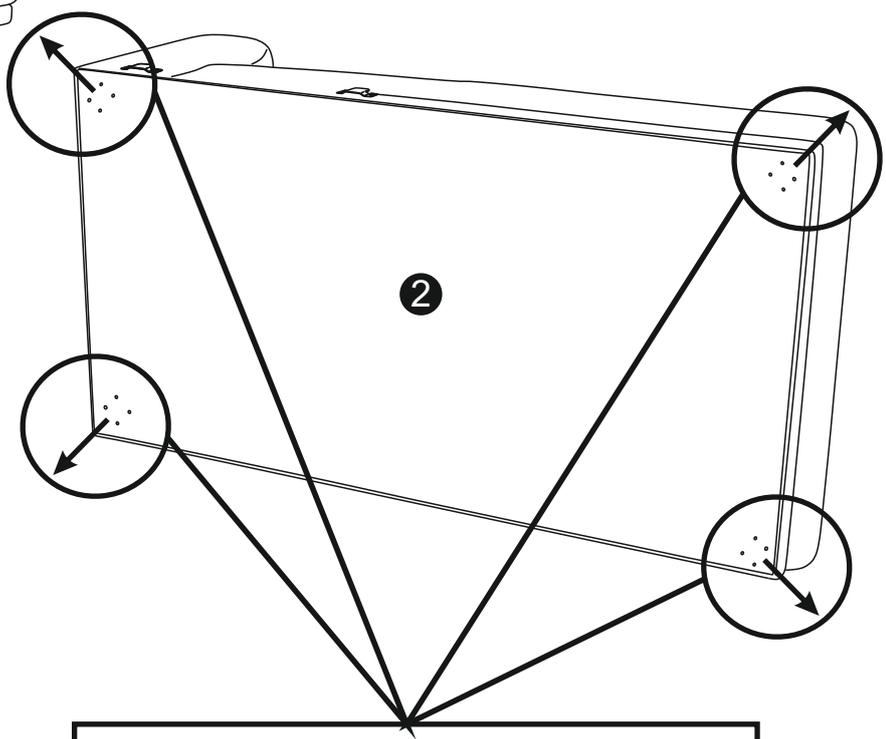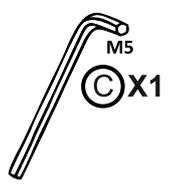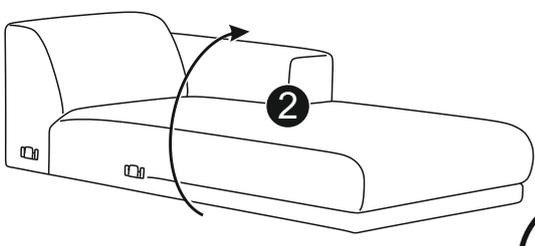








3.

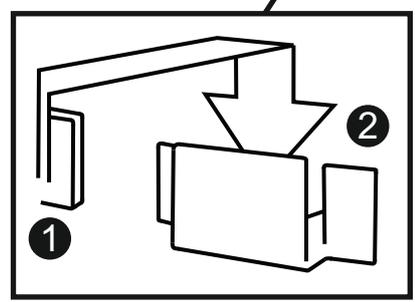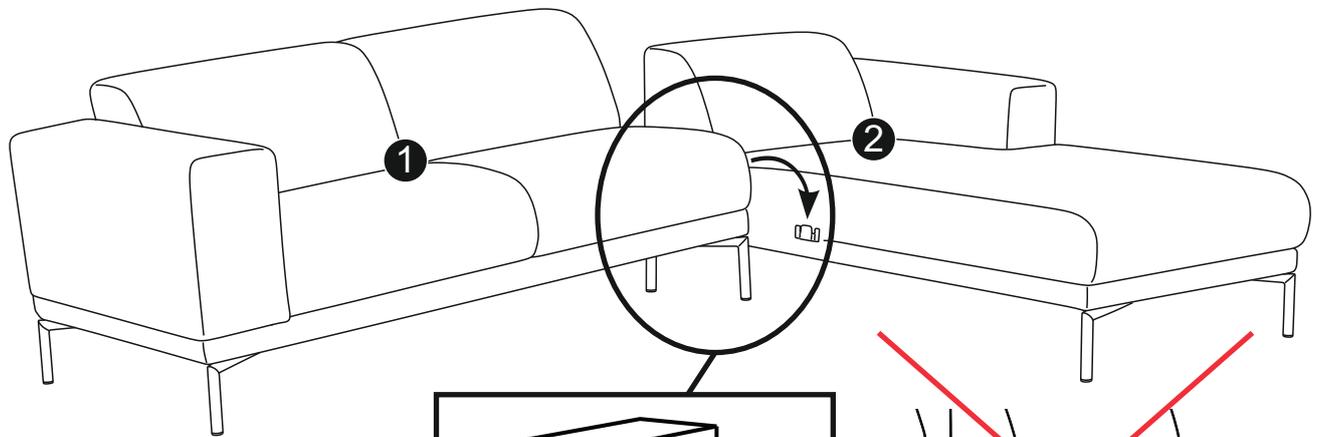




1.

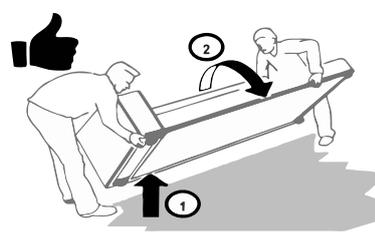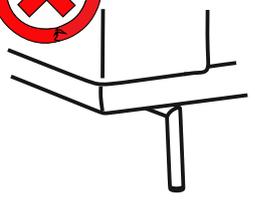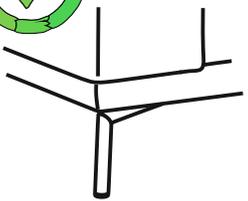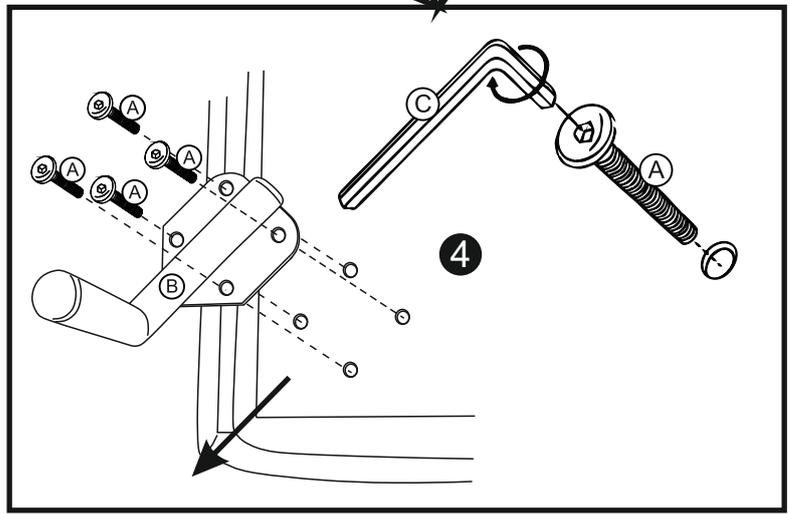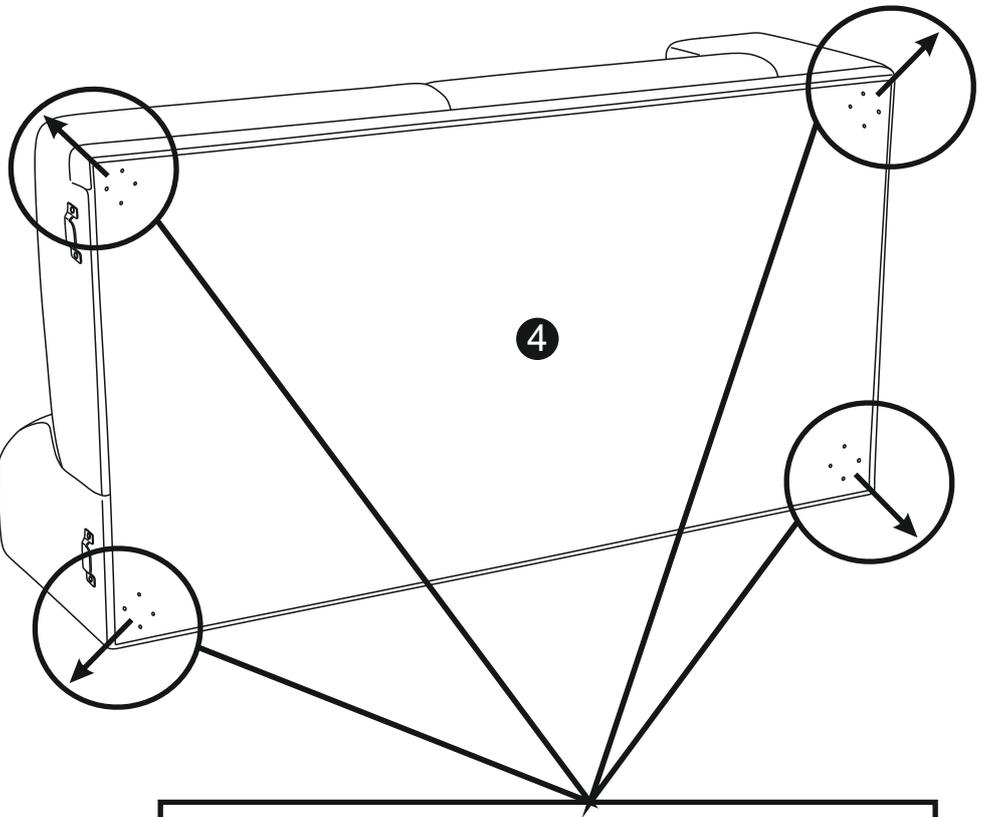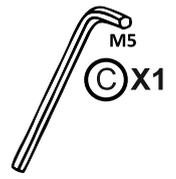

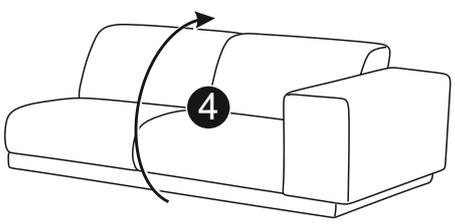



1.

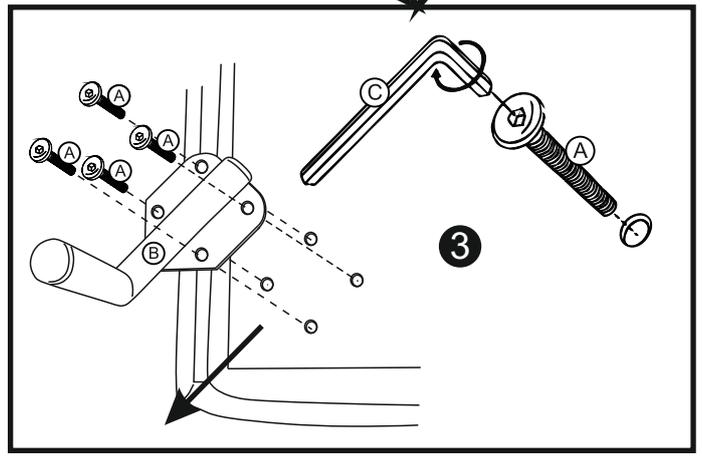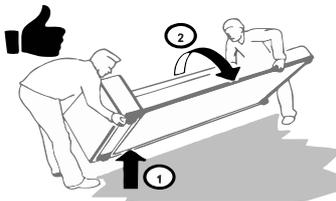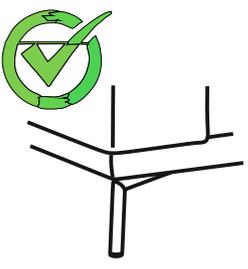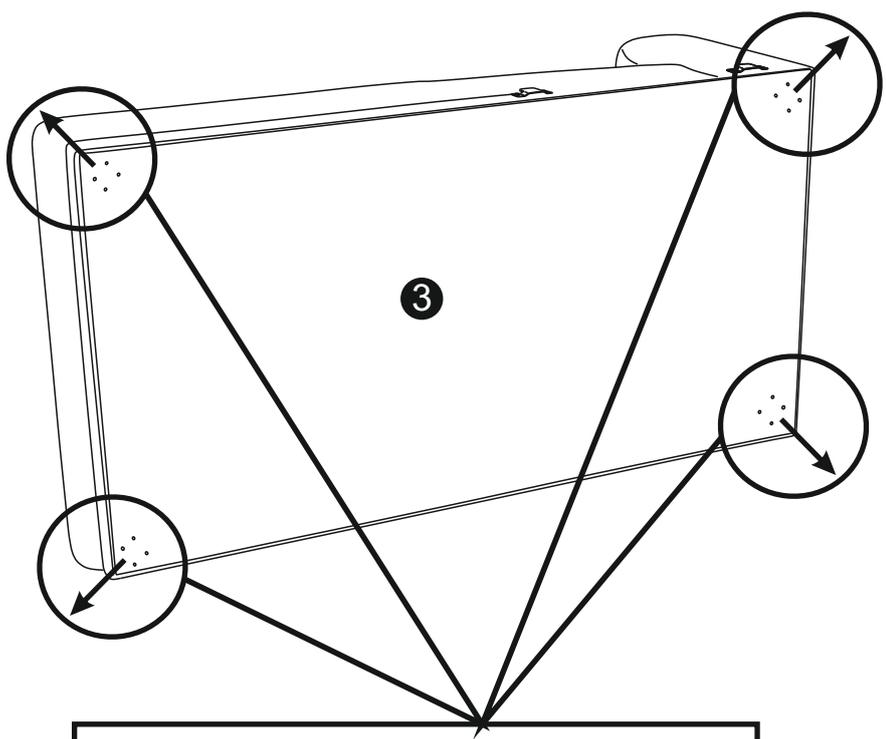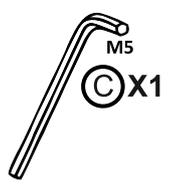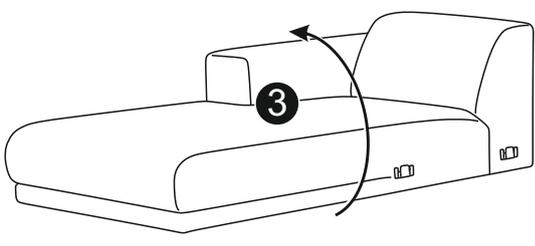

3.

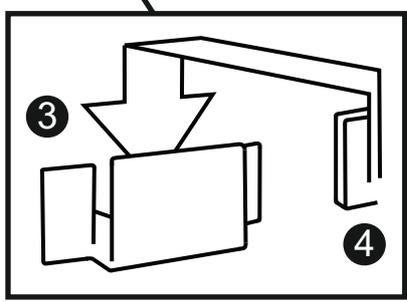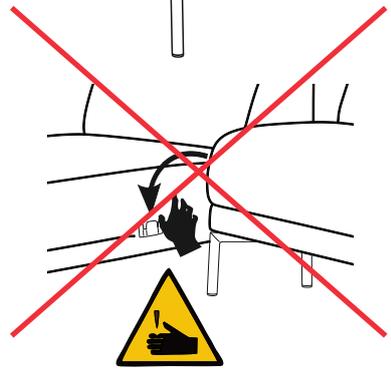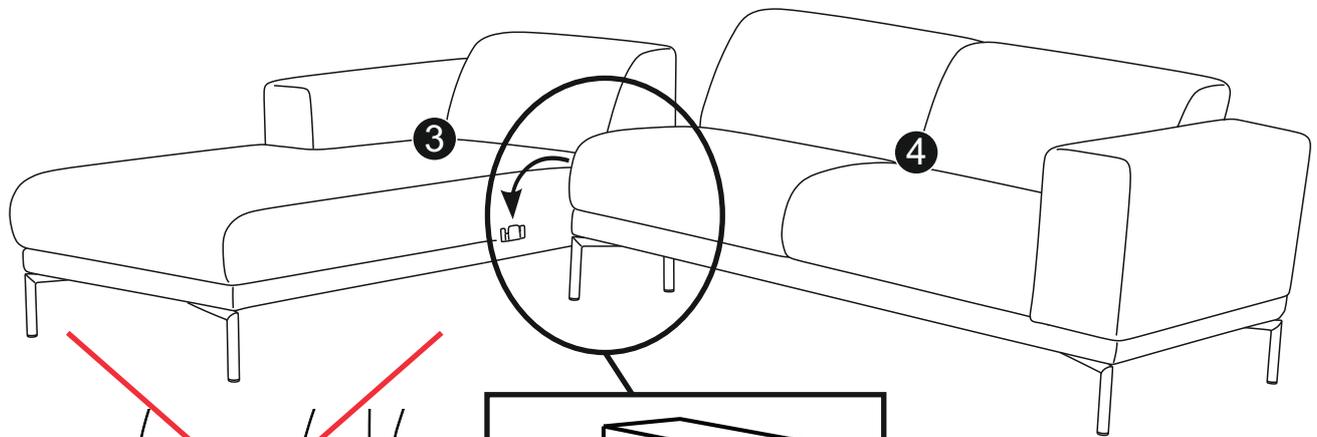


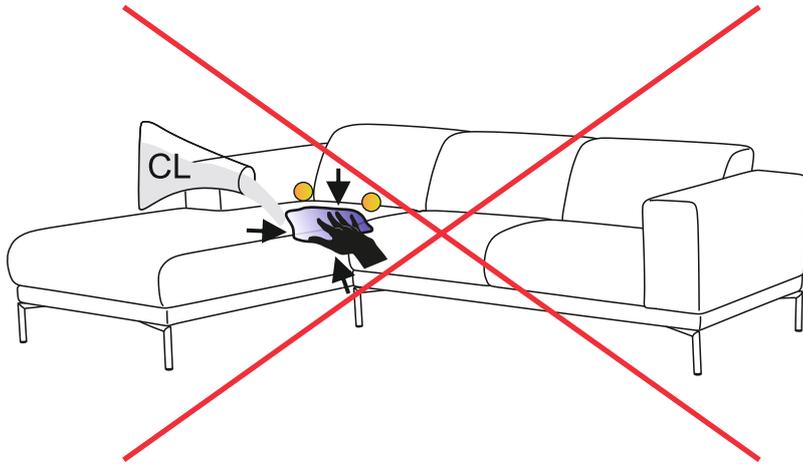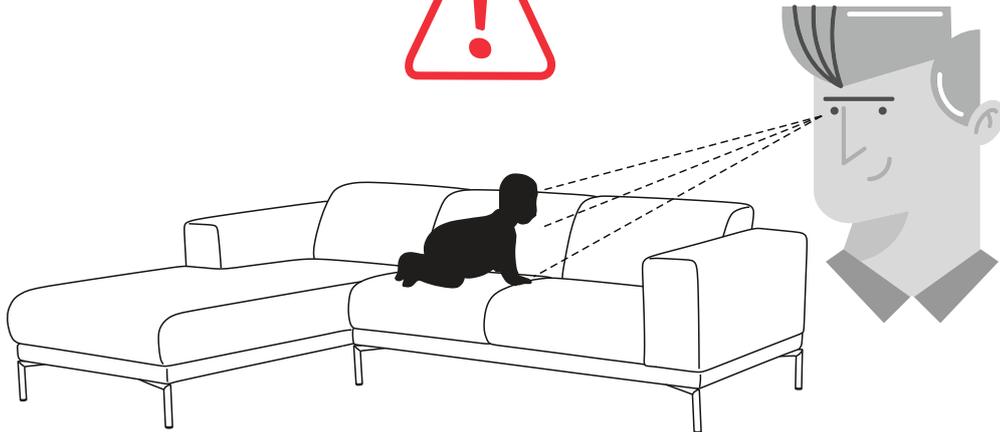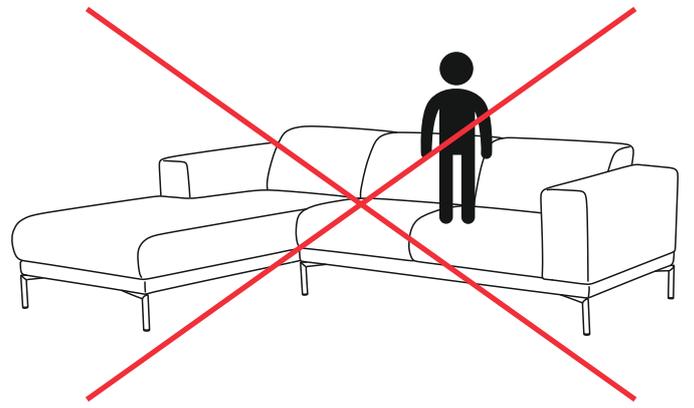

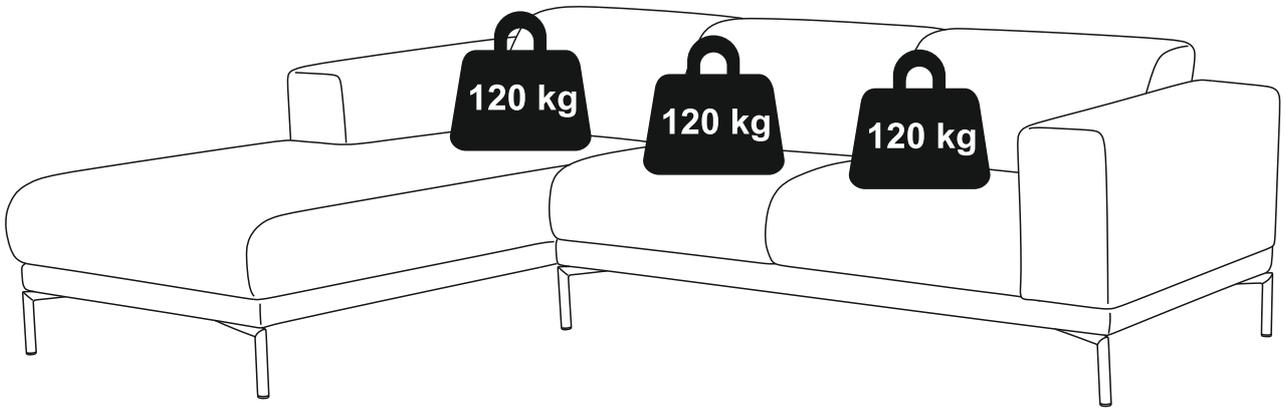


MAXIMALE BELASTUNG
CHARGE MAXIMALE
MAXIMUM LOAD

1

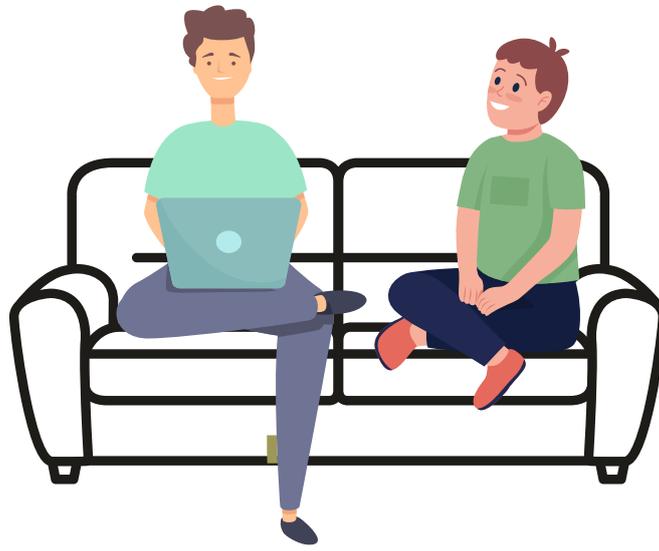

2

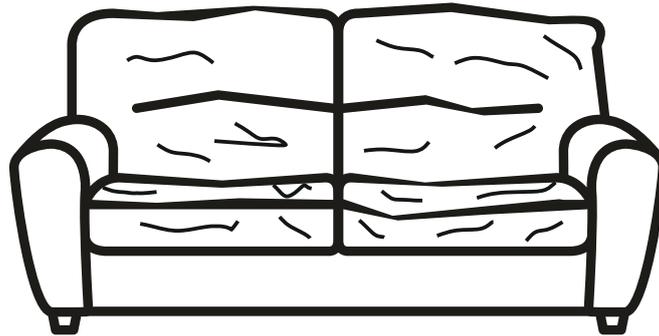

3



4

