






VOLOS

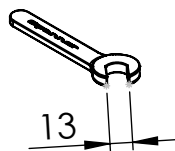



30 min.





Colly 1/3: I ; II ; Bx5 ; Cx5 ; Dx5 ; Ex5 ;

Colly 2/3: III ; IV

Colly 3/3: Vx3 ; Ax12 ; Bx12 ; Zx1




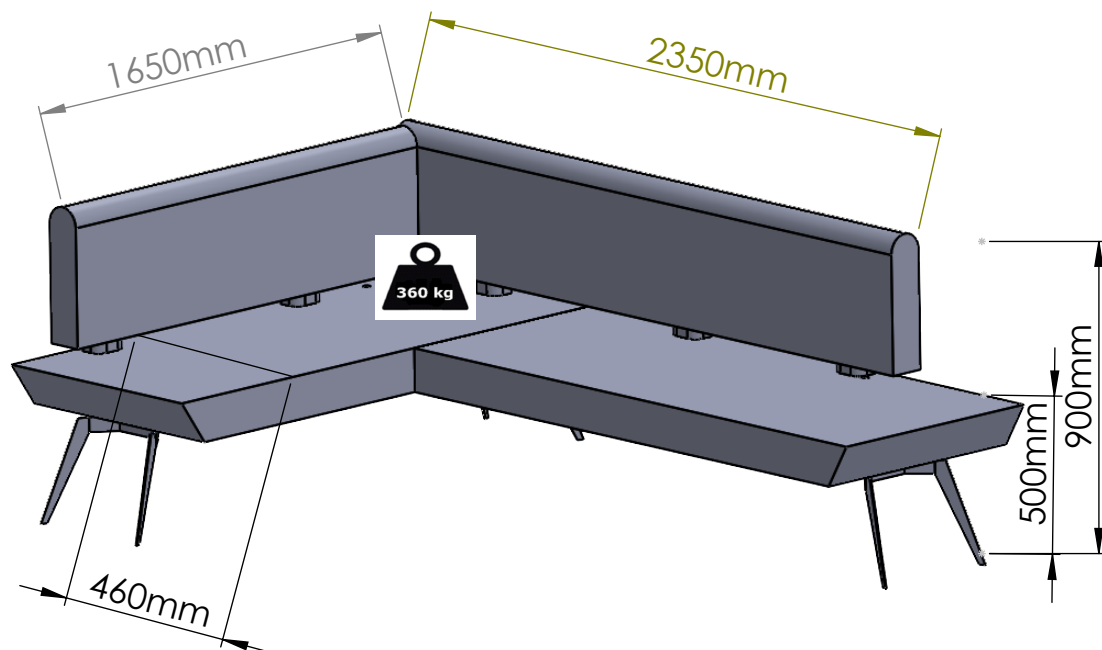


Ax12 M8x60	Bx17 M8
Cx5 170mm	Dx5 M8
Ex5	Zx1 6mm

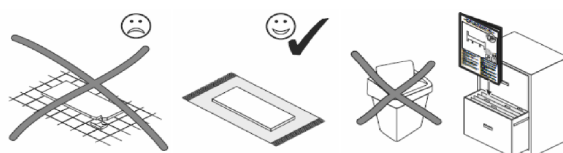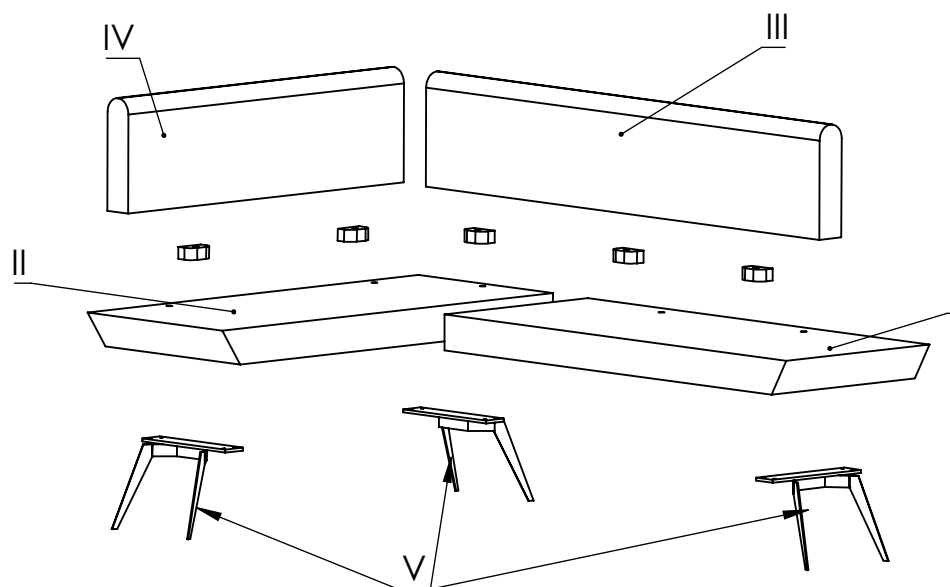




1.

Ax8 M8X60	Bx8 M8	Zx1 6mm
--------------	-----------	------------

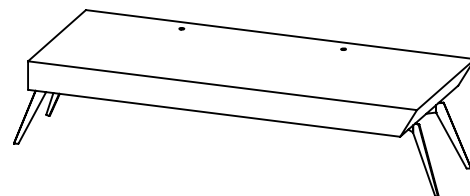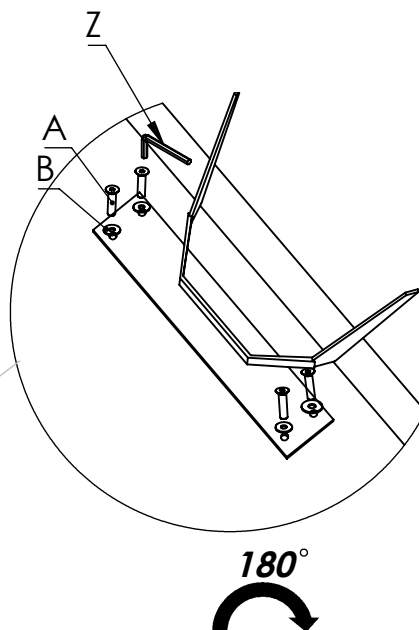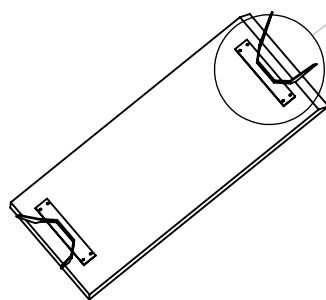
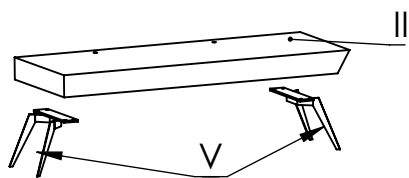


2.

Ax4 M8X60	Bx4 M8	Zx1 6mm
--------------	-----------	------------

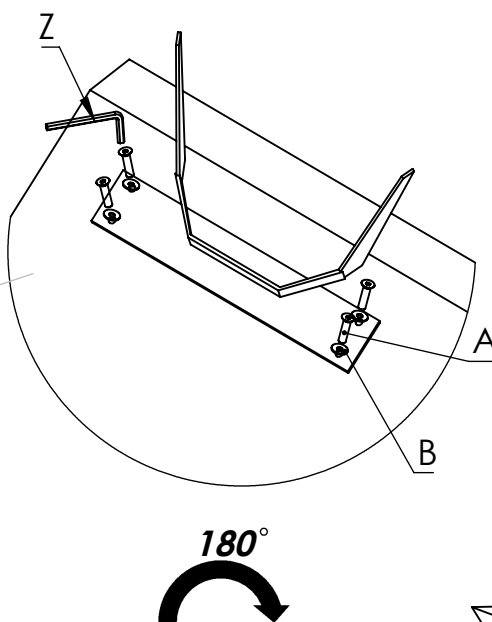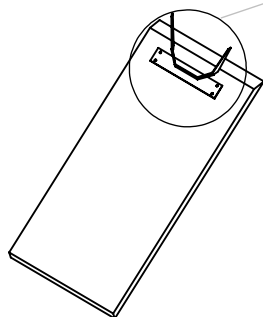
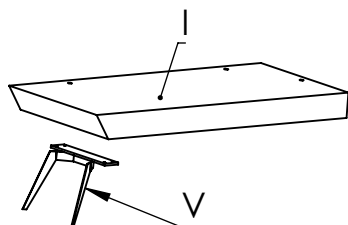


3.

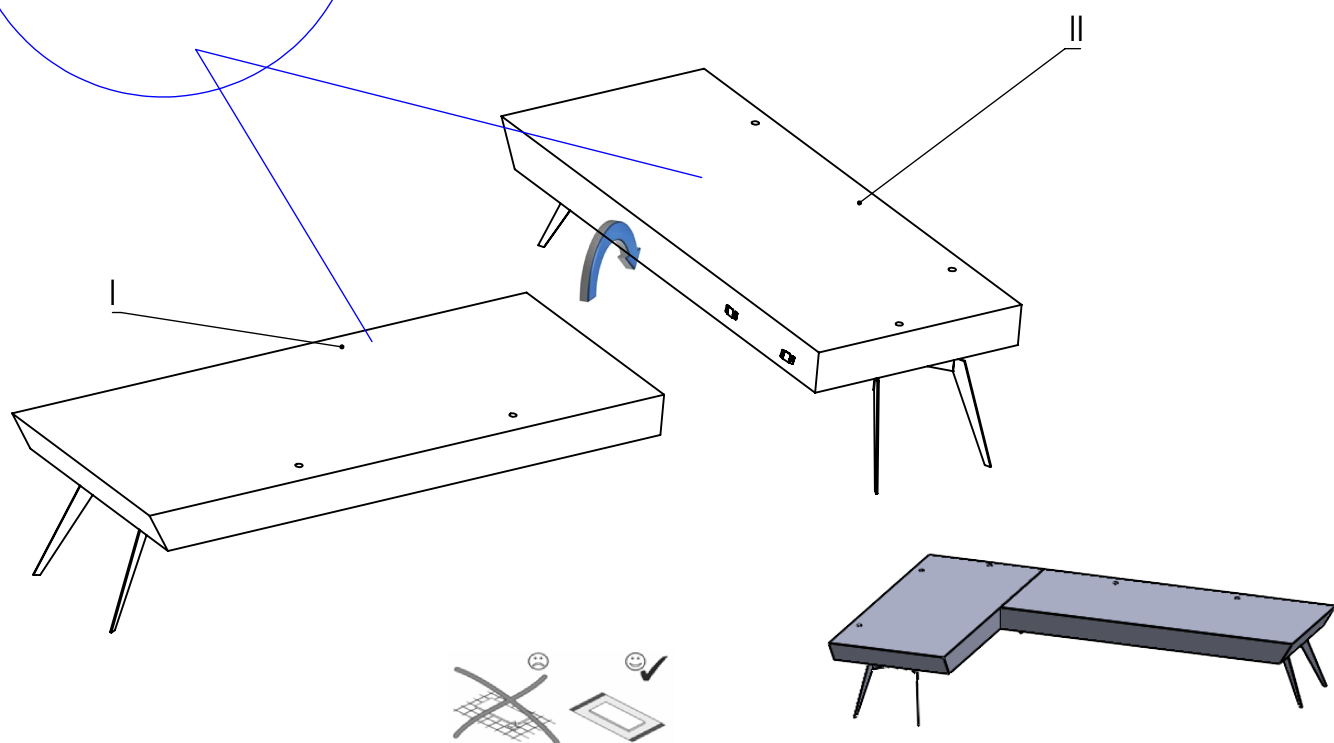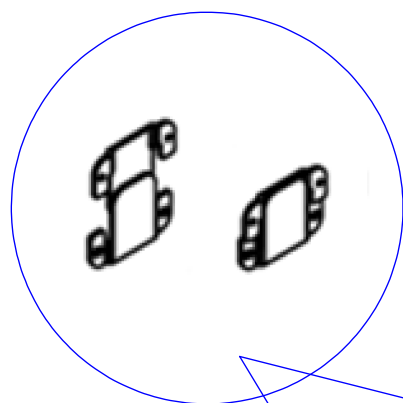




4.

Cx5
170mm

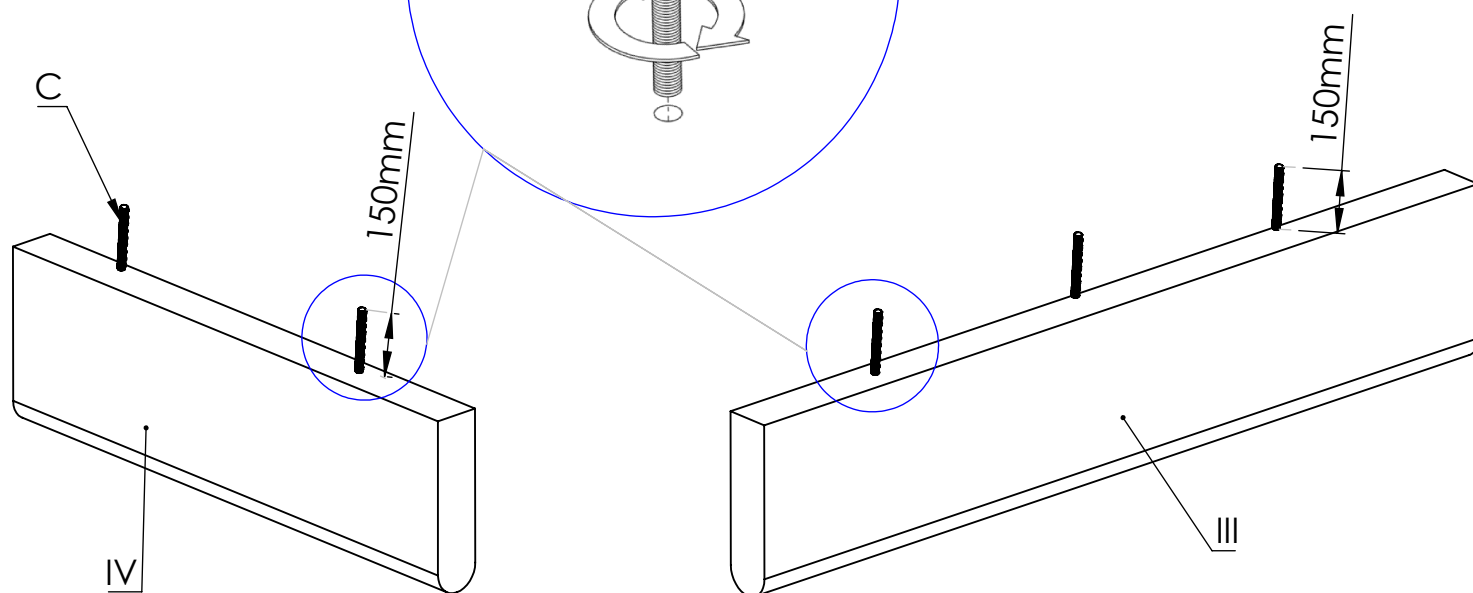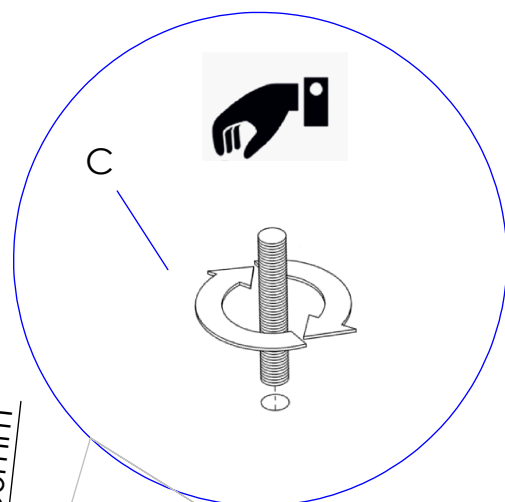

5.

Bx3 M8	Dx3 M8	Ex3	13
-----------	-----------	-----	----

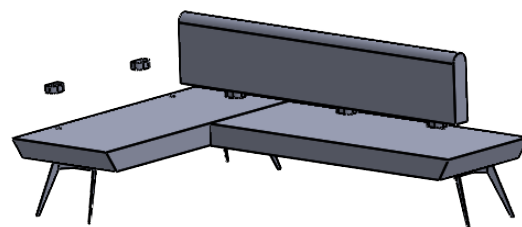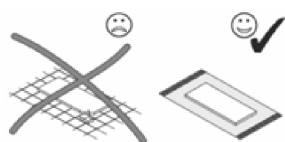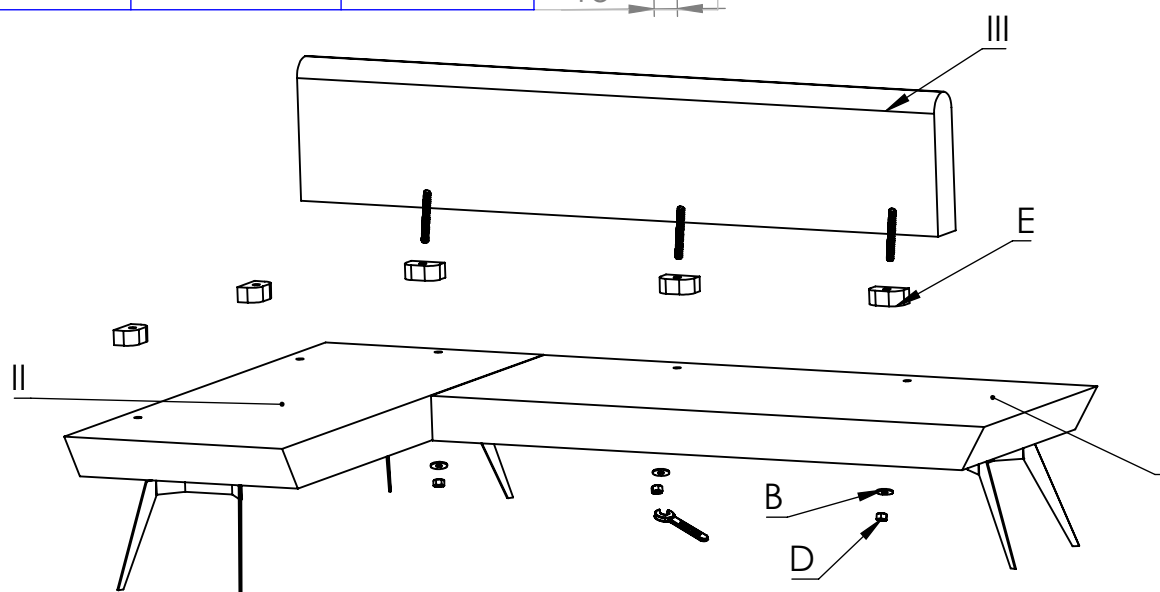

6.

Bx2 M6	Dx2 Mx6	Ex2	13
-----------	------------	-----	----

