




ACCORDEON


TRIPLE BED 90X200

0025470001/01 - WEIß
WHITE

0025470001/02 - GRAU
GREY

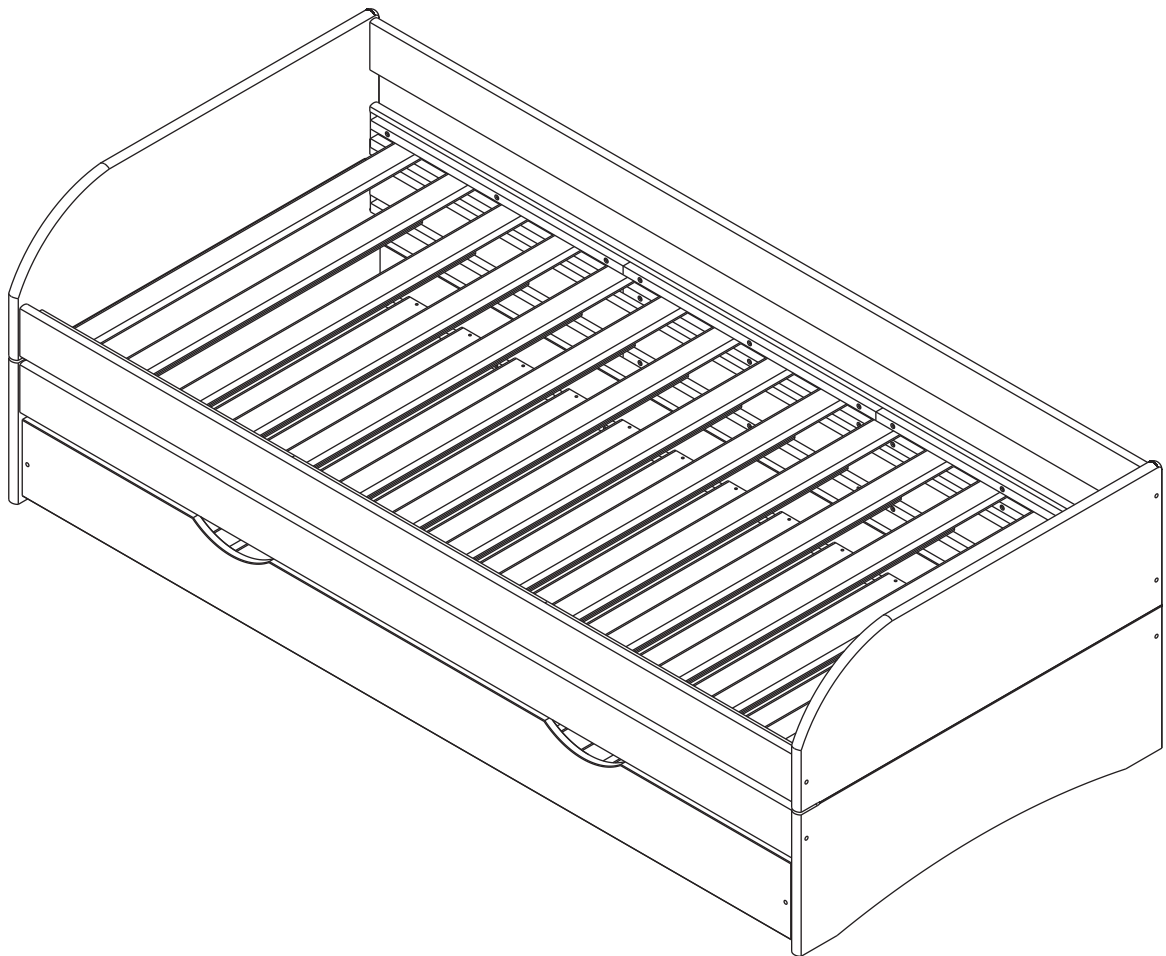








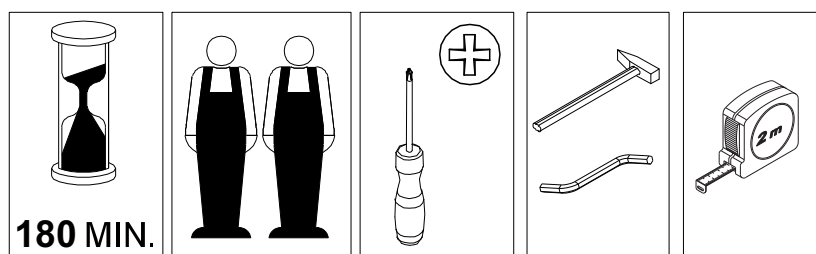
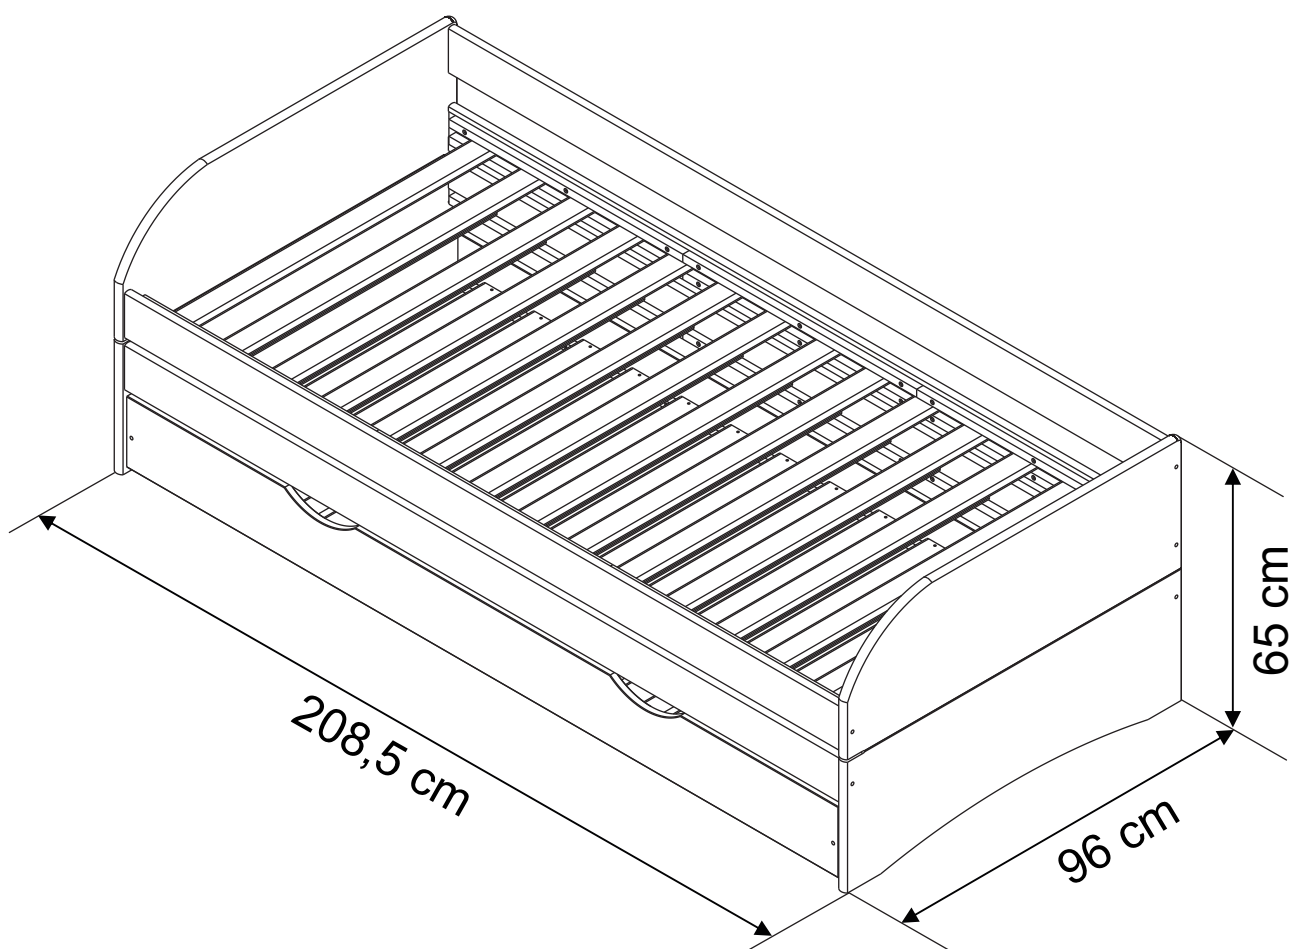


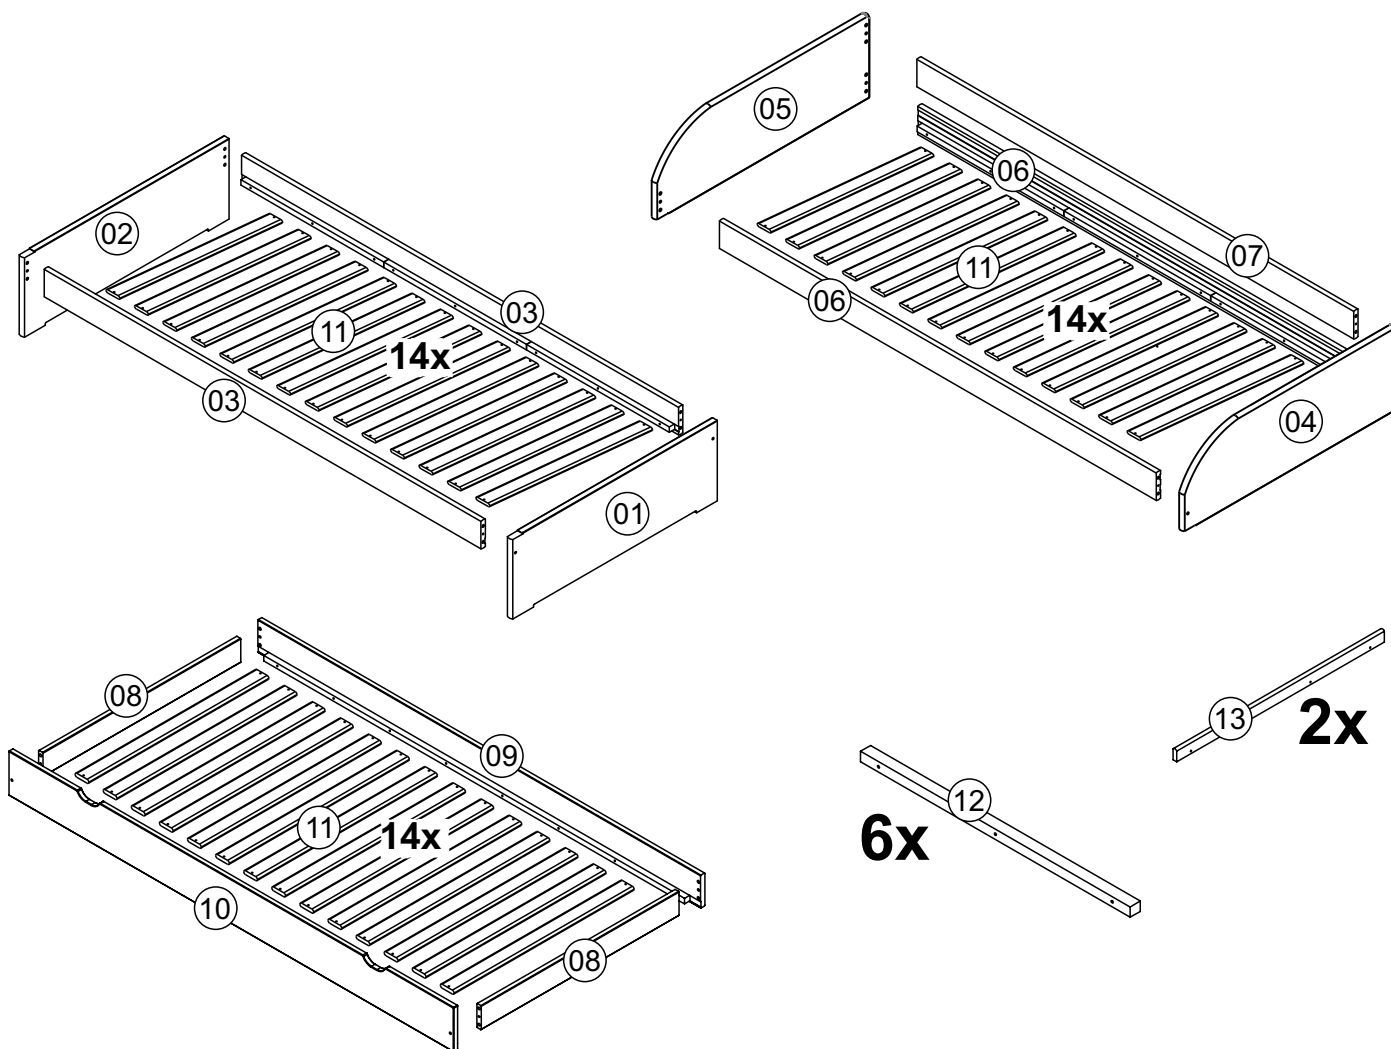


Teil Nummer	Menge	Paket
01	1	2/3
02	1	2/3
03	2	1/3
04	1	2/3
05	1	2/3
06	2	1/3
07	1	1/3


Teil Nummer	Menge	Paket
08	2	2/3
09	1	1/3
10	1	1/3
11	42	3/3
12	6	1/3
13	2	2/3

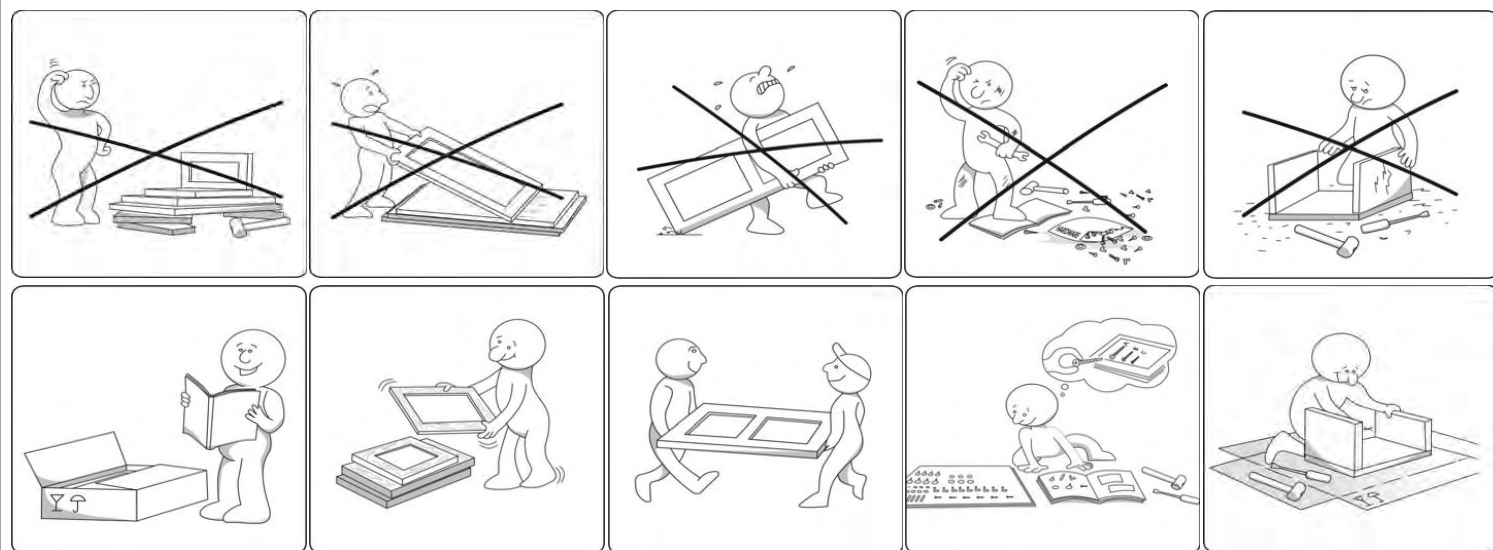

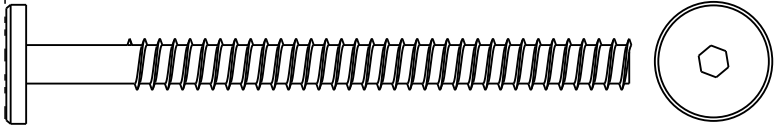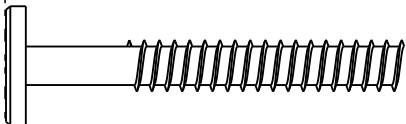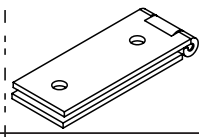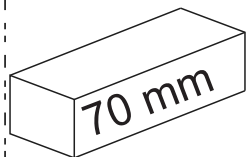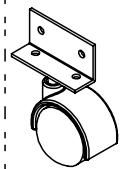
A		10x40	28
B		4x30	110
C		7x80	10
D		7x50	04
E			02
F		3,5x20	08
G			01
H			02
I			04
J		3,5x16	16




1

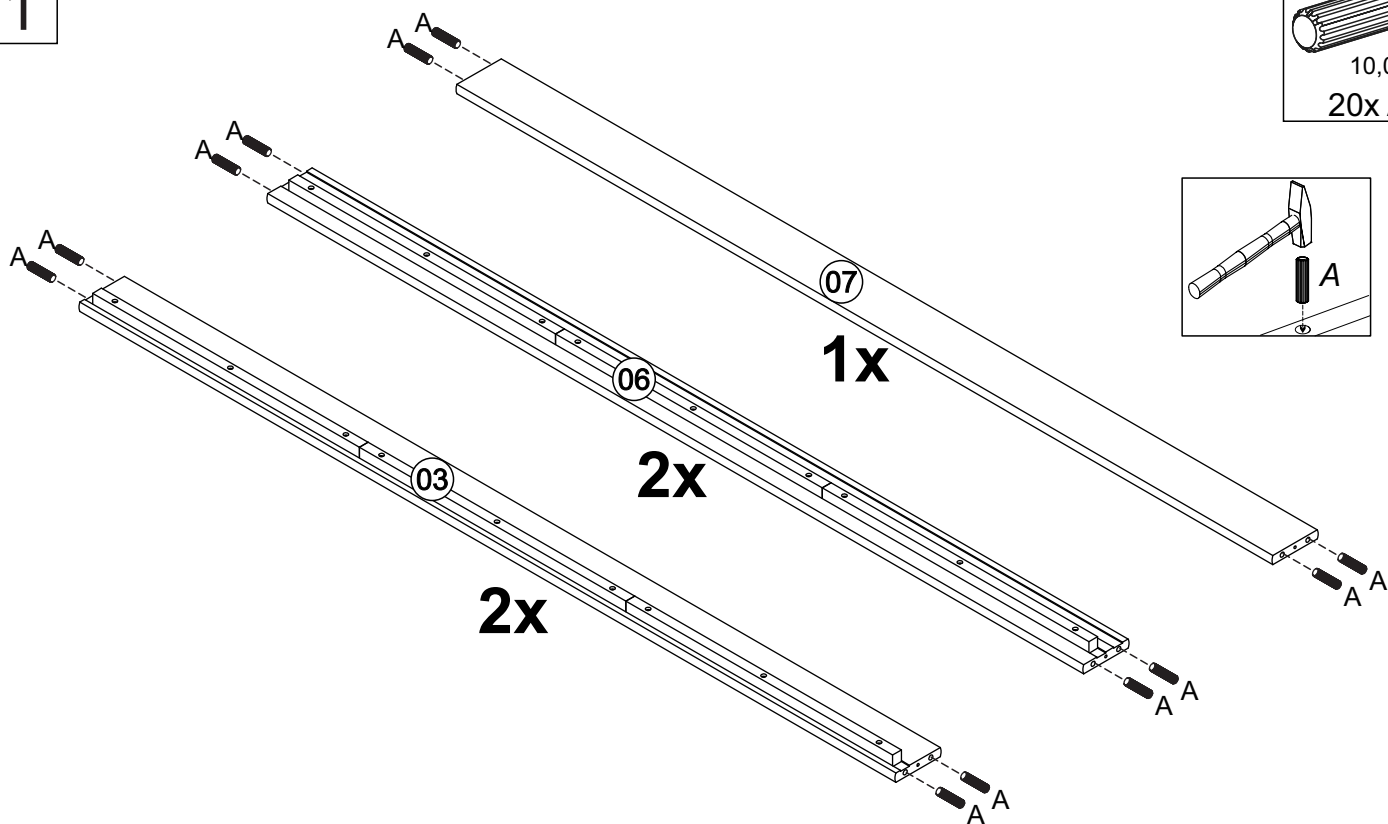


2

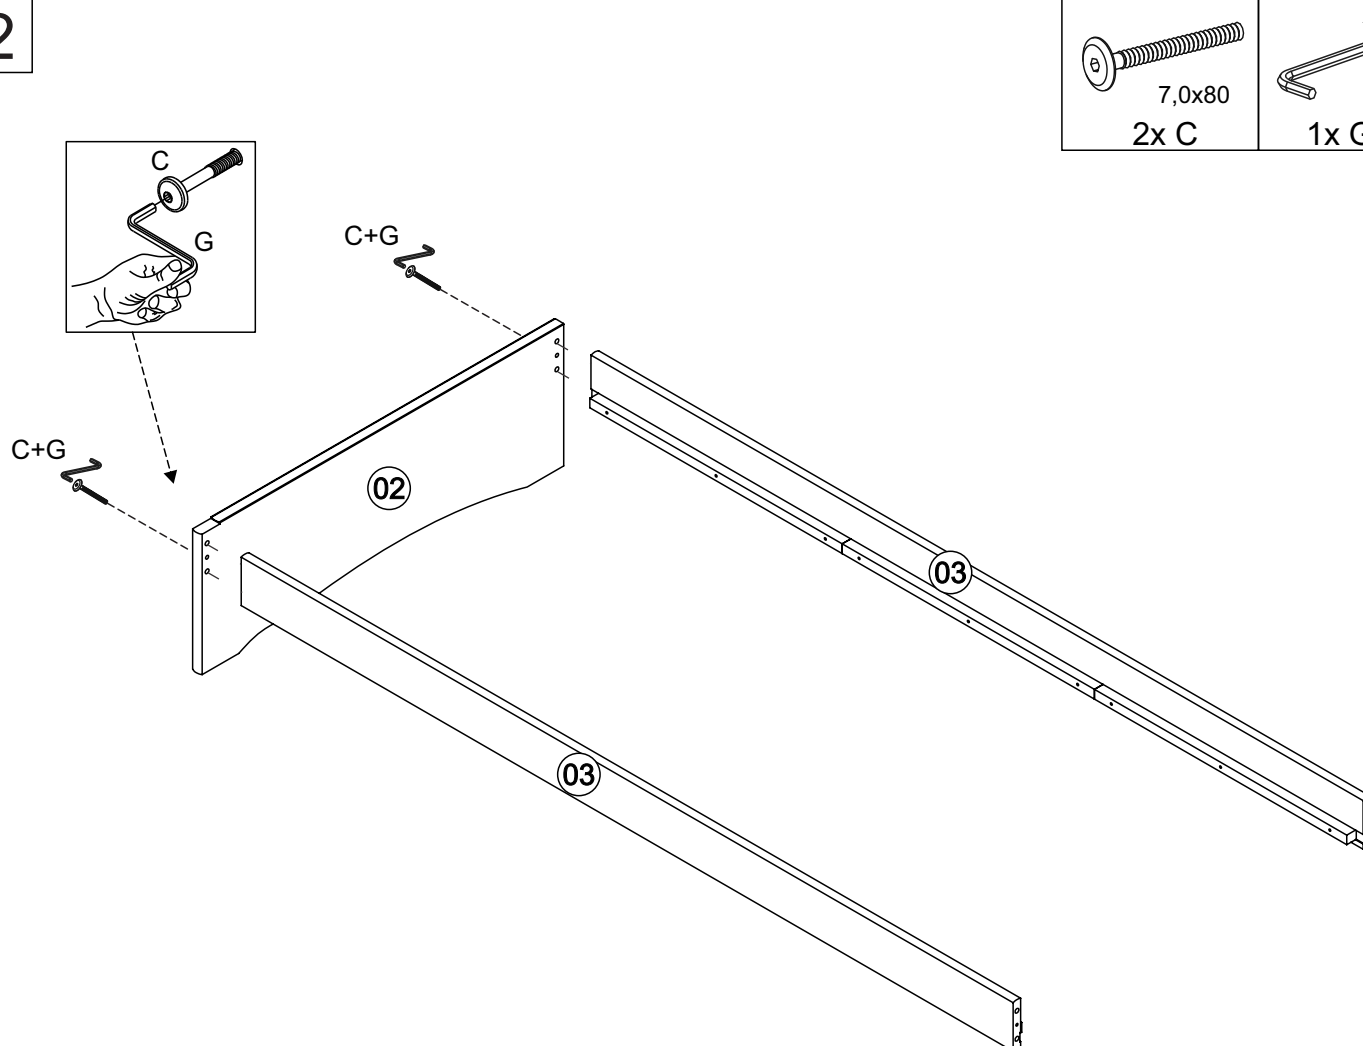

3

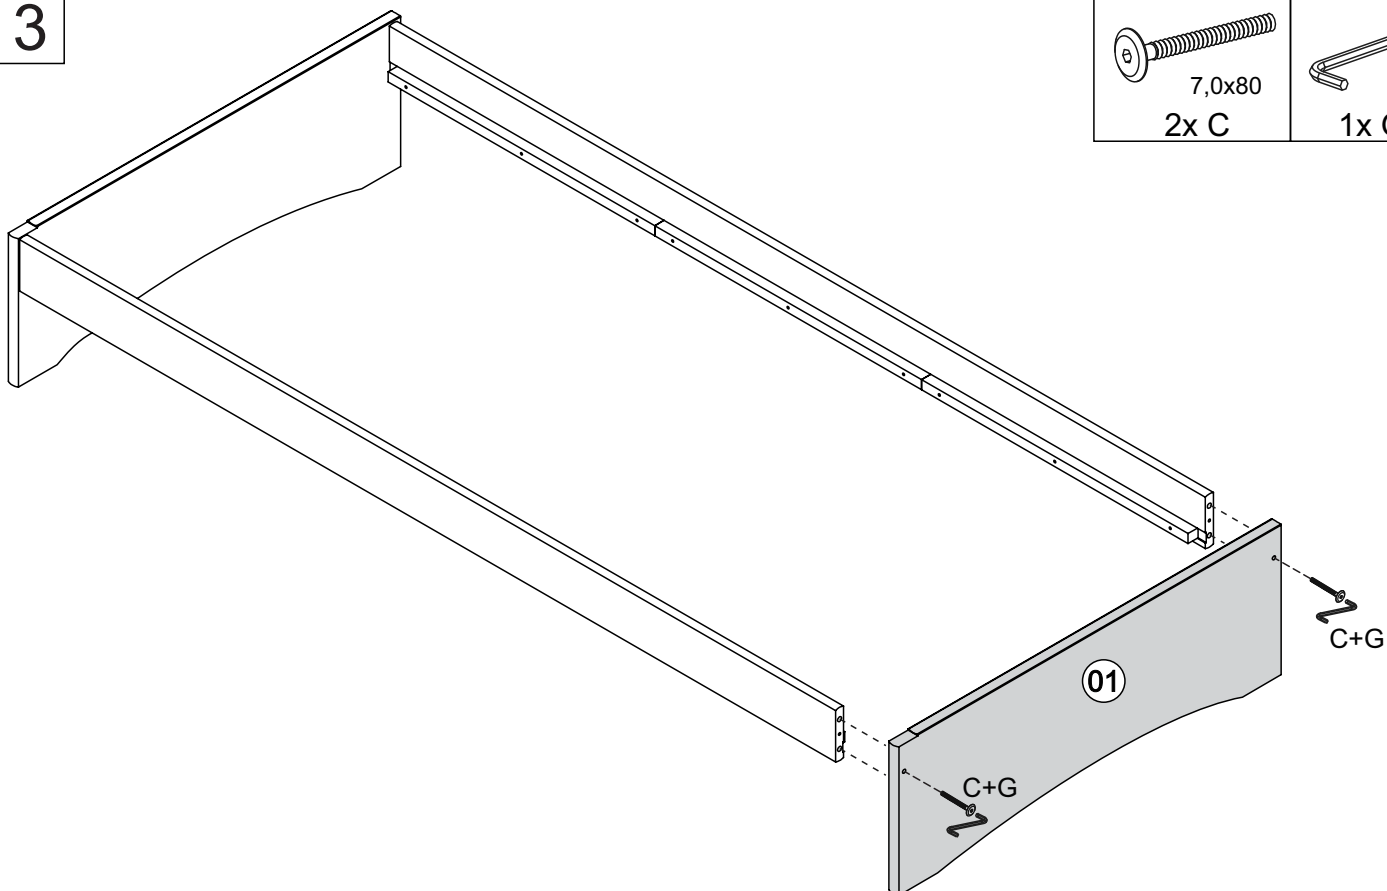

4

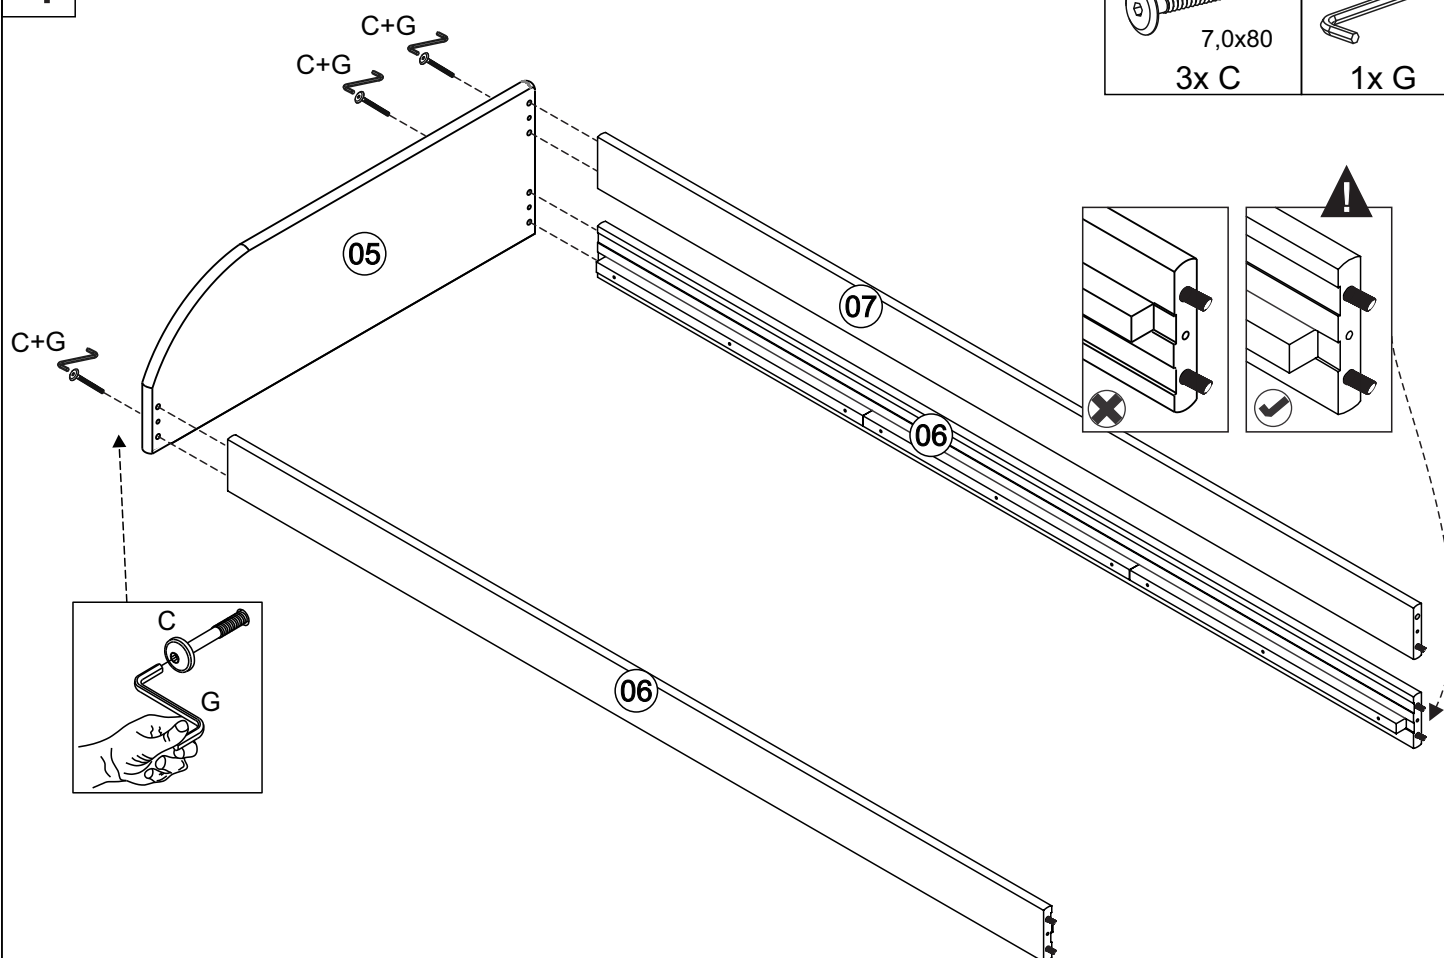

5

Diagram illustrating the assembly of a curved panel (04) onto a frame. The panel is shown being attached to the side of the frame using screws (C) and cam bolts (G).

Parts list:

- 7,0x80 (Screw)
- 3x C (Screws)
- 1x G (Cam bolt)

Assembly instructions:

- Insert the cam bolt (G) into the panel (04) and the frame.
- Tighten the screw (C) to secure the panel to the frame.

The diagram shows the panel (04) being attached to the side of the frame. The panel is secured by three screws (C) and one cam bolt (G). The cam bolt (G) is inserted into the panel and the frame, and the screw (C) is tightened to secure the panel.

6

2x 08

A A

D+G

08

09

10

08

D+G

D+G





G

 10,0x40 8x A	 7,0x50 4x D	 1x G
---------------------	--------------------	----------



7






04x G

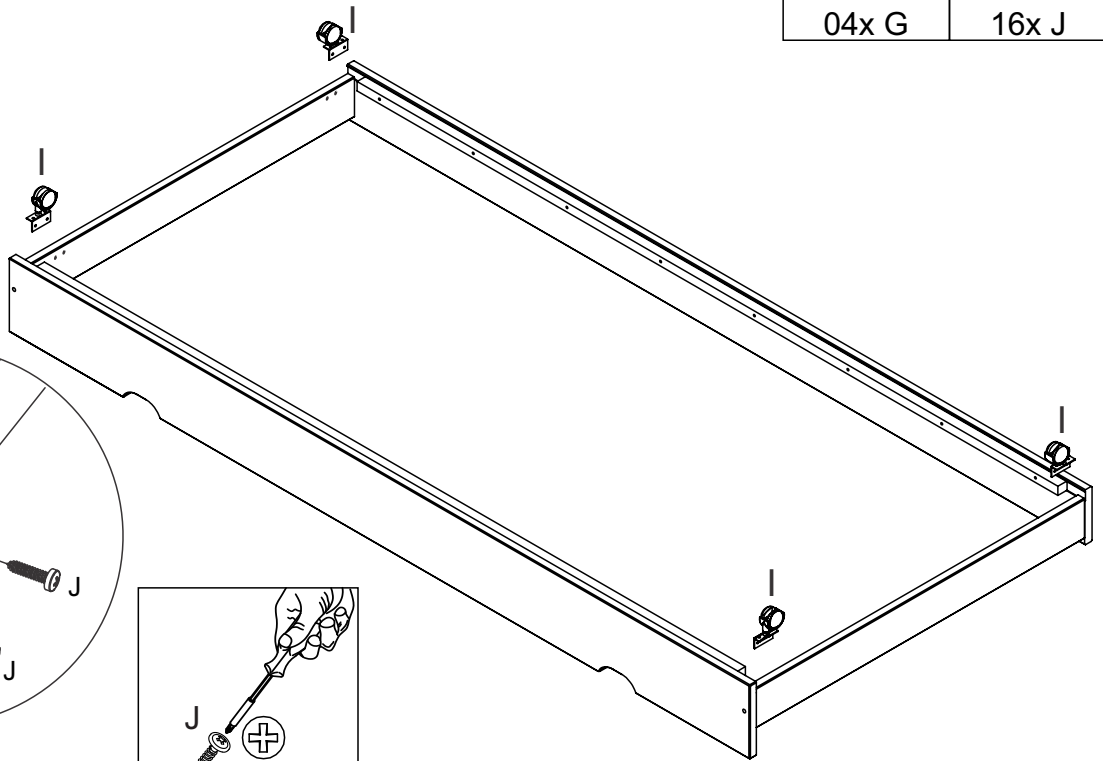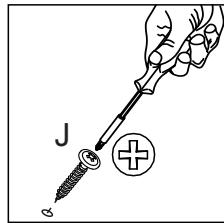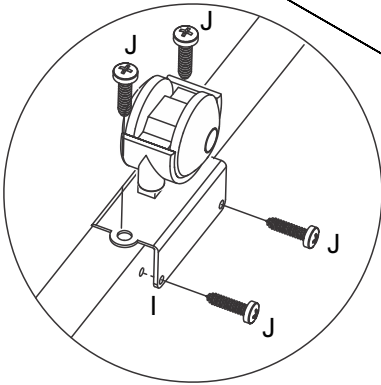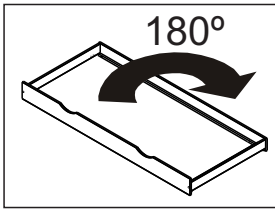3,5x16
16x J






8

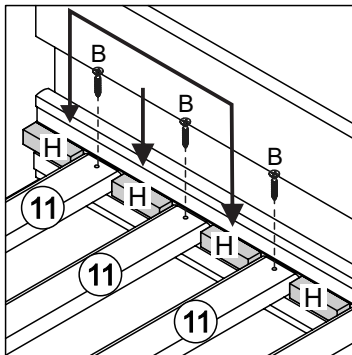4,0x30
56x B




2x H

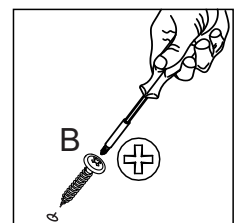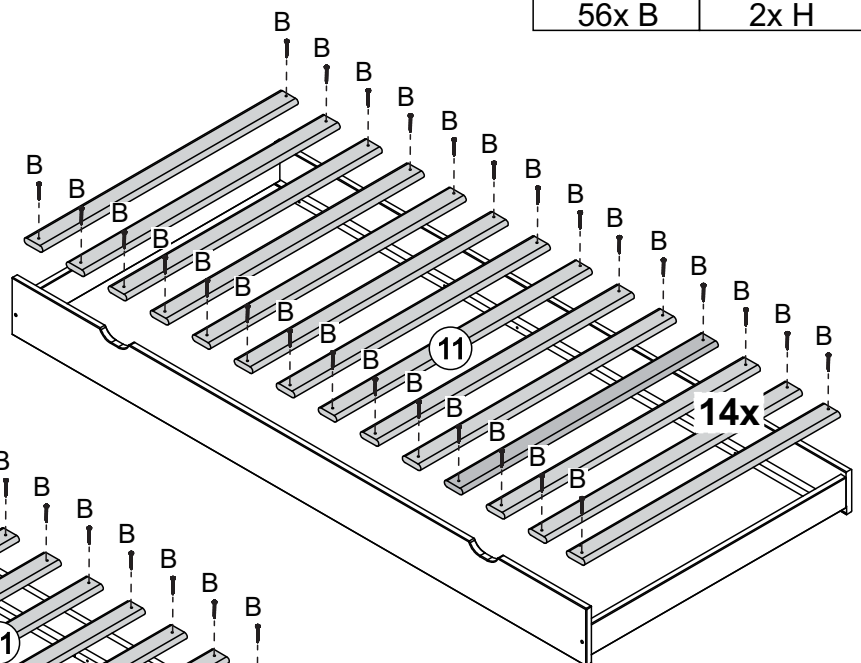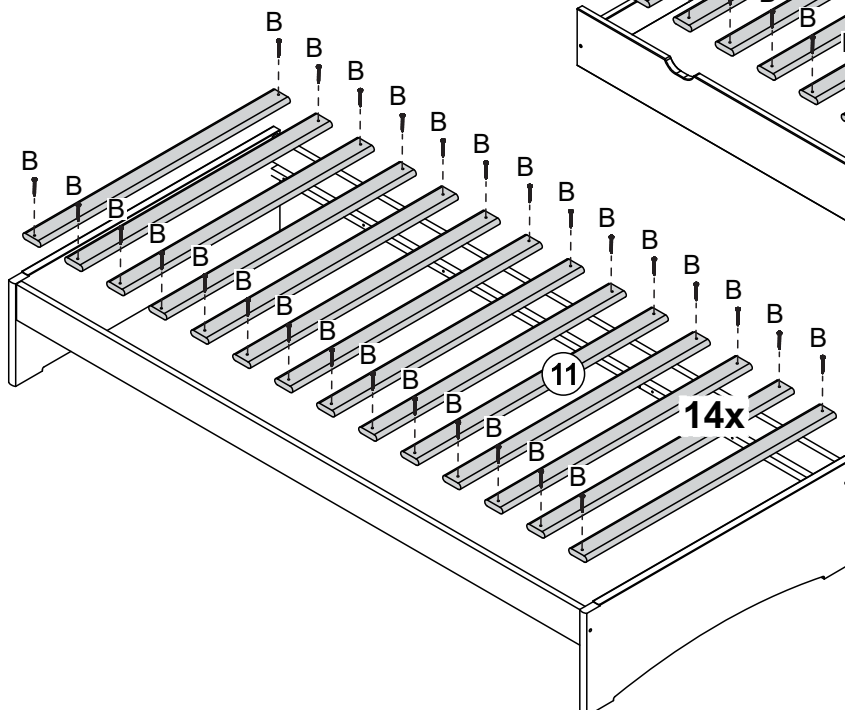







9

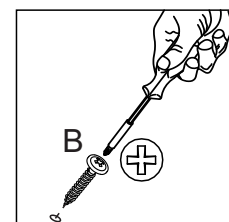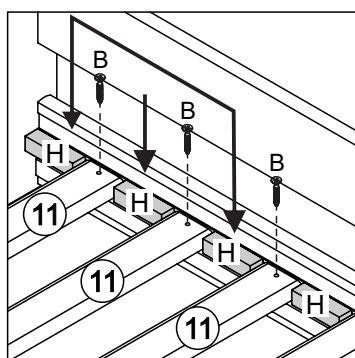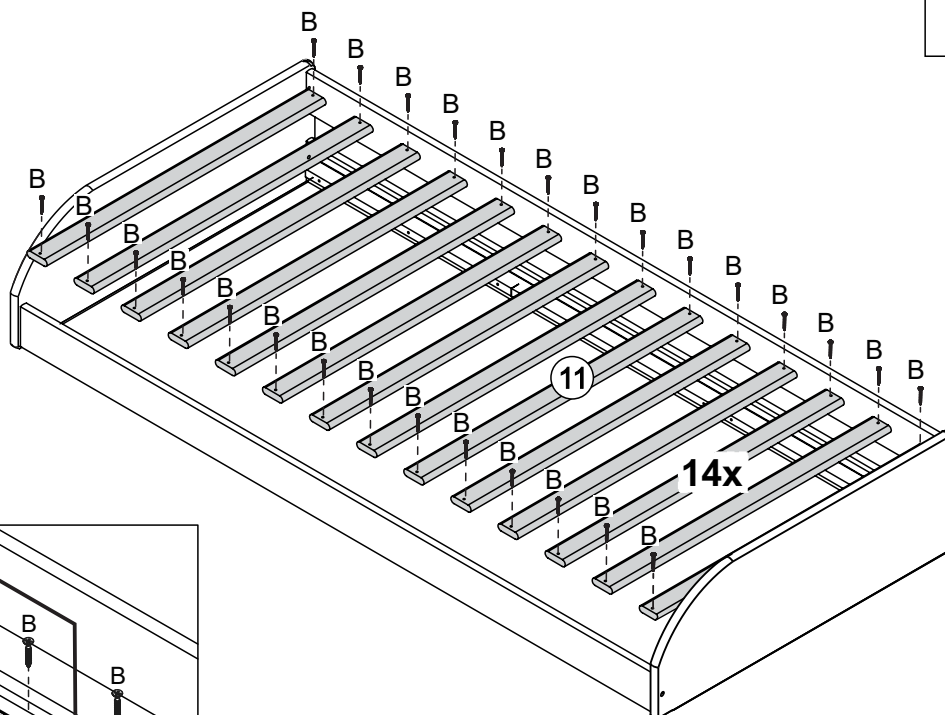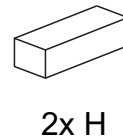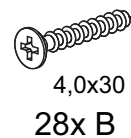




10

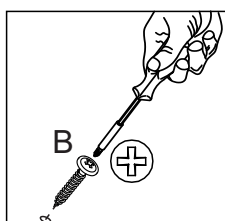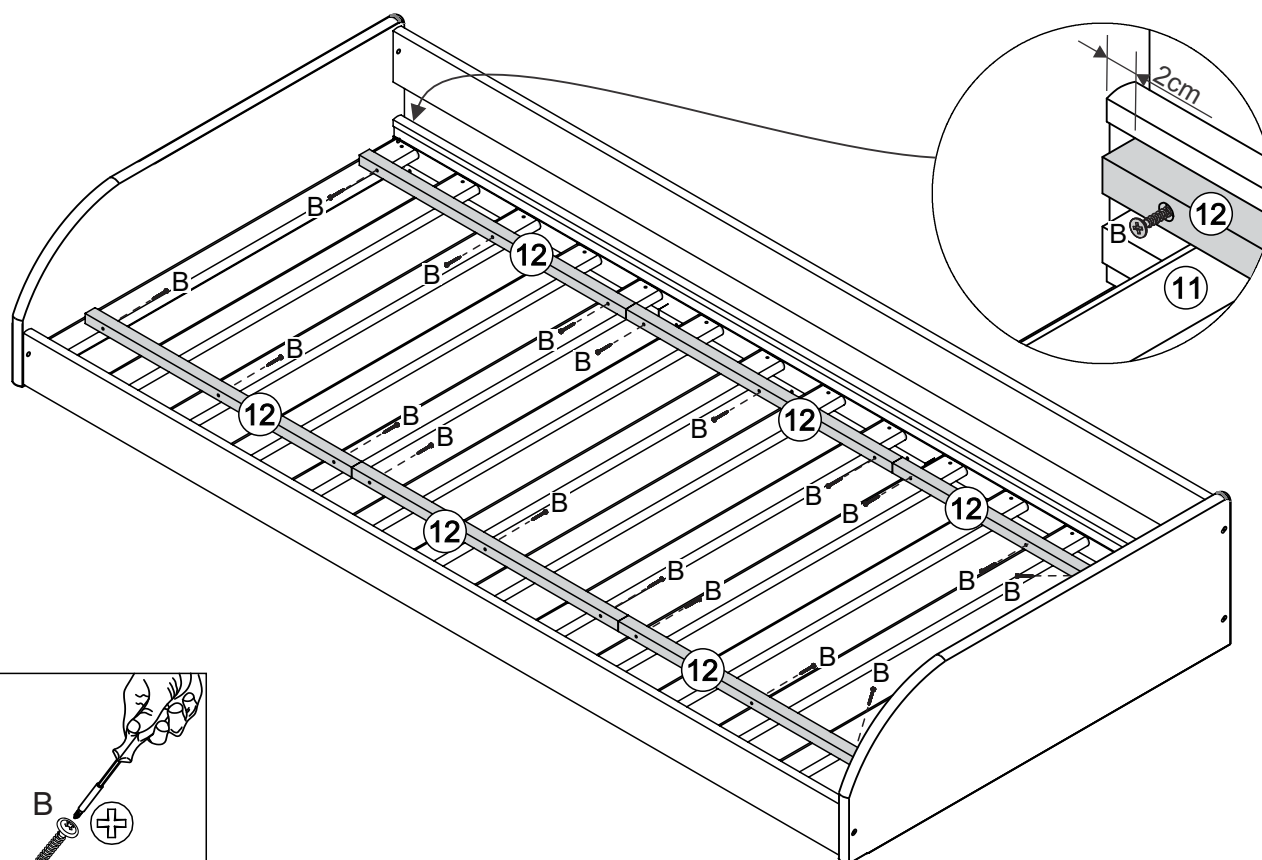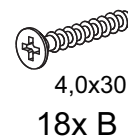



11

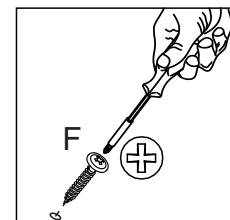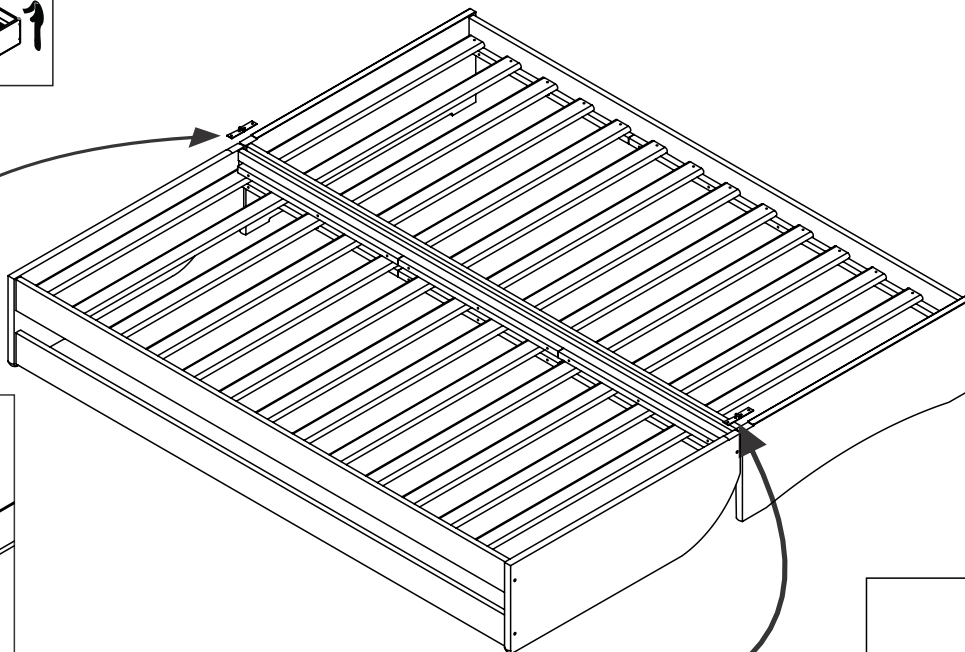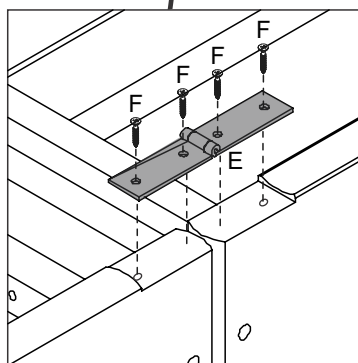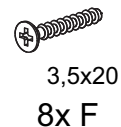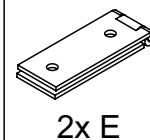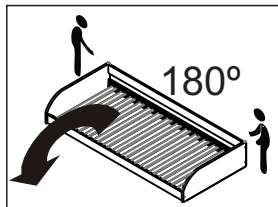

12

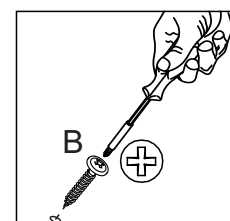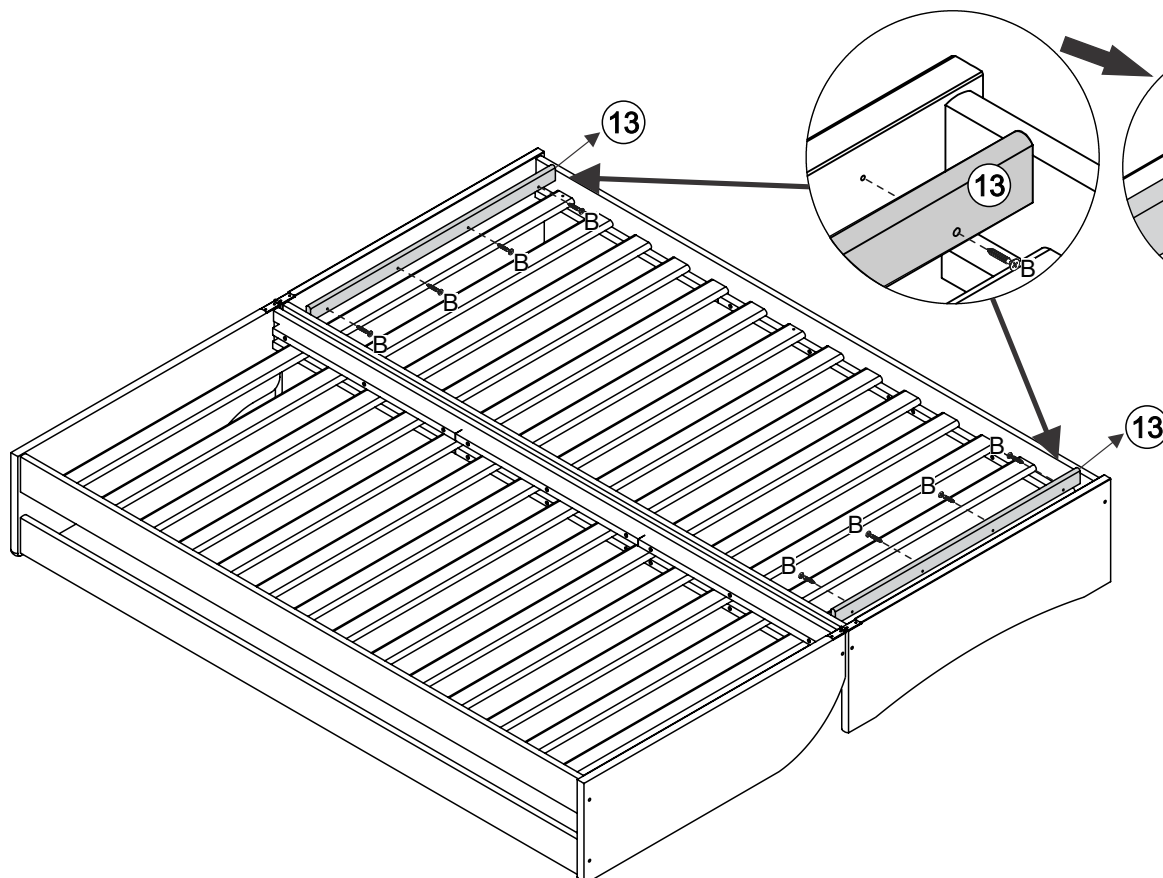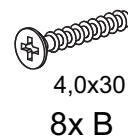

13

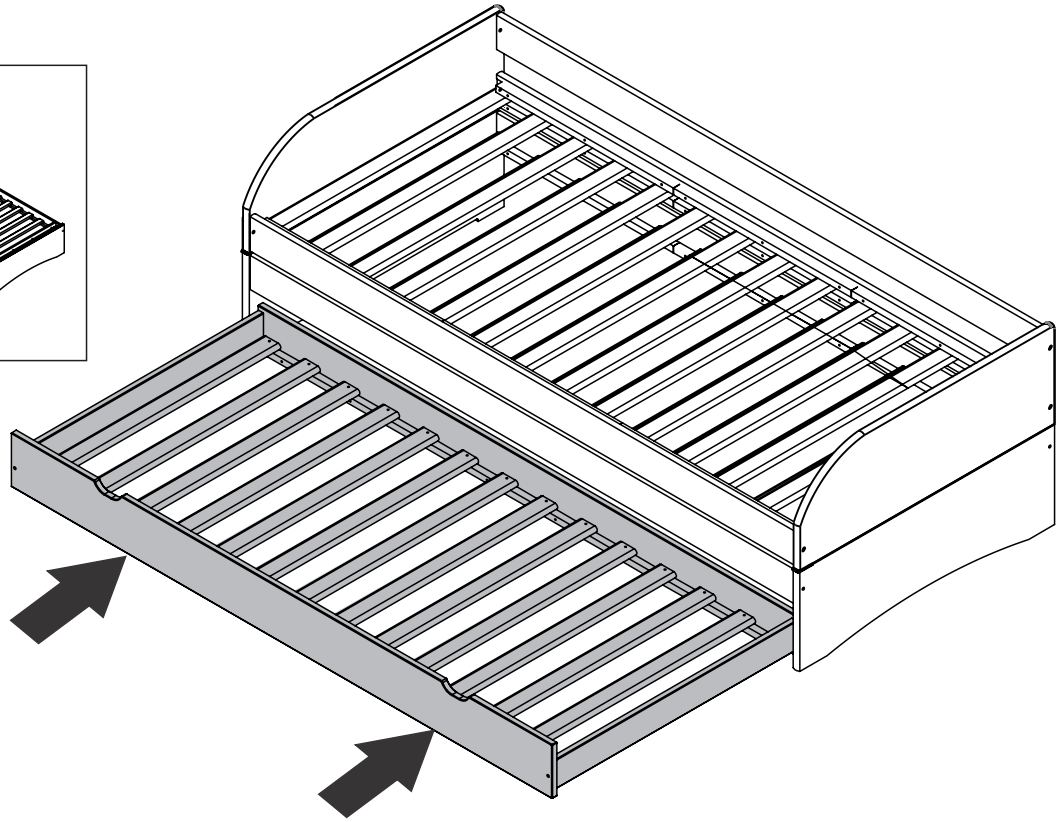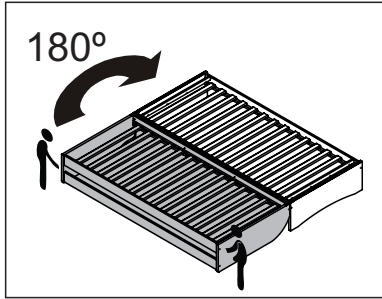

14

