

ROSELLA

STOLIK NOCNY

LEWY - SKROS06L / PRAWY - SKRO06P



(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatı

(GB) Assembly instructions








(IT) Istruzioni di montaggio

(PL) Instrukcja montażu

(SK) Návod na montáž


(RO) Instrucțiuni de montaj

(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

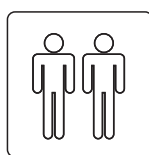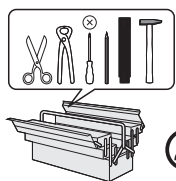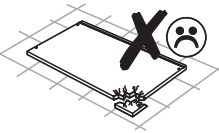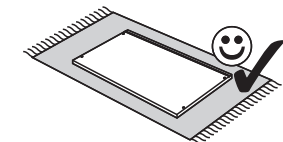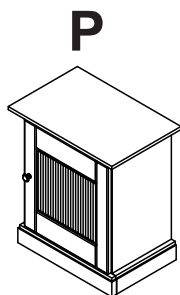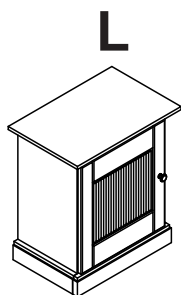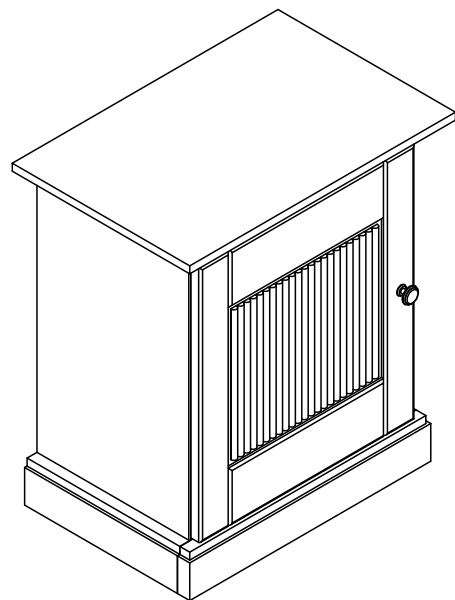

1 - 1,5

1



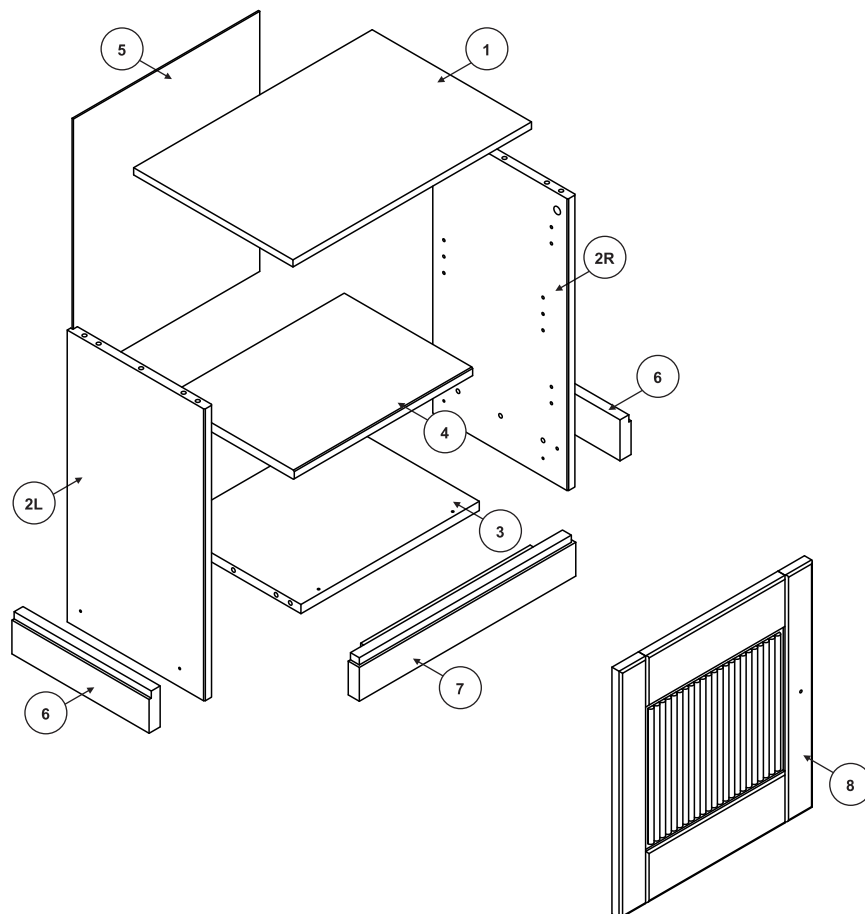


A	8x32	B	34mm	C	15x10	Y	5mm	PA		RA		NA	3,5x16
	x12		x8		x8		x4		x2		x2		x8
NB	3,5x35	NC	3,5x30	KK		YB	1x20	MF		YC	M4x25	O	
	x2		x4		x2		x40		x2		x1		x1





2





5

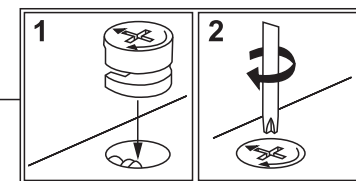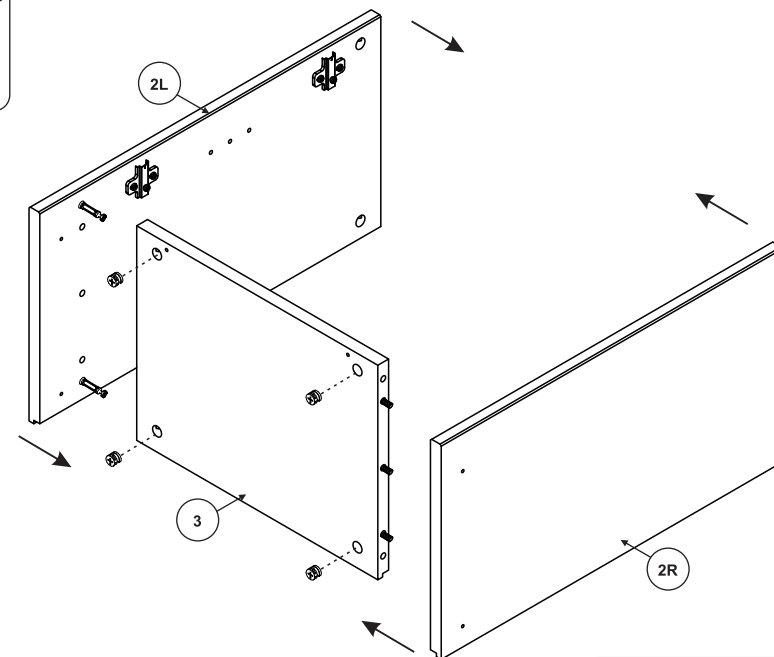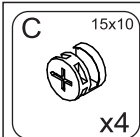



6

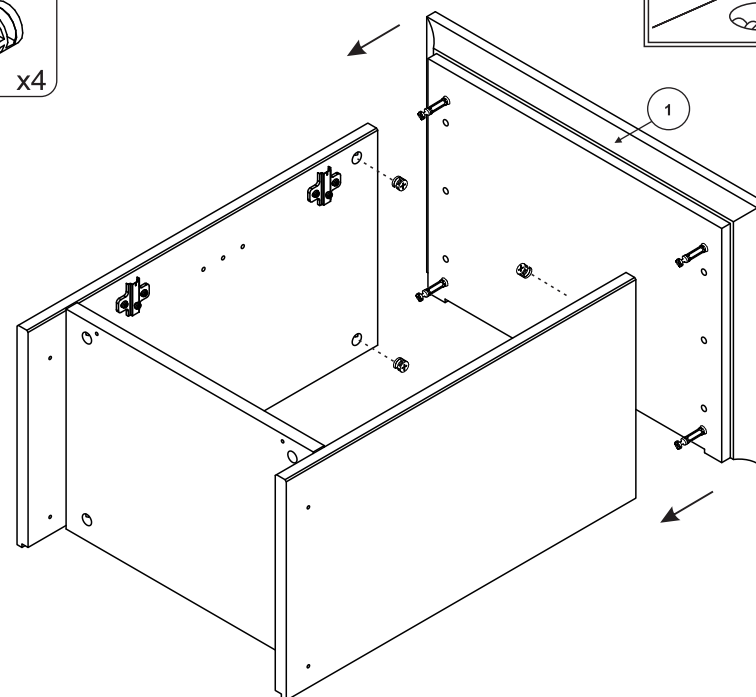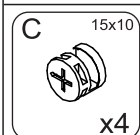

3

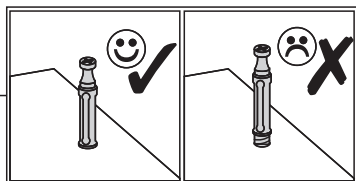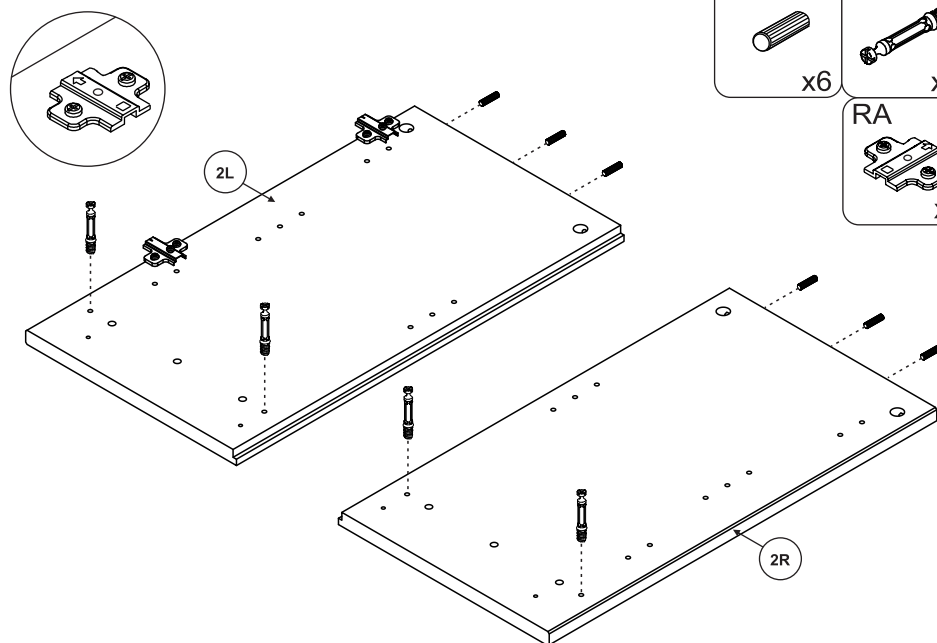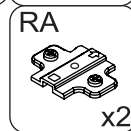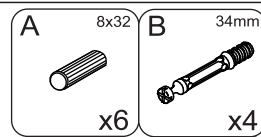


4

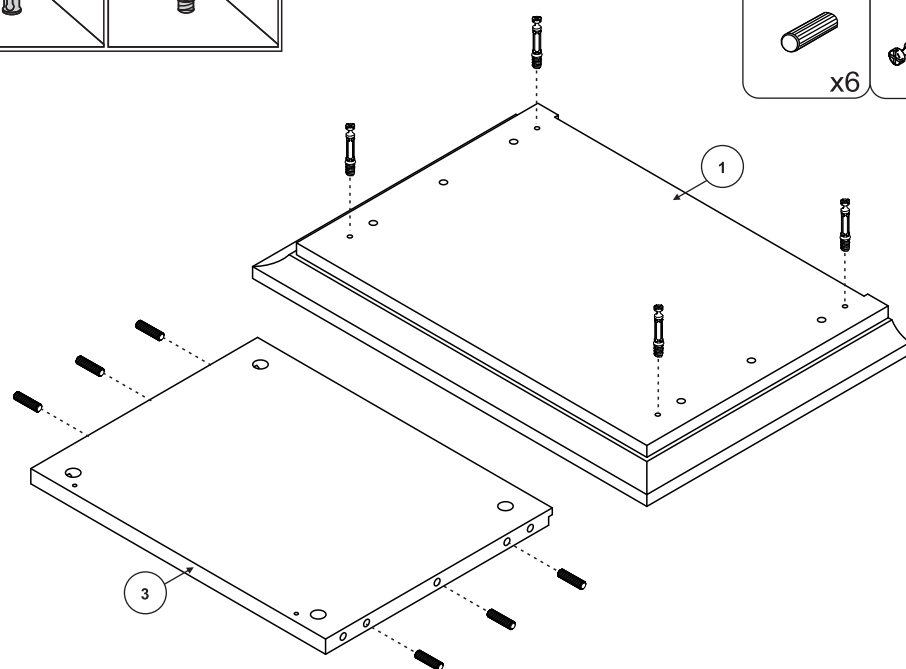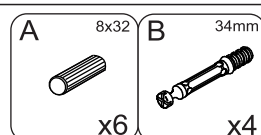


NC 3,5x30
x4

7

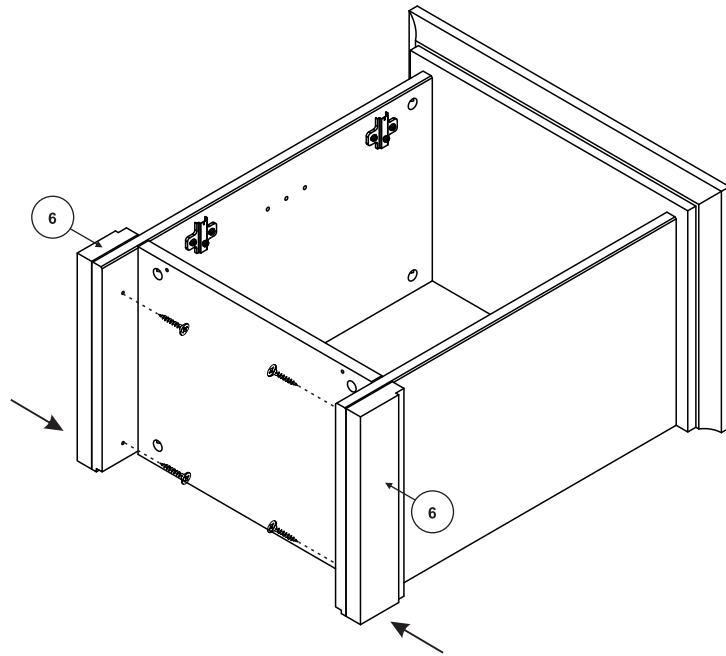


NB 3,5x35
x2

8

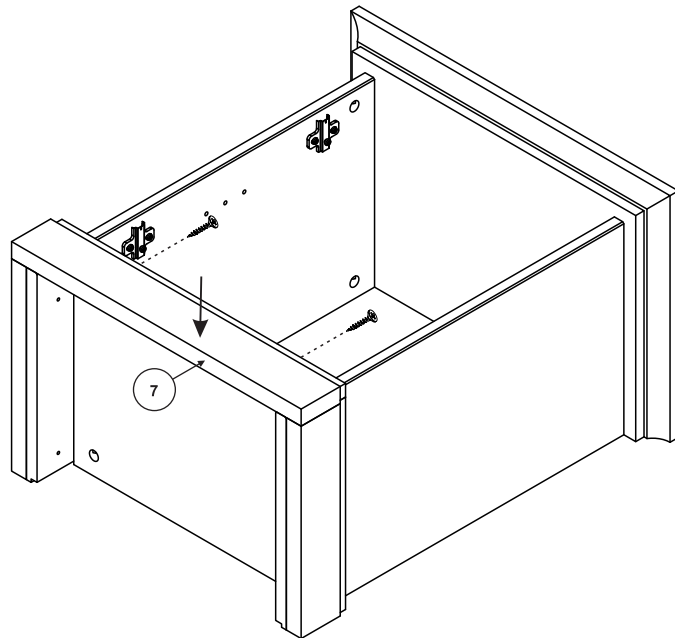


9

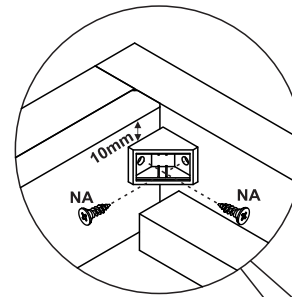




MF
x2


NA 3,5x16
x4

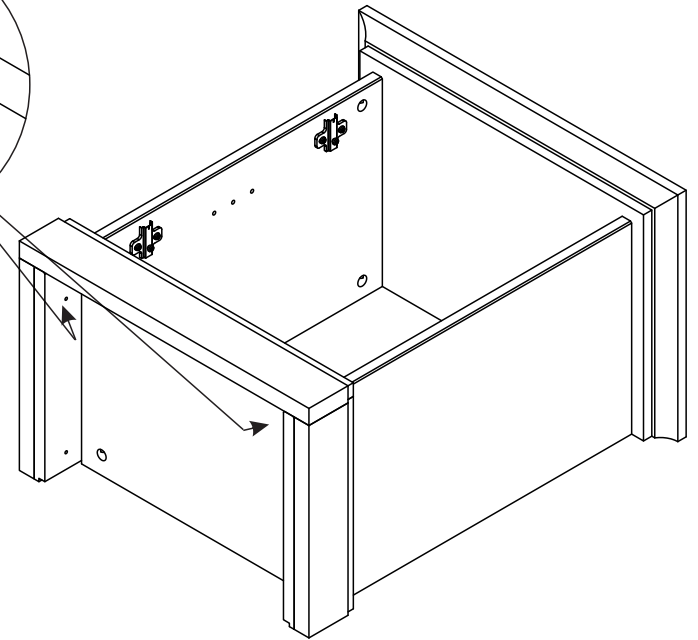

10

YB 1x20
x40

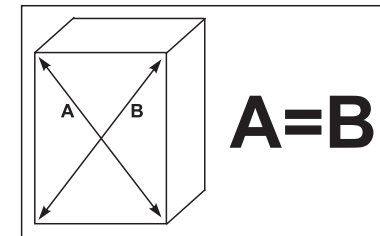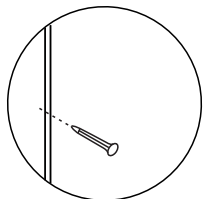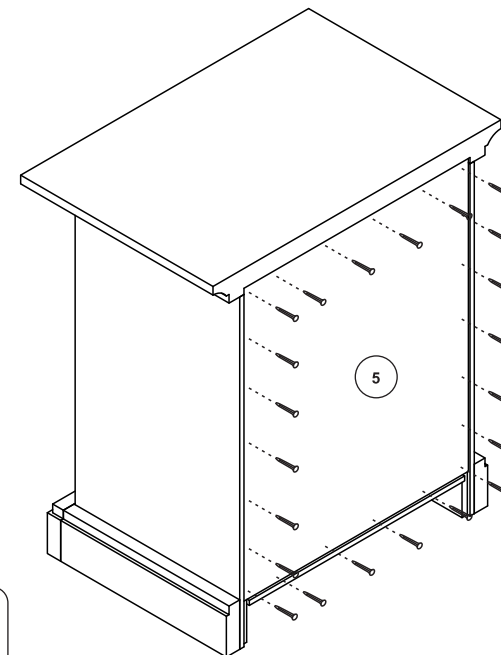


- | | |
|--|---|
| PA

x2 | NA 3,5x16

x4 |
| YC M4x25

x1 | O

x1 |




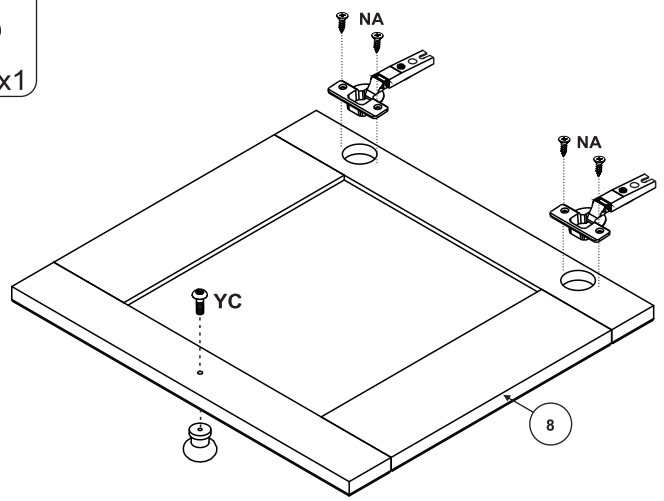
11



- | |
|---|
| Y 5mm

x4 |
|---|

12

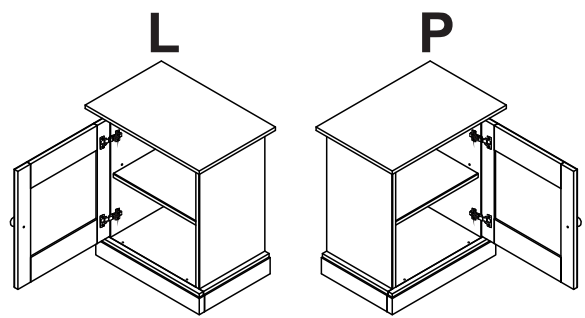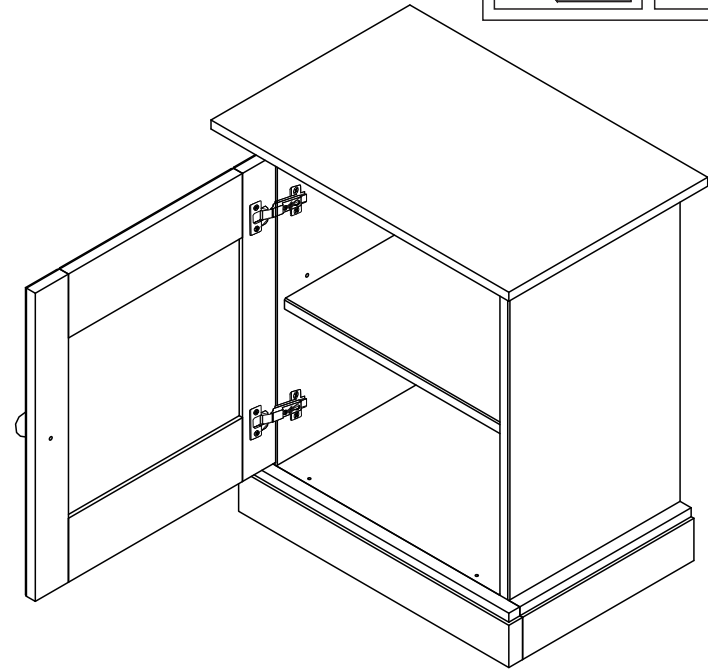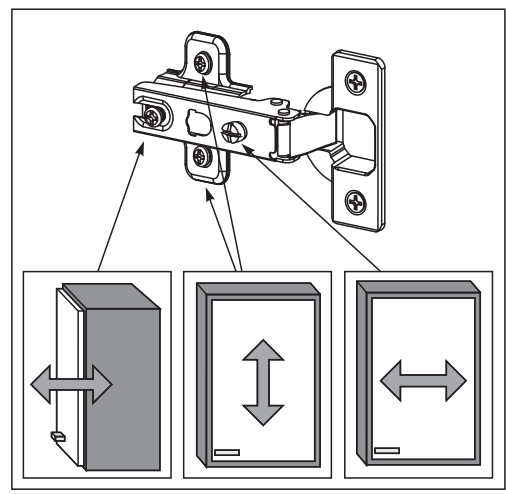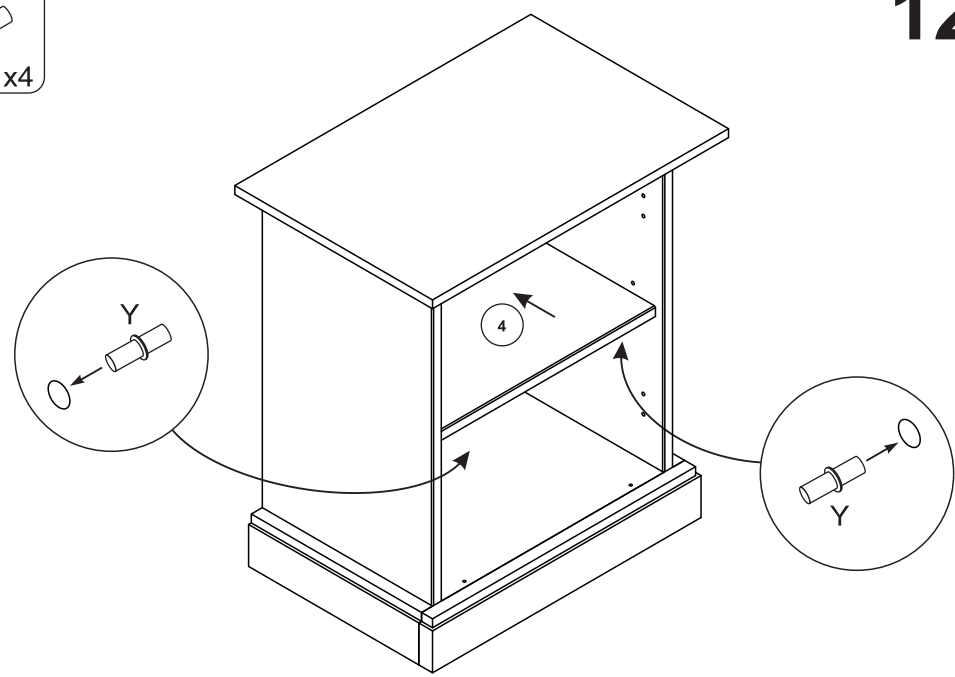

13