


2X	10 MIN			D AUFBAUANLEITUNG NL HANDLEIDING VOOR DE MONTAGE TR MONTAJ TALIMATI RO INSTRUCȚIUNI DE ASAMBLARE F INSTRUCTION D'ASSEMBLAGE CZ POKYNY K MONTÁŽI BG ИНСТРУКЦИИ ЗА МОНТАЖ HR NAPUTCI ZA MONTAŽU E INSTRUCCIONES DE MONTAJE	GB ASSEMBLY INSTRUCTIONS PL INSTRUKCJA MONTAŻU RU Инструкция по монтажу I PROCEDURA DI ASSEMBLAGGIO SK POKYNY K MONTÁŽI HU KÖZGYŰLÉS UTASÍTÁSOK SLO ASSEMBLY INSTRUCTIONS S MONTERINGSANVISNING LT DIEGIMO INSTRUKCIJOS
MODEL		“COLOSSEO”			

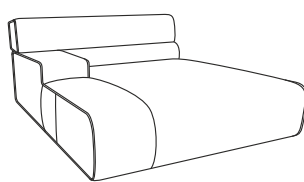


130kg

MAX



REC LI

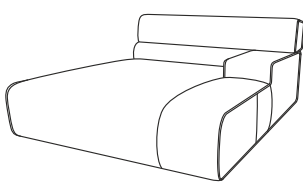

REC RE

1/2

A 65mm



6x

B




1x

C 25mm



1x

D



6x

HARDWARE BAG / SACHET MATÉRIEL / ZUBEHÖRBEUTEL / SACCHETTI MATERIALE / BOLSA DE MATERIALES / WOREK MATERIALOWY

0

10

20

30

40

50

60

70

80

90

100

110

120

130

140


150

160


170

180

1

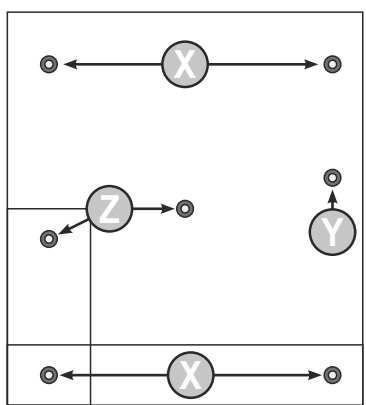


REC LI

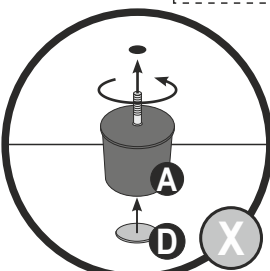

A


D

X

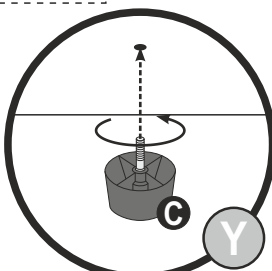


C

Y

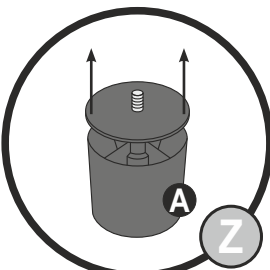

A

Z

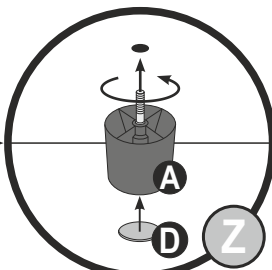


A


D

Z


REC RE

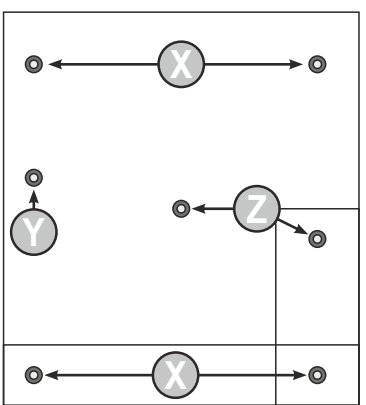


2

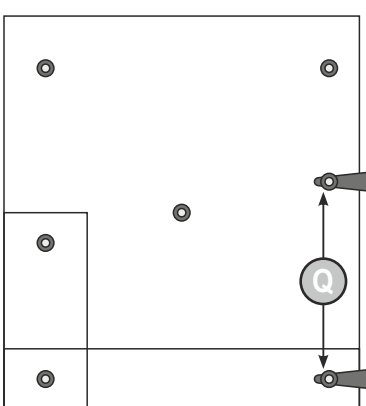

Q

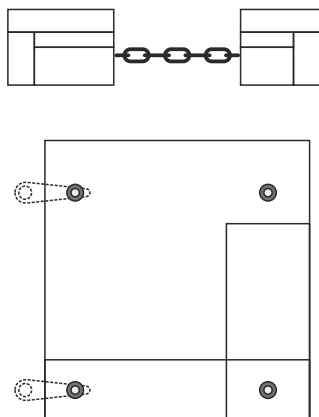

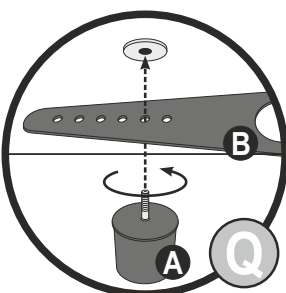



B

Q

A



3

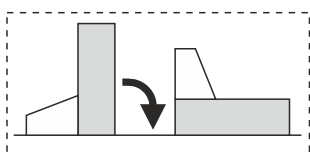

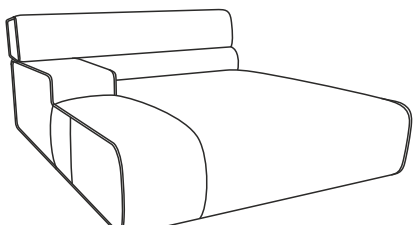

I03-14.06.24

2X	10 MIN		130kg MAX	(D) AUFBAUANLEITUNG (NL) HANDLEIDING VOOR DE MONTAGE (TR) MONTAJ TALIMATI (RO) INSTRUCTIUNI DE ASAMBLARE (F) INSTRUCTION D'ASSEMBLAGE (CZ) POKYNY K MONTÁŽI (BG) ИНСТРУКЦИИ ЗА МОНТАЖ (HR) NAPUTCI ZA MONTAŽU (E) INSTRUCCIONES DE MONTAJE	(GB) ASSEMBLY INSTRUCTIONS (PL) INSTRUKCJA MONTAŻU (RU) Инструкция по монтажу (I) PROCEDURA DI ASSEMBLAGGIO (SK) POKYNY K MONTÁŽI (HU) KÖZGYŰLÉS UTASÍTÁSOK (SLO) ASSEMBLY INSTRUCTIONS (S) MONTERINGSANVISNING (LT) DIEGIMO INSTRUKCIJOS
MODEL "COLOSSEO"					

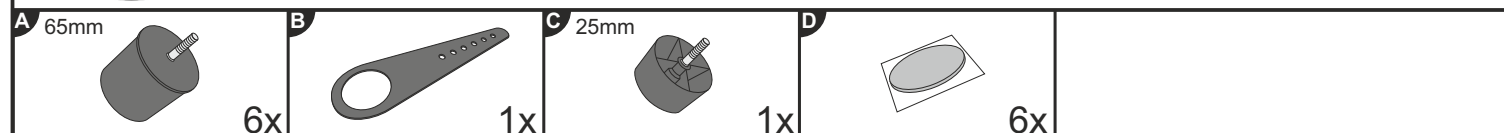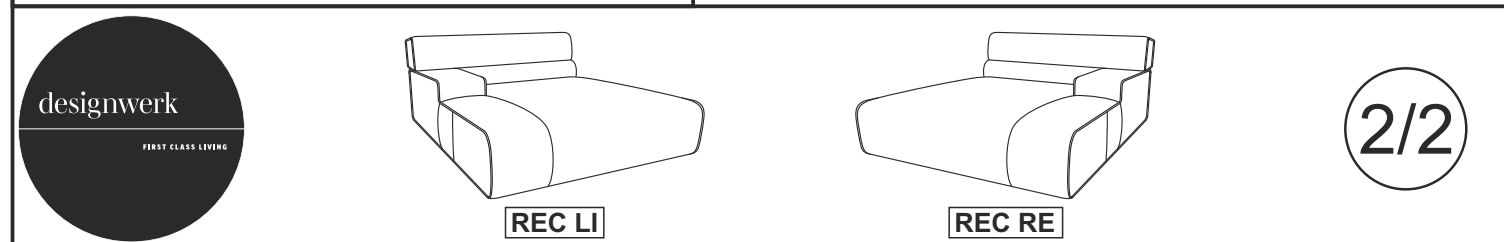

HARDWARE BAG / SACHET MATÉRIEL / ZUBEHÖRBEUTEL / SACCHETTI MATERIALE / BOLSA DE MATERIALES / WOREK MATERIALOWY

