



ASSEMBLY INSTRUCTION

23280039-01


ambia. GARDEN

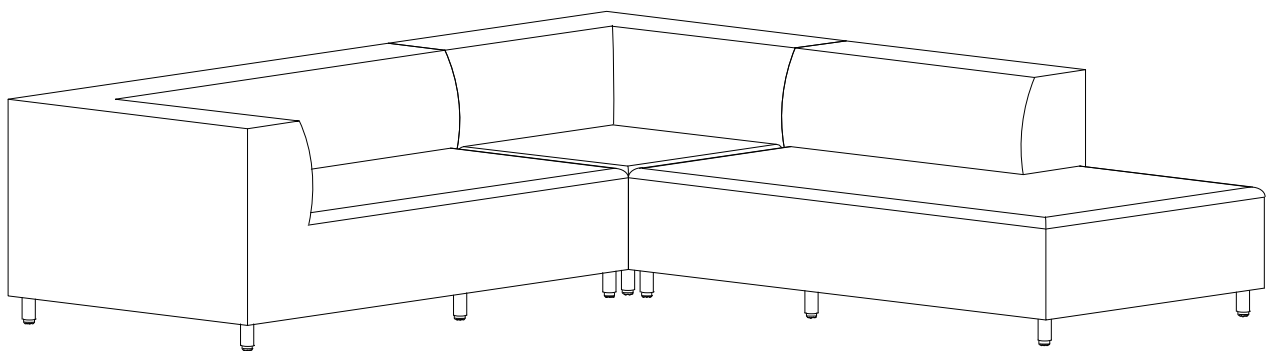


XXXLutz KG
Roemerstrasse 39
AT-4600 Wels
Germany

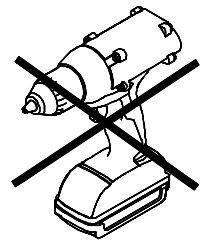


A x 1

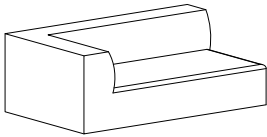


B x 1

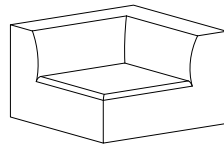


C x 1

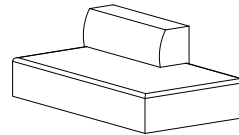




D x 16




E x 4

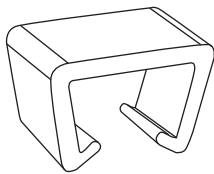


1

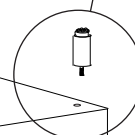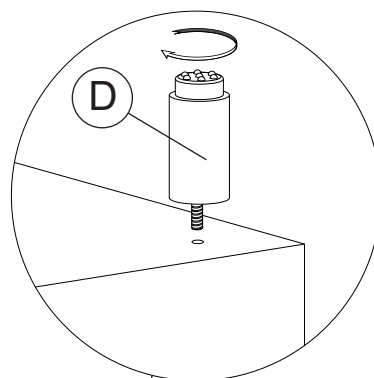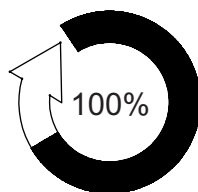

A

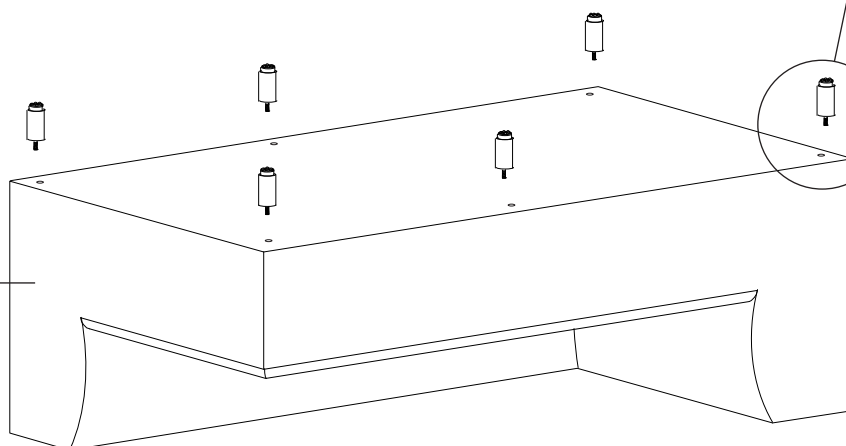


2

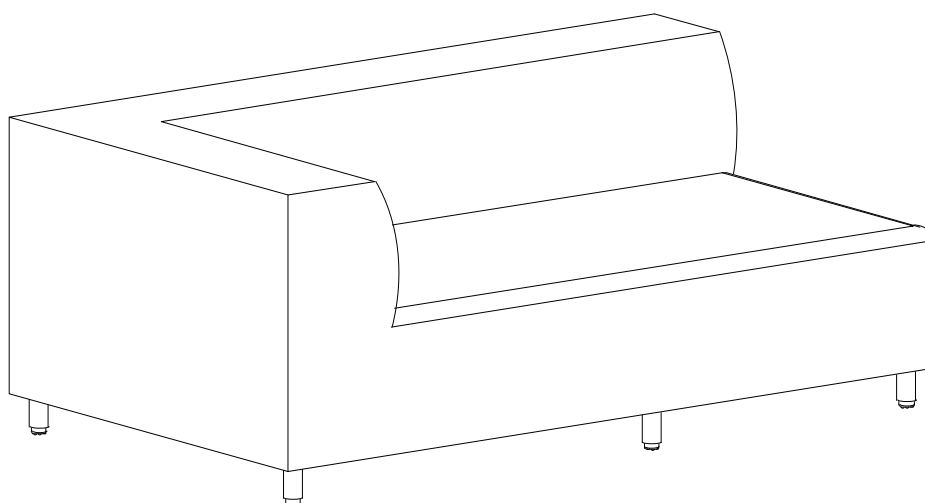


IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.

3

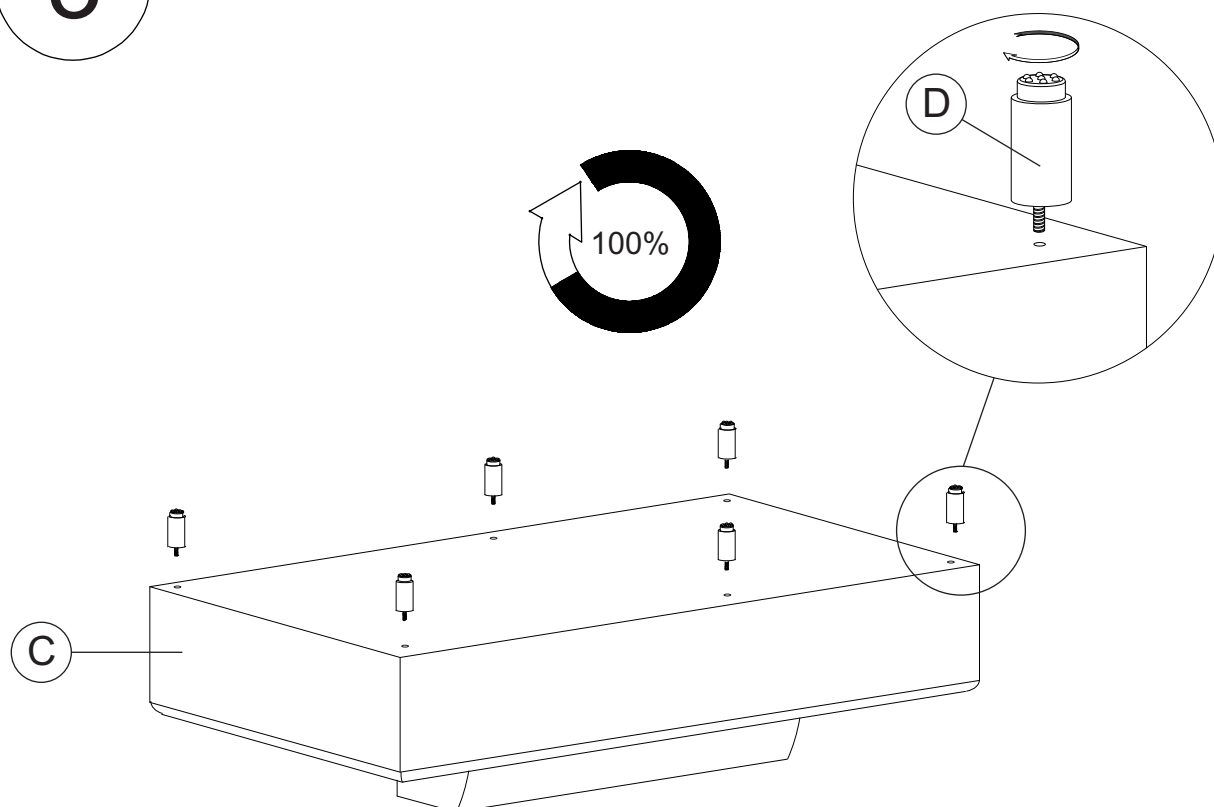


4

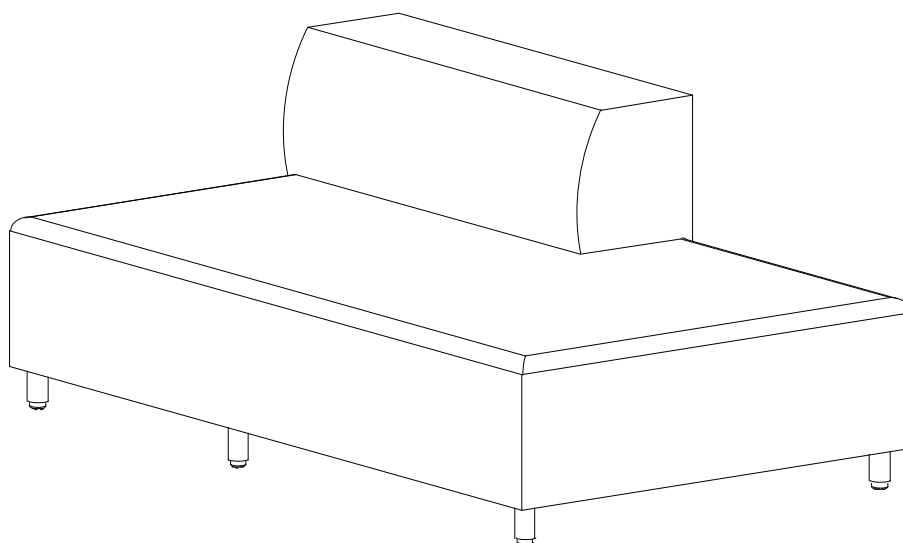


IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.

5

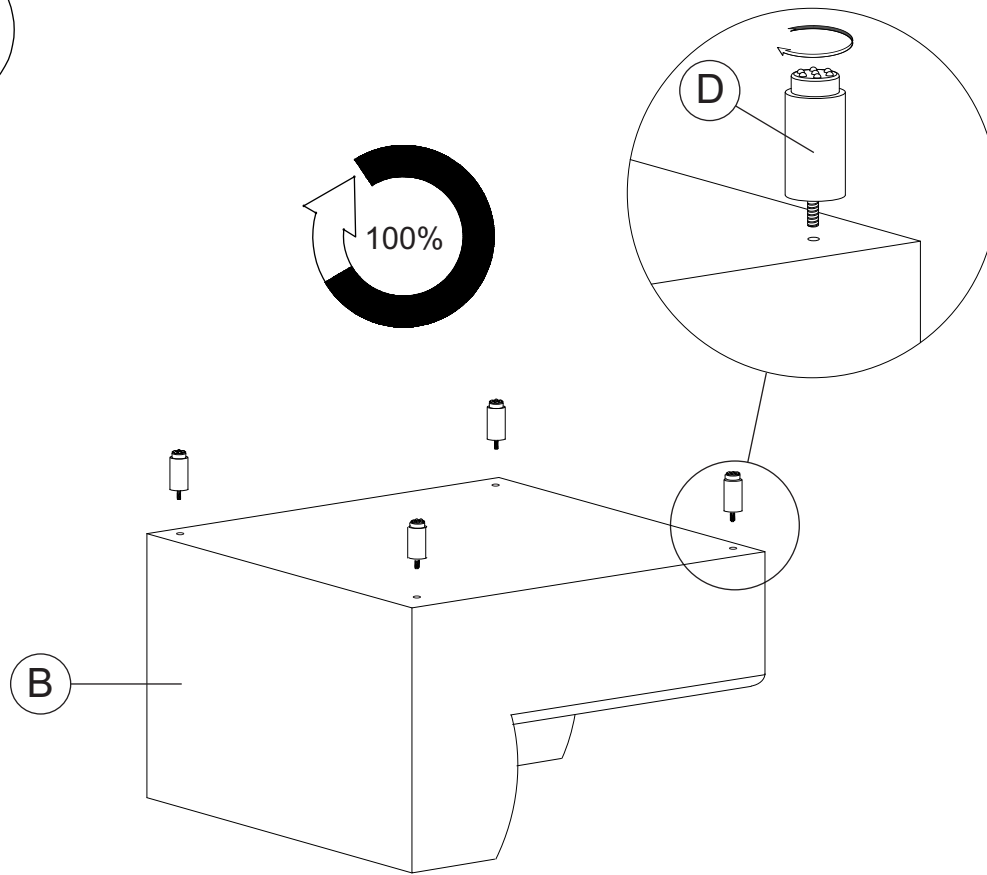


6

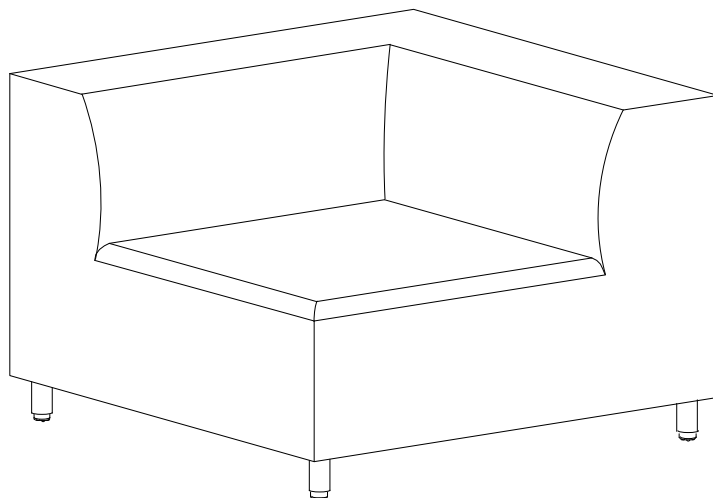


IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.

7

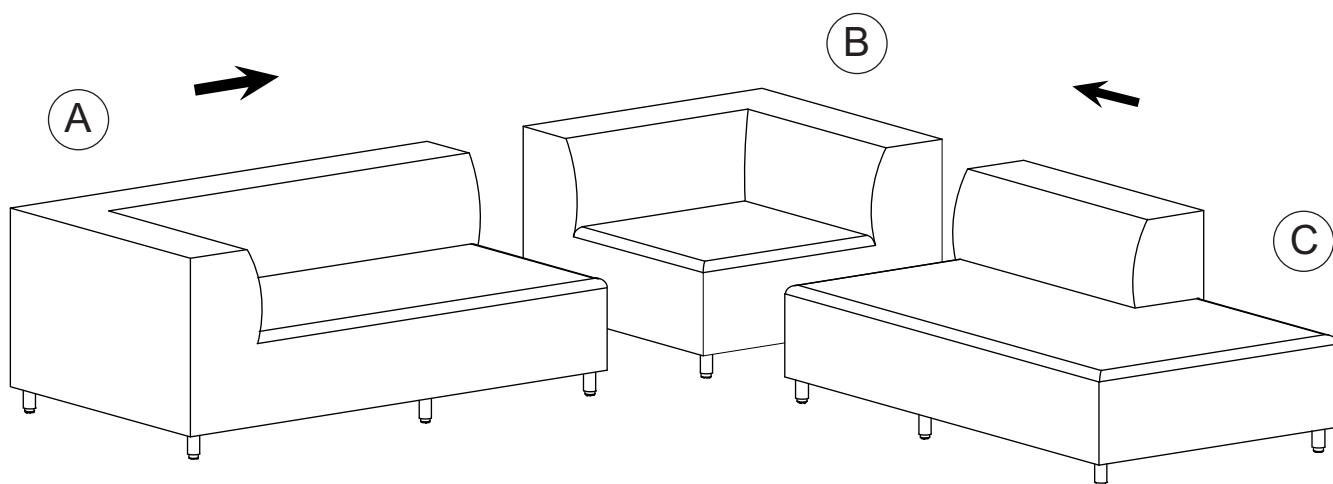

8

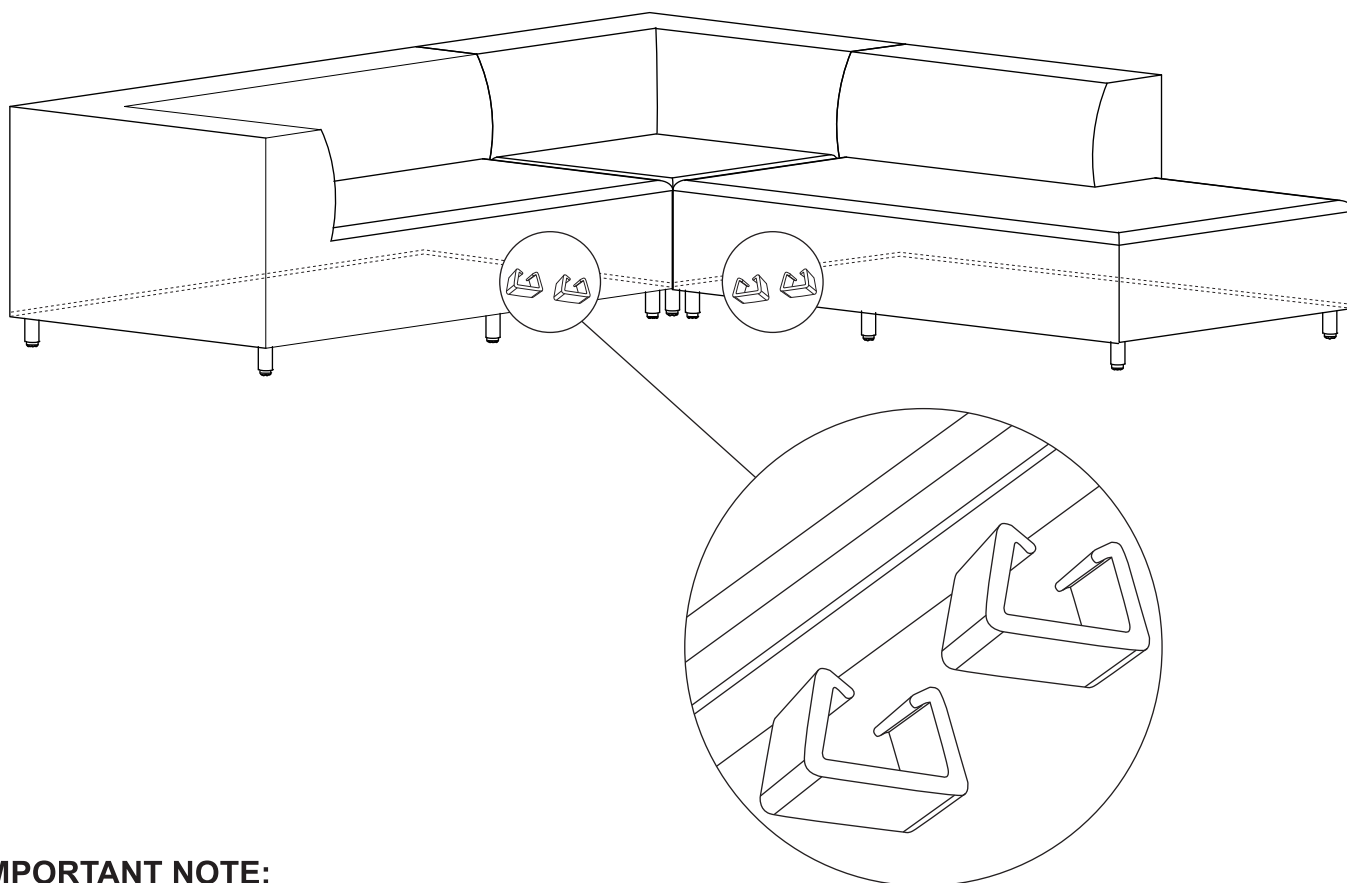

IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.

ILONA (23280039-01)
Garden ambia
XXXLutz KG
Roemerstrasse 39
AT-4600 Wels
Germany
Info@xxxlutz.at

