


SERVICEKARTE /SERVICECARD

Modellname/Modelname:
BETT/BED 0868

Ausführung/Finishing:


Wildeiche geölt
Wild oak oiled

140x200

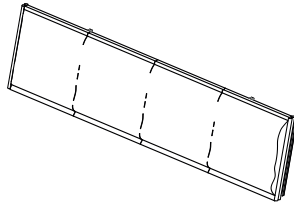


1017029

160x200

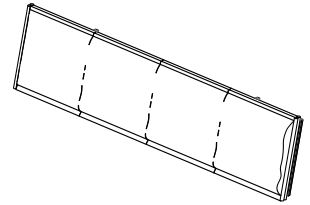


1017032

180x200

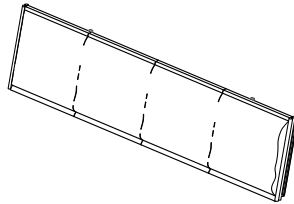


1017033

200x200

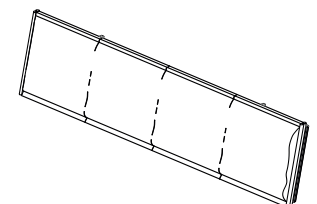

1017034

71306

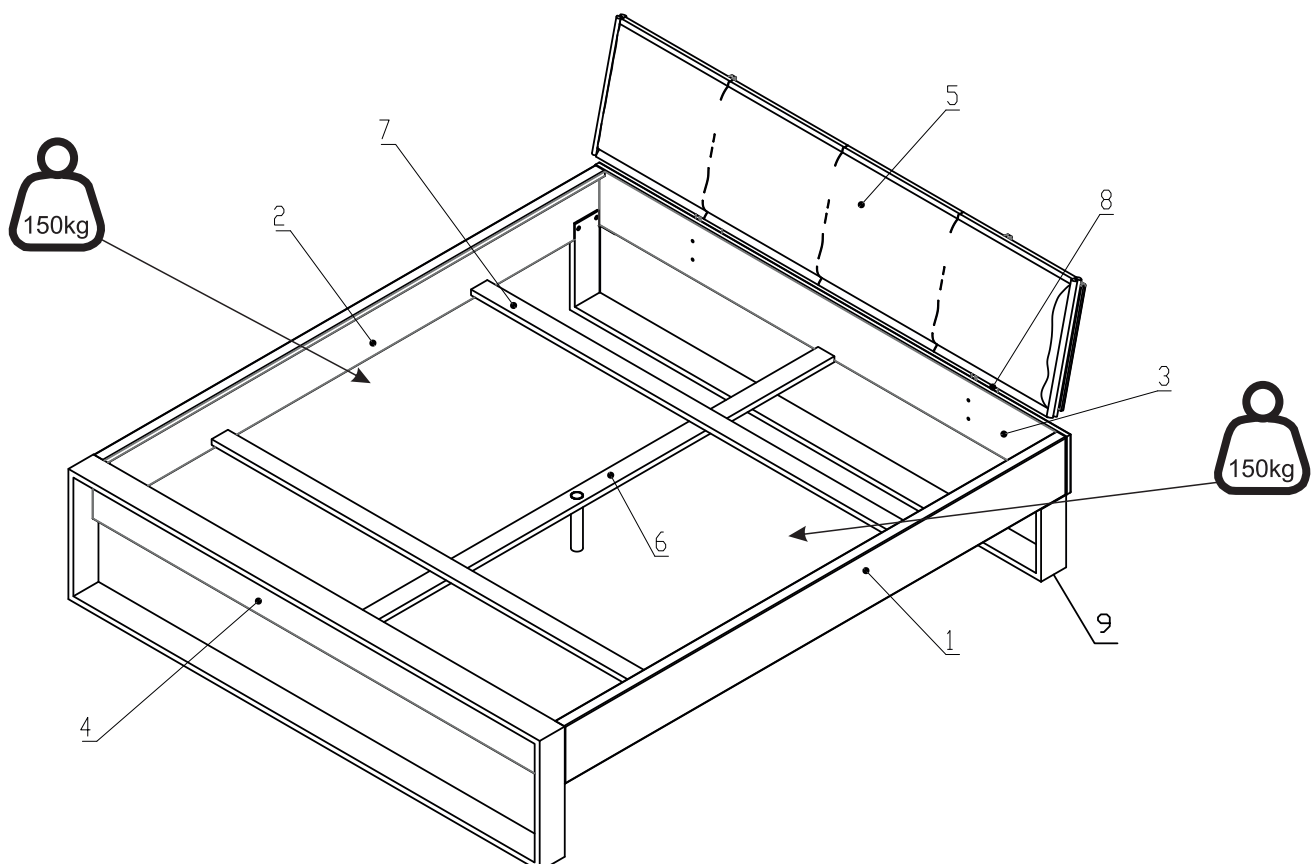

DE: Sehr geehrter Kunde, Sehr geehrte Kundin!

Fehlt Ihnen ein Beschlagteil oder ist es Defekt? Kein Problem! Nutzen Sie unsere Servicekarte!

Unser Direkt-Bestellservice für fehlende/defekte Beschlagteile:

Kontaktieren Sie uns telefonisch unter Tel. +499503/5033-114 oder senden Sie uns eine E-Mail an kundendienst@3s-frankenmoebel.de.

Bitte geben Sie dabei folgende Pflicht-Informationen an: -> Auftragsnummer, Artikelnummer, Nummer des Beschlagteils, fehlende/defekte Menge, und den Grund der Beanstandung, ob es sich um ein defektes oder fehlendes Beschlagteil handelt. Tragen Sie die benötigte Menge ein. Mailen Sie uns die vollständig ausgefüllte Servicekarte zu, um die Bearbeitung zu ermöglichen. Für andere Beanstandungen / Beschädigungen an Ihrem Möbelstück wenden Sie sich bitte direkt an Ihr Möbelhaus.

EN: Dear customer!

Are you missing a fitting part or is it defective? No problem! Use our service card!












Our direct ordering service for missing/defective fitting parts:

Contact us by telephone on +499503/5033-114 or send us an e-mail to kundendienst@3s-frankenmoebel.de.

Please include the following mandatory information: -> Order number, article number, number of the fitting part, missing/defective quantity, and the reason for the complaint, whether it is a defective or missing fitting part. Enter the required quantity.

Mail us the completed service card to enable processing.







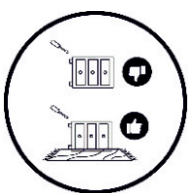

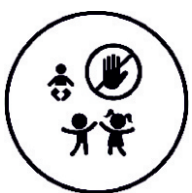

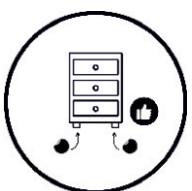

For other complaints/damage to your furniture, please contact your furniture store directly.

 6x15 Ax8	 M6x40 Bx4	 10x40 Cx4	 M6x65 Dx4	 M6,3x60 Ex4	 Fx6	 Gx6	 Hx1	 Ix2
 3,5x16 Jx42	 Sw4							

Grund der Beanstandung/Reason for complaint.

Name/Name:.....Telefon/Phone:.....

PLZ/Postal code.....Ort/ Place.....Hause-Nr/House-Nr.:.....

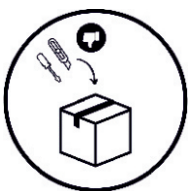


MONTAGE ANLEITUNG - ASSEMBLY INSTRUCTIONS







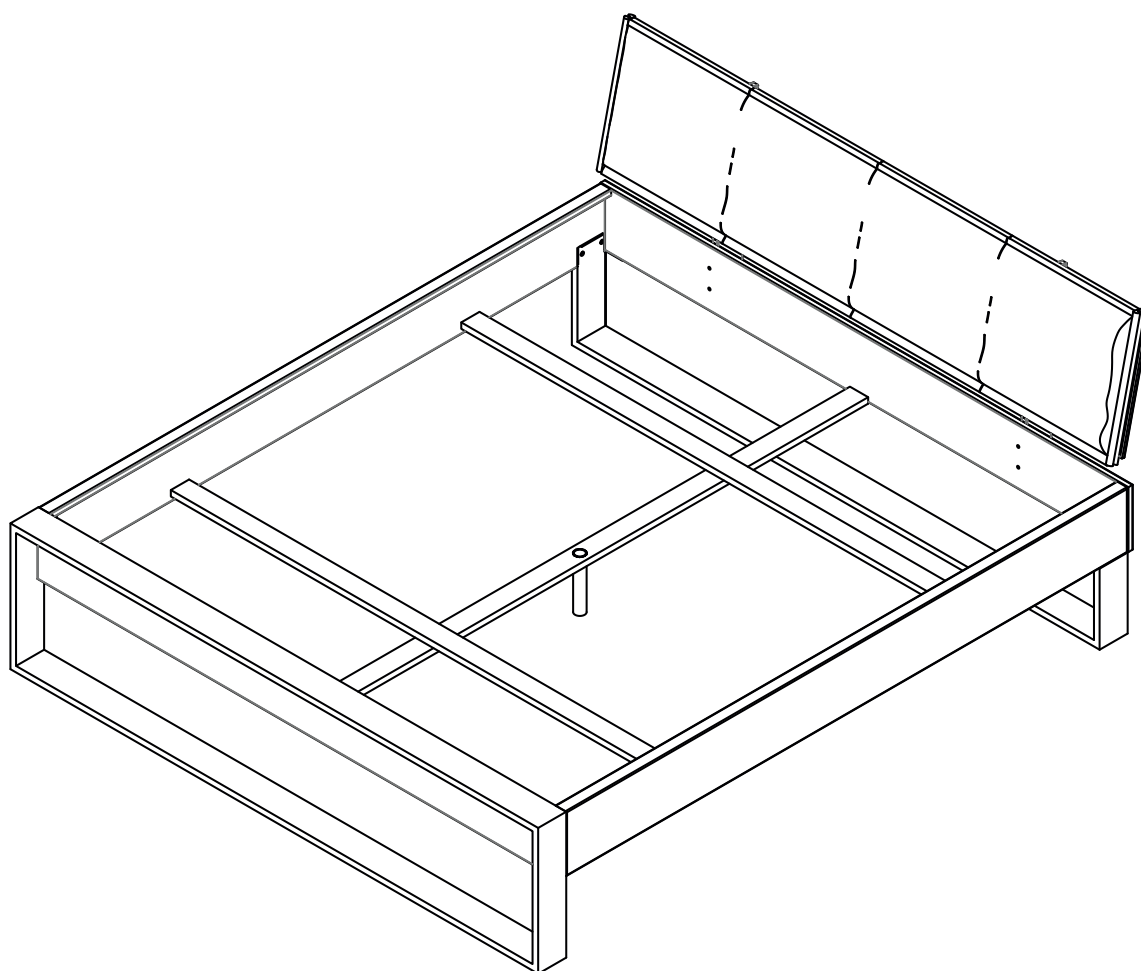




BETT 0868

BED 0868





40 Minutes



6x15  Ax8	M6x40  Bx4	10x40  Cx4	M6x65  Dx4	M6,3x60  Ex4	 Fx6	 Gx6	 Hx1	 Ix2
3,5x16  Jx42	Sw4 							

DETAIL A



1.

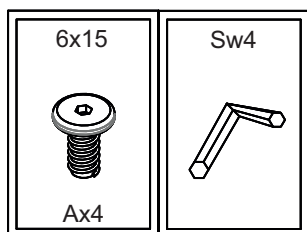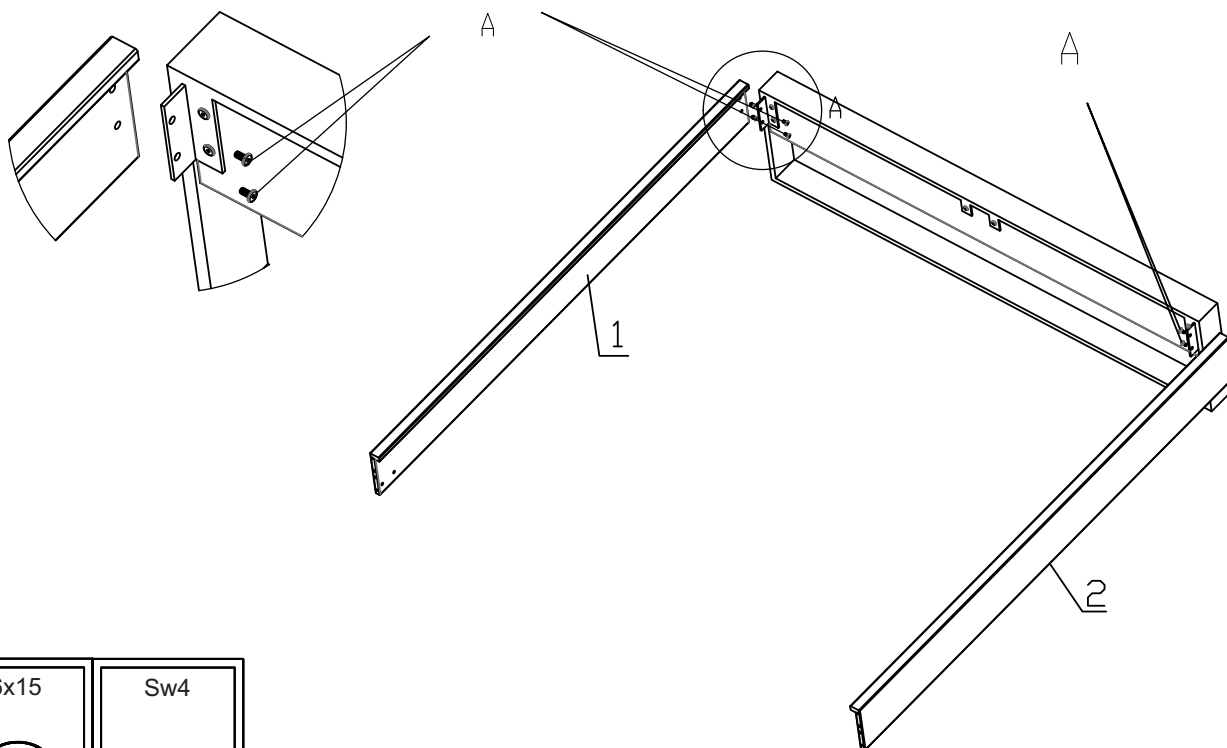



2.





DETAIL A

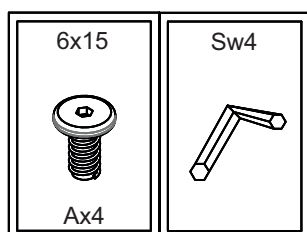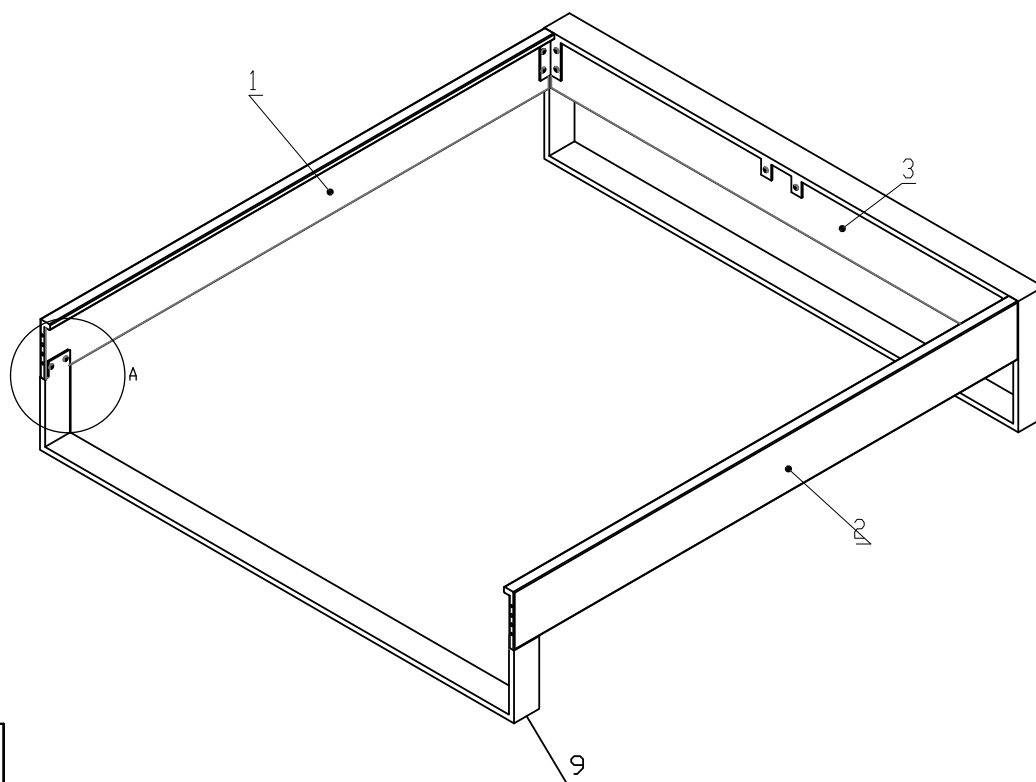



3.

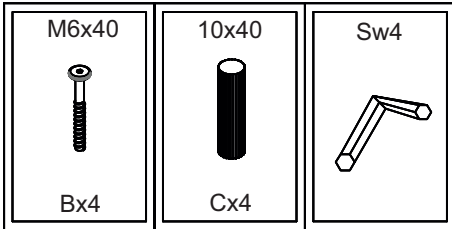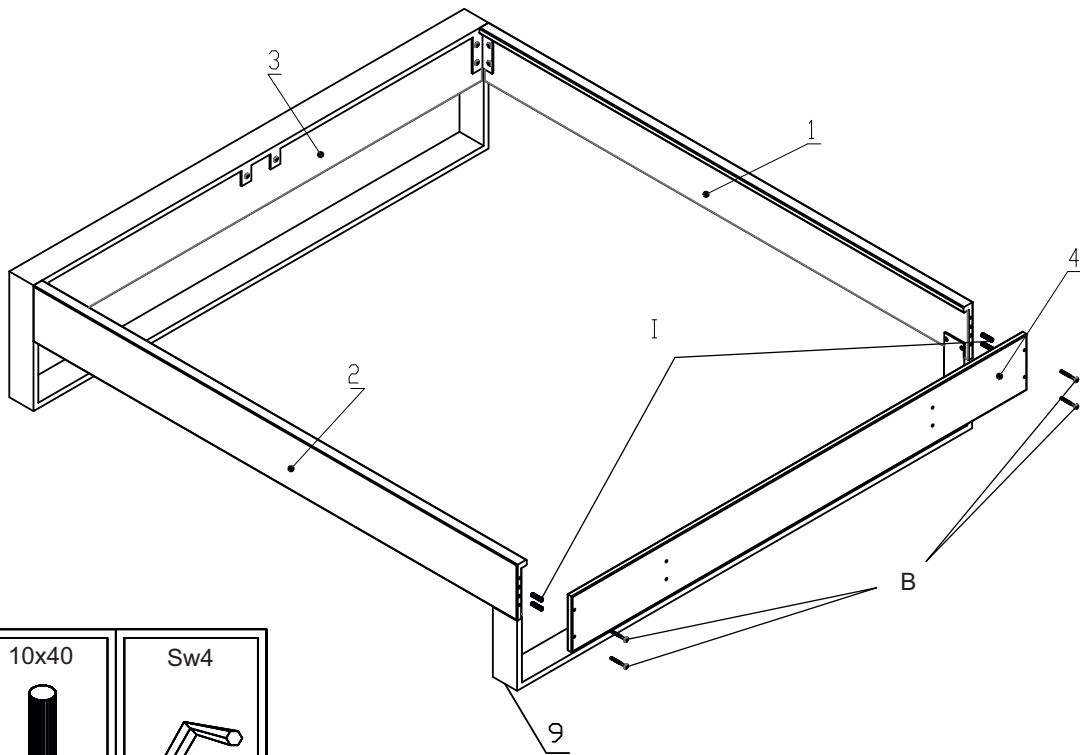




4.

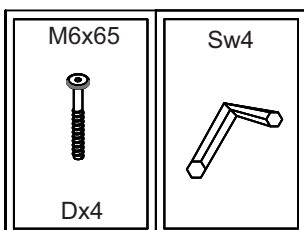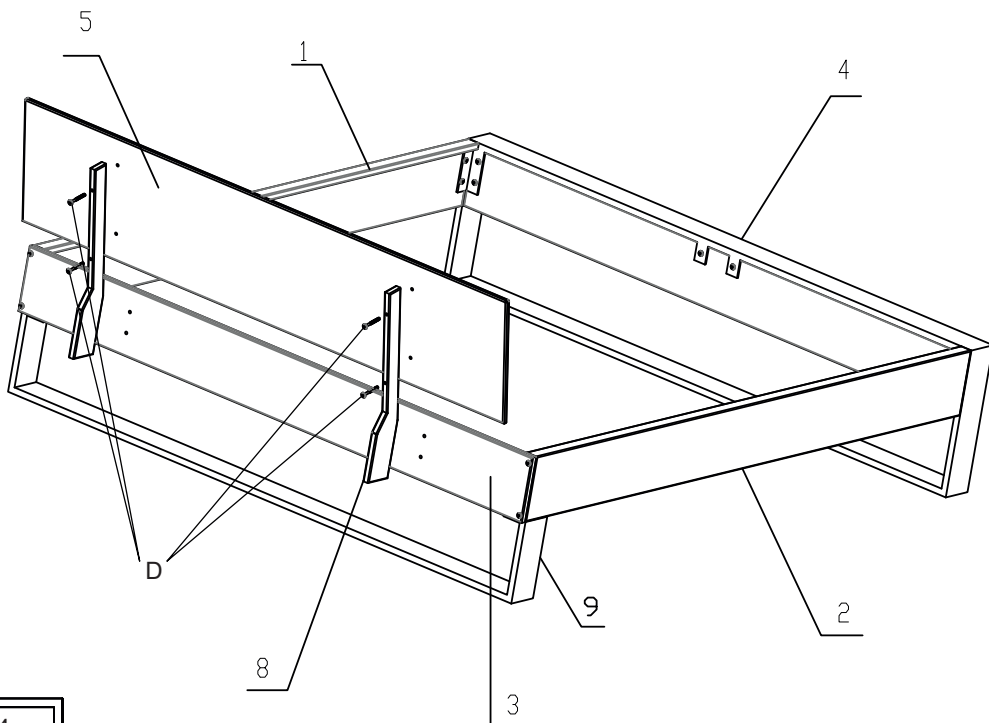


5.

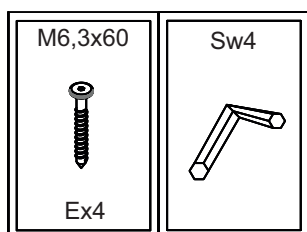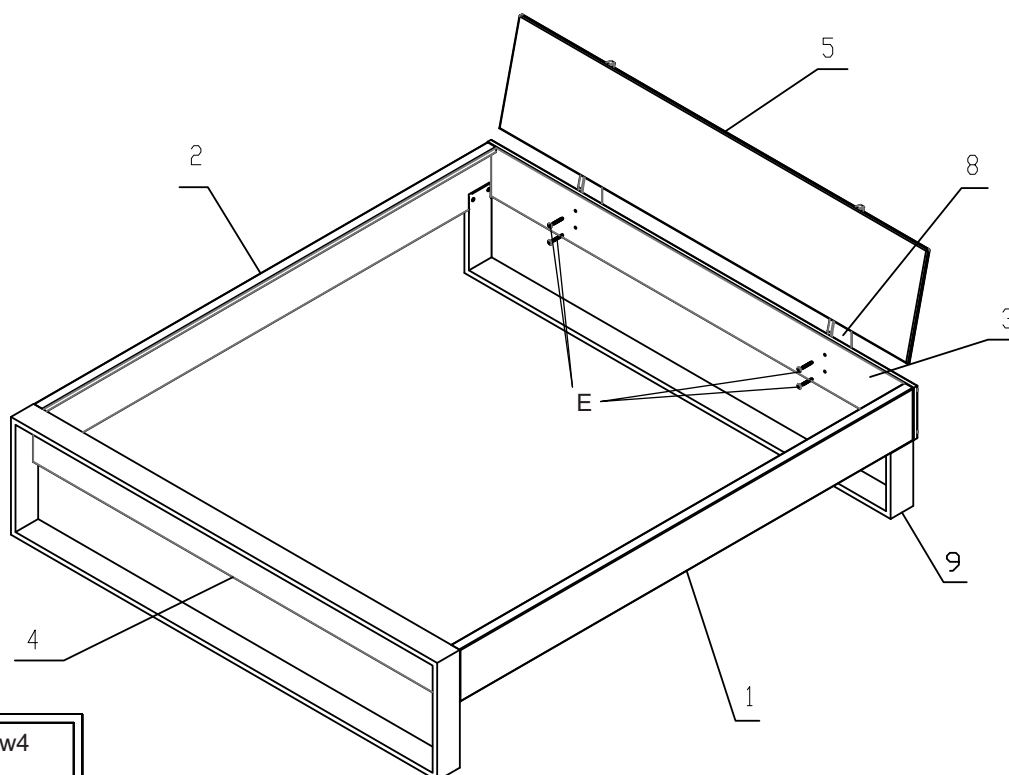

6.

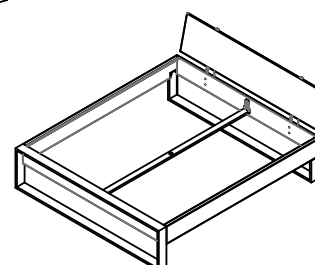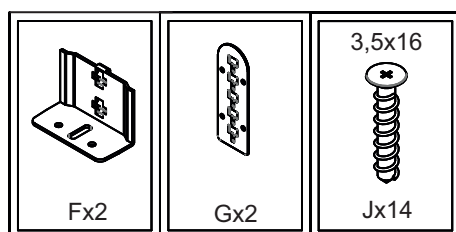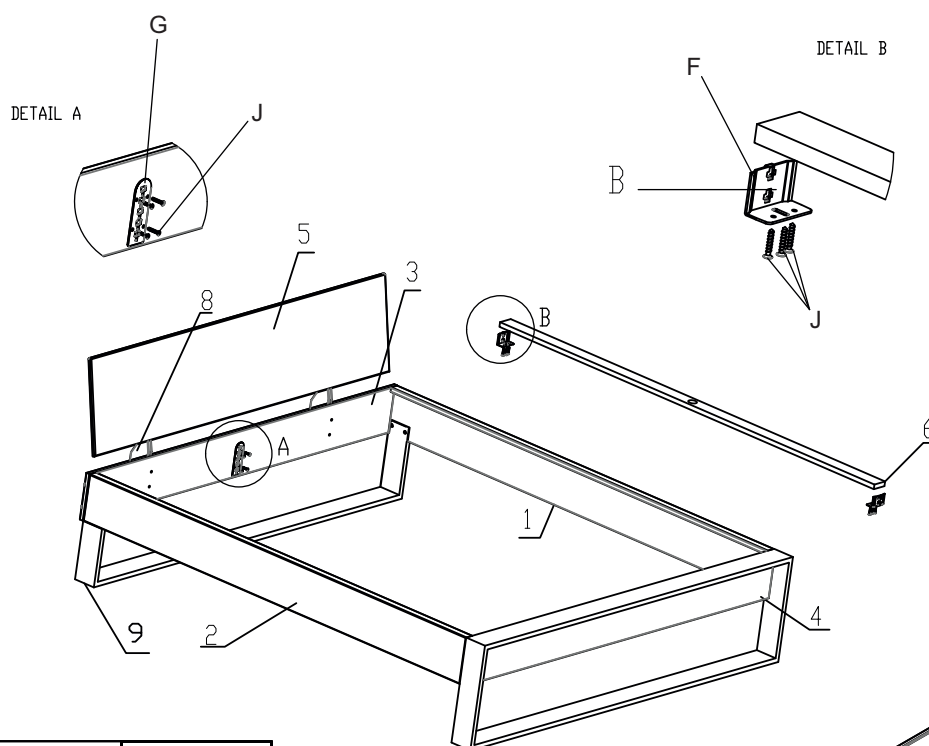

7,

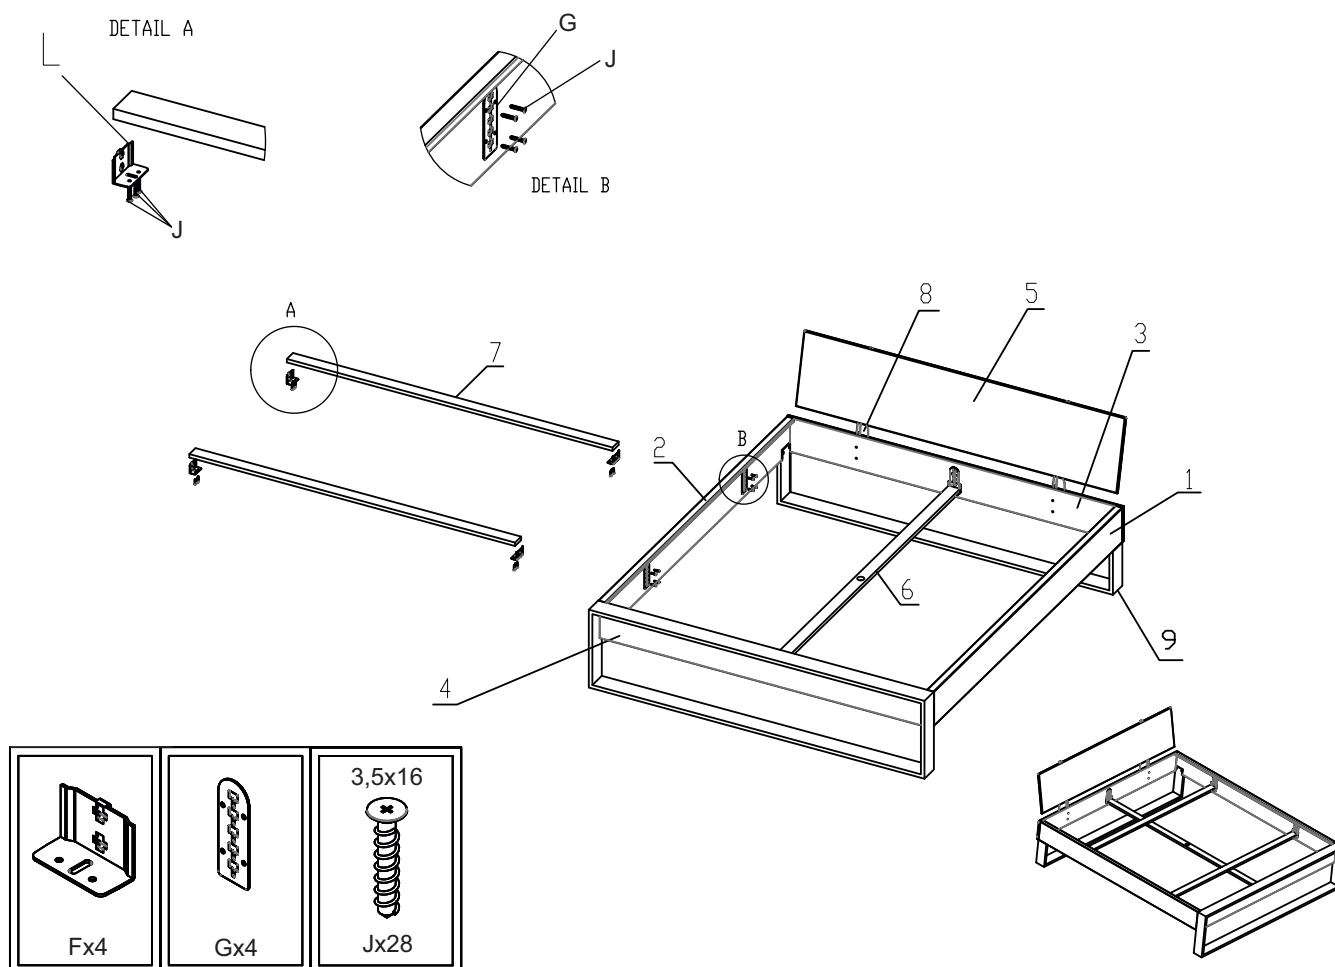

8,

