


MONTAGE ANLEITUNG ASSEMBLY INSTRUCTION

BETT 0257

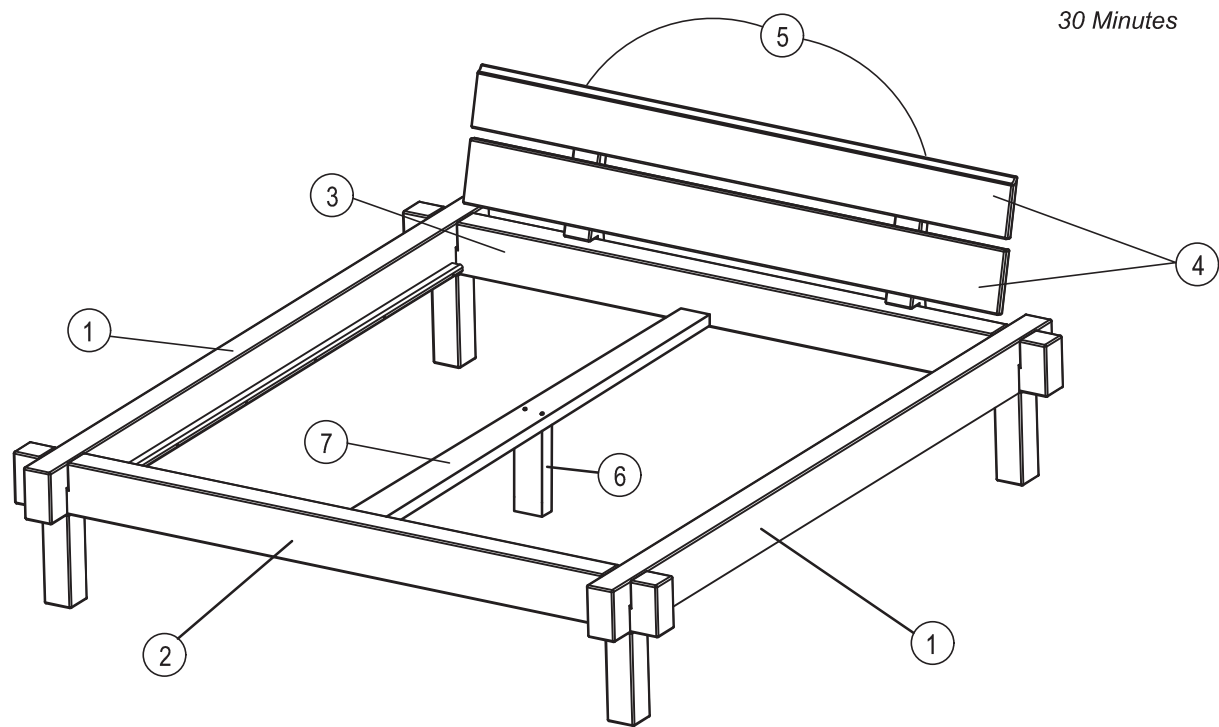


30 Minutes




35x35x90	Ø3,5x30		M6x60		ø6x70	SW4
Ax4	Bx38	Cx2	Dx12	Ex2	Fx2	x1

1

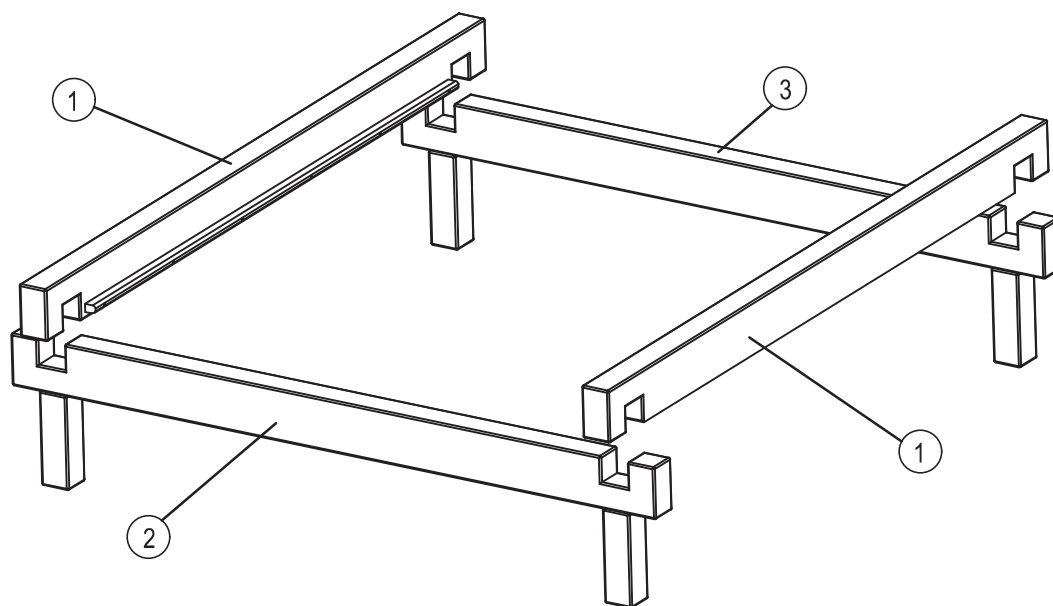


2

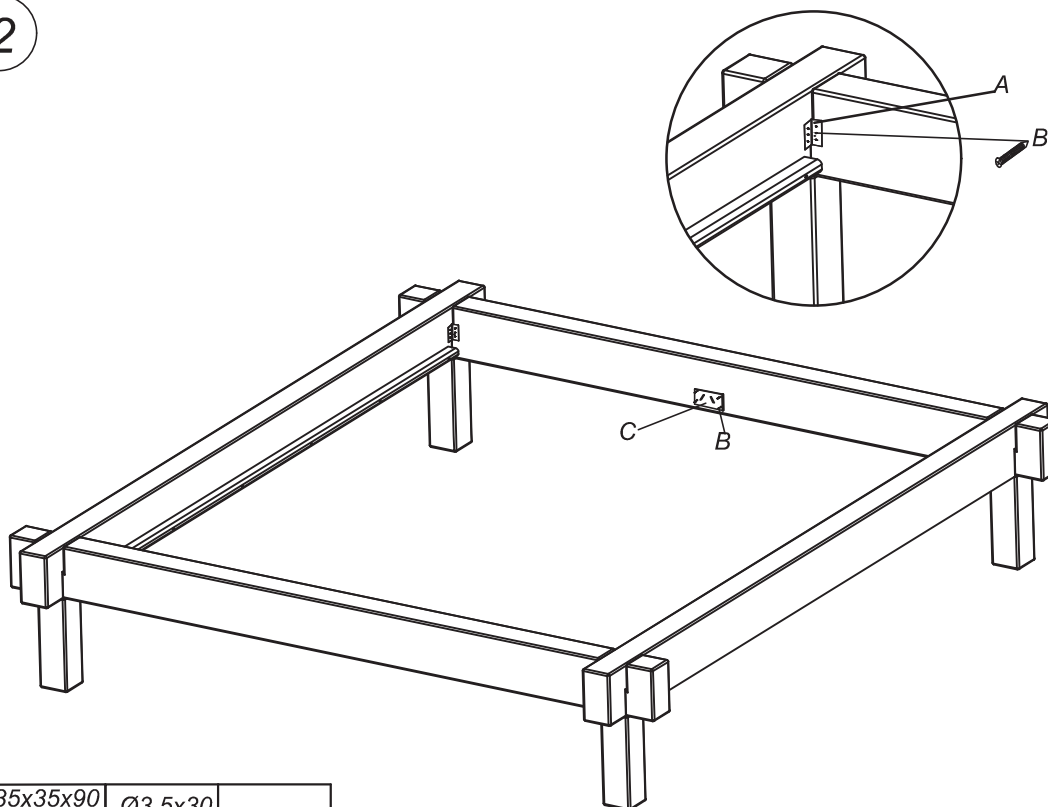

35x35x90	Ø3,5x30	
		
Ax4	Bx32	Cx2

3

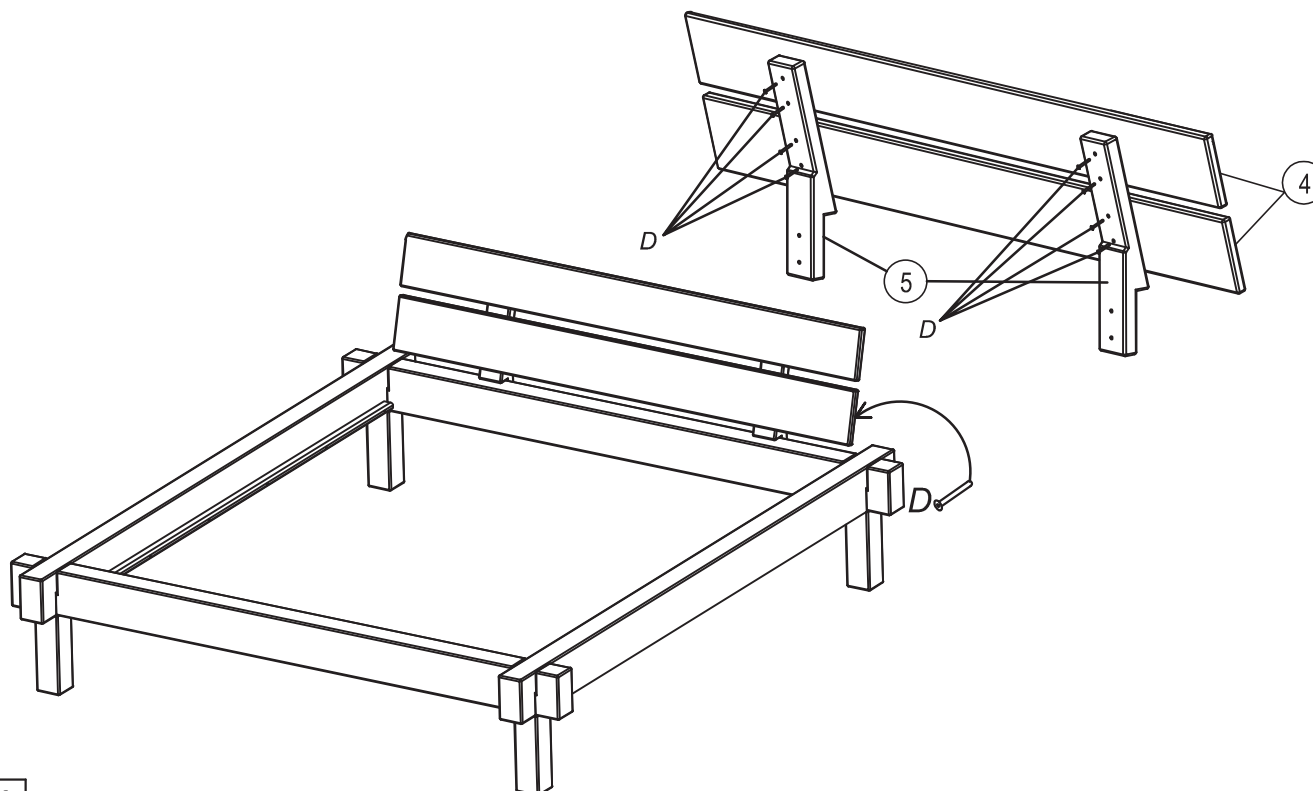


M6x60



Dx12

4

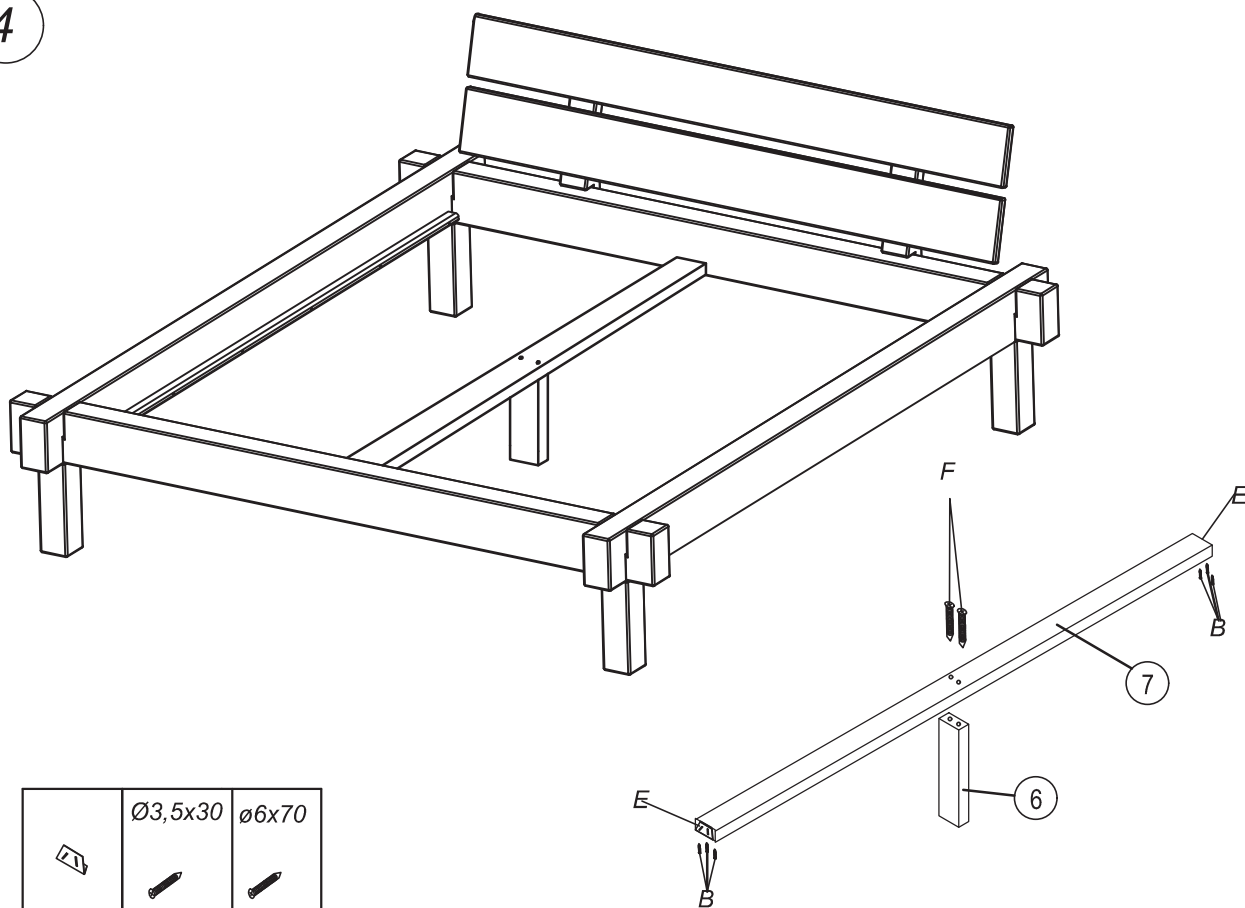

Ø3,5x30

Ø6x70



Ex2

Bx6

Fx2