

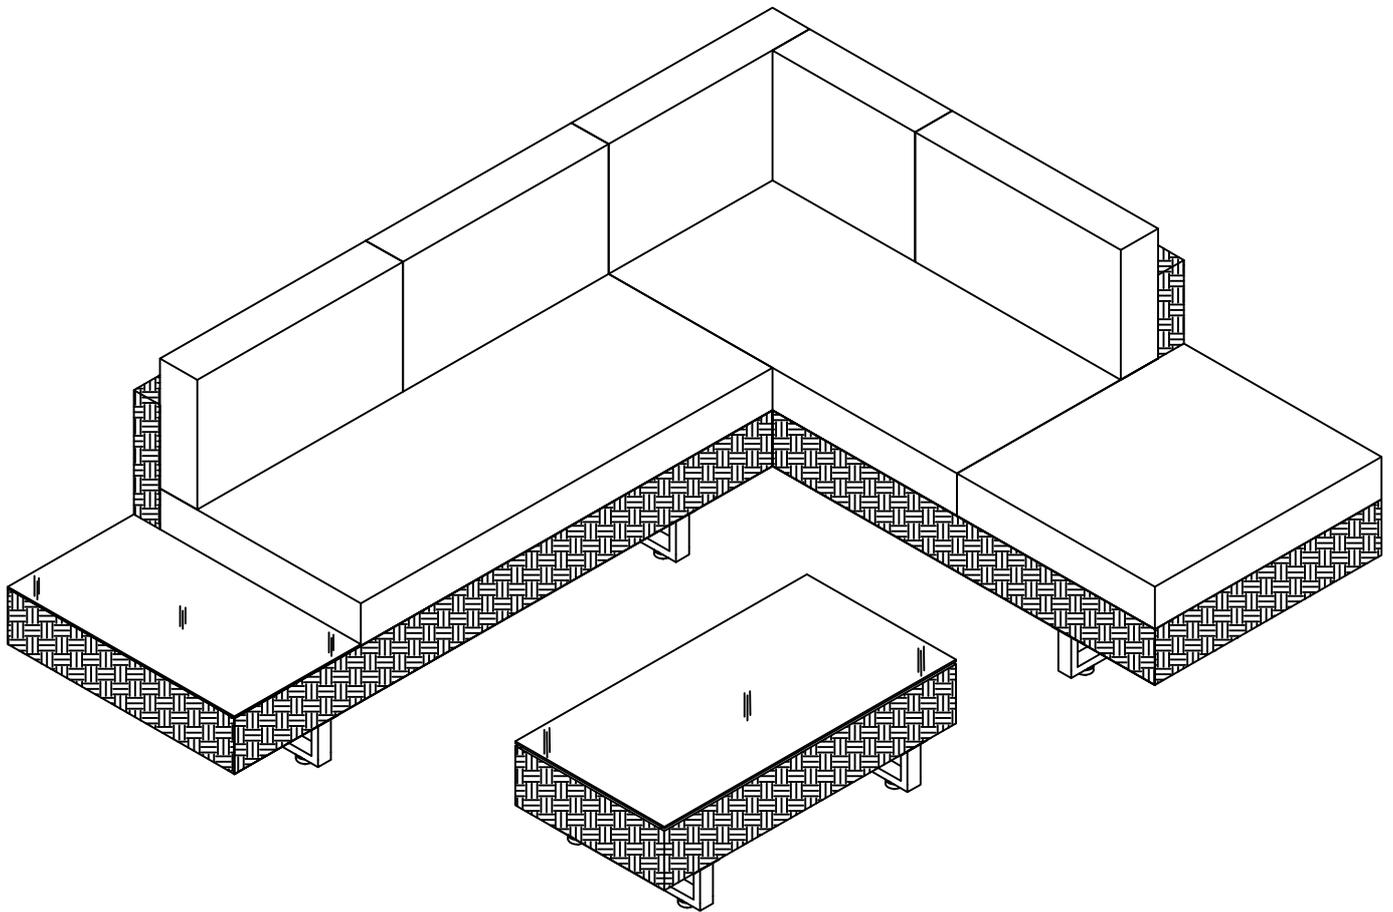



ASSEMBLY INSTRUCTION

23060024/09

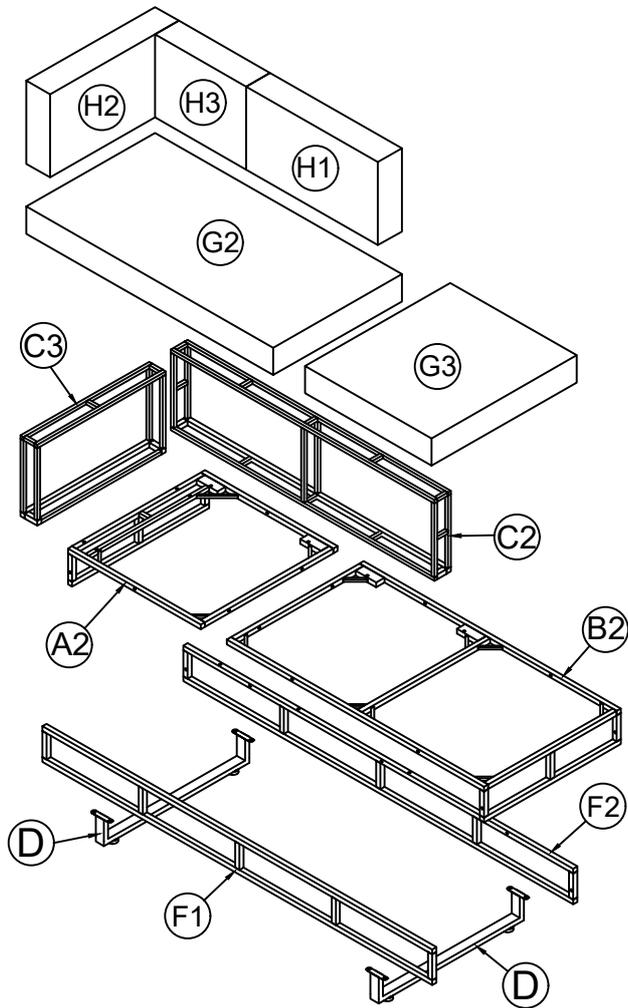


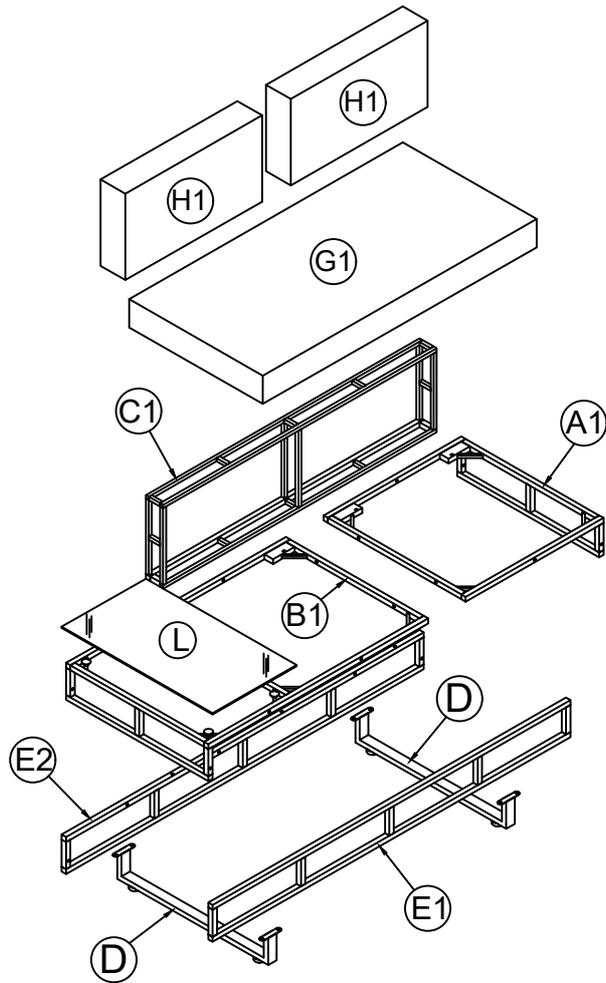

ASSEMBLY INSTRUCTION

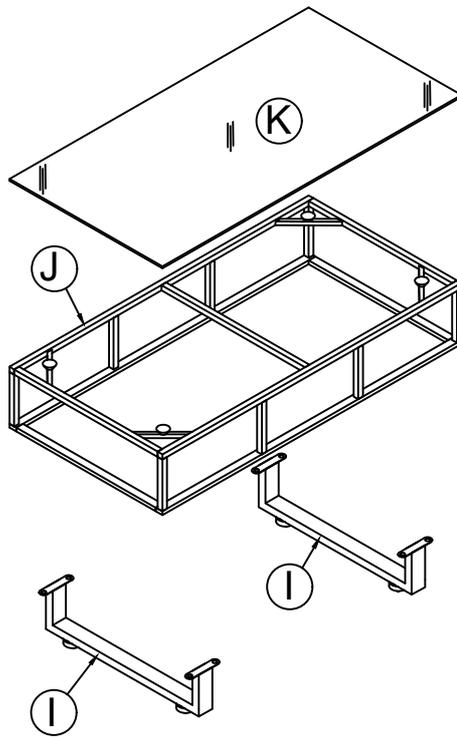

① x4



Allen Bolt M6*55

② x38



Allen Bolt M6*40

③ x24



Allen Bolt M6*15

④ x70




Washer M6*16*1.0

⑤ x4




⑥ x2

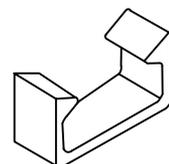

⑦ x1





⑧ x2



Allen Key K4



ASSEMBLY INSTRUCTION

1

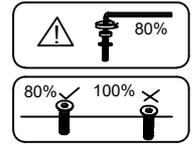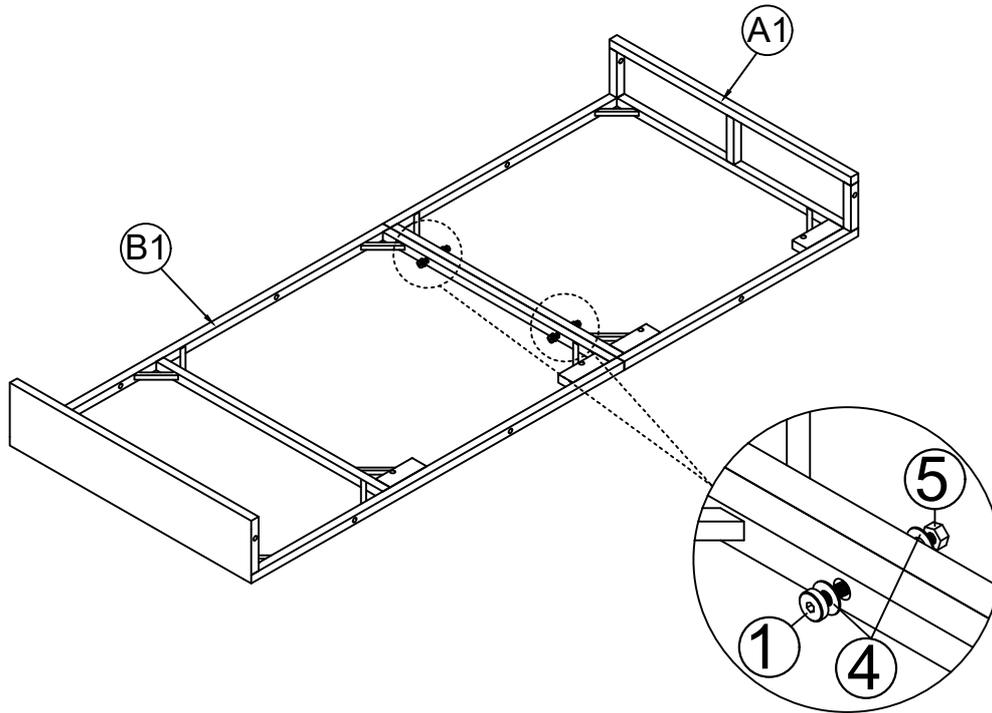

① x2		M6 x55
④ x4		M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$
⑤ x2		




2

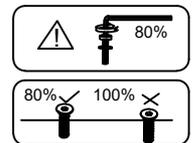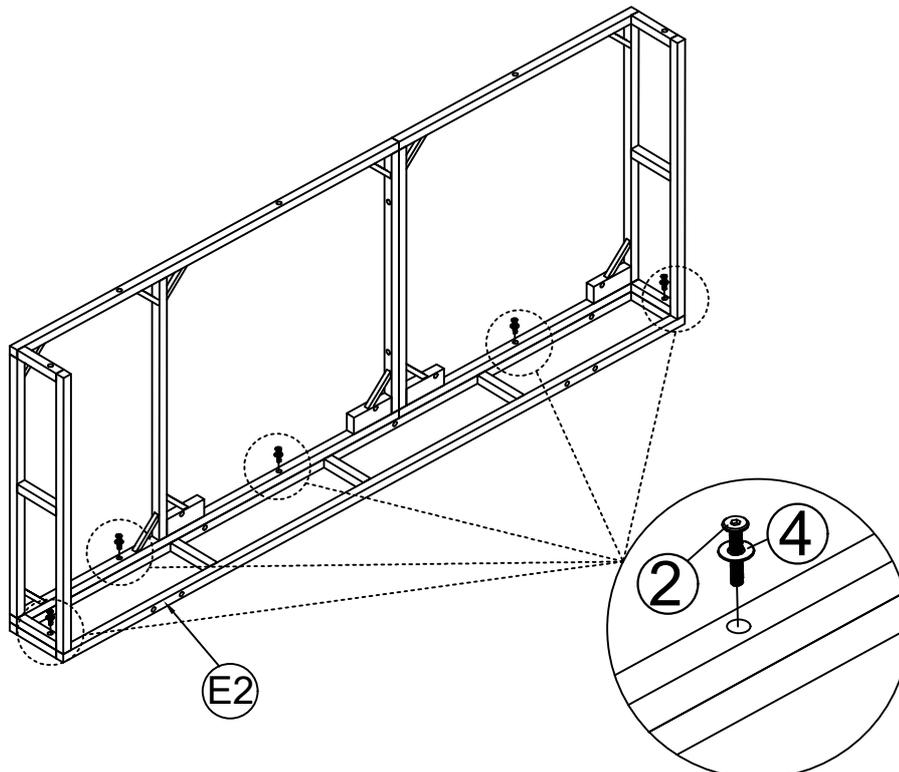




② x5		M6 x40
④ x5		M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$

ASSEMBLY INSTRUCTION

3

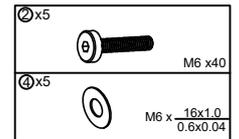
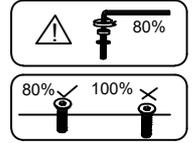
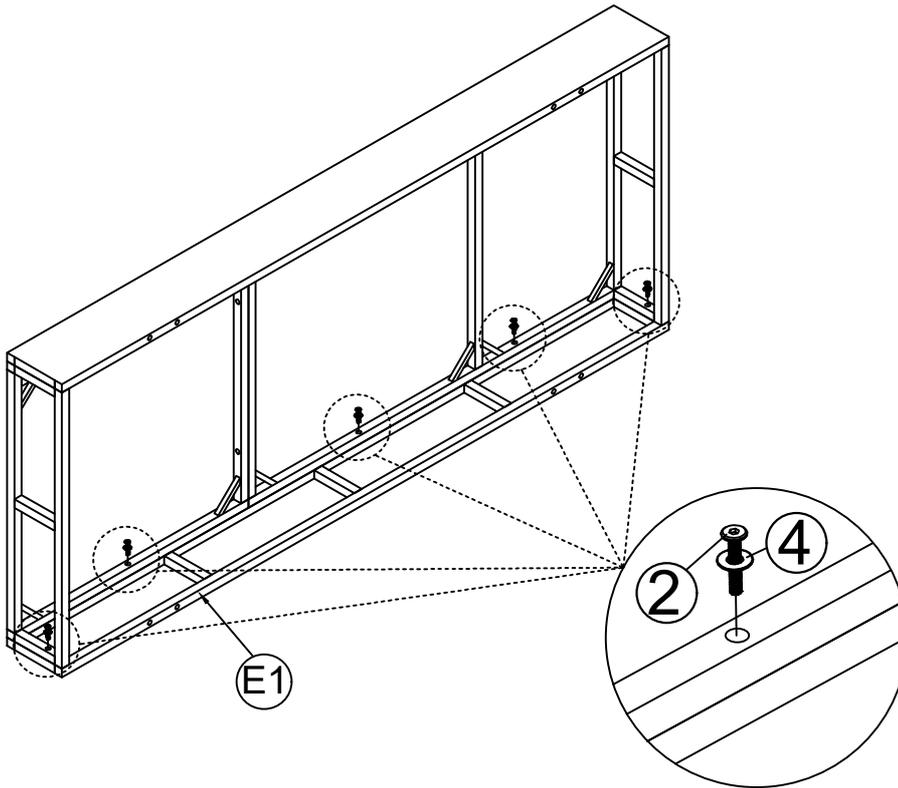


4

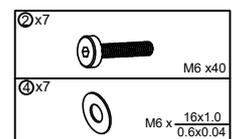
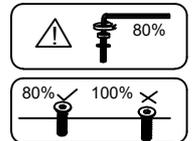
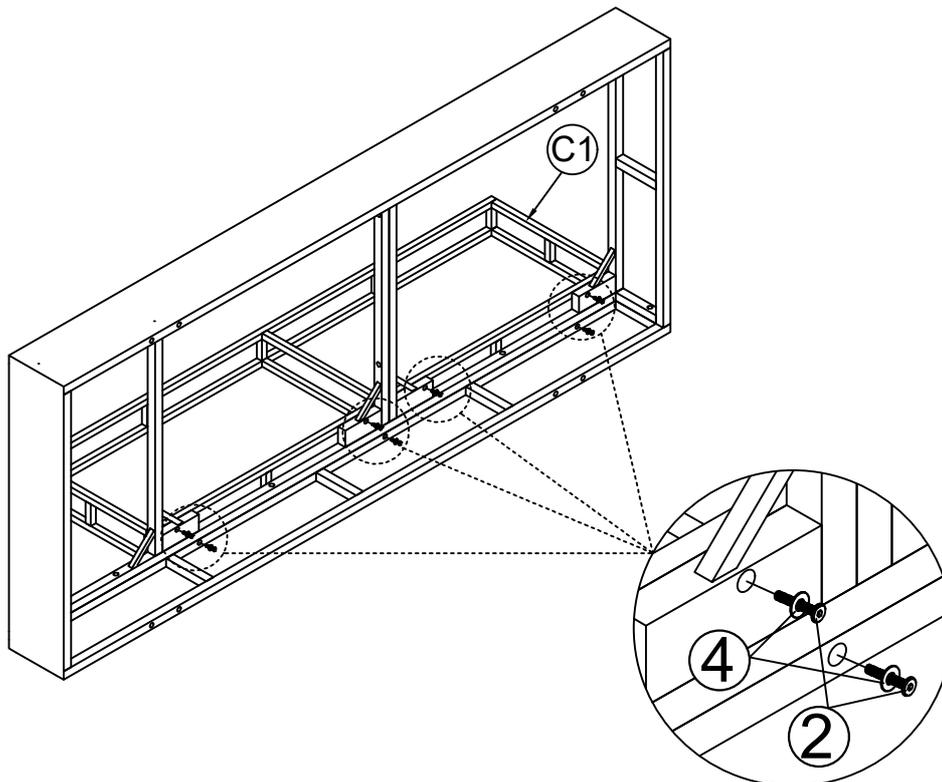


ASSEMBLY INSTRUCTION

5

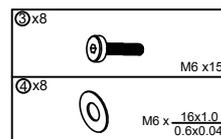
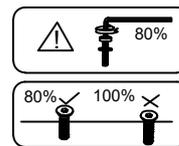
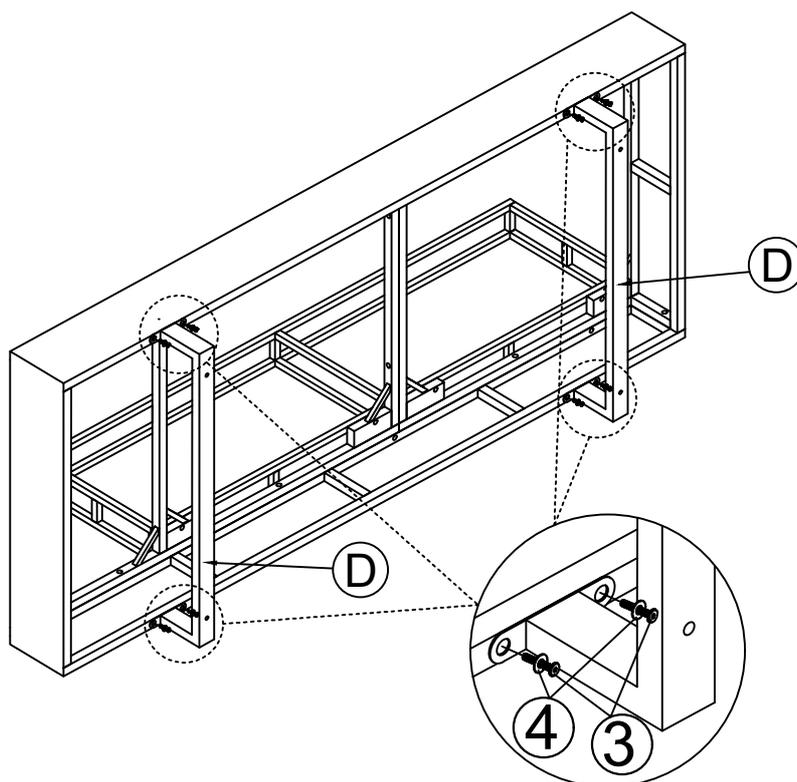


6

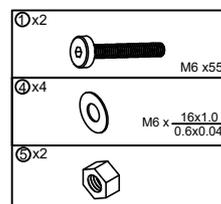
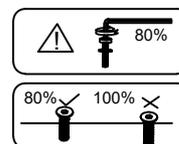
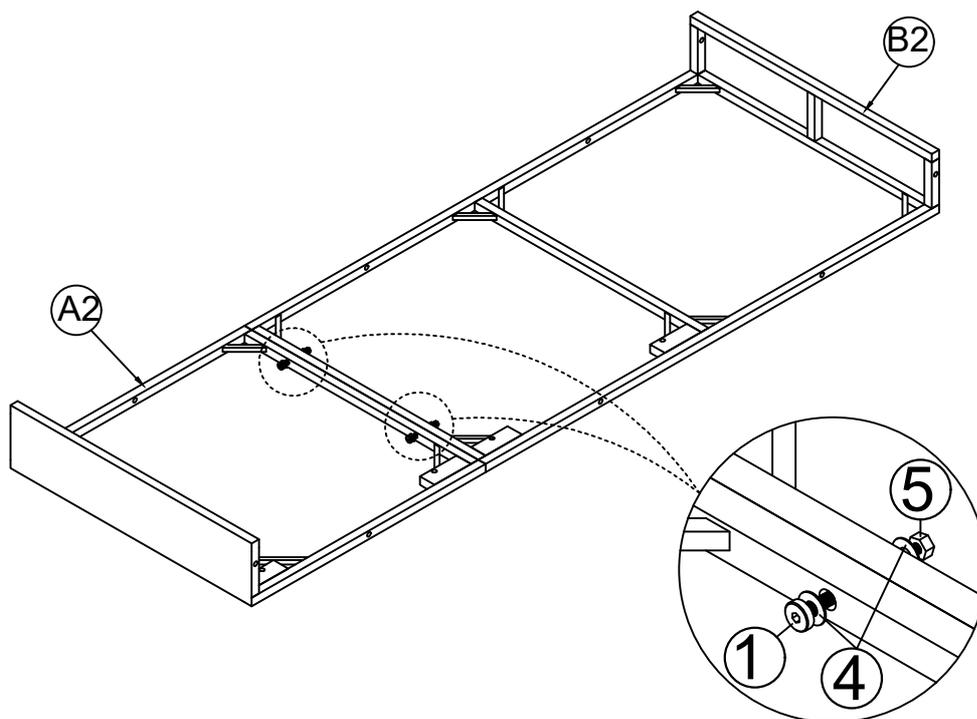


ASSEMBLY INSTRUCTION

7

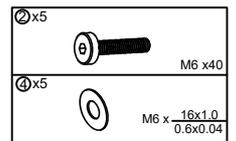
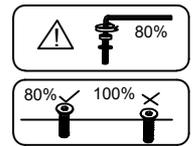
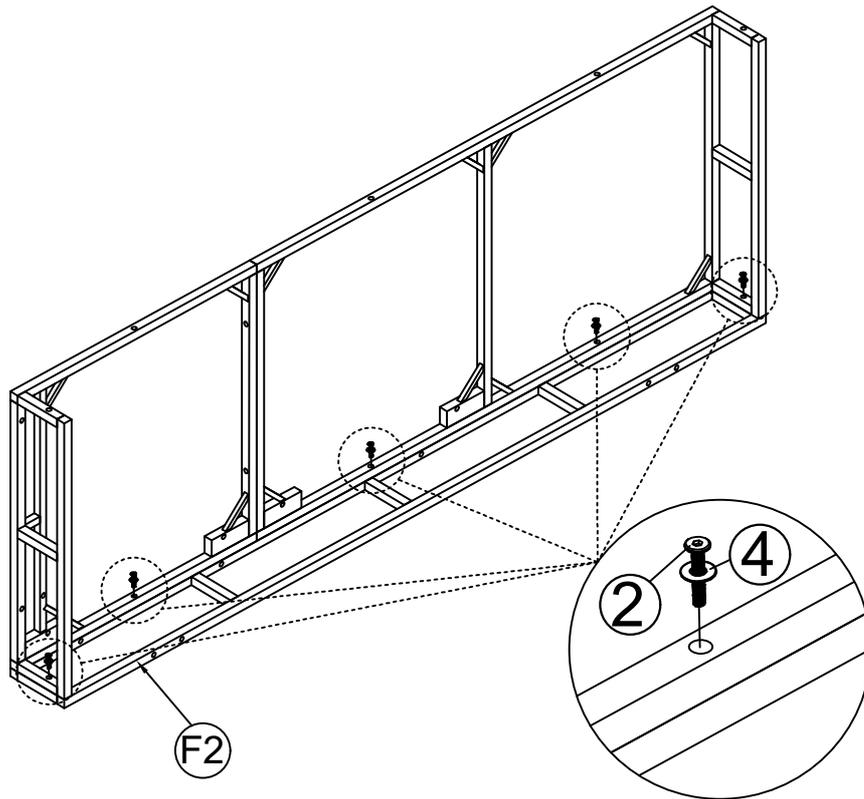


8

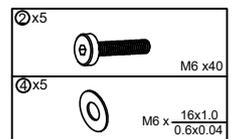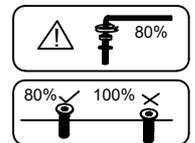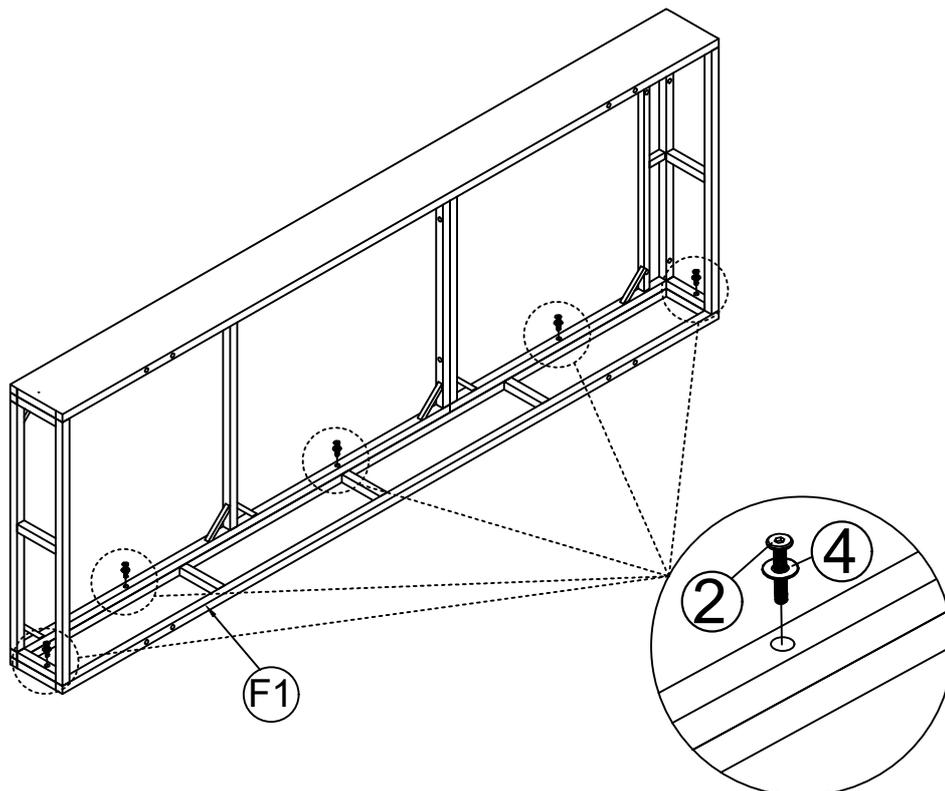


ASSEMBLY INSTRUCTION

9

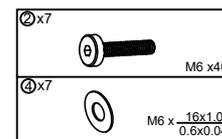
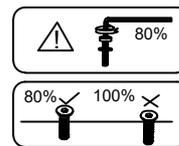
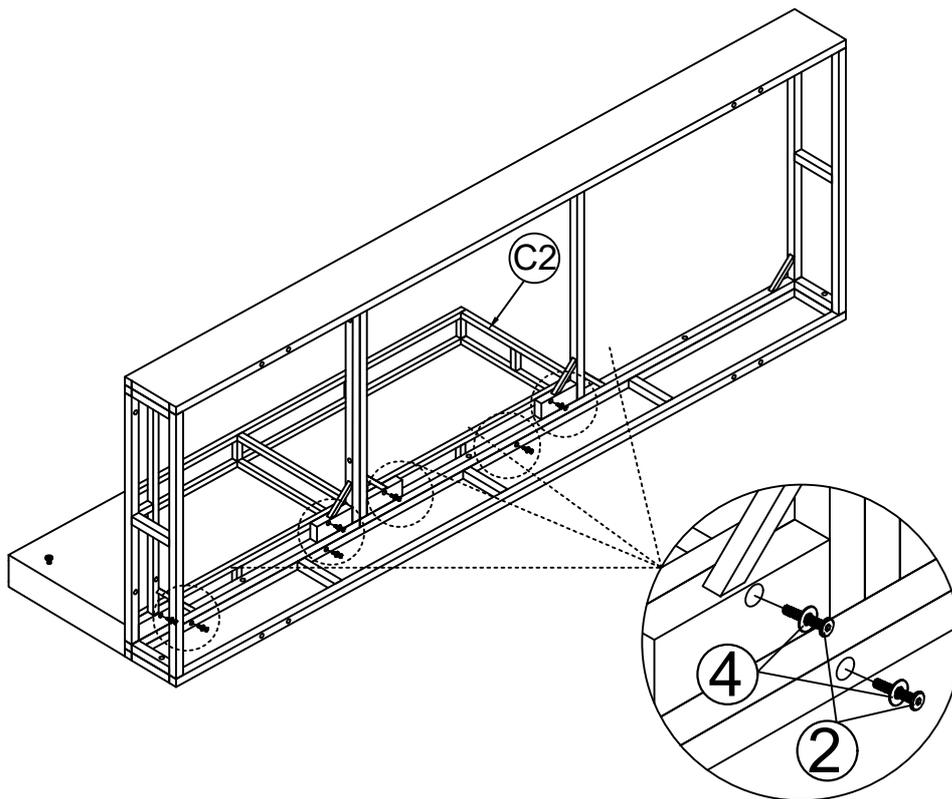


10



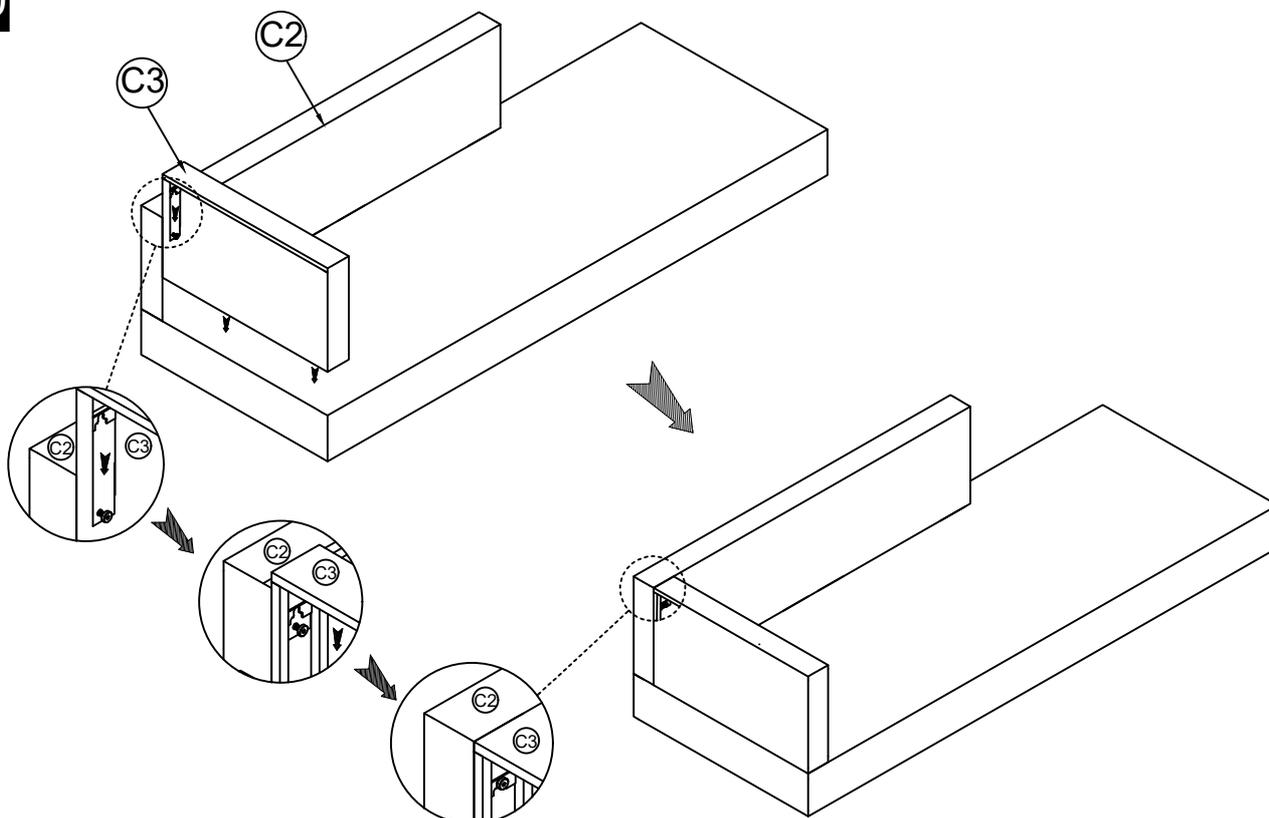


ASSEMBLY INSTRUCTION

11

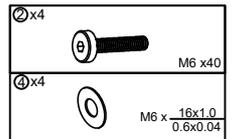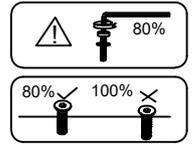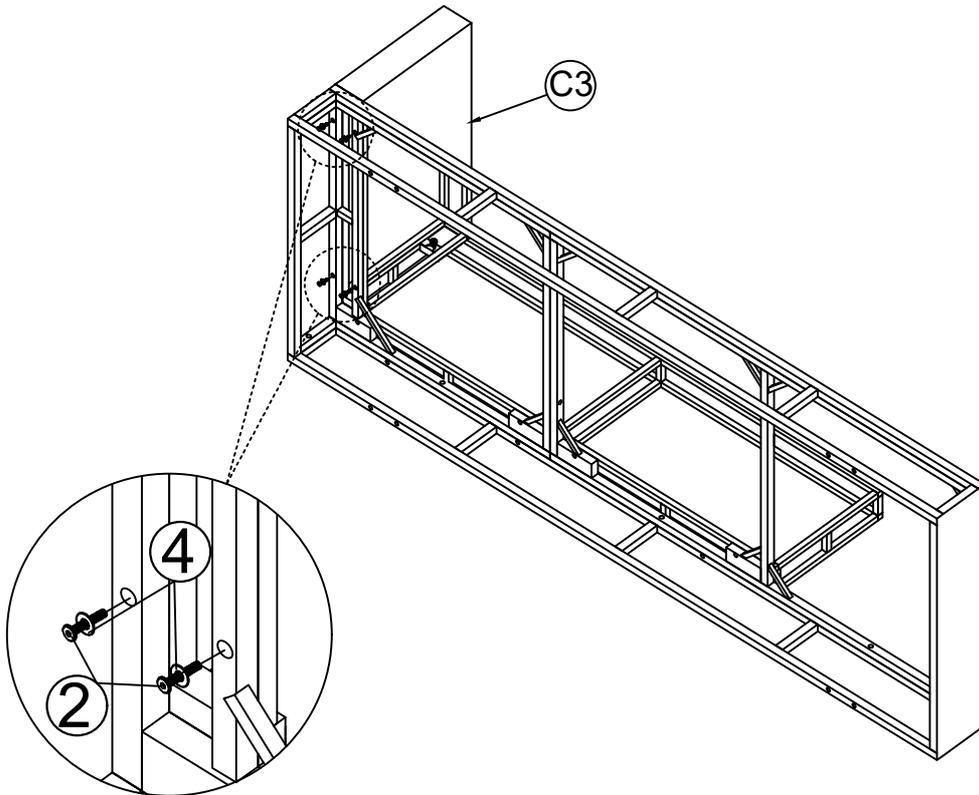


12

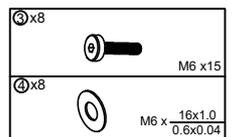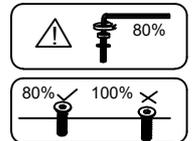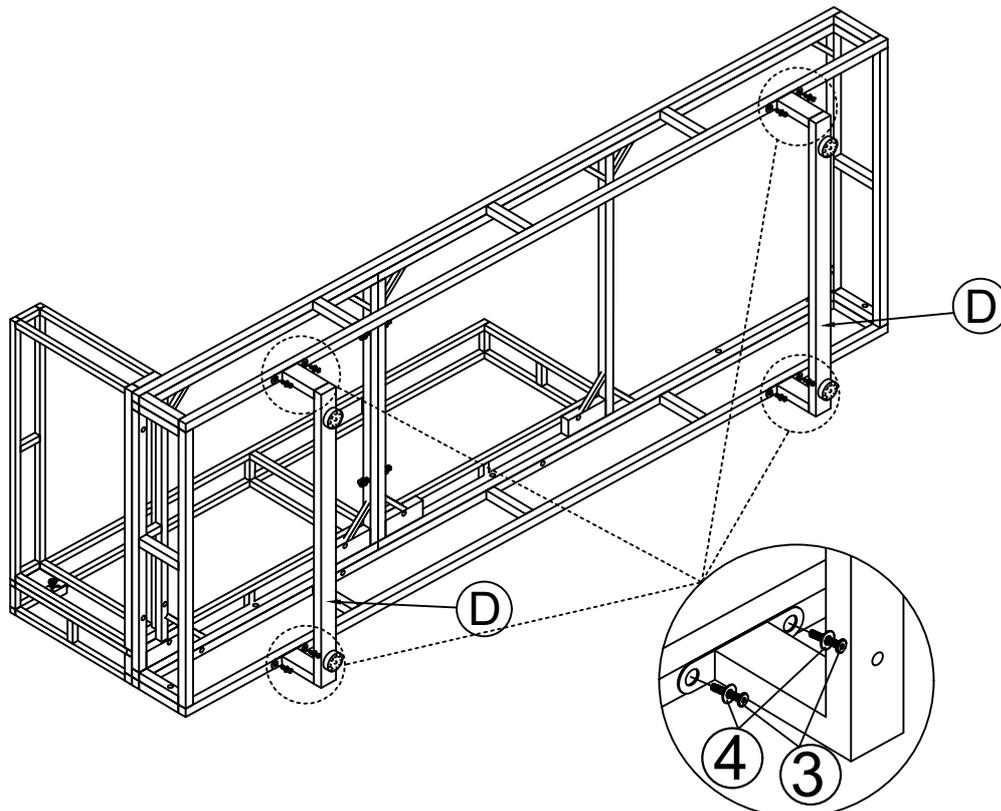


ASSEMBLY INSTRUCTION

13



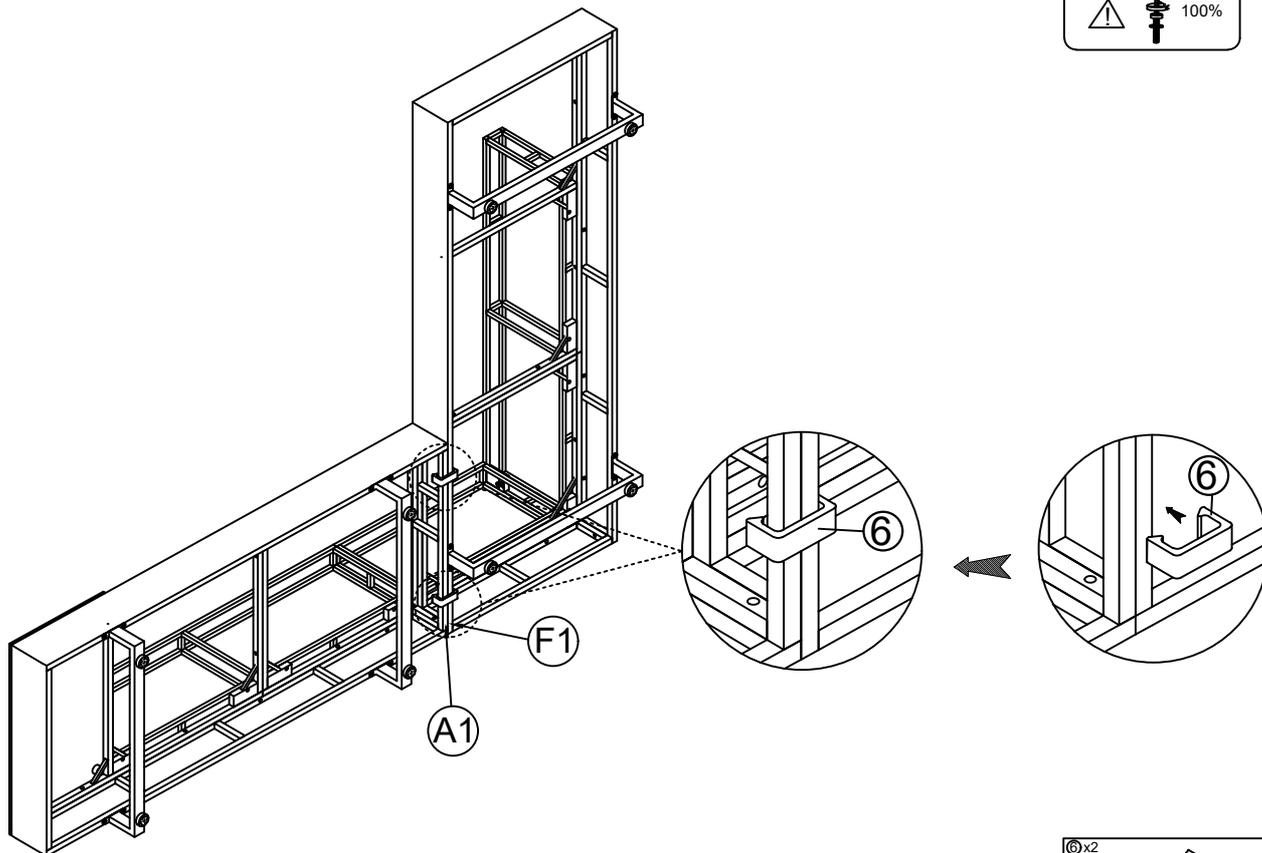


14

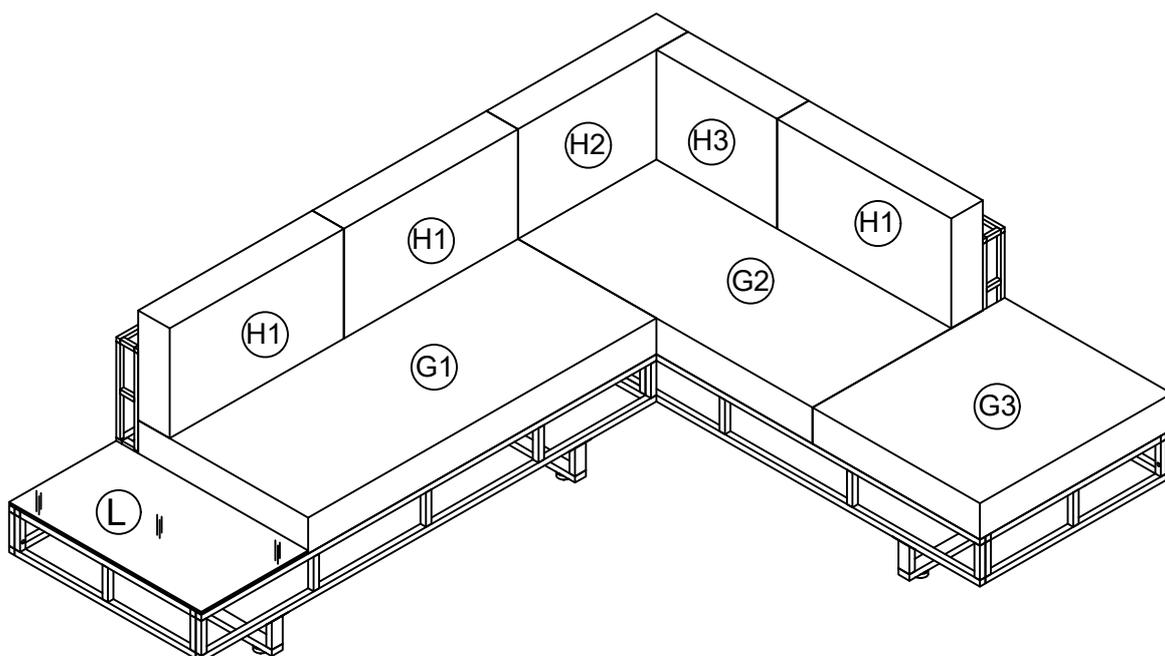


ASSEMBLY INSTRUCTION

15

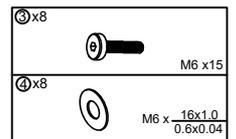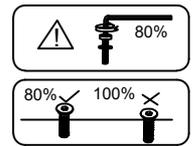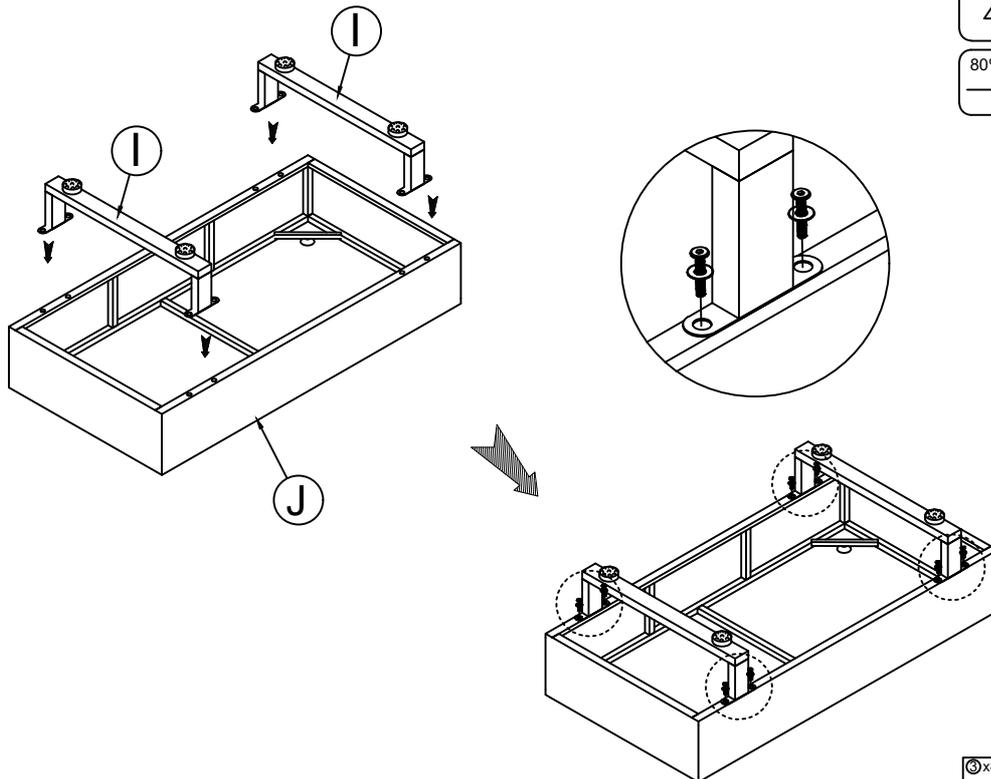

16

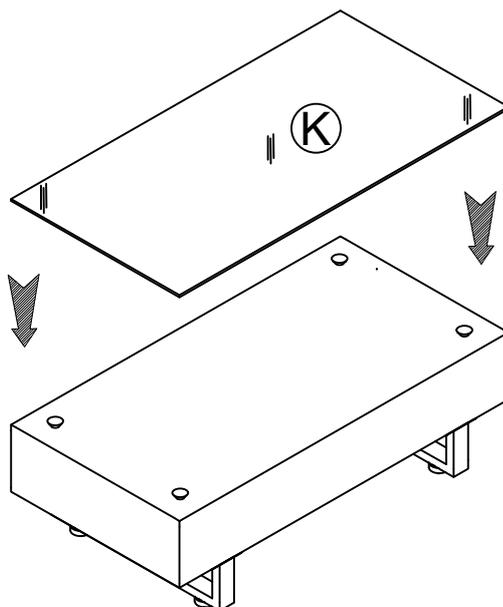

ASSEMBLY INSTRUCTION

17 Finish

