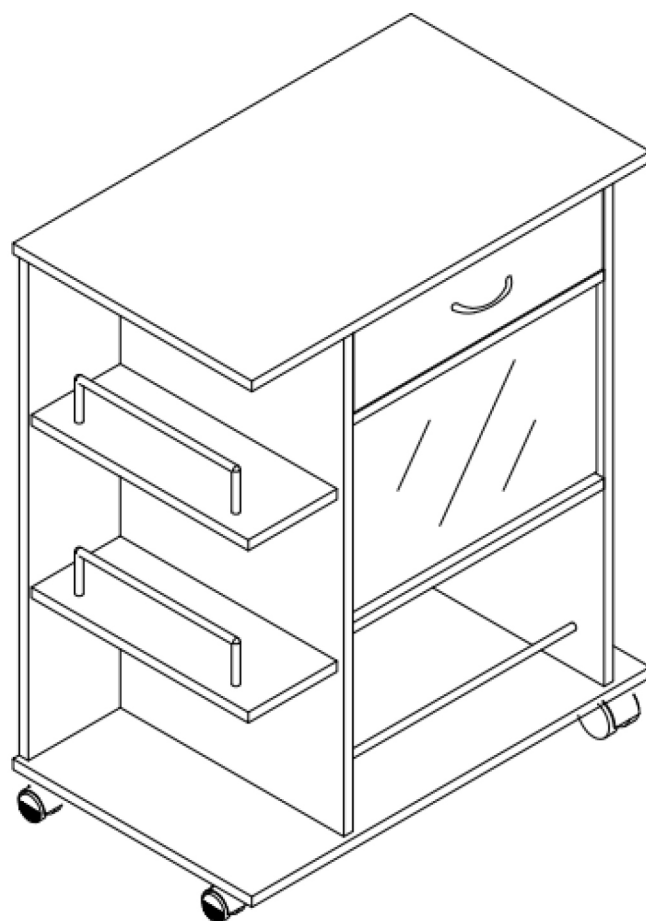



















Küchenrollwagen Pocis












Montageanleitung
Instruction Manual



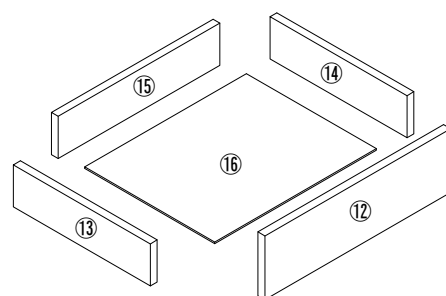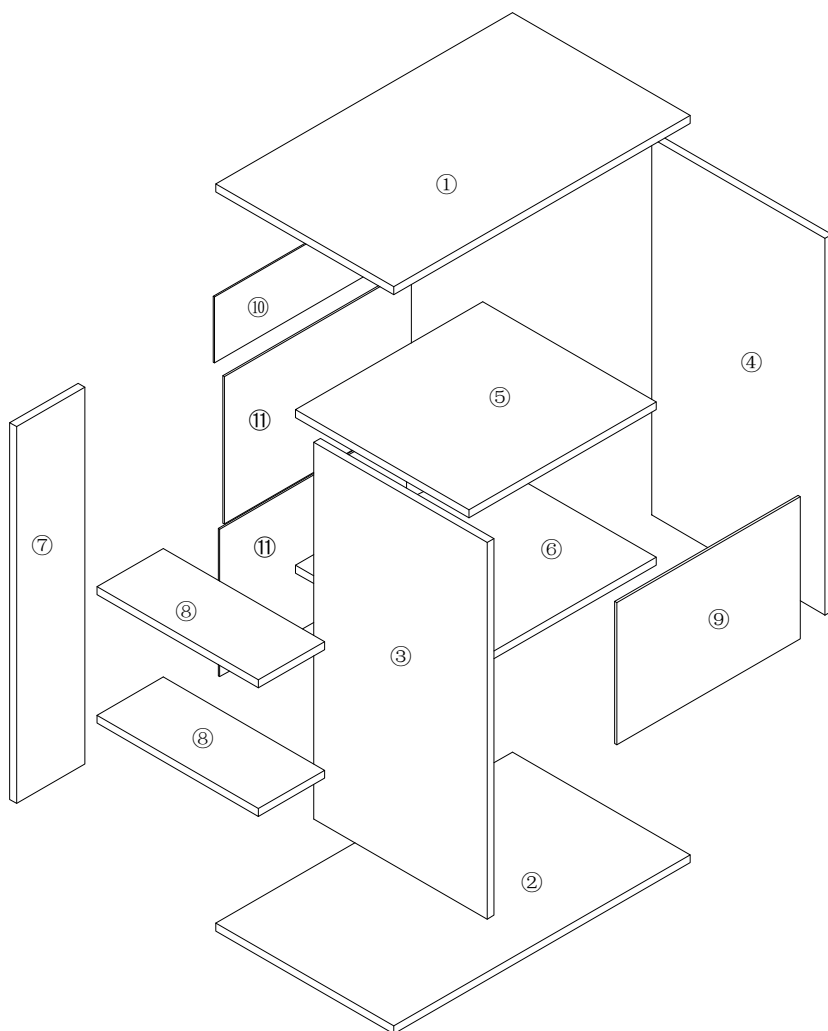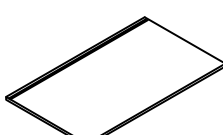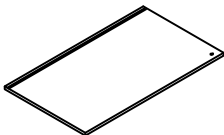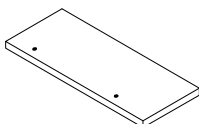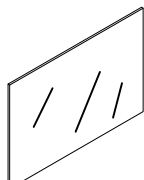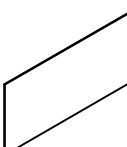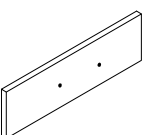
VCM Morgenthaler GmbH
D-79346 Endingen am Kaiserstuhl
service@vcm-gruppe.de
www.vcm-gruppe.de



1  X1	2  X1	3  X1	4  X1	5  X1	6  X1
7  X1	8  X2	9  X1	10  X1	11  X2	12  X1
13  X1	14  X1	15  X1	16  X1		

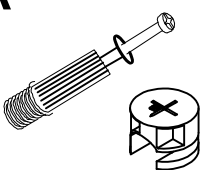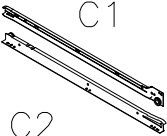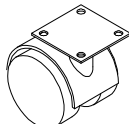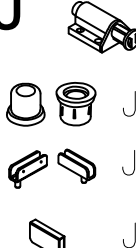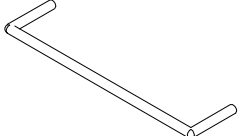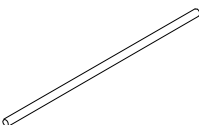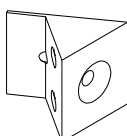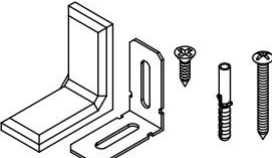
A  31 X	B 8*40  26 X	C  C1 C2 1 X	D 96MM  1 X	E 4*18  2 X
F 3.5*14  26 X	G 3.5*35  8 X	H  2 X	I  2 X	J  J1 J2 J3 J4 1 X
K 256MM  2 X	L 425MM  1 X	M  22 X	N 3*12  22 X	O  2 X

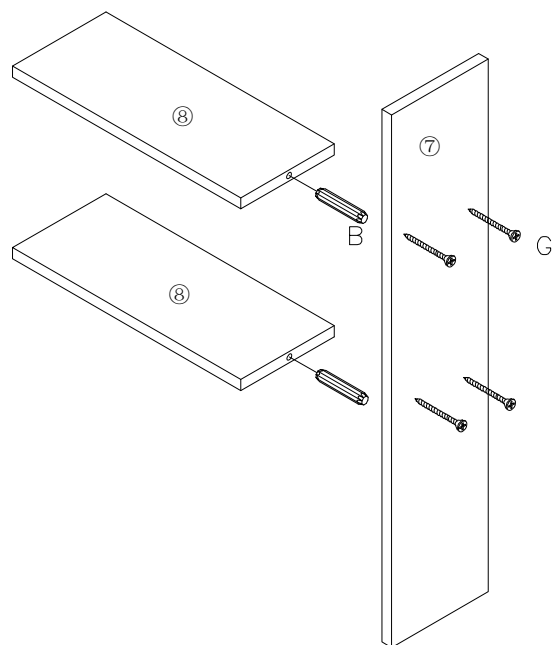1




B*2 G*4

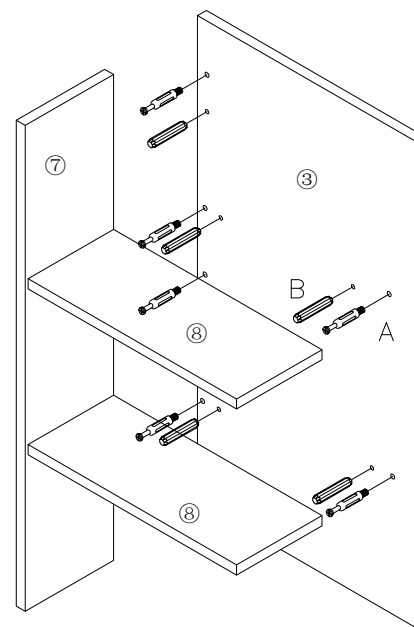2



A*7 B*6

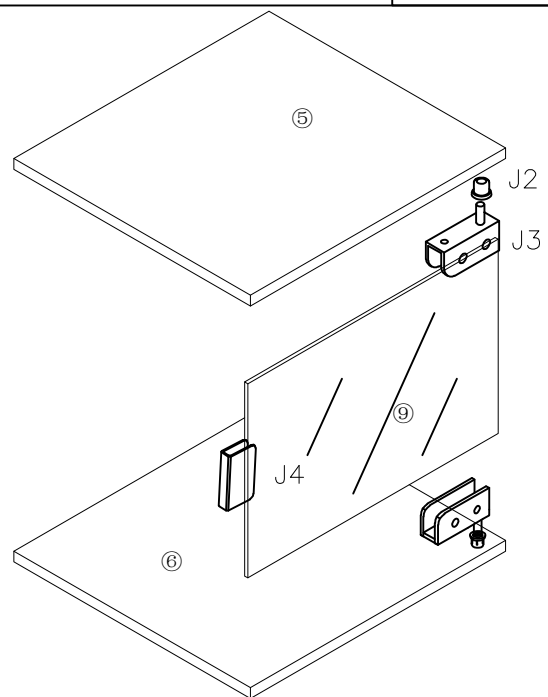
3



J2*1 J3*1 J4*1



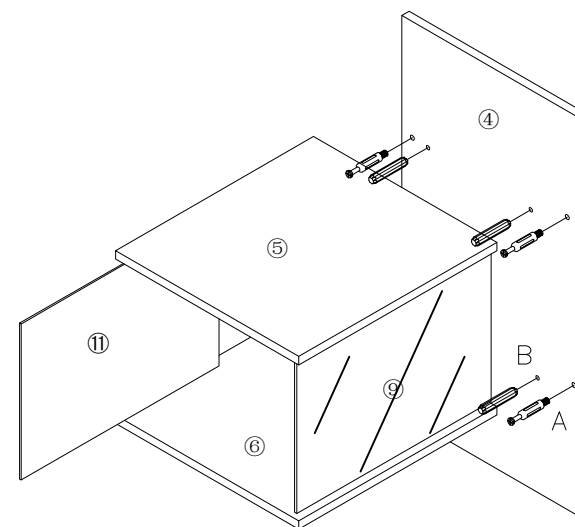
4



A*4 B*4




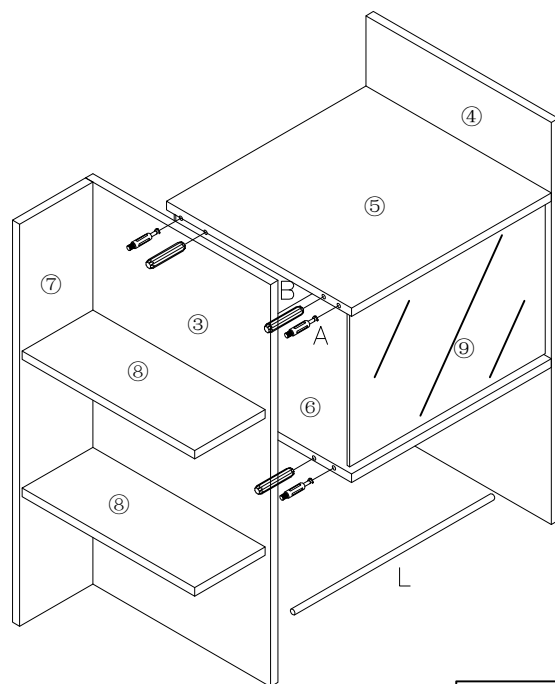5




A*4 B*4 L*1

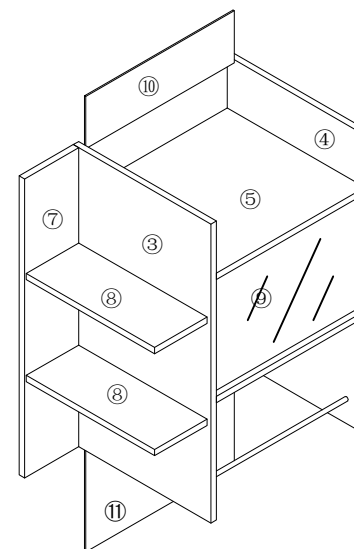6




7

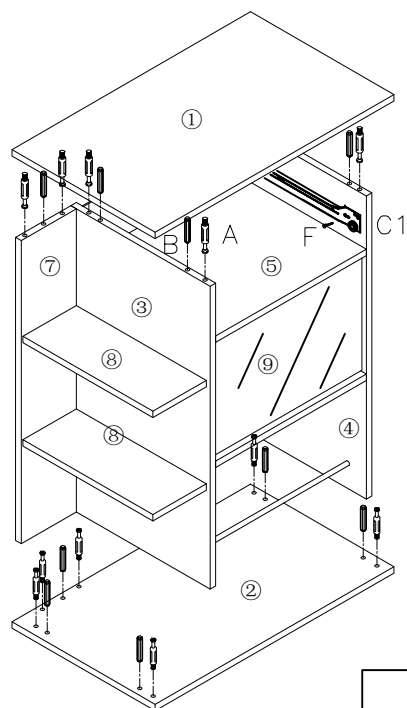


A*12 B*10 C1*1 F*4

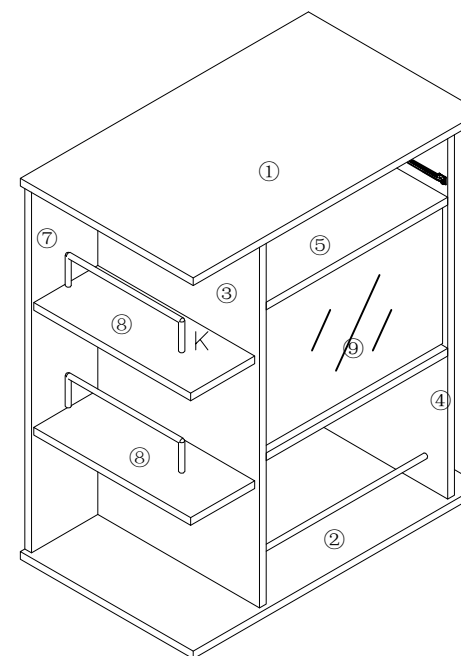8




K*2

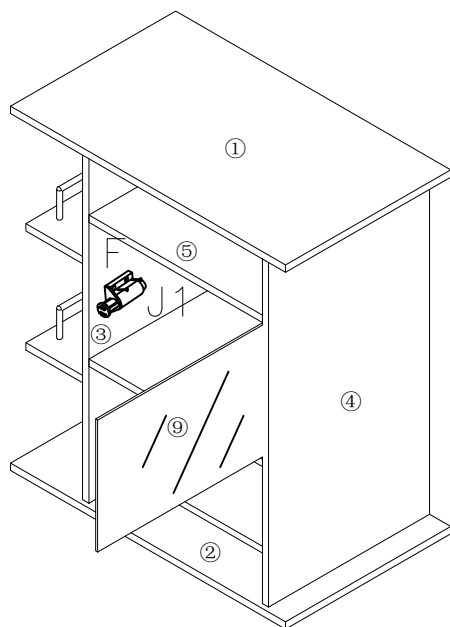9




F*2 J1*1

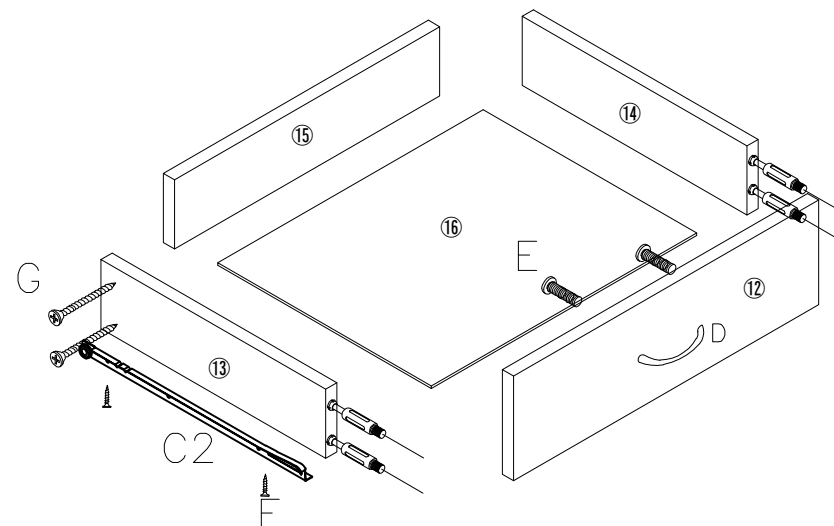10




A*4 C2*1 D*1 E*2 F*4 G*4

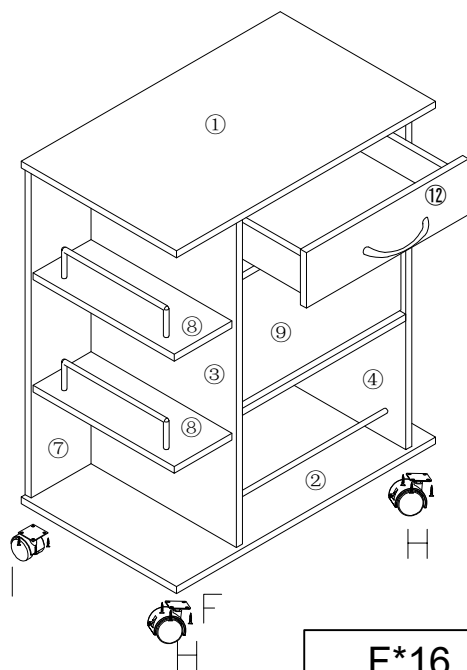11



F*16 H*2 I*2

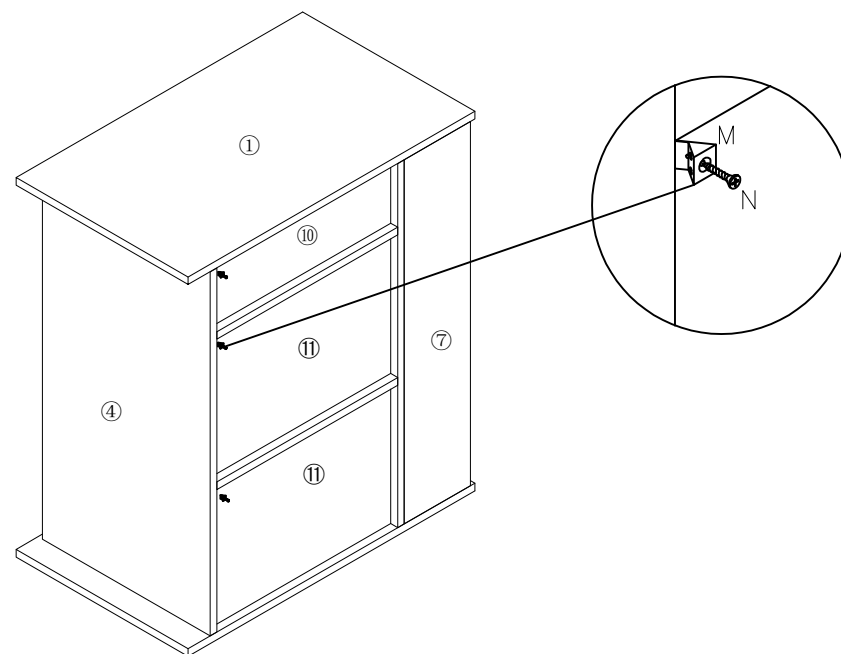12



M*22 N*22

