





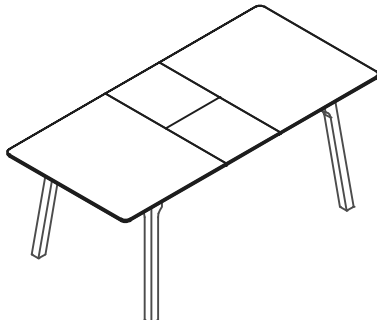
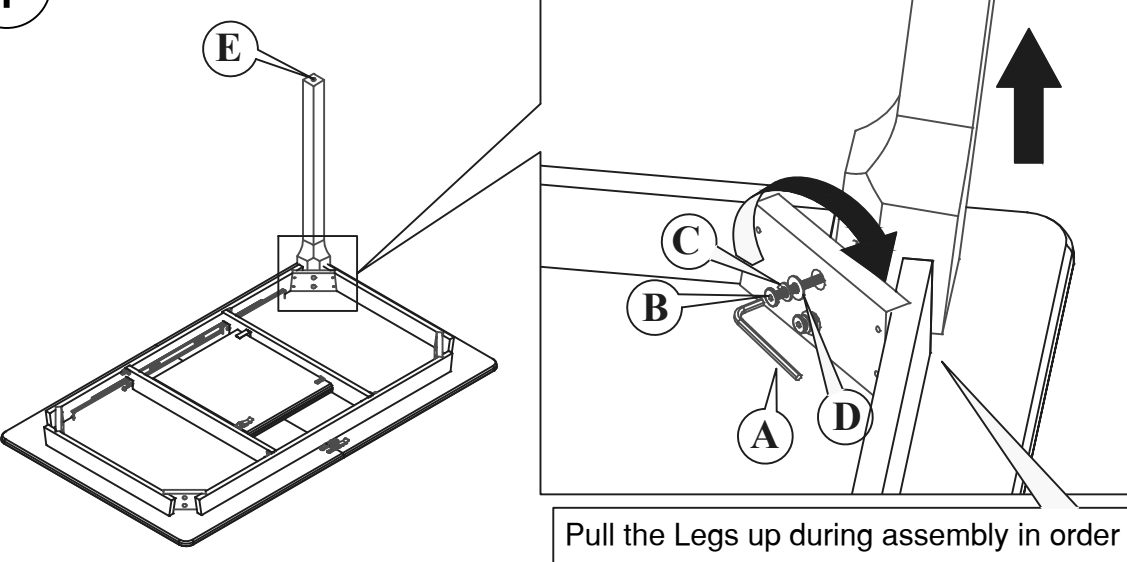


MODEL : BERGAMO (23130004/01)

| | | | | |
|---|------------------------|---|---|---|
| | | | | |
| | | | |  |
| A | ALLEN KEY ALM5 |  | 1 | |
| B | JCBC BOLT M8X60MM |  | 8 | |
| C | SPRING WASHER WS5/16 |  | 8 | |
| D | FLAT WASHER WS5/16X1.0 |  | 8 | |
| E | NAIL NA3/4 |  | 4 | |
| | | | | |



1



Pull the Legs up during assembly in order to get the gap

2

