


(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE


2 X

45min

# PISA I PB 160x190/160/180x200

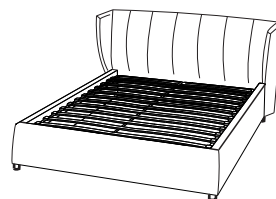

|                        |                               |                          |                |                         |                         |                          |                         |
|------------------------|-------------------------------|--------------------------|----------------|-------------------------|-------------------------|--------------------------|-------------------------|
| <b>A</b><br>x4<br>5cm  | <b>B</b><br>x2<br>4,5x4,5x5cm | <b>C</b><br>x1<br>L<br>R | <b>D</b><br>x2 | <b>F</b><br>x8          | <b>G</b><br>x8<br>M6x20 | <b>H</b><br>x38<br>M6x30 |                         |
| <b>L</b><br>x2<br>5X30 | <b>M</b><br>x38<br>M6         | <b>T</b><br>x4<br>M6     | <b>Q</b><br>x4 | <b>U</b><br>x1<br>#5    | <b>V</b><br>x1          | <b>Z</b><br>x1<br>3,5cm  | <b>X</b><br>x5          |
| <b>I</b><br>x8<br>M8   | <b>N</b><br>x8<br>M8x40       | <b>O</b><br>x4           | <b>P</b><br>x2 | <b>R</b><br>x1<br>M6x40 | <b>E</b><br>x4<br>M6x50 | <b>J</b><br>x8<br>M8x25  | <b>K</b><br>x4<br>M6x45 |

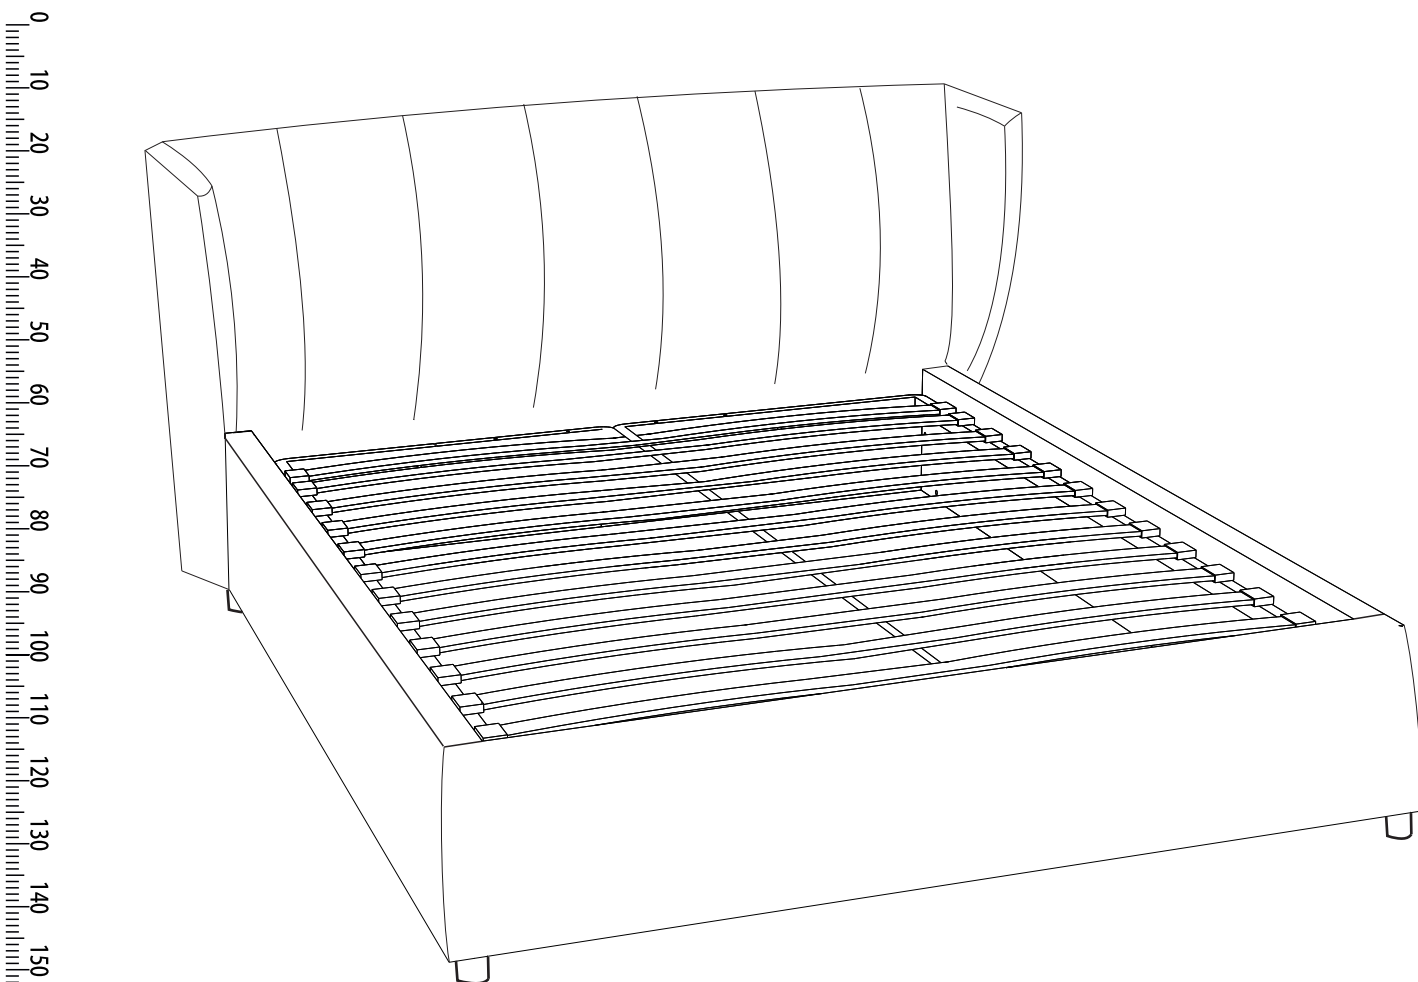

0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180



LE TRI  
+ FACILE



2 X
45min


- D
NL
TR
RO
F
CZ
BG
HR

AUFBAUANLEITUNG  
HANDLEIDING VOOR DE MONTAGE  
MONTAJ TALIMATI  
INSTRUCȚIUNI DE ASAMBLARE  
INSTRUCTION D'ASSEMBLAGE  
POKYNY K MONTÁŽI  
инструкции за монтаж  
UPUTSTVA ZA MONTAŽU


- GB
PL
RU
I
SK
HU
SLO
S
LT
E

ASSEMBLY INSTRUCTIONS  
INSTRUKCJA MONTAŻU  
Инструкция по монтажу  
PROCEDURA DI ASSEMBLAGGIO  
POKYNY K MONTÁŽI  
ÖSSZESZERELÉSI ÚTMUTATÓ  
NAVODILA ZA MONTAŽO  
MONTERINGSANVISNING  
DIEGIMO INSTRUKCIJOS  
INSTRUCCIONES DE MONTAJE

# PISA I PB160x190/160/180x200

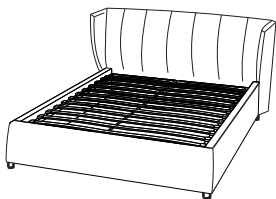

| COLLO | PARTE       |
|-------|-------------|
| 1/1   | 1+5+5       |
| 1/1   | 2+3+4+7+8+9 |
| 1/1   | 6           |

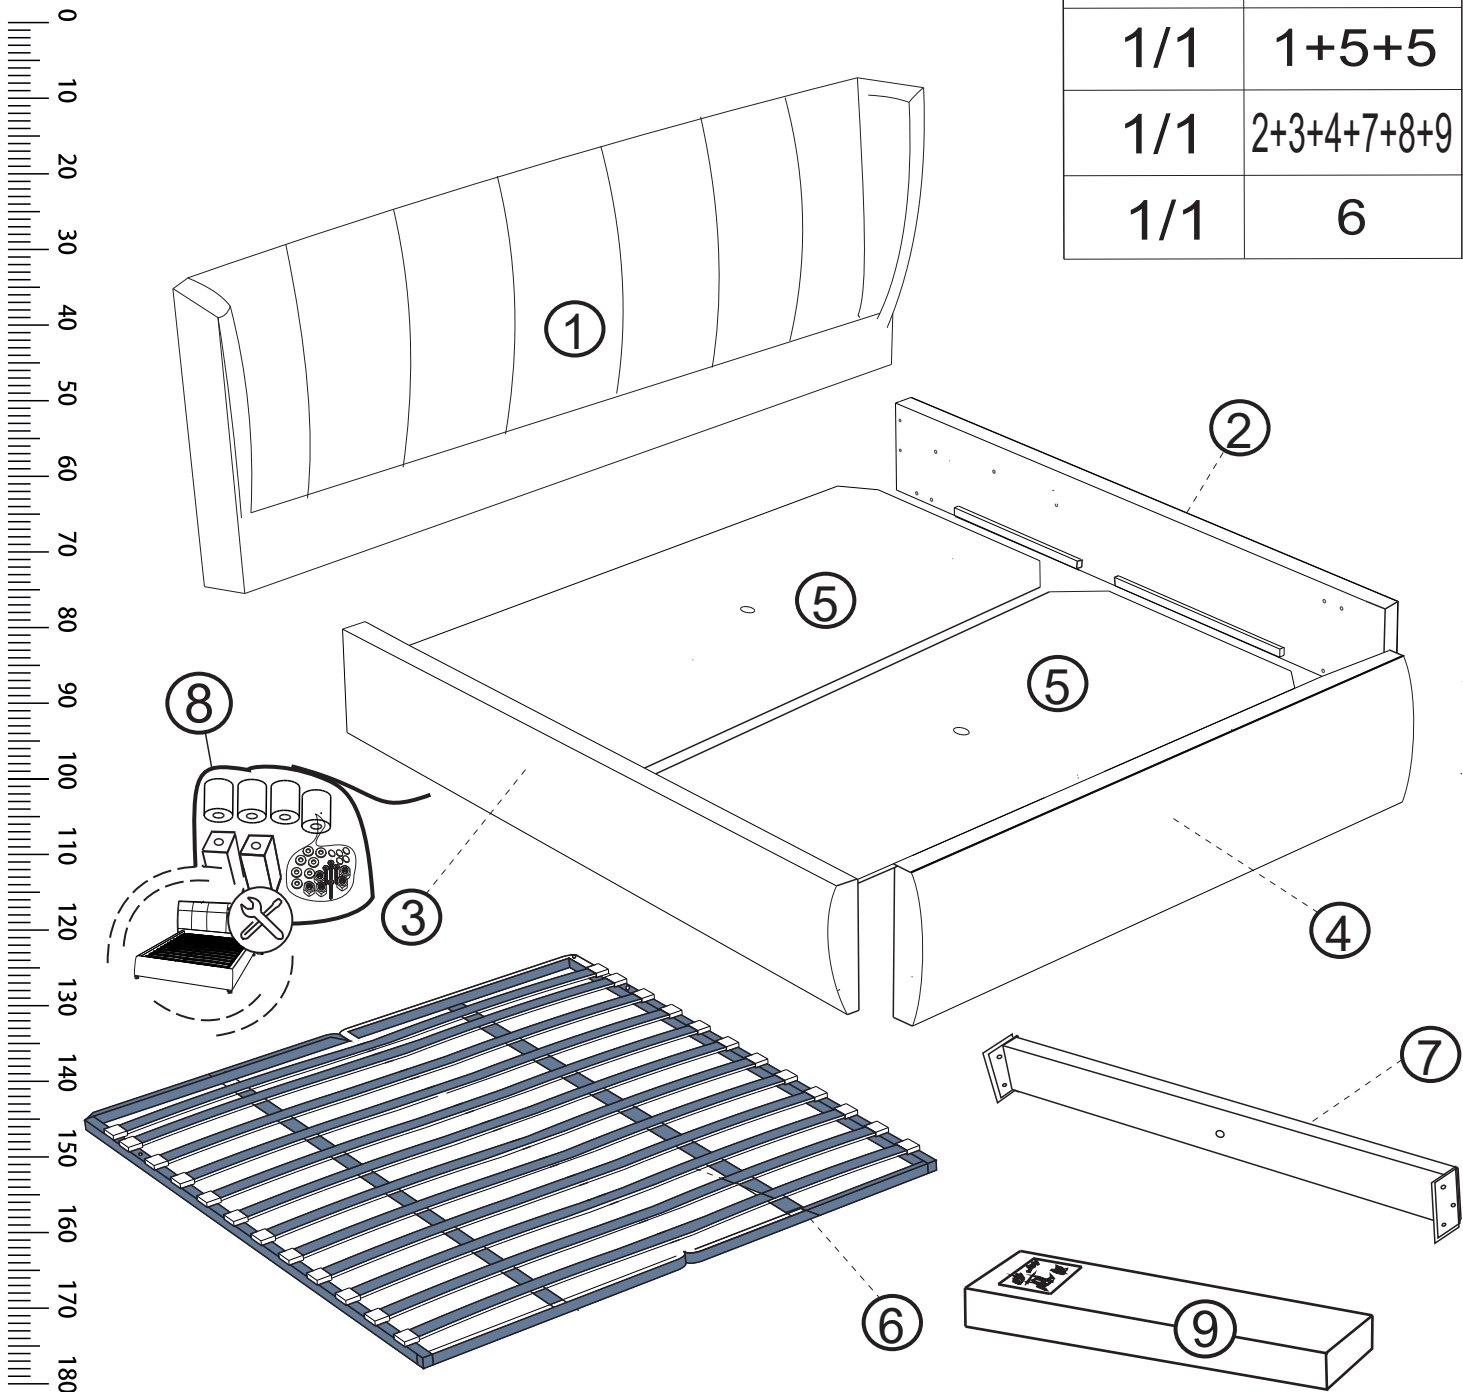


(D) AUFBAUANLEITUNG  
 (NL) HANDLEIDING VOOR DE MONTAGE  
 (TR) MONTAJ TALIMATI  
 (RO) INSTRUCTIUNI DE ASAMBLARE  
 (F) INSTRUCTION D'ASSEMBLAGE  
 (CZ) POKYNY K MONTÁŽI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (HR) UPUTSTVA ZA MONTAŽU


(GB) ASSEMBLY INSTRUCTIONS  
 (PL) INSTRUKCJA MONTAŻU  
 (RU) Инструкция по монтажу  
 (I) PROCEDURA DI ASSEMBLAGGIO  
 (SK) POKYNY K MONTÁŽI  
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
 (SLO) NAVODILA ZA MONTAŽO  
 (S) MONTERINGSANVISNING  
 (LT) DIEGIMO INSTRUKCIJOS  
 (E) INSTRUCCIONES DE MONTAJE

|     |       |   |     |    |
|-----|-------|---|-----|----|
| 2 X | 45min | ⊕ | #13 | #5 |
|     |       |   |     |    |

# PISA I PB 160x190/160/180x200

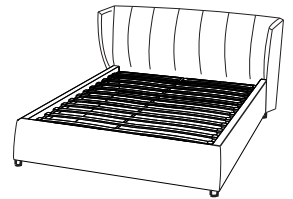

1

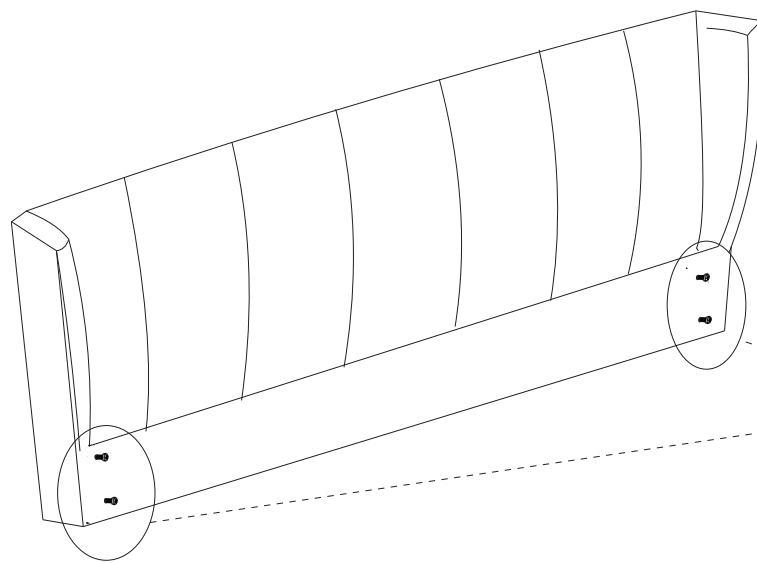


|       |  |    |   |  |
|-------|--|----|---|--|
| E     |  | x4 | ⊕ |  |
| M6x50 |  |    |   |  |

E


15mm

2

x4

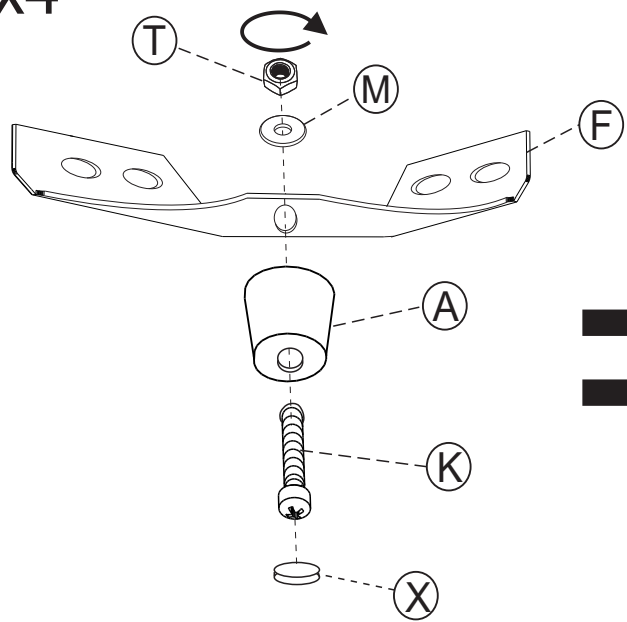


x4

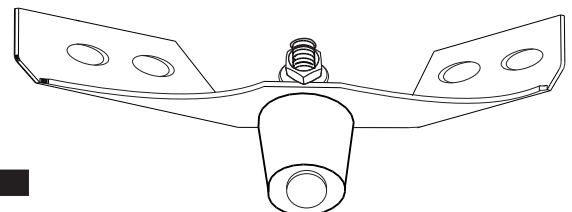


A1

(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE


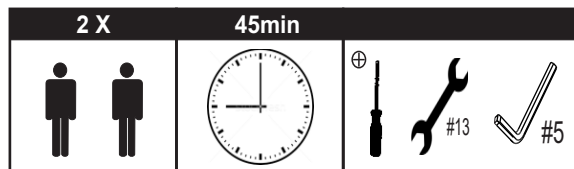


# PISA I PB 160x190/160/180x200


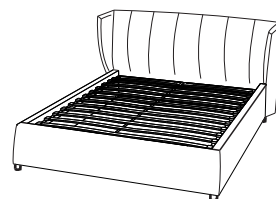


3

2x

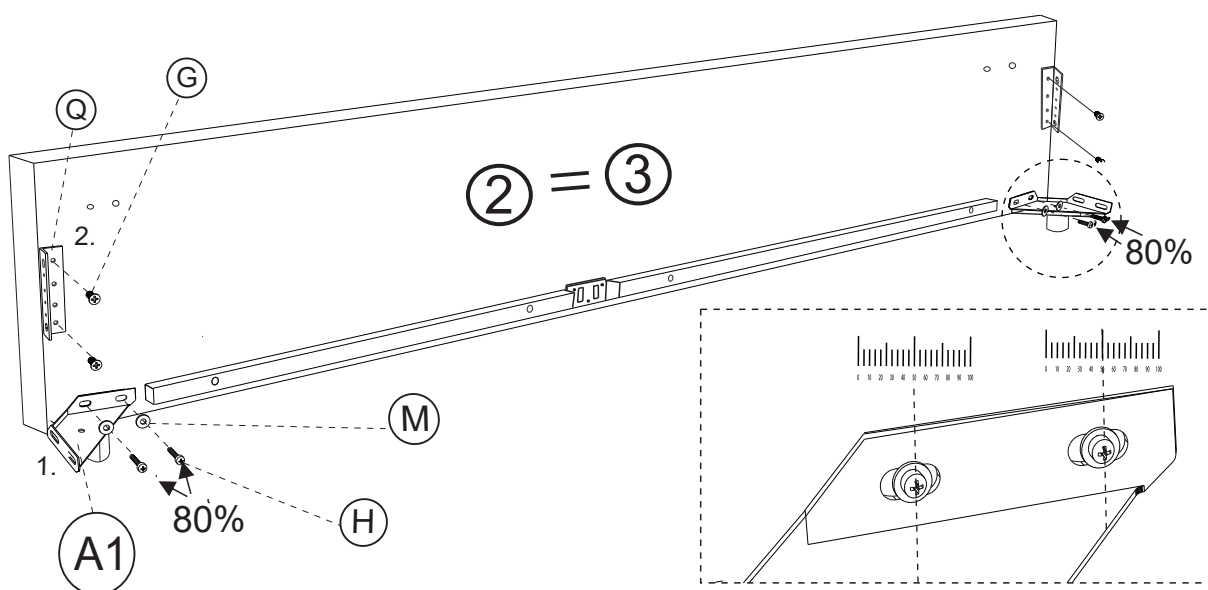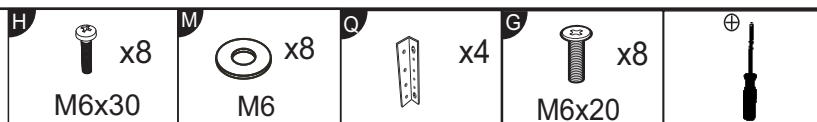


4





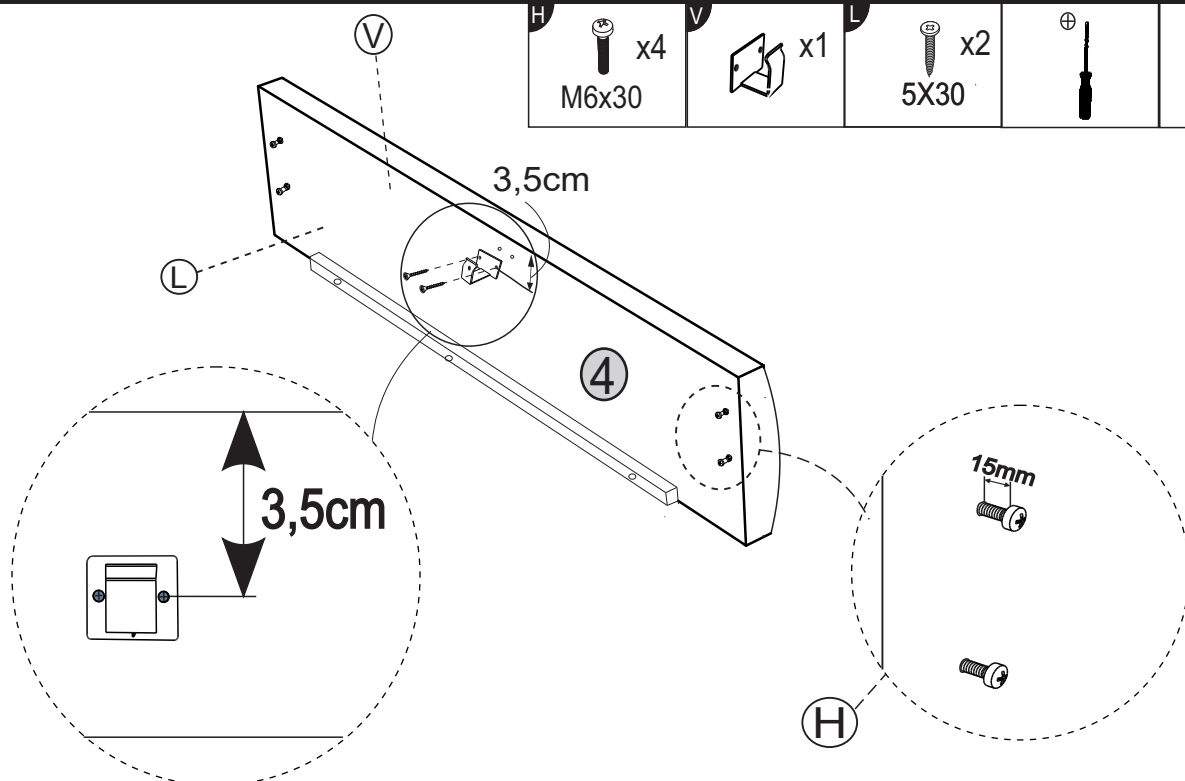
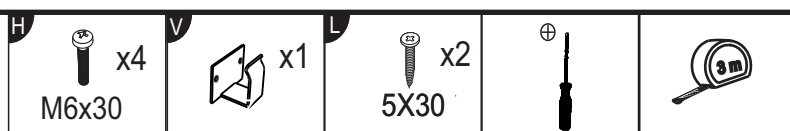


(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU





(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

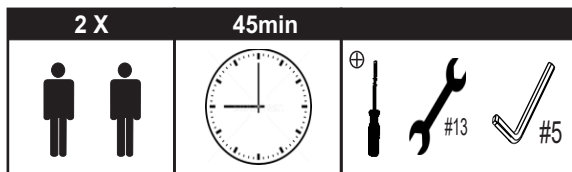

# PISA I PB 160x190/160/180x200

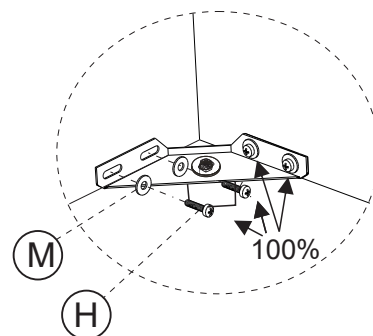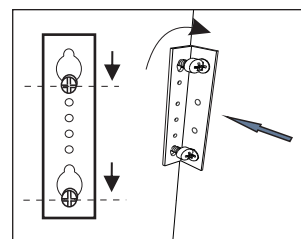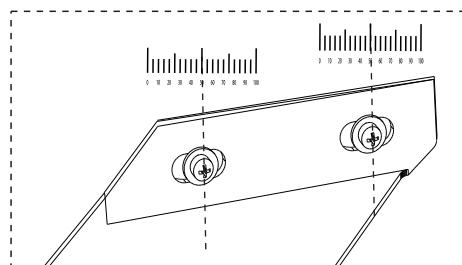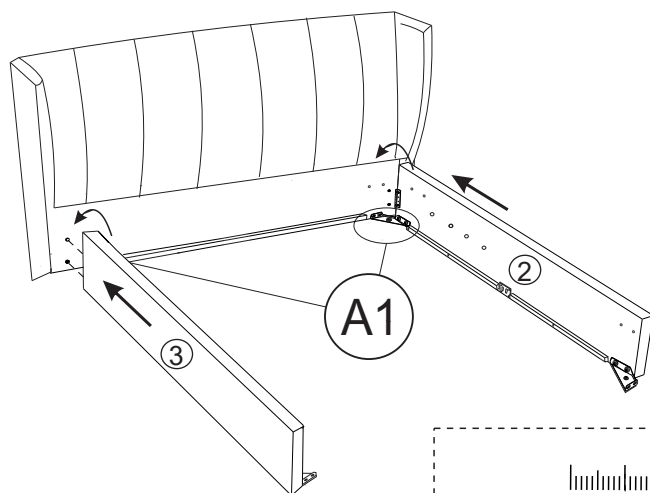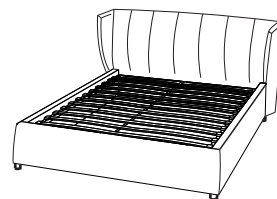


6

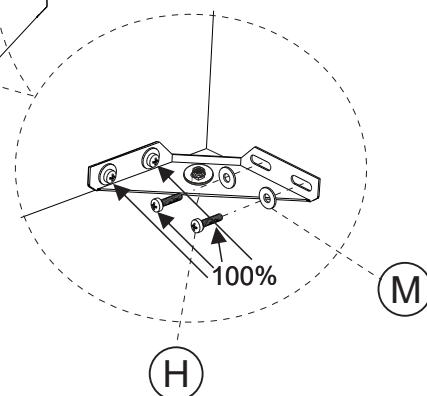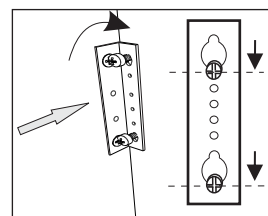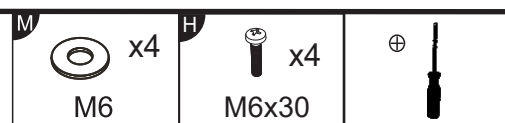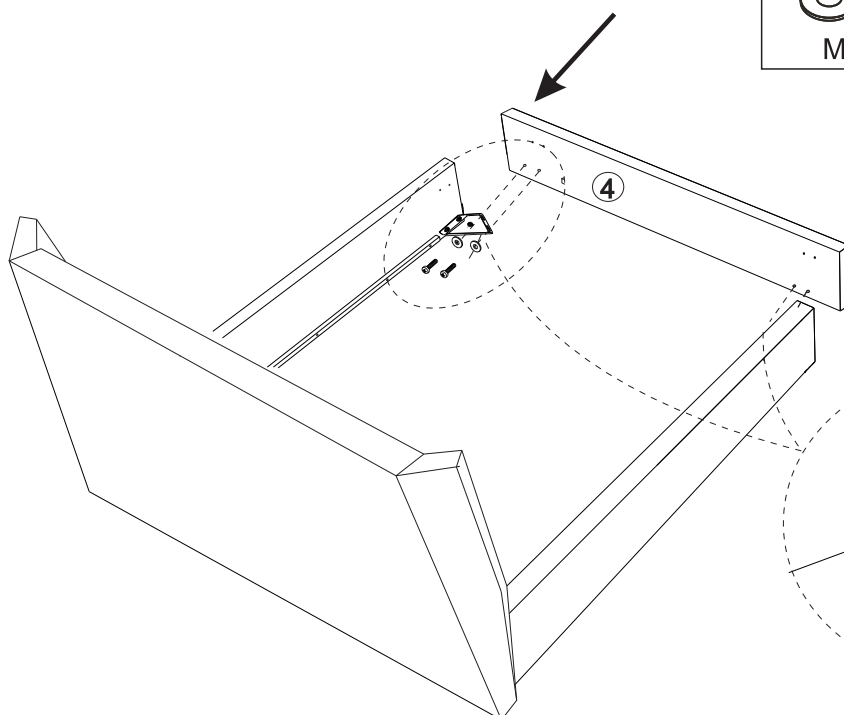


(D) AUFBAUANLEITUNG  
 (NL) HANDLEIDING VOOR DE MONTAGE  
 (TR) MONTAJ TALIMATI  
 (RO) INSTRUCTIUNI DE ASAMBLARE  
 (F) INSTRUCTION D'ASSEMBLAGE  
 (CZ) POKYNY K MONTÁŽI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
 (PL) INSTRUKCJA MONTAŻU  
 (RU) Инструкция по монтажу  
 (I) PROCEDURA DI ASSEMBLAGGIO  
 (SK) POKYNY K MONTÁŽI  
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
 (SLO) NAVODILA ZA MONTAŽO  
 (S) MONTERINGSANVISNING  
 (LT) DIEGIMO INSTRUKCIJOS  
 (E) INSTRUCCIONES DE MONTAJE

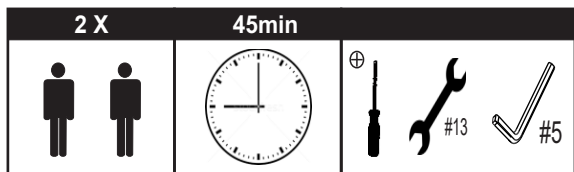


# PISA I PB 160x190/160/180x200

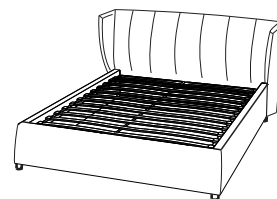

7

2x

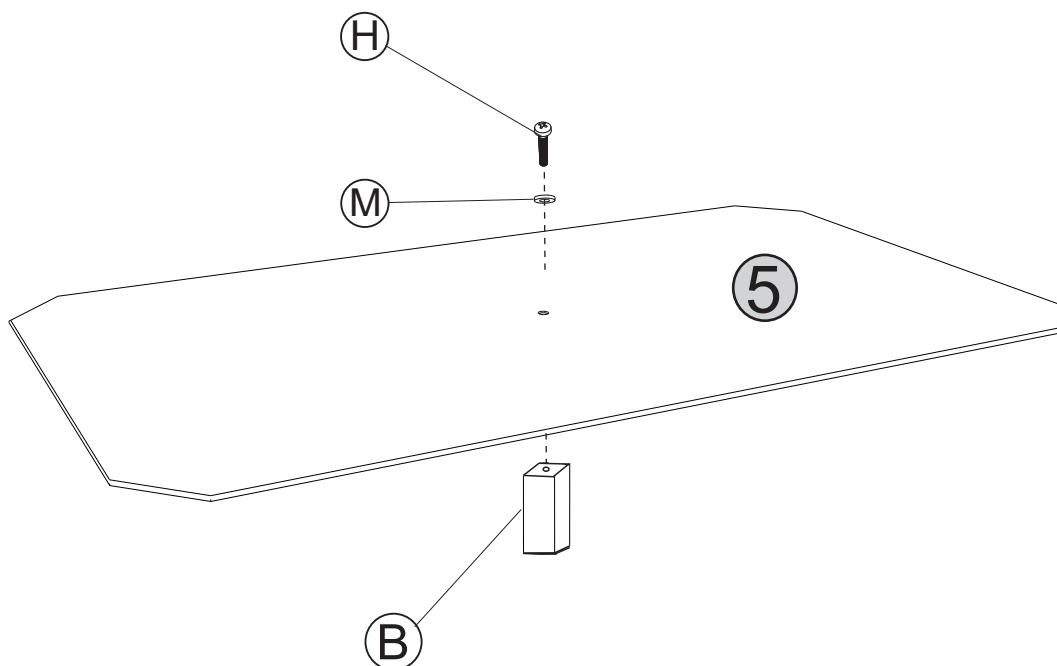


8

x1

X


R

Z

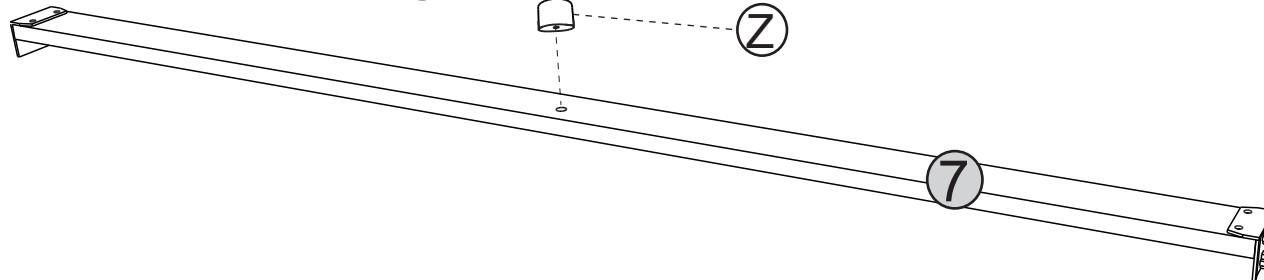


(D) AUFBAUANLEITUNG  
 (NL) HANDLEIDING VOOR DE MONTAGE  
 (TR) MONTAJ TALIMATI  
 (RO) INSTRUCTIUNI DE ASAMBLARE  
 (F) INSTRUCTION D'ASSEMBLAGE  
 (CZ) POKYNY K MONTÁŽI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (HR) UPUTSTVA ZA MONTAŽU


(GB) ASSEMBLY INSTRUCTIONS  
 (PL) INSTRUKCJA MONTAŻU  
 (RU) Инструкция по монтажу  
 (I) PROCEDURA DI ASSEMBLAGGIO  
 (SK) POKYNY K MONTÁŽI  
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
 (SLO) NAVODILA ZA MONTAŽO  
 (S) MONTERINGSANVISNING  
 (LT) DIEGIMO INSTRUKCIJOS  
 (E) INSTRUCCIONES DE MONTAJE

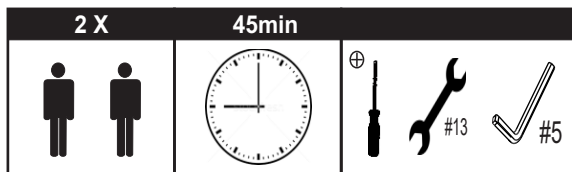



# PISA I PB 160x190/160/180x200

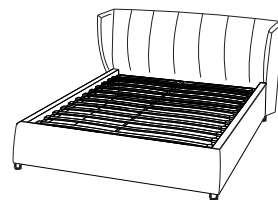

9 x1

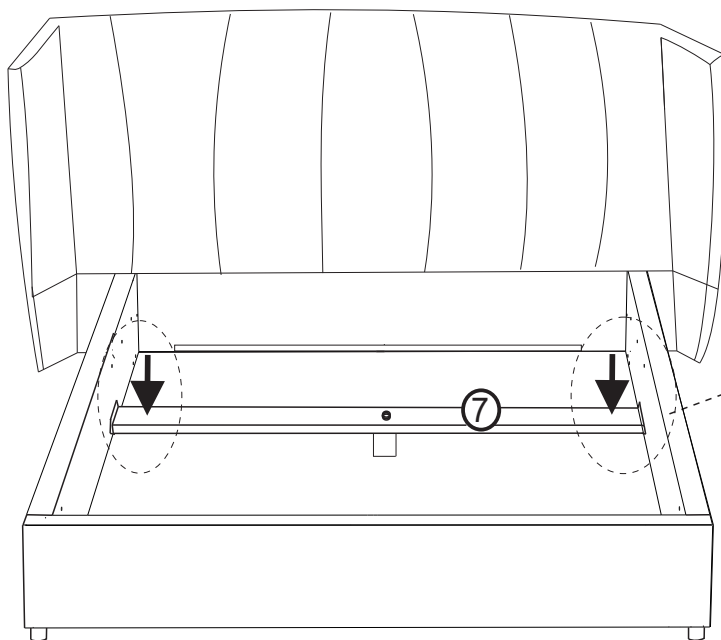


10

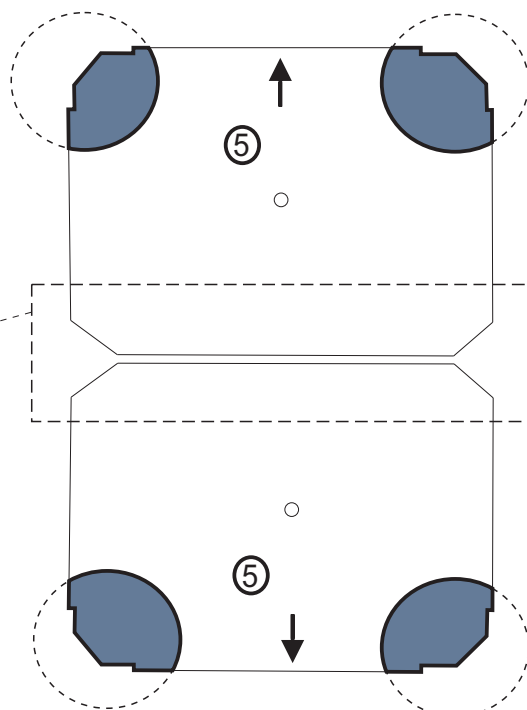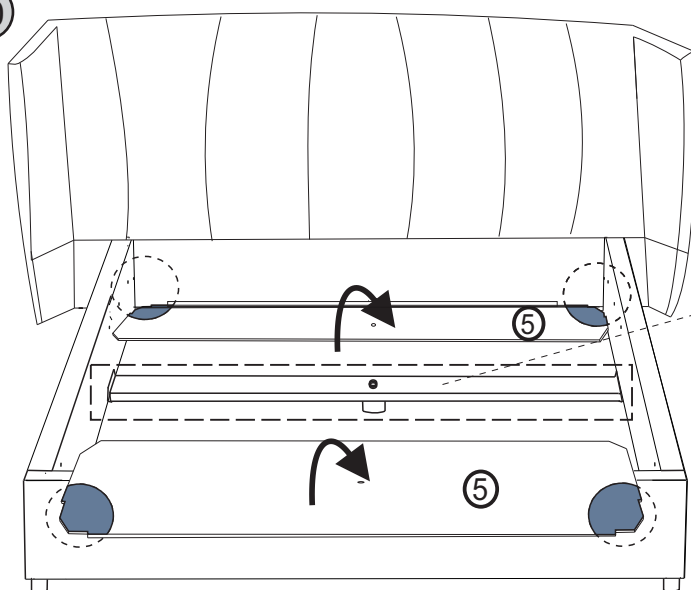


(D) AUFBAUANLEITUNG  
 (NL) HANDLEIDING VOOR DE MONTAGE  
 (TR) MONTAJ TALIMATI  
 (RO) INSTRUCTIUNI DE ASAMBLARE  
 (F) INSTRUCTION D'ASSEMBLAGE  
 (CZ) POKYNY K MONTÁŽI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (HR) UPUTSTVA ZA MONTAŽU





(GB) ASSEMBLY INSTRUCTIONS  
 (PL) INSTRUKCJA MONTAŻU  
 (RU) Инструкция по монтажу  
 (I) PROCEDURA DI ASSEMBLAGGIO  
 (SK) POKYNY K MONTÁŽI  
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
 (SLO) NAVODILA ZA MONTAŽO  
 (S) MONTERINGSANVISNING  
 (LT) DIEGIMO INSTRUKCIJOS  
 (E) INSTRUCCIONES DE MONTAJE

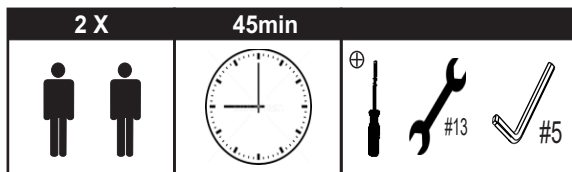

# PISA I PB 160x190/160/180x200

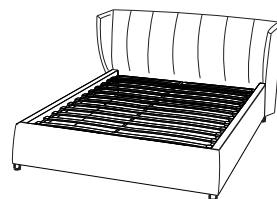


11

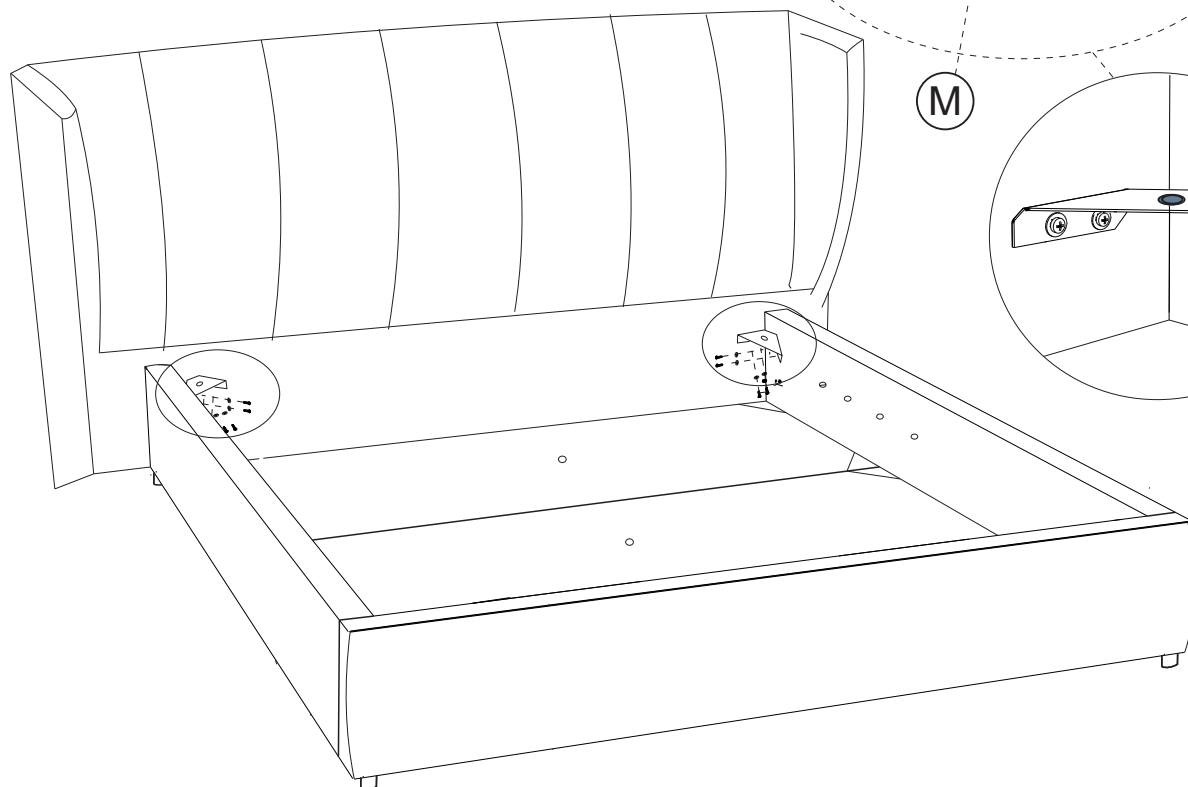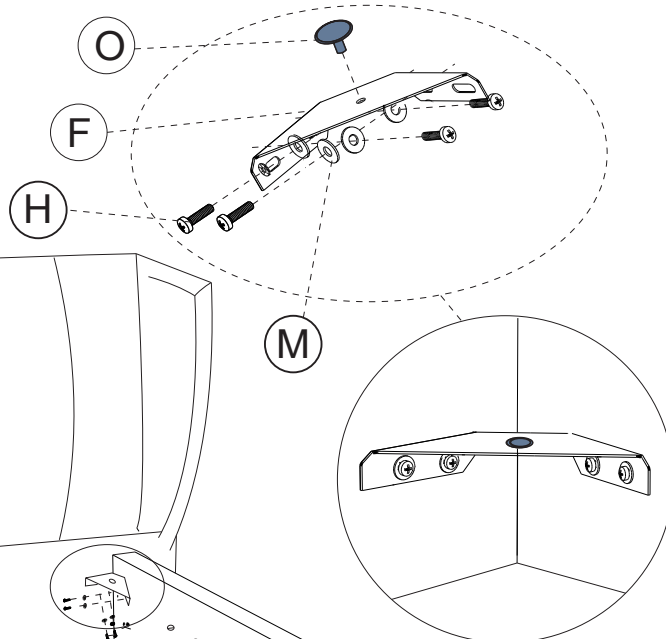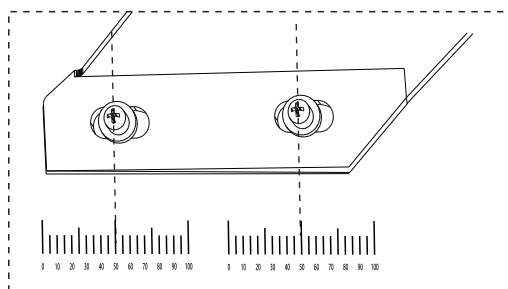


(D) AUFBAUANLEITUNG  
 (NL) HANDLEIDING VOOR DE MONTAGE  
 (TR) MONTAJ TALIMATI  
 (RO) INSTRUCTIUNI DE ASAMBLARE  
 (F) INSTRUCTION D'ASSEMBLAGE  
 (CZ) POKYNY K MONTÁŽI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (HR) UPUTSTVA ZA MONTAŽU





(GB) ASSEMBLY INSTRUCTIONS  
 (PL) INSTRUKCJA MONTAŻU  
 (RU) Инструкция по монтажу  
 (I) PROCEDURA DI ASSEMBLAGGIO  
 (SK) POKYNY K MONTÁŽI  
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
 (SLO) NAVODILA ZA MONTAŽO  
 (S) MONTERINGSANVISNING  
 (LT) DIEGIMO INSTRUKCIJOS  
 (E) INSTRUCCIONES DE MONTAJE

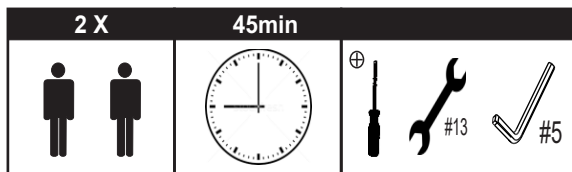

# PISA I PB 160x190/160/180x200

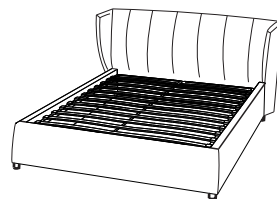


12

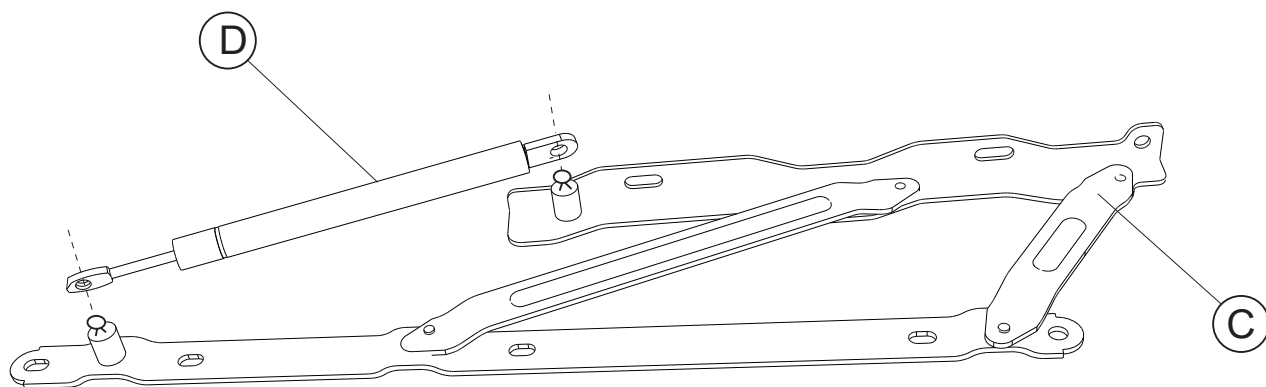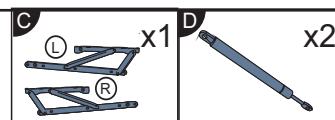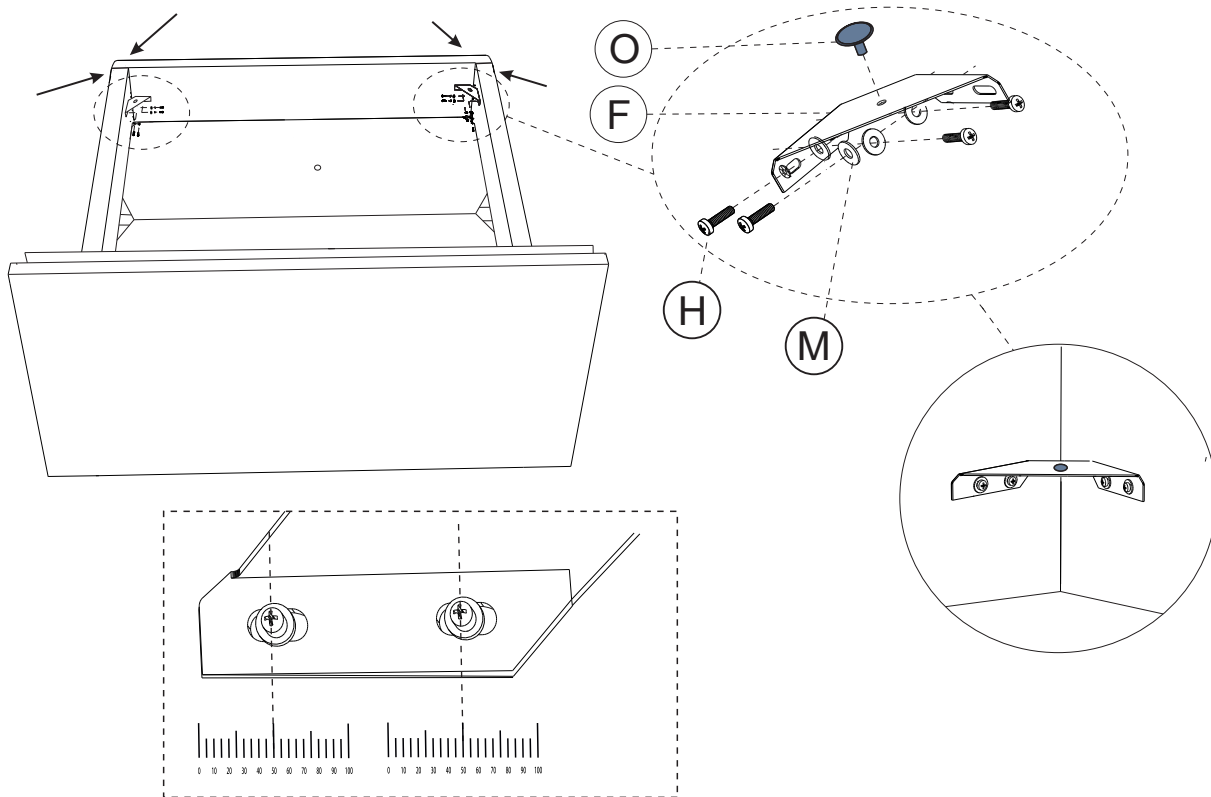


(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU




(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

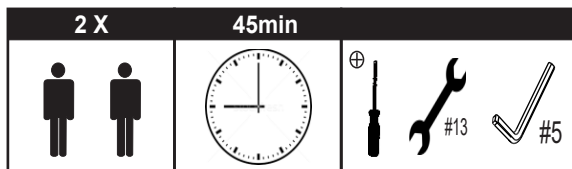

# PISA I PB 160x190/160/180x200



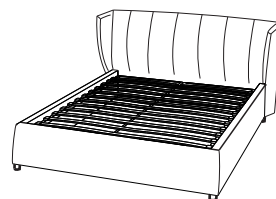


13

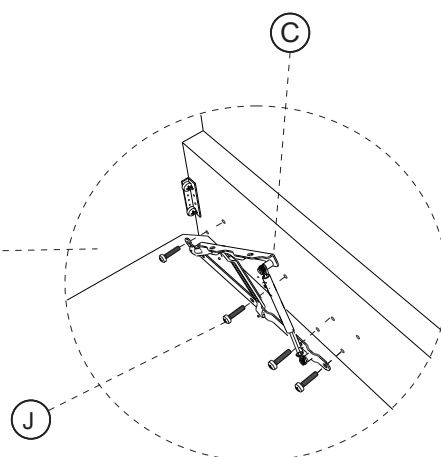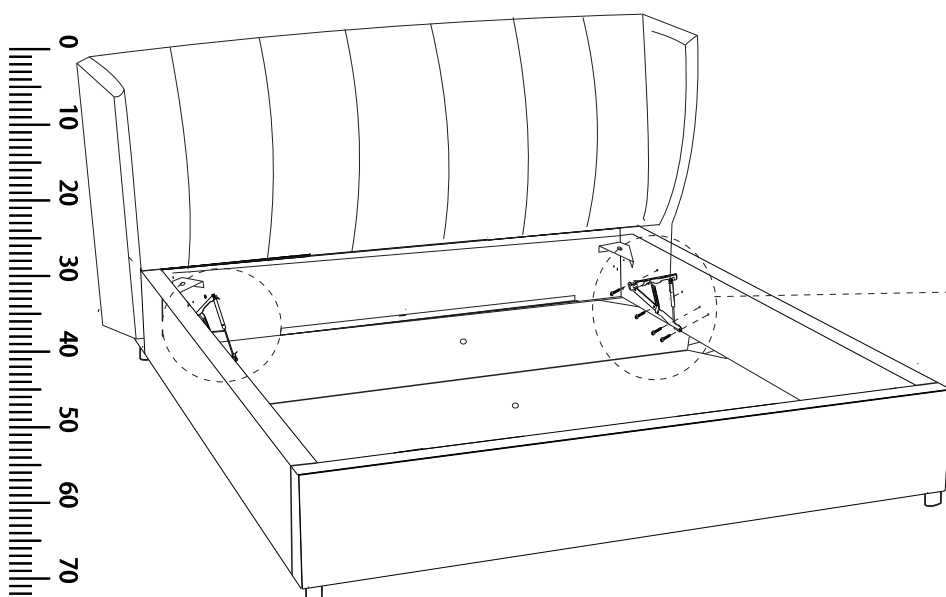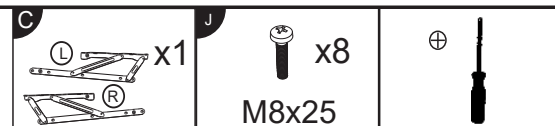


14

6

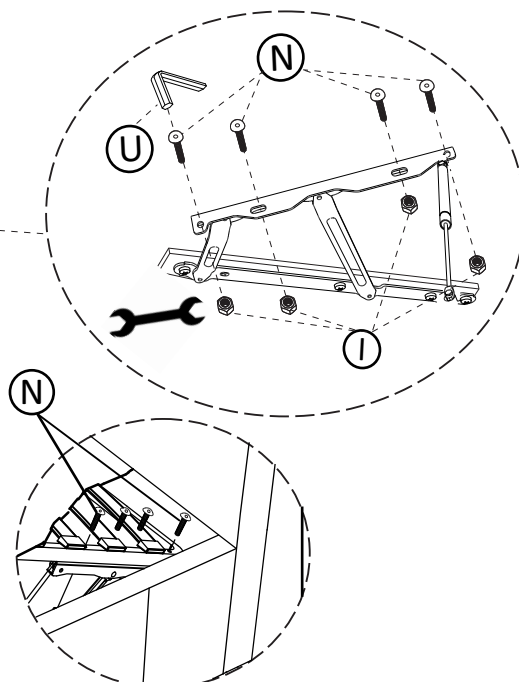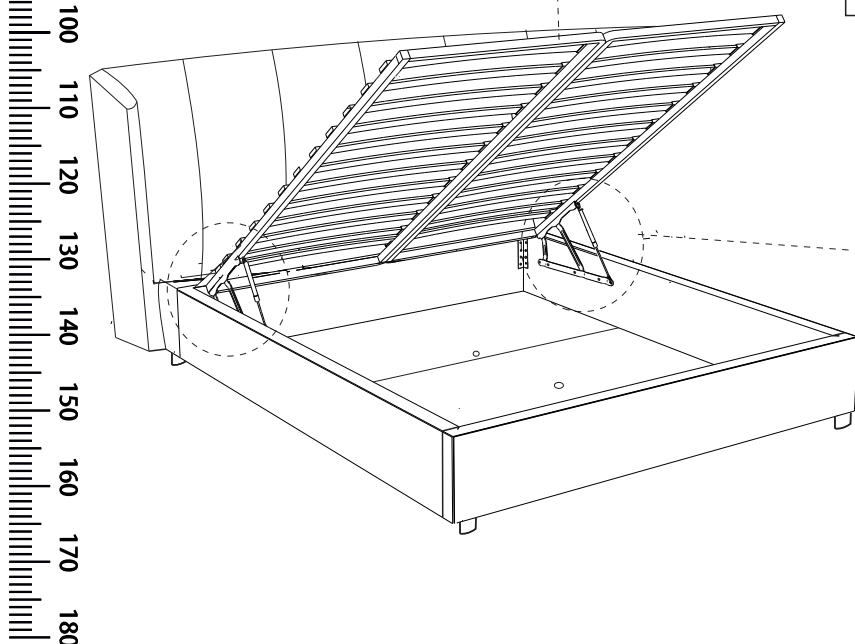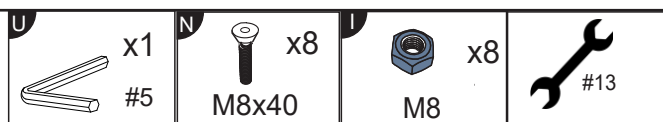


- (D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU



- (GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

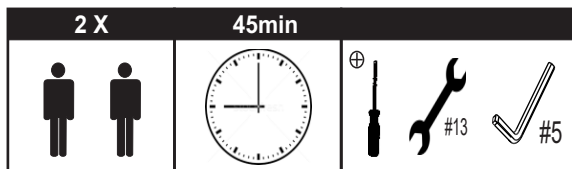

# PISA I PB 160x190/160/180x200

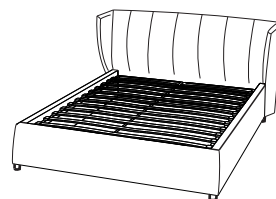

15

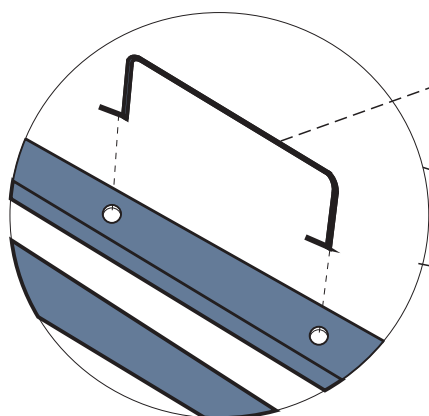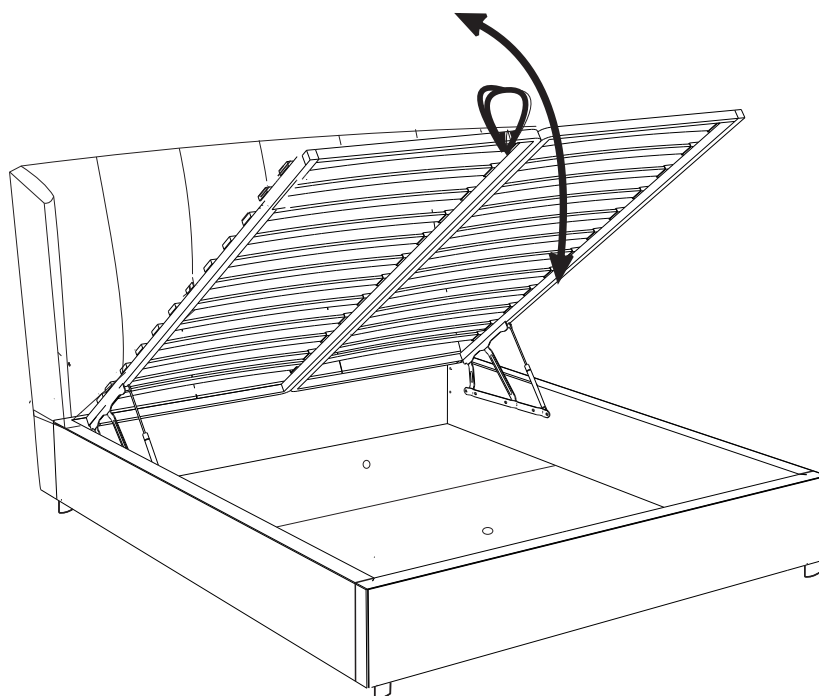

P

